

TM 5-6115-365-15

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

ORGANIZATIONAL, DS, GS, AND DEPOT MAINTENANCE MANUAL INCLUDING REPAIR PARTS
AND SPECIAL TOOLS LIST

GENERATOR SETS, GASOLINE AND DIESEL ENGINE DRIVEN, TRAILER MOUNTED

PU-238A/G, PU-236/G, FSN 6115-393-1709
PU-236B/G, FSN 6115-738-6334
PU-253A/U, PU-253/U, FSN 6115-697-2402
PU-304C/MPQ-4, FSN 6115-056-8421
PU-332/G, FSN 6115-577-8471
PU-332A/G, FSN 6115-738-8336
PU-375A/G, PU-375/G, FSN 6115-753-2231
PU-375B/G, FSN 6115-931-8789
PU-401/M, FSN 6115-823-2217
PU-402/M, FSN 6115-722-3760
PU-406/M, FSN 6115-738-6342
PU-409/M, FSN 6115-702-3343
PU-409A/M, FSN 6115-733-6338
PU-495/G, FSN 6115-823-2213
PU-551/G, FSN 6115-889-1307
PU-564A/G, FSN 6115-728-6341
PU-564B/G, FSN 6115-179-2789
PU-617/M, FSN 6115-738-6335
PU-618/M, FSN 6115-738-6337
PU-619/M, FSN 6115-738-6339
PU-620/M, FSN 6115-738-6340
PU-625/G, FSN 6115-873-3915
PU-628/G, FSN 6115-087-0373
PU-629/G, FSN 6115-937-5555
PU-631/G, FSN 6115-059-5172
PU-656/G, FSN 6115-939-3296

This copy is a reprint which includes current
pages from Changes 1 through 6

HEADQUARTERS, DEPARTMENT OF THE ARMY
MAY 1966

SAFETY PRECAUTIONS

NOTE

These precautions are general and refer to most sets discussed in this manual. For detailed safety precautions for each individual piece of equipment that comprise the generator set, refer to the appropriate TM applicable to the equipment. Do not install the generator set in an enclosed area unless the exhaust fumes are piped to the outside. Inhalation of exhaust fumes may result in **SERIOUS ILLNESS** or **DEATH**.

Operation of this equipment presents a **NOISE HAZARD** to personnel in the areas the noise level exceeds the allowable limits for unprotected personnel as described in TB MED 251. Wear ear muffs or ear plugs which were fitted by a trained professional. Signs conforming to the provisions of AR 385-30 will be posted in the operating area to provide notification of **NOISE HAZARD** as follows: **NOISE HAZARD EQUIPMENT, HEARING PROTECTION REQUIRED**.

Do not operate generator set without a suitable ground connection. **DEATH** by electrocution may result when contact is made with an ungrounded system.

Do not smoke or have open flame in the area when filling fuel tanks. Provide a metal-to-metal contact between the fuel supply container and the fuel tank to prevent static spark being generated as fuel flows over metallic surface.

Do not fill tank while unit is operating. Fuel spilled on a hot engine may cause an explosion. Do not perform maintenance on the electrical system or change load connections when unit is operating. **DEATH** or severe electrical shock may result.

WARNING

Cleaning solvent, PD-680, is **POTENTIALLY DANGEROUS CHEMICAL**. Do not use near open flame when used for cleaning.

SAFETY PRECAUTIONS

NOTE

These precautions are general and refer to the use of the equipment in the laboratory. The detailed safety instructions for each individual piece of equipment are given in the separate instructions for that equipment. It is recommended that the user read these instructions carefully and follow the instructions for each piece of equipment. The instructions for the use of the equipment are given in the separate instructions for that equipment.

The instructions for the use of the equipment are given in the separate instructions for that equipment. It is recommended that the user read these instructions carefully and follow the instructions for each piece of equipment. The instructions for the use of the equipment are given in the separate instructions for that equipment.

WARNING

The instructions for the use of the equipment are given in the separate instructions for that equipment. It is recommended that the user read these instructions carefully and follow the instructions for each piece of equipment. The instructions for the use of the equipment are given in the separate instructions for that equipment.

The instructions for the use of the equipment are given in the separate instructions for that equipment. It is recommended that the user read these instructions carefully and follow the instructions for each piece of equipment. The instructions for the use of the equipment are given in the separate instructions for that equipment.

The instructions for the use of the equipment are given in the separate instructions for that equipment. It is recommended that the user read these instructions carefully and follow the instructions for each piece of equipment. The instructions for the use of the equipment are given in the separate instructions for that equipment.

CAUTION

The instructions for the use of the equipment are given in the separate instructions for that equipment. It is recommended that the user read these instructions carefully and follow the instructions for each piece of equipment. The instructions for the use of the equipment are given in the separate instructions for that equipment.

CHANGE }

No. 6 }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 28 May 1976

**Operator, Organizational, Direct Support, General Support, and
Depot Maintenance Manual
Including Repair Parts and Special Tools List**

**GENERATOR SETS, GASOLINE AND DIESEL ENGINE DRIVEN,
TRAILER MOUNTED**

PU-236A/G, PU-236/G, NSN 6115-00-393-1709

PU-236B/G, NSN 6115-00-738-6334

PU-253A/U, PU-253/U, NSN 6115-00-697-2402

PU-304C/MPQ-4, NSN 6115-00-056-8421

PU-332/G, NSN 6115-00-577-8471

PU-332A/G, NSN 6115-00-738-8336

PU-375A/G, PU-375/G, NSN 6115-00-753-2231

PU-375B/G, NSN 6115-00-931-6789

PU-401/M, NSN 6115-00-823-2217

PU-402/M, NSN 6115-00-722-3760

PU-406/M, NSN 6115-00-738-6342

PU-409/M, NSN 6115-00-702-3343

PU-409A/M, NSN 6115-00-733-6338

PU-495/G, NSN 6115-00-823-2218

PU-551/G, NSN 6115-00-889-1307

PU-564A/G, NSN 6115-00-728-6341

PU-564B/G, NSN 6115-00-179-2789

PU-617/M, NSN 6115-00-738-6335

PU-618/M, NSN 6115-00-738-6337

PU-619/M, NSN 6115-00-738-6339

PU-620/M, NSN 6115-00-738-6340

PU-625/G, NSN 6115-00-837-3915

PU-628/G, NSN 6115-00-087-0873

PU-629/G, NSN 6115-00-937-5555

PU-631/G, NSN 6115-00-059-5172

PU-656/G, NSN 6115-00-939-3296

PU-650B/G, NSN 6115-00-258-1622

Current as of 8 March 1976

TM 5-6115-365-15, 11 May 1966, is changed as follows:

The title is changed to read as shown above.

1. Remove old pages and insert as indicated below. New material is indicated by a vertical bar in the margin of the page. When an entire chapter or appendix is revised or added, the vertical bar will be adjacent to the title only.

Remove pages
i through iv
vii
None

Insert pages
i through iv
vii
23-1 thru 23-12

2. File this change sheet in front of the publication for reference purposes.

FRED C. WEYAND
General, United States Army
Chief of Staff

Official:

PAUL T. SMITH
Major General, United States Army
The Adjutant General

Distribution:

To be distributed in accordance with DA Form 12-25D (qty rqr block No. 782), Organizational maintenance requirements for Truck and Trailer Mounted Generator Sets (PU's).

Change }
No. 5 }

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, DC 5 July 1974

**Organizational, DS, GS, and Depot Maintenance Manual
Including Repair Parts and Special Tools List
GENERATOR SETS. GASOLINE AND DIESEL ENGINE DRIVEN,
TRAILER MOUNTED**

PU-238A/G, PU-236/G, FSN 6115-393-1709
PU-236B/G, FSN 6115-738-6334
PU-253A/U, PU-253/U, FSN 6115-697-2402
PU-304C/MPQ-4, FSN 6115-056-8421
PU-332/G, FSN 6115-577-8471
PU-332A/G, FSN 6115-738-8336
PU-375A/G, PU-375/G, FSN 6115-753-2231
PU-375B/G, FSN 6115-931-8789
PU-401/M, FSN 6115-823-2217
PU-402/M, FSN 6115-722-3760
PU-406/M, FSN 6115-738-6342
PU-409/M, FSN 6115-702-3343
PU-409A/M, FSN 6115-733-6338
PU-495/G, FSN 6115-823-2213
PU-551/G, FSN 6115-889-1307
PU-564A/G, FSN 6115-728-6341
PU-564B/G, FSN 6115-179-2789
PU-617/M, FSN 6115-738-6335
PU-618/M, FSN 6115-738-6337
PU-619/M, FSN 6115-738-6339
PU-620/M, FSN 6115-738-6340
PU-625/G, FSN 6115-873-3915
PU-628/G, FSN 6115-087-0373
PU-629/G, FSN 6115-937-5555
PU-631/G, FSN 6115-059-5172
PU-656/G, FSN 6115-939-3296

TM 5-6115-365-15, 11 May 1966, is changed as follows:

1. Remove old pages and insert new pages as indicated below. New material is indicated by a vertical bar in the margin of the page. When an entire chapter or appendix is revised, the bar will be adjacent to the title only.

2. On the inside front cover delete the safety precautions.

Remove Pages

None

Insert Pages

Safety Precaution Page

3. File this transmittal sheet in the front of the manual for reference purposes.

By Order of the Secretary of the Army:

CREIGHTON W. ABRAMS
General, United States Army
Chief of Staff

Official:

VERNE L. BOWERS
Major General, United States Army
The Adjutant General

Distribution:

To be distributed in accordance with DA Form 12-25D (qty rqr block No. 782) organizational maintenance requirements for Truck and Trailer Mounted Generators (PU's).

TECHNICAL MANUAL

No. 5-6115-365-15

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 11 May 1966

**Operator, Organizational, Direct Support, General Support and
Depot Maintenance Manual
Including Repair Parts and Special Tools List**

**GENERATOR SETS, GASOLINE AND DIESEL ENGINE DRIVEN,
TRAILER MOUNTED**

PU-236A/G, PU-236/G, NSN 6115-00-393-1709

PU-236B/G, NSN 6115-00-738-6334

PU-253A/U, PU-253/U, NSN 6115-00-697-2404

PU-304C/MPQ-4, NSN 6115-00-056-8421

PU-332/G, NSN 6115-00-577-8471

PU-332A/G, NSN 6115-00-738-6336

PU-375A/G, PU-375/G, NSN 6115-00-753-2231

PU-375B/G, NSN 6115-00-931-6789

PU-401/M, NSN 6115-00-823-2217

PU-402/M, NSN 6115-00-722-3760

PU-406/M, NSN 6115-00-738-6342

PU-409/M, NSN 6115-00-702-3348

PU-409A/M, NSN 6115-00-738-6338

PU-495/G, NSN 6115-00-823-2218

PU-551/G, NSN 6115-00-889-1307

PU-564A/G, NSN 6115-00-738-6341

PU-564B/G, NSN 6115-00-179-2789

PU-617/M, NSN 6115-00-738-6335

PU-618/M, NSN 6115-00-738-6337

PU-619/M, NSN 6115-00-738-6339

PU-620/M, NSN 6115-00-738-6340

PU-625/G, NSN 6115-00-837-3915

PU-628/G, NSN 6115-00-087-0873

PU-629/G, NSN 6115-00-937-5555

PU-631/G, NSN 6115-00-059-5172

PU-656/G, NSN 6115-00-939-3296

PU-650B/G, NSN 6115-00-258-1622

Current as of 8 March 1976

*This TM supersedes TM 11-6115-234-12P, 18 July 1962; TM 11-6115-220-15P, 21 October 1960; TM 11-6115-224-15P, 30 January 1961; TM 11-6615-227-15P, 6 September 1961; TM 11-6115-228-15P, 7 September 1961; TM 11-6115-229-15P, 7 December 1961; and TM 11-6115-235-15P, 18 October 1963.

	Paragraph	Page
CHAPTER 1. INTRODUCTION		
Section I. General	1-1-1-3	1-1
II. Repair parts	1-4 - 1-9	1-1 - 1-4
CHAPTER 2. GENERATOR SET PU-617/M		
Section I. Description and data	2-1, 2-2	2-2
II. Operating instructions	2-3 - 2-6	2-3
III. Operator's maintenance instructions	2-7, 2-8	2-8
IV. Organizational maintenance instructions	2-9, 2-10	2-11
V. Direct general support and depot maintenance instructions	2-11, 2-12	2-11
VI. Repair parts list		
Part I. Organizational maintenance		2-14
II. Direct and general support depot maintenance		2-19
CHAPTER 3. GENERATOR SET PU-619/M		
Section I. Description and data	3-1, 3-2	3-1
II. Operating instructions	3-3 - 3-6	3-3
III. Operator maintenance instructions	3-7, 3-8	3-8
IV. Organizational maintenance instructions	3-9 - 3-11	3-11
V. Direct and general support and depot maintenance instructions	3-12 - 3-15	3-11 - 3-14
VI. Repair parts list		
Part I. Organizational maintenance		3-15
II. Direct and general support and depot maintenance		3-19
CHAPTER 4. GENERATOR SETS PU-618/M and PU-620/M		
Section I. Description and data	4-1, 4-2	4-1
II. Operating instructions	4-3 - 4-6	4-4
III. Operator maintenance instructions	4-7, 4-8	4-9
IV. Organizational maintenance instructions	4-9 - 4-11	4-11
V. Direct and general support and depot maintenance instructions	4-12 - 4-15	4-11 - 4-14
VI. Repair parts list		
Part I. Organizational maintenance PU-618/M		4-15
II. Direct and general support and depot maintenance PU-618/M		4-19
III. Organizational maintenance PU-620/M		4-27
IV. Direct and general support and depot maintenance, PU-620/M		4-31
CHAPTER 5. GENERATOR SETS PU-406/M and PU-402/M		
Section I. Description and data	5-1, 5-2	5-1
II. Operating instructions	5-3 - 5-6	5-3, 5-4
III. Direct and general support and depot maintenance instructions	5-7	5-4
IV. Repair parts list		
Part I. Organizational maintenance		5-6
II. Direct and general support and depot maintenance		5-9
CHAPTER 6. GENERATOR SETS PU-409/M AND PU-409A/M		
Section I. Description and data	6-1, 6-2	6-1
II. Operating instructions	6-3 - 6-6	6-3
III. Organizational maintenance instructions	6-7, 6-8	6-8
IV. Direct support, general support and depot maintenance instructions	6-9, 6-10	6-8
V. Repair parts list		
Part I. Organizational maintenance		6-10
II. Direct support and general support maintenance		6-13
CHAPTER 7. GENERATOR SET PU-236B/G		
Section I. Description and data	7-1	7-1
II. Repair parts list		7-2
CHAPTER 8. GENERATOR SETS PU-236/G and PU-236A/G		
Section I. Description and data	8-1	8-1
II. Repair parts list		8-2
CHAPTER 9. GENERATOR SET PU-401/M		
Section I. Description and data	9-1	9-1
II. Repair parts list		9-3
CHAPTER 10. GENERATOR SET PU-495/G		
Section I. Description and data	10-1	10-1
II. Repair parts list		10-3

	Paragraph	Page
CHAPTER II. GENERATOR SETS PU-332/G and PU-332A/G		
Section I. Description and data	11-1	11-1
II. Repair parts list		11-2
CHAPTER 12. GENERATOR SET PU-564A/G AND PU-564B/G		
Section I. Description and data	12-1	12-1
II. Repair parts list		
Part I. PU-564A/G		12-3
II. Organizational maintenance, PU564-B/G		12-7
III. DS, GS, and depot maintenance, PU-564B/G		12-12
CHAPTER 13. GENERATOR SETS PU-253/U AND PU-253A/U		
Section I. Description and data	13-1	13-1
II. Repair parts list		13-2
CHAPTER 14. GENERATOR SETS PU-375/G AND PU-375A/G		
Section I. Description and data	14-1	14-1
II. Repair parts list		14-3
CHAPTER 15. GENERATOR SET PU-551/G		
Section I. Description and data	15-1	15-1
II. Repair parts list		15-2
CHAPTER 16. GENERATOR SET PU-304C/MPQ-4		
Section I. Description and data	16-1, 16-2	16-1
II. Operating instructions	16-3 - 16-6	16-4
III. Organizational maintenance instructions	16-7 - 16-9	16-9
IV. Direct and general support and depot maintenance instructions	16-10 - 16-12	16-9 - 16-11
V. Repair parts list		
Part I. Organizational maintenance		16-12
II. Direct and general support and depot maintenance		16-16
CHAPTER 17. GENERATOR SET PU-375B/G		
Section I. Description and data	17-1, 17-2	17-1
II. Operating instructions	17-3 - 17-6	17-3
Section III. Operator's maintenance instructions	17-7, 17-8	17-8
IV. Organizational maintenance instructions	17-9 - 17-11	17-8
V. DS, GS and depot maintenance instructions	17-12 - 17-13	17-9
VI. Repair parts list		
Part I. Organizational maintenance		17-11
II. Direct support and general support maintenance		17-17
CHAPTER 18. GENERATOR SET PU-628/G		
Section I. Description and data	18-1, 18-2	18-1
II. Operating instructions	18-3 - 18-6	18-3 18-6
III. Operator's maintenance instructions	18-7, 18-8	18-6
IV. Organizational maintenance instructions	18-9 - 18-11	18-8
V. DS, GS, and depot maintenance instructions	18-12 - 18-14	18-9 - 18-11
VI. Repair parts list		
Part I. Organizational maintenance		18-12
II. Direct and general support maintenance		18-18
CHAPTER 19. GENERATOR SET PU-629/G		
Section I. Description and data	19-1, 19-2	19-1
II. Operating instructions	19-3 - 19-6	19-3, 19-4
III. Operator's maintenance instructions	19-7	19-8
Section IV. Organizational maintenance instructions	19-8 - 19-10	19-9

	Paragraph	Page
V. DS, GS, and depot maintenance instructions	19-11 - 19-14	19-9 - 19-12
VI. Repair parts list		
Part I. Organizational maintenance		19-3
II. Direct and general support maintenance		19-7
CHAPTER 20. GENERATOR SET PU-631/G		
Section I. Description and data	20-1, 20-20	20-1
II. Operating instructions	20-3 - 20-6	20-
III. Operator's maintenance instructions		20-
IV. Organizational maintenance instructions	20-7 - 20-14	20-
V. DS, GS, and depot maintenance instructions	20-15 - 20-17	20-
VI. Repair parts list		
Part I. Organizational maintenance		20-
II. DS, GS, and depot maintenance		20-
CHAPTER 21. GENERATOR SET PU-656/G		
Section I. Description and data	21-1, 21-2	21-1
II. Operating instructions	21-3 - 21-6	21-
III. Operator's maintenance instructions		21-
IV. Organizational maintenance instructions	21-7, 21-8	21-
Section V. DS, GS, and depot maintenance instructions	21-9 - 21-11	21-
VI. Repair parts list		
Part I. Organizational maintenance		21-
II. DS, GS, and depot maintenance		21-
CHAPTER 22. GENERATOR SET PU 625/G		
Section I. Description and data	22-1, 22-2	22-1
II. Operating instructions	22-3 - 22-6	22-
III. Operator's maintenance instructions		22-
IV. Organizational maintenance instructions	22-7 - 22-11	22-
V. DS, GS, and depot maintenance	22-12 - 22-15	22-
VI. Repair parts list		
Part I. Organizational maintenance		22-
II. DS, GS, and depot maintenance		22-
CHAPTER 23. GENERATOR SET PU-650B/G		
Section I. Description and data	23-1	23-1
II. Operating instructions	23-3	
III. Organizational repair parts		
IV. DS, GS, and depot repair parts		
APPENDIX A. References		A-1
B. Basic Issue Items List		B-1
C. Maintenance Allocation Chart		C-1
INDEX		I-1

LIST OF ILLUSTRATIONS

Number	Title	Page
2-1	PU-617/M, right front, 3/4 view	2-2
2-2	PU-617/M, set up for operation	2-4
2-2	PU-617/M, set up for operation - Continued	2-5
2-3	Interconnection diagram, transfer switch-to-generators	2-6
2-4	Fuel system connection and transfer procedure	2-7
2-5	Transfer switch, removal, disassembly, reassembly and installation	2-10
2-6	Transfer switch wiring diagram	2-12
2-7	PU-617/M overall component location diagram	2-13
3-1	PU-619/M, left front, 3/4 view	3-2
3-2	Interconnection diagram, transfer switch-to-generators	3-4
3-3	PU-619/M set up for operation	3-5
3-3	PU-619/M set up for operation - Continued	3-6
3-4	Fuel system connection and transfer procedure	3-7
3-5	Transfer switch, removal, disassembly, reassembly, and installation	3-10
3-6	Transfer switch wiring diagram	3-12
3-7	PU-619/M overall component location diagram	3-13
3-8	Distribution box	3-26
4-1	PU-618/M, right front, 3/4 view	4-2
4-2	PU-618/M top view, tarpaulin removed	4-3
4-3	Interconnection diagram, transfer switch-to-generators	4-5
4-4	PU-618/M set up for operation	4-6
4-4	PU-618/M set up for operation - Continued	4-7
4-5	Fuel system connection and transfer procedure	4-8
4-6	Transfer switch, removal, disassembly, reassembly, and installation	4-10
4-7	Transfer switch wiring diagram	4-12
4-8	PU-618/M overall component location diagram	4-13
4-9	Distribution box	4-26
4-10	PU-620/M power unit	4-37
4-11	PU-620/M accessories	4-38
5-1	PU-406/M, left front, 3/4 view	5-2
5-2	PU-406/M, rear view	5-3
5-3	Generator set, removal and installation	5-5
6-1	PU-409A/M, right front, 3/4 view	6-2
6-2	Roof bows and rocks, removal and installation	6-4
6-3	PU-409A/M set up for operation (sheet 1 of 2)	6-5
6-3	PU-409A/M set up for operation (sheet 2 of 2)	6-6
6-4	Fuel system connection and transfer procedure	6-7
6-5	Overall component location diagram	6-9
6-6	Power unit components	6-17
6-7	Detail component	6-18
7-1	Generator Set PU-236B/G	7-2
7-2	Accessories	7-6
8-1	Generator Set PU-236A/G	8-2
9-1	Generator Set PU-401/M	9-2
9-2	Accessories	9-7
10-1	Generator Set PU-495/G	10-2
11-1	Generator Set PU-332A/G	11-2
11-2	Accessories	11-6
12-1	Generator Set PU-564A/G	12-2
12-1.1	Generator Set PU-564B/G	12-2.1
12-2	Accessories	12-6
12-3	PU-564B/G	12-17
12-4	PU-564B/G Accessories	12-18
13-1	Generator Set PU-253A/U	13-2
14-1	Generator Set PU-375A/G	14-2
15-1	Generator Set PU-551/G	15-2
15-2	Accessories	15-6
16-1	PU-304C/MPQ-4, right front, 3/4 view	16-2
16-2	PU-304C/MPQ-4, overall view showing radar equipment stowed	16-3

<i>Number</i>	<i>Title</i>	<i>Page</i>
16-3	PU-304C/MPQ-4, set up for operation	16-5
16-3	PU-304C/MPQ-4, set up for operation - continued	16-6
16-4	Load cable connection diagram	16-7
16-5	Fuel system connection and transfer procedure	16-8
16-6	PU-304C/MPQ-4, overall component location diagram	16-10
17-1	PU-375B/G, left front, 3/4 view	17-2
17-2	Bows and racks, removal and installation	17-4
17-3	PU-375B/G, set up for operation (sheet 1 of 2)	17-5
17-3	PU-375B/G, set up for operation (sheet 2 of 2)	17-6
17-4	Fuel system connection and transfer procedure	17-7
17-5	PU-375B/G, overall component location diagrams	17-10
17-6	Power unit components	17-24
17-7	Detail components	17-25
17-8	Fuel tank mounting components	17-26
17-9	Fuel tank components	17-27
18-1	PU-628/G, right front, 3/4 view	18-2
18-2	Racks, removal and installation	18-3
18-3	PU-628/G set up for operation	18-4
18-4	Interconnection diagram, transfer switch-to-generators	18-5
18-5	Transfer switch, removal, disassembly, reassembly, and installation	18-7
18-6	PU-628/G overall component location diagram	18-9
18-7	Transfer switch wiring diagram	18-10
18-8	Generator transfer switch	18-26
18-9	Power unit components	18-27
18-10	Detail components	18-28
19-1	PU-629/G, right front, 3/4 view	19-2
19-2	Interconnection diagram, transfer switch-to-generators	19-3
19-3	PU-629/G set up for operation (sheet 1 of 2)	19-5
19-3	PU-629/G set up for operation (sheet 2 of 2)	19-6
19-4	Fuel system connection and transfer procedure	19-7
19-5	Transfer switch, removal, disassembly, reassembly, and installation	19-8
19-6	Transfer switch wiring diagram	19-10
19-7	PU-629/G, overall component location diagram	19-11
19-8	Generator transfer switch	19-24
19-9	Power unit components	19-25
19-10	Detail components	19-26
19-11	Fuel tank components	19-27
20-1	PU-631/G, left front, 3/4 view	20-1
20-2	PU-631/G, right side	20-2
20-3	Wiring diagram	20-3
20-4	Fuel system components	20-5
20-5	PU-631/G, rear view	20-6
20-6	Electrical distribution system	20-7
20-7	Generator Sets	20-8
20-8	Brackets and holddowns	20-9
20-9	Generator distribution box	20-11
20-10	PU-631/G, power units	20-38
20-11	PU-631/G, accessories	20-39
20-12	Trailer body	20-40
20-13	Trailer accessories	20-40
20-14	Distribution box	20-41
20-15	Fuel tank	20-42
20-16	Roadside rack assembly	20-43
20-17	Curbside rack assembly	20-44
20-18	Holder assemblies	20-45
21-1	Generator Set, PU-656/G	21-1
21-2	Engine accessories, installed view	21-3
21-3	Wiring diagram	21-4
21-4	Distribution box	21-7
21-5	PU-656/G, power unit	21-18
21-6	PU-656/G, accessories	21-19
22-1	Generator Set, PU-625/G	22-2
22-2	Accessories, racks, and reels	22-3
22-3	Fuel line, connections	22-4

Number	Title	Page
22-4	Wiring diagram	22-6
22-5	Distribution box and cables	22-7
22-6	Fuel supply fittings and oil drain	22-9
22-7	Fuel tank assembly	22-10
22-8	Distribution box	22-11
22-9	Removable rack assembly	22-13
22-10	Curbside rack assembly	22-14
22-11	Basic trailer with accessories	22-15
22-12	Trailer with fuel tank mounted	22-16
23-1	Side and top view of generator set PU-650B/G	

CHAPTER 1

INTRODUCTION

Section I. GENERAL

1-1. Scope

a. This manual is published for the use of personnel to whom the trailer-mounted generator sets, described in chapters 2 through 20, are issued.

b. Each individual PU generator set is assigned a chapter. The assigned chapter provides information on setting-up, operation, and maintenance of ancillary equipment (components and accessories that are peculiar to each individual PU set).

c. The appropriate technical manuals published for the trailer, generator, and engine peculiar to each PU generator set are referenced in each chapter and these manuals must be used to supplement the information in this manual.

Note. Sets such as PU-618/M and PU-620/M, which have only minor differences, are covered in the same chapter.

1-2. Forms and Records

a. DA Forms and records used for equipment maintenance will be only those prescribed in TM 38-750.

b. Reporting of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to Publications) and forwarded direct to the Commanding General, U. S. Army Mobility Equipment Command, ATTN: AMSME-MPP, 4300 Goodfellow Boulevard, St. Louis, Mo. 63120.

1-3. External Fuel Tank Connections

a. Attach the auxiliary fuel hose from the auxiliary fuel tank to the three-way gate valve so that fuel may be drawn from the auxiliary tank, by turning valve to auxiliary, and the primary tank may be refueled away from the generator.

b. Keep fuel tanks, as near as possible, on the same plane as base of engine.

c. When starting engine at subzero temperature, fuel should be drawn from the nearest tank. When normal engine operating temperature has been reached, fuel may be drawn from auxiliary tank.

Section II. REPAIR PARTS

1-4. Scope

This manual lists repair parts required for the performance of organizational, direct support, general support, and depot maintenance of the generator sets.

1-5. General

a. The repair parts list is arranged as follows:

(1) Individual parts and major assemblies are listed alphabetically by item name within the numbered functional groups.

(2) Assembly components and subassemblies are indented and listed alpha-

betically by item name under major assemblies.

b. This Repair Parts List is divided into the following parts:

(1) *Repair parts - part I.* A list of repair parts authorized for the performance of maintenance at the organizational level. The *Prescribed Load Allowance (PLA)* is those repair parts quantitatively allocated to organizational level in the repair parts list. These items are the mandatory minimum stockage allowances.

(2) *Repair parts - part II.* A list of repair parts authorized for the performance

of maintenance at the direct support, general support, and depot level.

1-6. Explanation of Columns

The following provides an explanation of columns in the tabular lists in Part I and Part II.

a. Source, Maintenance, and Recoverability Codes (SMR).

Note. Common hardware items known to be readily available in Army supply channels will be assigned Maintenance codes only. Source codes, Recoverability codes, and Maintenance Allowances will not be assigned to this category.

(1) *Source code.* Indicates the selection status and source for the listed item. Source codes used are:

Code	Explanation
P	Applied to repair parts which are stocked in or supplied from DSA/GSA or Army supply system, and authorized for use at indicated levels.
M	Applies to repair parts which are not procured or stocked but are to be manufactured at indicated maintenance levels.
A	Applied to assemblies which are not procured or stocked as such but made up of two or more units, each of which carry individual stock numbers and descriptions and are procured and stocked and can be assembled by units at indicated maintenance levels.
X	Applied to parts and assemblies which are not procured or stocked, the mortality of which is normally below that of the applicable end item, and the failure of which should result in retirement of the end item from the supply system.
X1	Applied to repair parts which are not procured or stocked, the requirement for which will be supplied by use of the next higher assembly or component.
X2	Applied to repair parts which are not stocked. The indicated maintenance level requiring such repair parts will attempt to obtain them through cannibalization; if not obtainable through cannibalization, such repair parts will be requisitioned with supporting justification through normal supply channels.
G	Applied to major assemblies that are procured with PEMA (Procurement Equipment Missile Army) funds for initial issue only to be used as exchange assemblies at DSU and GSU maintenance level. These assemblies will not be stocked above DSU and GSU level or returned to depot supply level.

(2) *Maintenance code.* Indicates the

lowest level of maintenance authorized to install the listed item. The maintenance level codes are:

Code	Explanation
C	Operator maintenance
O	Organizational maintenance
F	Direct support maintenance
H	General support maintenance
D	Depot maintenance

(3) *Recoverability code.* Indicates whether unserviceable items should be returned for recovery or salvage. Items not coded are expendable. Recoverability codes are:

Code	Explanation
R	Applied to repair parts and assemblies which are economically repairable at DSU and GSU activities and normally are furnished by supply on an exchange basis.
T	Applied to high dollar value recoverable repair parts which are subject to special handling and are issued on an exchange basis. Such repair parts normally are repaired or overhauled at depot maintenance activities.
U	Applies to repair parts specifically selected for salvage by reclamation units because of precious metal content, critical materials, high dollar value reusable casings or castings.

(4) This column also lists, below the SMR code, an index number for each item in ascending numerical sequence, which is used to locate items in the publication when the Federal stock number and/or reference number is not known.

b. *Federal Stock Number.* Indicates the Federal stock number for the item.

c. *Description.* Indicates the Federal item name and any additional description of the item required. A part number or other reference number is followed by the applicable five-digit Federal supply code for manufacturers in parentheses. Repair parts quantities included in the kits, sets, and assemblies are shown in front of the repair part name.

d. *Unit of Measure.* Indicates the unit used as a basis for issue, e.g., ea, pr, ft, yd, etc.

e. *Quantity Incorporated in Unit.* Indicates the quantity of the item used in the functional group.

f. *Fifteen-Day Organizational Maintenance Allowances.*

(1) The allowance columns are divided into subcolumns. Indicated in each sub-

column opposite the first appearance of each item is the total quantity of items authorized for the number of equipments supported. Subsequent appearances of the same item will have no entry in the allowance columns but will have in the description column a reference to the first appearance of the item. Items authorized for use as required but not for initial stockage are identified with an asterisk in the allowance column.

(2) The quantitative allowances for organizational level of maintenance represents one initial prescribed load for a 15-day period for the number of equipments supported. Units and organizations authorized additional prescribed loads will multiply the number of prescribed loads authorized by the quantity of repair parts reflected in the appropriate density column to obtain the total quantity of repair parts authorized.

(3) Organizational units providing maintenance for more than 100 of these equipments shall determine the total quantity of parts required by converting the equipment quantity to a decimal factor by placing a decimal point before the next to last digit of the number to indicate hundredths, and multiplying the decimal factor by the parts quantity authorized in the 51-100 allowance column. Example: Authorized allowance for 51-100 equipments is 12; for 140 equipments multiply 12 by 1.40 or 16.80 rounded off to 17 parts required.

(4) Subsequent changes to allowances will be limited as follows: No change in the range of items is authorized. If additional items are considered necessary, recommendation should be forwarded to U. S. Army Mobility Equipment Command for exception or revision to the allowance list. Revisions to the range of items authorized will be made by this Command based upon engineering experience, demand data, or TAMMS information.

g. Thirty-Day DS/GS Maintenance Allowances.

(1) The allowance columns are divided into subcolumns: Indicated in each subcolumn, opposite the first appearance of each item, is the total quantity of items authorized for the number of equipments supported. Subsequent appearances of the same item will have no entry in the allowance column, but will have in the description column a reference to the first appearance of the

item. Items authorized for use as required but not for initial stockage are identified with an asterisk in the allowance column.

(2) The quantitative allowances for DS/GS levels of maintenance will represent initial stockage for a 30-day period for the number of equipments supported.

(3) Determination of the total quantity of parts required for maintenance of more than 100 of these equipments can be accomplished by converting the equipment quantity to a decimal factor by placing a decimal point before the next to last digit of the number to indicate hundredths, and multiplying the decimal factor by the parts quantity authorized in the 51-100 allowance column. Example: Quantity authorized allowance for 51-100 equipments is 40; for 150 equipments multiply 40 by 1.50 or 60 parts required.

h. One-Year Allowances Per 100 Equipments/Contingency Planning Purposes. Indicates opposite the first appearance of each item the total quantity required for distribution and contingency planning purposes. The range of items indicates total quantities of all authorized items required to provide for adequate support of 100 equipments for one year.

i. Depot Maintenance Allowance Per 100 Equipments. Indicates opposite the first appearance of each item the total quantity authorized for depot maintenance of 100 equipments. Subsequent appearances of the same item will have no entry in this column, but will have in the description column a reference to the first appearance of the item. Items authorized for use but not for initial stockage are identified with an asterisk in the allowance column.

j. Illustration.

(1) *Figure number.* Indicates the figure number of the illustration in which the item is shown.

(2) *Item number.* Indicates the callout number used to reference the item in the illustration.

1-7. Special Information

a. Repair parts mortality has been based on 2000 hours of operation per year.

b. Parts which require manufacture or assembly at a level higher than that authorized for installation will indicate in the source column the higher level.

1-8. Index of Federal Supply Codes for Manufacturers

<i>Code</i>	<i>Manufacturer</i>	<i>Code</i>	<i>Manufacturer</i>
02032	John R. Hollingsworth	81343	Society of Automotive Engineers
04939	Martin-Marietta Corp.	81348	Federal Specification, GSA
06716	Lakeview Mfg. Co.	81349	Military Specification, DSA
12204	Chrysler Corp.	88044	Aeronautical Standards Group, Navy and Air Force
14850	Tobyhanna Army Depot Maintenance Div.	96906	Military Standards, DSA
19702	Stardyne Industries	97403	Engineer R and D Laboratories
80204	U.S.A. Standards Institute		

CHAPTER 2

GENERATOR SET PU-617/M

Section I. DESCRIPTION AND DATA

2-1. Description

a. General. The PU-617/M is a self-contained, mobile, general purpose power supply (Refer to figure 2-1). The set is comprised of two 3-kw, model SF 3.0 MD Military Standard generator sets, mounted on an M101 trailer, and includes the components listed in Table 2-1, below. The two generators are powered by directly coupled 4-cylinder, 6-hp Military Standard model 4A032-1 engines. A power transfer switch is provided for connecting the generators' output to a common load.

b. Engines. For description and maintenance information pertaining to the engines, refer to TM 5-2805-203-14.

c. Generators. For description and generator operation and maintenance information not covered in this chapter, refer to TM 5-6115-271-15.

d. Trailer. For description and trailer maintenance information, refer to TM 9-2330-202-14P.

2-2. Tabulated Data

Table 2-1 lists the components for PU-617/M.

Table 2-1. PU-617/M Components.

Fsn	Qty	Nomenclature
2330-738-8509	1	Trailer: M101
6115-017-8237	2	Generator: 3 kw, 60 cycle, Model SF 3.0 MD
2590-318-6691	1	Leg prop assembly, trailer
2910-066-1235	2	Adapter assembly, fuel drum
7240-222-3088	4	Can, gasoline: military 5- gallon
4210-555-8873	1	Fire extinguisher
5975-878-3791	2	Ground rod (w/attachments)
5120-251-4489	1	Sledge hammer

CAUTION: REMOVE TARPAULIN, BOWS AND RACKS BEFORE OPERATION.
BE SURE TAILGATE IS DOWN AND REMOVE ANYTHING
IN THE TRAILER THAT MIGHT OBSTRUCT THE FREE
CIRCULATION OF AIR.



Figure 2-1. PU-617/M, right front 3/4 view.

Section II. OPERATING INSTRUCTIONS

2-3. Setting-Up Instructions

a. Leveling.

(1) Locate the trailer on as level a surface as possible in order for the generator sets to operate efficiently.

(2) Set brakes and block wheels securely to prevent any movement. Operate handbrake at weekly intervals to assure freedom of linkage.

(3) Pull the leg support down and adjust length for firm contact with ground.

Warning: Wheels must be blocked, brakes set, and leg support down in support position before attempting to roll up the tarpaulin and before starting to assemble or set-up the equipment for operation.

b. Grounding.

Warning: Never operate the generator set until it has been properly grounded. Electrical defects in the load lines or equipment can cause death by electrocution when contact is made with an ungrounded system.

(1) The generator set must be grounded prior to operation. The ground may be any of three methods, depending on the location and terrain.

(a) A ground rod driven to a depth of 8 feet.

(b) An underground metallic water piping system.

(c) A metal plate (9 sq ft) buried at a depth of 4 feet.

(2) The ground lead must be No. 6 AWG copper wire bolted or clamped to the rod, plate, or piping system.

(3) Connect the other end of the ground lead to the generator set ground stud as shown in figure 2-2.

(4) Be sure that both generators are connected to the generator set ground stud as shown in figure 2-2.

c. Preparation for Starting.

(1) Remove the canvas tarpaulin and remove the racks.

(2) Open the trailer tailgate and remove all loose auxiliary items and anything else that might block the free circulation of air through the trailer and around the generator sets.

Caution: It is of foremost importance that there be free circulation of air around the generator sets at all times during operation. Inadequate ventilation is a major cause of damage to the equipment.

(3) Be sure the transfer switch load cables are connected to the generator sets as illustrated in figure 2-3.

(4) Connect the fuel hoses as illustrated in figure 2-4.

Warning: Never operate the generator set in an enclosed area unless the exhaust gases are piped to the outside. Inhalation of exhaust fumes will result in serious illness or death.

2-4. Starting

a. Perform setting-up and pre-starting procedures (para 2-3).

b. Be sure generator transfer switch is OFF (fig. 2-3).

c. Start the generator set as instructed in TM 5-6115-271-15.

2-5. Stopping

a. Turn generator transfer switch OFF or in position to select standby generator (fig. 2-3).


b. Stop the generator set as instructed in TM 5-6115-271-15.

2-6. Operation

a. Start the generator (para. 2-4) and position transfer switch to desired generator.

b. Operate the generator as instructed in TM 5-6115-271-15.

c. Perform the fuel transfer procedure as instructed in figure 2-4.

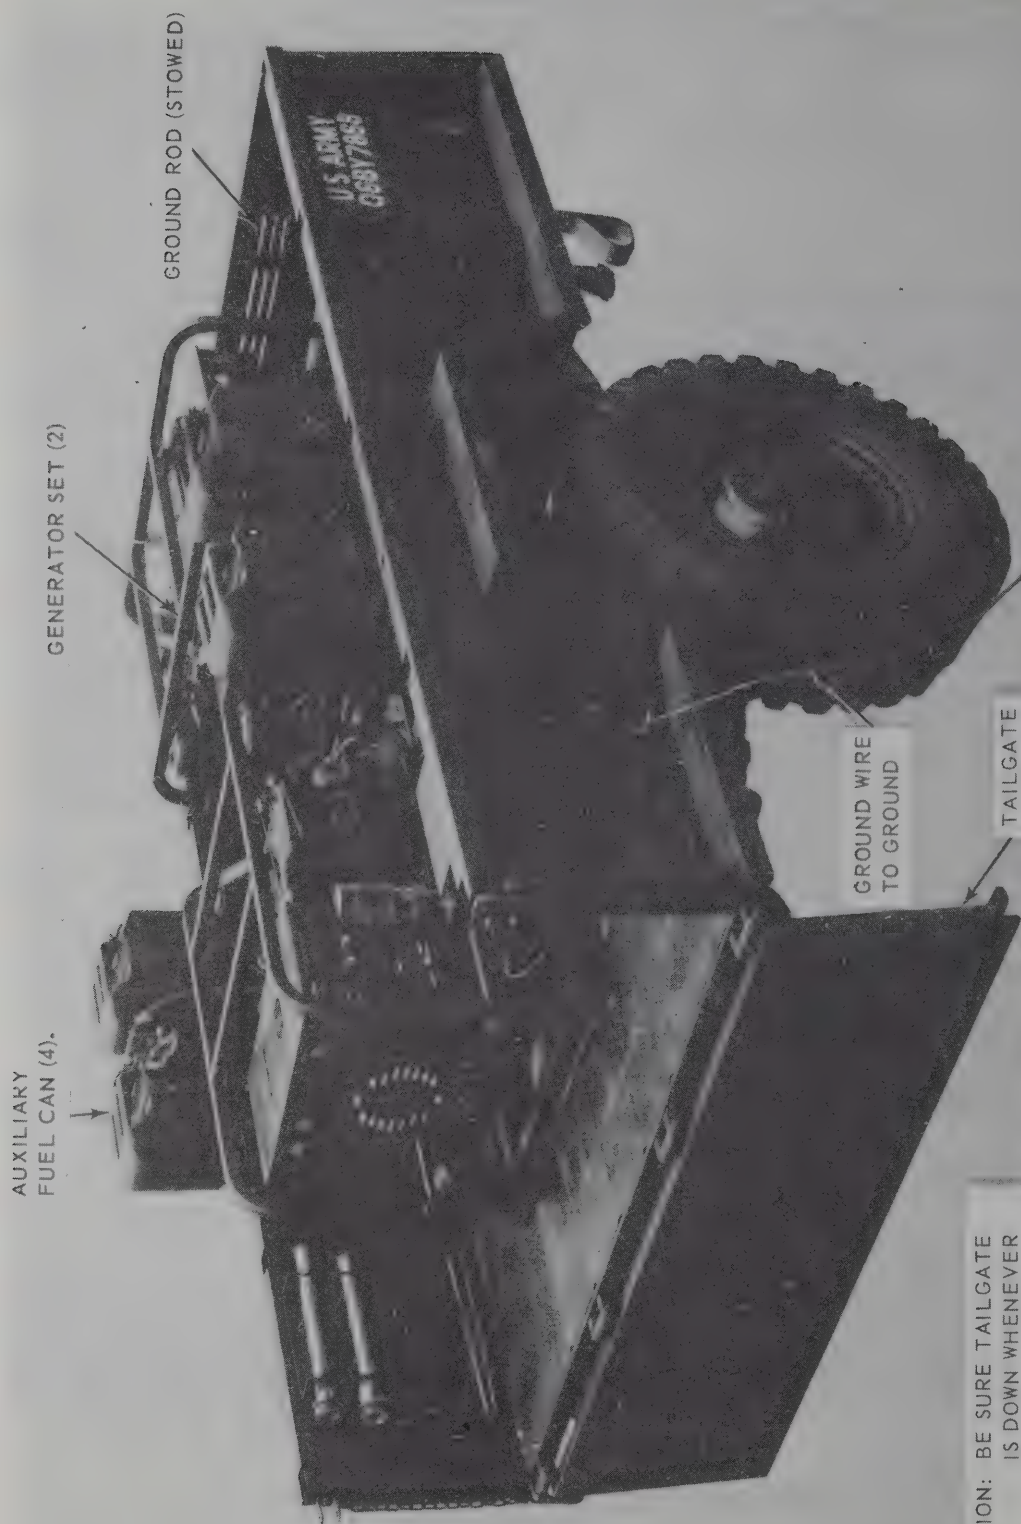

AUXILIARY
FUEL CAN (4).

GENERATOR SET (2)

GROUND ROD (STOWED)

GROUND WIRE
TO GROUND

TAILGATE

CAUTION: BE SURE TAILGATE
IS DOWN WHENEVER
GENERATOR SET IS
OPERATING. MAXIMUM
CIRCULATION OF AIR
IS ESSENTIAL.

ME 6115-365-15/2-2 ① CI

Figure 2-2. PU-617/M set up for operation.


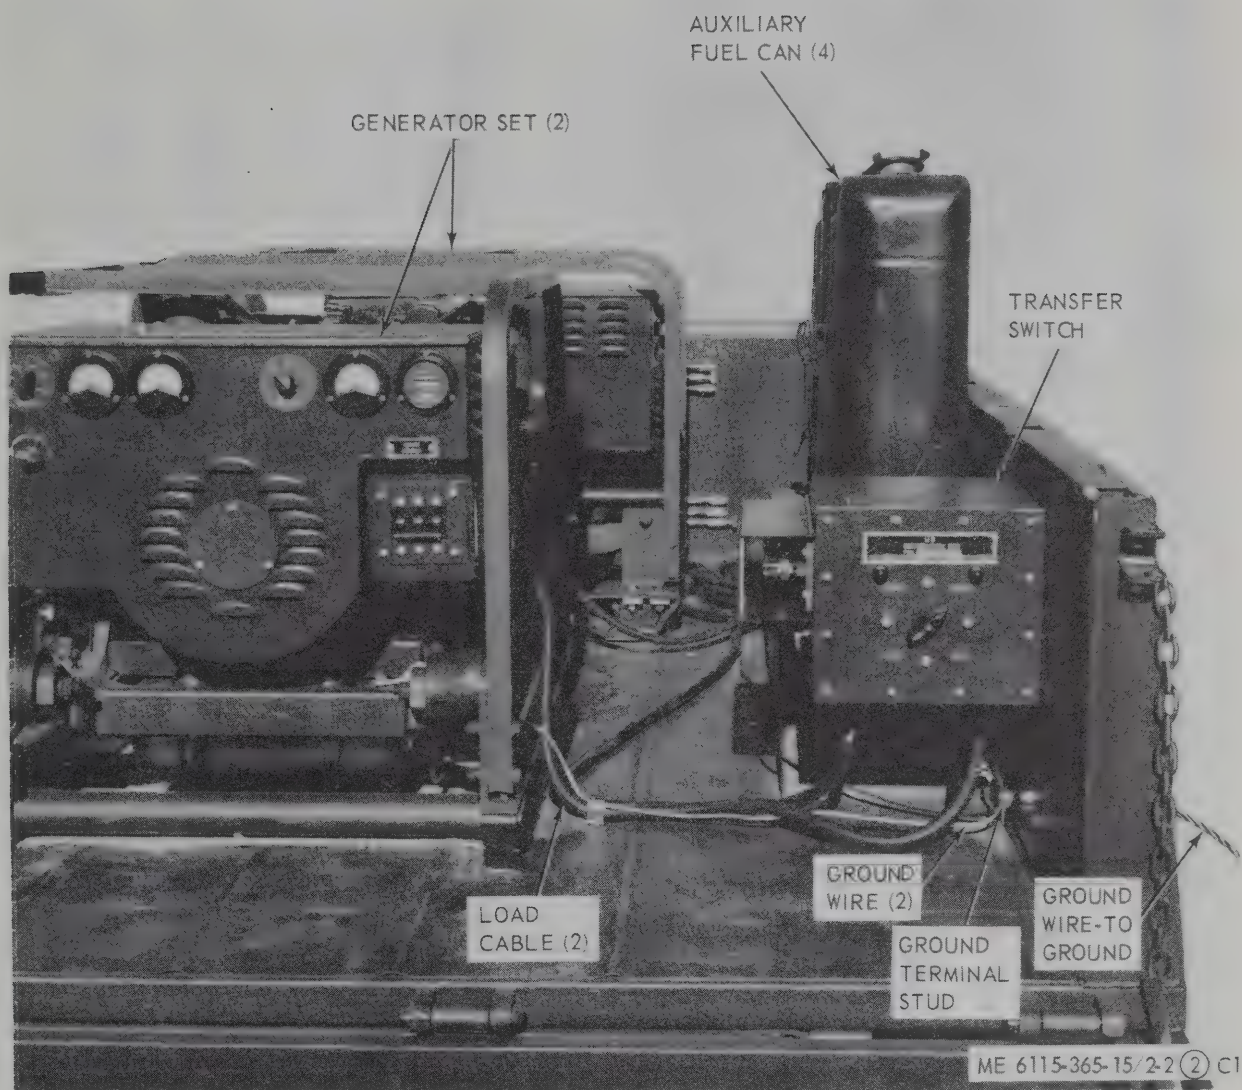


Figure 2-2. — Continued.

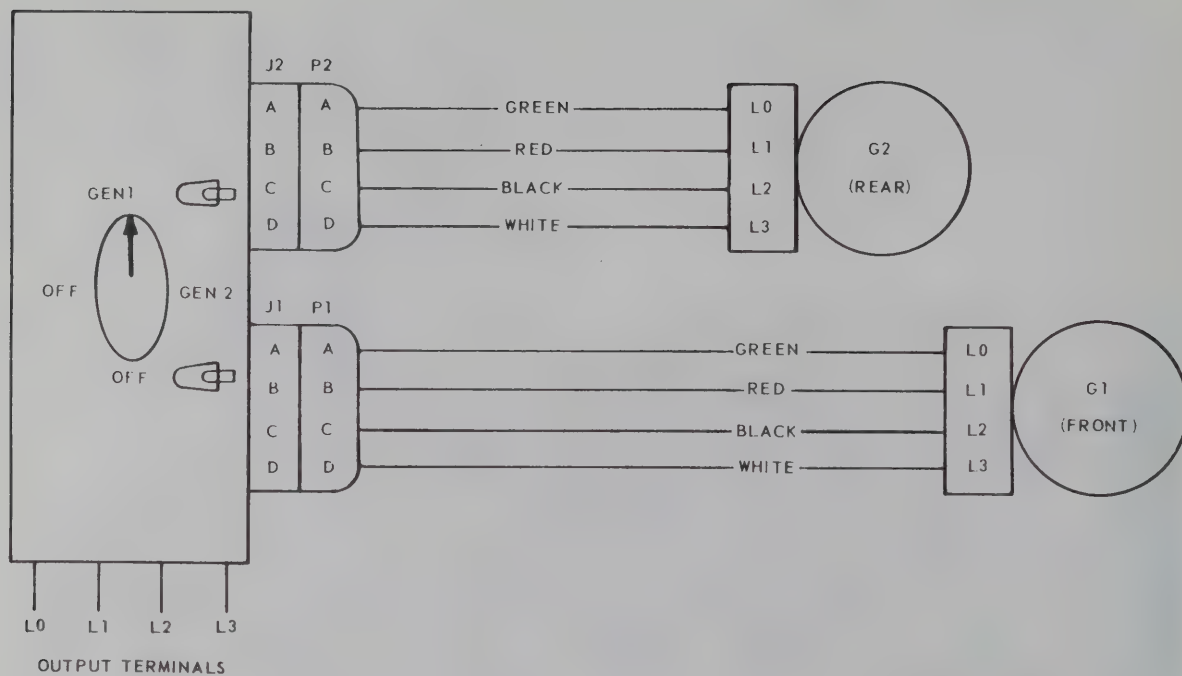


MEC 6115-365-15/2-2

Figure 2-3. Interconnection diagram, transfer switch-to-generators.

FUEL SYSTEM OPERATION.

1. CONNECT THE AUXILIARY FUEL HOSE TO THE 3-WAY FUEL SELECTOR VALVE AND CONNECT THE OTHER END TO THE ADAPTER INSTALLED IN ONE OF THE 5-GALLON AUXILIARY FUEL CANS.
2. POSITION THE SELECTOR VALVE TO DRAW FUEL FROM THE GENERATOR-MOUNTED FUEL TANK. START THE GENERATOR AND BRING IT UP TO OPERATING SPEED.
3. POSITION THE SELECTOR VALVE TO DRAW FUEL FROM THE AUXILIARY FUEL CAN. OPERATE THE GENERATOR FOR APPROXIMATELY 4 HOURS ON THE AUXILIARY FUEL CAN, THEN TURN THE SELECTOR VALVE TO DRAW FUEL FROM THE GENERATOR-MOUNTED FUEL TANK.
4. SWITCH THE ADAPTER TO THE OTHER AUXILIARY FUEL CAN AND TURN THE SELECTOR VALVE BACK TO AUXILIARY FUEL SUPPLY POSITION.

NOTE: THIS PROCEDURE PERMITS LONGER OPERATION BETWEEN REFUELING PERIODS.

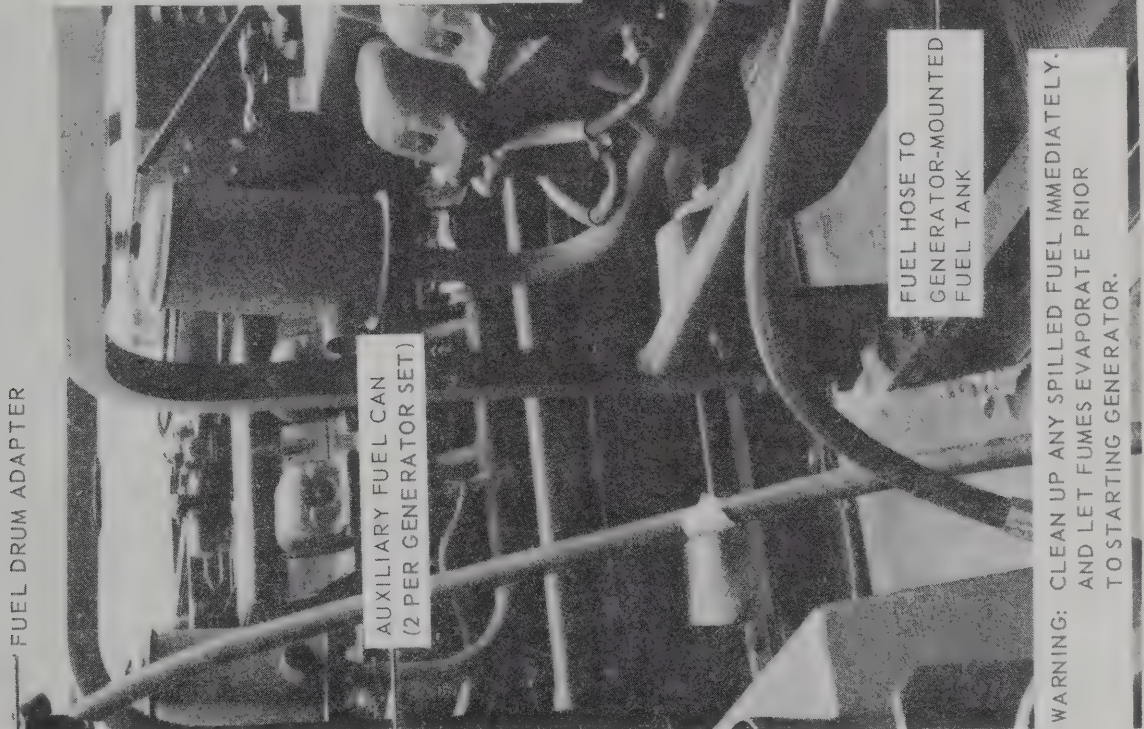

ME 6115-365-15/2-4 C1

Figure 2-4. Fuel system connection and transfer procedure.


Section III. OPERATOR'S MAINTENANCE INSTRUCTIONS**2-7. Transfer Switch Indicating Lamps**

a. Removal. Remove the indicating lamps as illustrated in figure 2-5.

b. Installation. Install the indicator light lamps as illustrated in figure 2-5.

2-8. Field Expedient Repairs

Trouble	Probable cause	Remedy
Power transfer switch will not supply power to load.	Switch or terminal board defective.	Disconnect generator sets from transfer cables and connect load cables directly to the individual terminal boards of the generator sets.

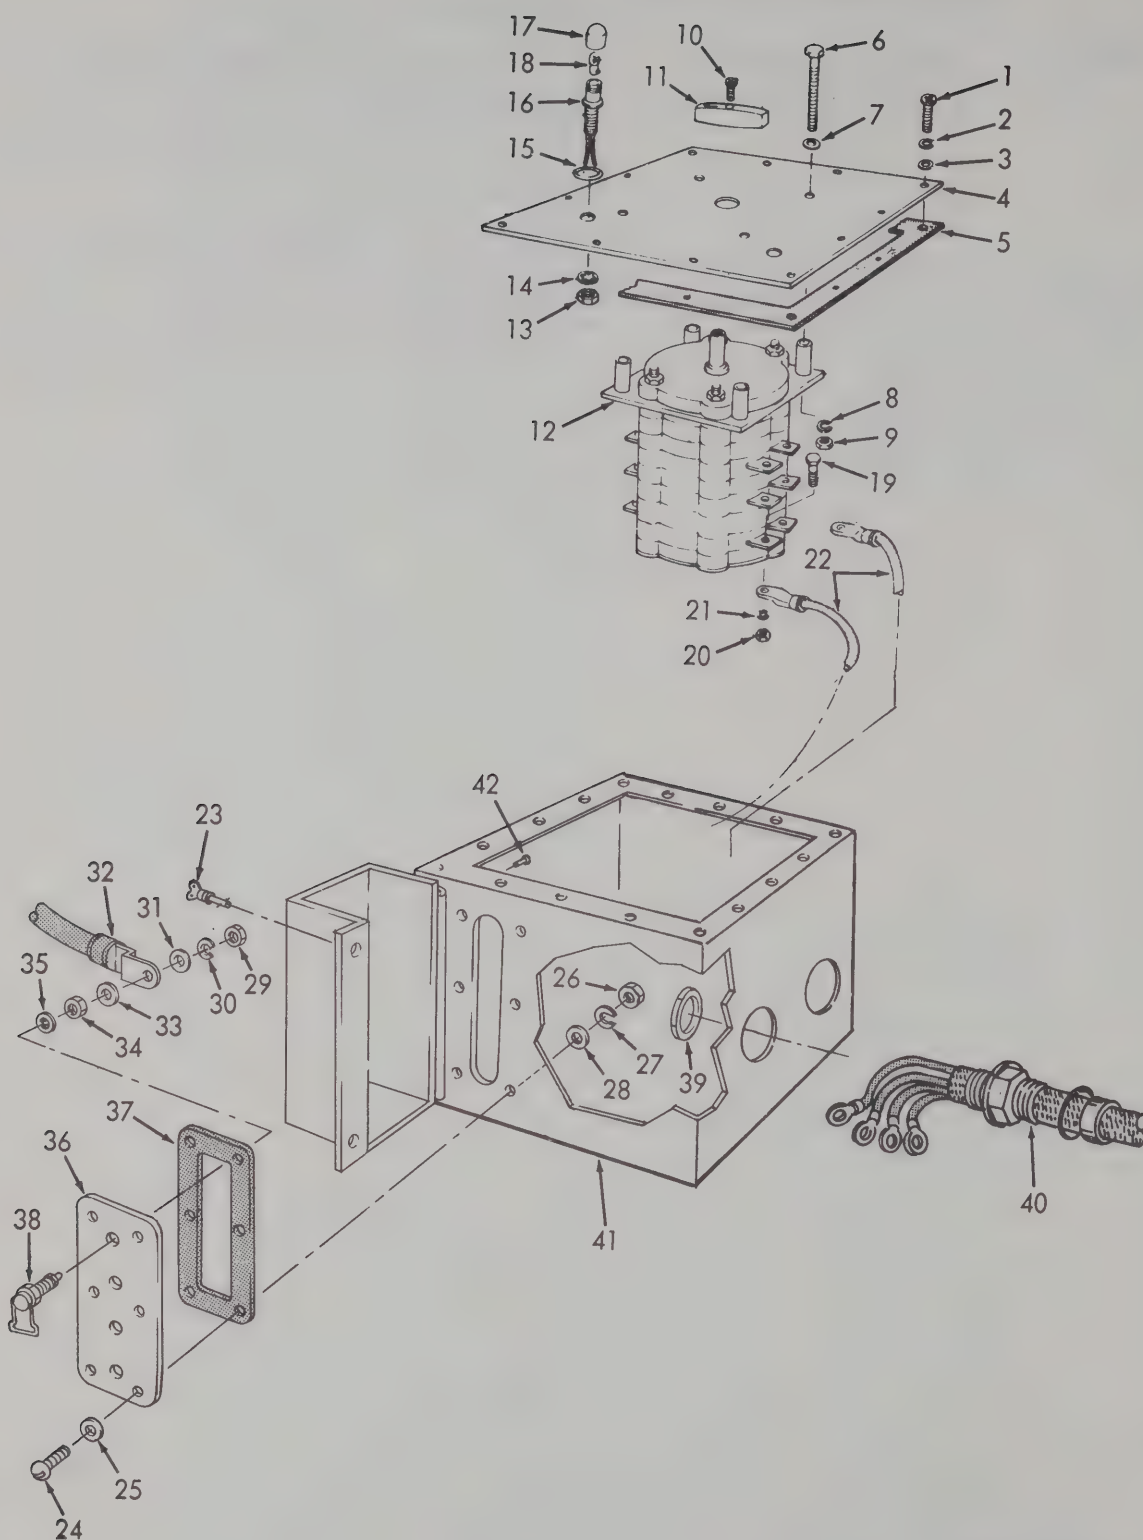

ME 6115-365-15/2-5 C1

Figure 2-5. Transfer switch, removal, disassembly, reassembly, and installation.

1 Screw	15 Preformed packing	29 Hexnut
2 Lockwasher	16 Light and wire assembly	30 Lockwasher
3 Flat washer	17 Lens	31 Flatwasher
4 Cover	18 Lamp	32 Electrical lead
5 Gasket	19 Screw	33 Flat washer
6 Screw	20 Hexnut	34 Hex nut
7 Flat washer	21 Lockwasher	35 Lockwasher
8 Lockwasher	22 Electrical lead	36 Terminal board
9 Hexnut	23 Fastener	37 Gasket
10 Screw	24 Screw	38 Terminal lug
11 Knob	25 Flat washer	39 Locknut
12 Transfer switch	26 Hex nut	40 Stuffing tube assembly
13 Hex nut	27 Lockwasher	41 Transfer switch box
14 Lockwasher	28 Flat washer	42 Rivet

Figure 2-5—Continued.

Section IV. ORGANIZATIONAL MAINTENANCE INSTRUCTIONS

2-9. Transfer Switch Indicating Lights

a. Removal. Remove the indicating lights as illustrated in figure 2-5.

b. Installation. Install the indicator or lights as illustrated in figure 2-5.

2-10. Ground Wires and Terminal Stud

a. Removal. Remove the ground wires from the ground terminal and generator sets as shown in figure 2-2. Remove the terminal stud.

b. Installation. Install the ground wires, and terminal stud as shown in figure 2-2.

Section V. DIRECT AND GENERAL SUPPORT AND DEPOT MAINTENANCE INSTRUCTIONS

2-11. Generator Transfer Switch

a. Removal and Disassembly.

(1) Tag and disconnect leads from the output terminals to load.

(2) Remove and disassemble the transfer switch as illustrated in figure 2-5.

b. Reassembly and Installation.

(1) Reassemble and install the transfer switch as illustrated in figure 2-5.

(2) Connect load connections. (Refer to fig. 2-6).

2-12. Generator Sets

a. Removal. Using figure 2-7 as a guide, perform the following steps:

(1) Disconnect fuel lines.

(2) Disconnect electrical leads and cables.

(3) Disconnect oil drain adapters.

(4) Remove 8 bolts that secure the two generator sets to the trailer and remove the generator sets.


b. Installation. Using figure 2-7 as a guide, perform the following steps:

(1) Secure the two generator sets to the trailer bed with 8 bolts.

(2) Connect the oil drain adapters.


(3) Connect the electrical leads and cables.

(4) Connect fuel lines.

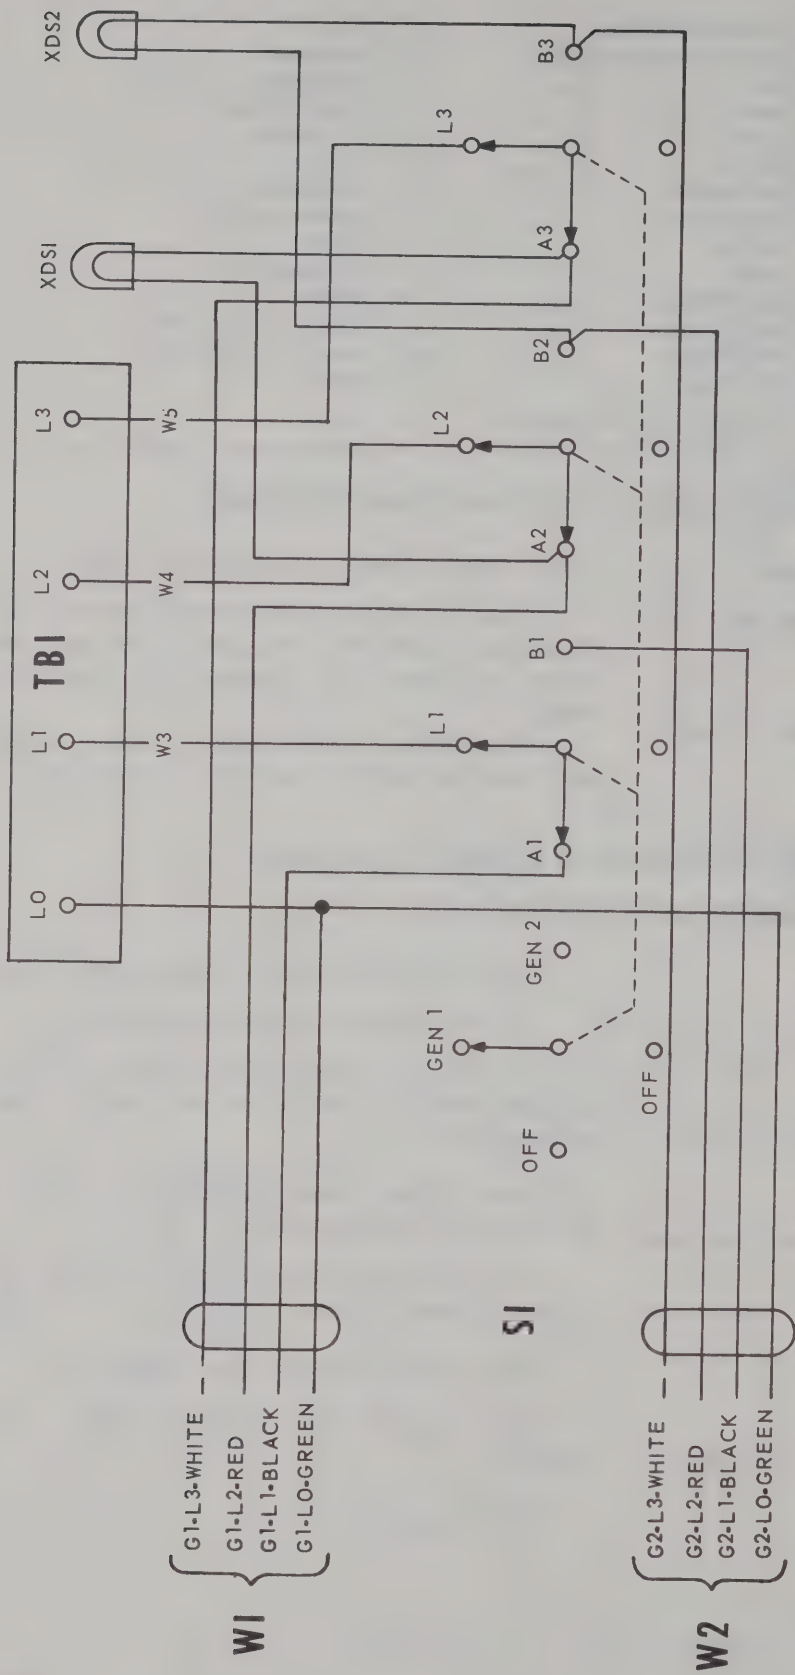

ME 6115-365-15/2-6 C1

Figure 2-6. Transfer switch wiring diagram.

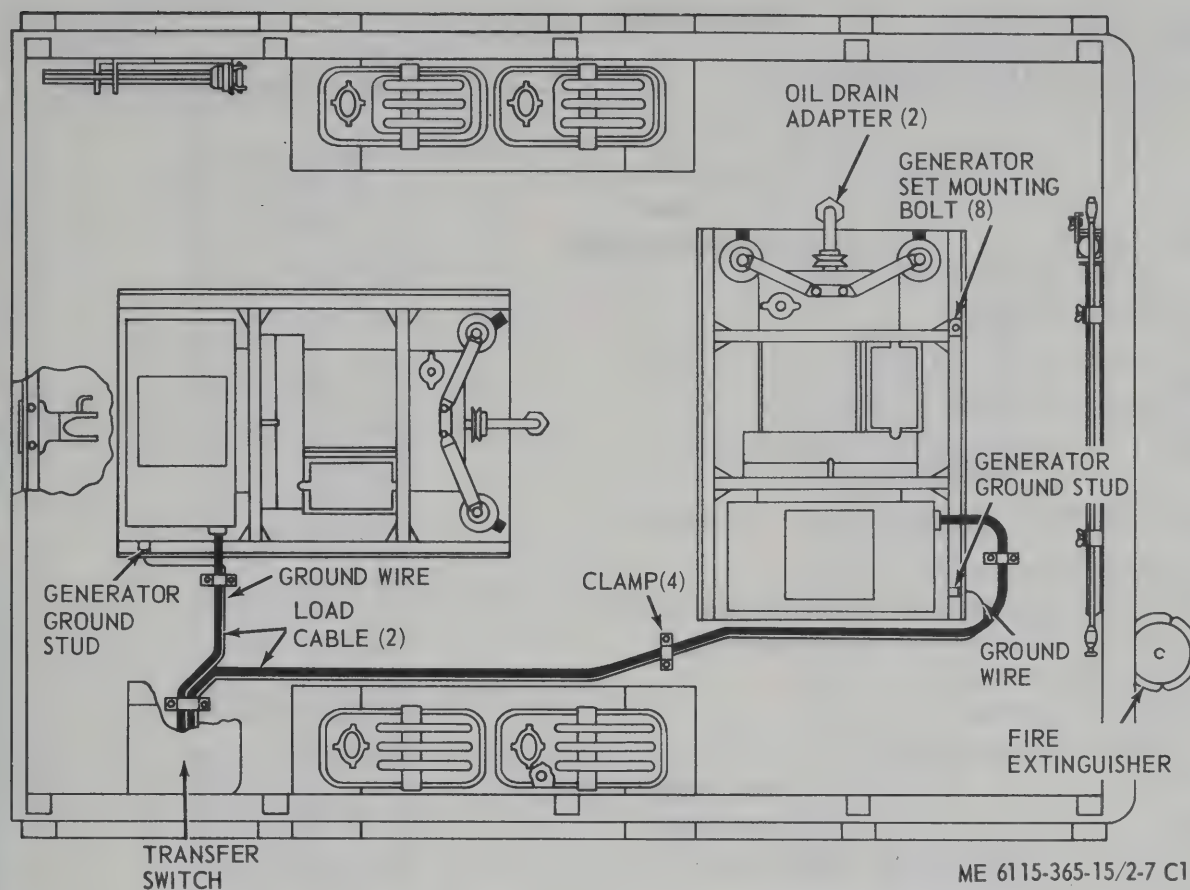

ME 6115-365-15/2-7 C1

Figure 2-7. PU-617M overall component location diagram.

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(e) FIG. NO.	(f) ITEM NO.
		REF NUMBER & MFR CODE								
		PART I								
		REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE								
		GROUP 01 - ENGINE								
		0106 - ENGINE LUBRICATION SYSTEM								
00001										
00002										
0	4730-270-4581	ADAPTER: 1/2-20 x 1/4-18	EA	2	*	*	*	*		
00003										
P 0	4730-908-3194	CLAMP	EA	4	*	*	*	*		
00004		MS35842-11 (96906)								
0	4820-277-1765	COCK, PLUG, SPRING, KEY: 1/4-18 x 1/4-18	EA	2	*	*	*	*		
00005										
0	4730-278-6317	COUPLING: 1/4, iron pipe size	EA	2	*	*	*	*		
00006										
M 0		HOSE: 1/2-10 x 10 in. lg, oil drain	EA	2						
00007		SAEJ30CL30RSTYP1 (81348)								
		MANUFACTURE FROM:								
P 0	4730-684-6032	HOSE: 1/2-10, oil drain (As required)	FT			SKE	GRP	9501		
00008		SAEJ30CL30RS (81348)								
0	5310-584-5272	LOCK, WASHER: 1/2 in.	EA	2	*	*	*	*		
00009										
0	4730-196-1465	NIPPLE, CLOSE: 1/4 iron pipe size x 7/8, lg	EA	2	*	*	*	*		
00010										
0	4730-196-1502	NIPPLE: 1/4, iron pipe size, x 1-1/2, lg	EA	2	*	*	*	*		
00011										
0	5310-282-7818	NUT: 1/2 in.	EA	2	*	*	*	*		
00012										
0	5330-684-3430	"O" RING	EA	2	*	*	*	*		
00013										
0	4730-277-6447	UNION, BULK HEAD	EA	2	*	*	*	*		
00014										
00015		GROUP 15 - FRAME, TOWING, ATTACHMENTS, AND DRAWBARS								
00016		1501 - FRAME ASSEMBLY								
X2 0	2590-473-6331	BRACKET ASSEMBLY: liquid count, 5 gal	EA	4						
00017		MS53052-1 (96906)								
X2 0		BRACKET ASSEMBLY, SLEDGE HAMMER	EA	1						
00018		13214E1214 (97403)								
X2 0		CLAMP	EA	3						
00019		13212E3573 (97403)								
X2 0		CLAMP	EA	1						
00020		13212E3572 (97403)								
X2 0		CLAMP, GROUND ROD	EA	4						
00021		13212E3617-1 (97403)								
X2 0		CLIP SPRING, SLEDGE HAMMER	EA	1						
00022		13214E1213-1 (97403)								
X2 0		HOLDER, FUEL ADAPTER	EA	4						
00023		13211E4889-2 (97403)								
X2 0		HOLDER, FUEL DRUM ADAPTER	EA	2						
00024		13212E3553-1 (97403)								
X2 0		HOLDER, SPOUT, CAN, FLEXIBLE	EA	2						
00025		13212E3553-2 (97403)								
X2 0		NUT, PLAIN, HEXAGON: No. 4-40 machine, screw	EA	8						
00026		MS35649-242 (96906)								
X2 0		NUT, SELF-LOCKING, HEXAGON: 1/4-20	EA	6						
00027		MS51922-1 (96906)								
X2 0		NUT, SELF-LOCKING, HEXAGON: 1/4-20	EA	1						
00028		MS51922-1 (96906)								
X2 0		NUT, SELF-LOCKING, HEXAGON: 1/4-20	EA	2						
00029		MS51922-1 (96906)								

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00030		NUT, SELF-LOCKING, HEXAGON: 1/4 x 20 MS51922-1 (96906)		EA	4					
X2 0 00031		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)		EA	8					
X2 0 00032		NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)		EA	16					
X2 0 00033		NUT, SELF-LOCKING, HEXAGON: 5/16-18 MS51922-9 (96906)		EA	4					
X2 0 00034		NUT, SELF-LOCKING, HEAD: 5/16-18 MS51922-9 (96906)		EA	4					
X2 0 00035		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 1, lg MS90725-8 (96906)		EA	2					
X2 0 00036		SCREW, CAP, HEXAGON HEAD MS90725-8 (96906)		EA	6					
X2 0 00037		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4, lg MS90725-6 (96906)		EA	1					
X2 0 00038		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4, lg MS90725-6 (96906)		EA	2					
X2 0 00039		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 1-1/4 MS90725-62 (96906)		EA	16					
X2 0 00040		SCREW, CAP, HEXAGON HEAD: 5/16-18 x 1, lg MS90725-34 (96906)		EA	4					
X2 0 00041		SCREW, CAP, HEXAGON HEAD: 5/16-18 x 1, lg MS90725-34 (96906)		EA	4					
X2 0 00042		SCREW, MACHINE: flat head, 1/4-20 x 3/4, lg MS35190-289 (96906)		EA	8					
X2 0 00043		SCREW, MACHINE, PAN HEAD: 4-40 x 5/8, lg MS35206-218 (96906)		EA	8					
X2 0 00044		WASHER, FLAT: round, 3/8 screw size MS27183-14 (96906)		EA	32					
X2 0 00045		WASHER, FLAT: round, 1/4, nominal size MS27183-10 (96906)		EA	8					
X2 0 00046		WASHER, FLAT: round, 1/4 nominal size MS27183-10 (96906)		EA	2					
X2 0 00047		WASHER, FLAT: round, 1/4 nominal, size MS27183-10 (96906)		EA	4					
X2 0 00048		WASHER, FLAT: round, 1/4 screw size MS27183-10 (96906)		EA	12					
X2 0 00049		WASHER, FLAT: round, 1/4-20 screw size MS27183-10 (96906)		EA	4					
X2 0 00050		WASHER, FLAT: round, 4-10 screw size MS27183-3 (96906)		EA	16					
X2 0 00051		WASHER, FLAT: round, 5/16 MS27183-12 (96906)		EA	8					
X2 0 00052		WASHER, FLAT: round, 5/16 screw size MS27183-12 (96906)		EA	8					
X2 0 00053		WASHER, LOCK, SPLIT, HELICAL MS35338-40 (96906)		EA	8					
00054		1507 - LANDING GEAR, LEVELING JACKS (MECHANICAL OR HYDRAULIC)								
P 0 00055	2590-318-6691	TRAILER LEG, PROP ASSEMBLY 13214E1206 (97403)		EA	1	*	*	*	*	
X2 0 00056		BRACKET, TRAILER PROP ASSEMBLY 13214E1207 (97403)		EA	1					

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00057		FITTING, LUBRICATION: 1/8-27 thd MS15006-1 (96906)	EA	1						
X2 0 00058		LEG, BASE 13214E1212 (97403)	EA	1						
X2 0 00059		LEG, UPPER 13214E1208 (97403)	EA	1						
X2 0 00060		NUT 13214E1211 (97403)	EA	1						
X2 0 00061		NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)	EA	3						
X2 0 00062		PIN, COTTER: 1/8 dia, x 3/4, lg MS24665-351 (96906)	EA	1						
X2 0 00063		RIVET, SOLID: universal head, 1/4 x 2, lg MS20613-8P32 (96906)	EA	1						
X2 0 00064		SCREW 13214E1210 (97403)	EA	1						
X2 0 00065		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 1-1/4 MS90725-62 (96906)	EA	3						
X2 0 00066		SHAFT 13214E1209 (97403)	EA	1						
X2 0 00067		WASHER, FLAT: round, 3/8 nominal size MS27183-14 (96906)	EA	6						
00068		GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS								
00069		2202 - ACCESSORY ITEMS								
P C 00070	2910-066-1235	ADAPTER ASSEMBLY, FUEL DRUM 13211E7541 (97403)	EA	2	*	*	*	*		
P O 00071	7240-222-3088	CAN, GASOLINE: 5 gallon, Military MILG1283 (81349)	EA	4	*	*	*	*		
P C 00072	5120-203-4656	HAMMER HAND: double face, 8 lb GGGH86TYPEXCLASS1 (81348)	EA	1	*	*	*	*		
X2 0 00073		NUT, PLAIN, HEXAGON: brass, 3/8-16 MS16203-27 (96906)	EA	1						
P C 00074	5975-878-3791	ROD, GROUND: w/attachments MILR11461TYPE2STYLE2 (81349)	EA	2	*	*	*	*		
X2 0 00075		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 3/4, lg MS35309-358 (96906)	EA	1						
X2 0 00076		SPOUT CAN: flexible, w/adapter assembly MILS1285 (81349)	EA	2						
X2 0 00077		TERMINAL, LUG, CRIMP: No. 6 3/8, stud MS20659-110 (96906)	EA	3						
X2 0 00078		WASHER, FLAT, BRASS, ELECTRIC: 3/8 thd size AN961-66T (88044)	EA	2						
00079		2210 - DATA PLATES AND INSTRUCTION HOLDERS								
X2 0 00080		PLATE, IDENTIFICATION: ground term 13205E4918 (97403)	EA	1						
X2 0 00081		PLATE, IDENTIFICATION 13205E4916-1 (97403)	EA	1						
00082		GROUP 40 - ELECTRICAL MOTOR AND GENERATORS								
00083		4000 - GENERATOR ASSEMBLY								
X2 0 00084		NUT, SELF-LOCKING, HEXAGON: 1/2-13 unc MS51922-33 (96906)	EA	8						
X2 0 00085		SCREW, CAP, HEXAGON HEAD: 1/2-13 x 1-3/4 MS90725-114 (96906)	EA	8						

(1) SWR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE OR CODE	(5) UNIT OF MEAS	(6) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
						(a)	(b)	(c)	(d)	(a)	(b)
						1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00086		SPACER 13212E3554 (97403)		EA	8						
X2 0 00087		WASHER, BEVELED 13206E4482-2 (97403)		EA	8						
X2 0 00088		WASHER, FLAT: round, 1/2 screw size MS27183-18 (96906)		EA	8						
00089		4019 - RADIO INTERFERENCE SUPPRESSION									
M 0 00090		LEAD, GROUND: generator No. 1 to stud, 10 ft MANUFACTURE FROM:		EA	1						
P 0 00091		WIRE, ELECTRICAL: copper, No. 6 QQW343TYPEBCLASS1 (81349)		FT			SEE	GRP	9501		
M 0 00092		LEAD, GROUND: generator No. 2 to stud, 4 ft MANUFACTURE FROM:		EA	1						
P 0 00093		WIRE, ELECTRICAL: No. 6 QQW343TYPEBCLASS1 (81349)		FT			SEE	GRP	9501		
X2 0 00094		NUT, PLAIN, HEXAGON: 3/8-16 MS16203-39 (96906)		EA	2						
X2 0 00095		NUT, PLAIN, HEXAGON: brass, 3/8-16 MS16203-27 (96906)		EA	1						
X2 0 00096		NUT, PLAIN, WING: brass, 3/8-16 MS35425-28 (96906)		EA	1						
X2 0 00097		STUD 13214E1223 (97403)		EA	1						
X2 0 00098		WASHER, FLAT, ELECTRIC: 3/8 in. thd size AN961-66T (88044)		EA	4						
X2 0 00099		WASHER, LOCK: flat external tooth, 3/8 MS35335-91 (96906)		EA	2						
00100		GROUP 42 - ELECTRICAL EQUIPMENT									
00101		4206 - THERMOSTATIC, AUTOMATIC AND MANUAL CONTROL DEVICES									
X2 0 00102		NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)		EA	4						
X2 0 00103		PLATE 13212E3569 (97403)		EA	1						
X2 0 00104		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 1-1/4 MS90725-62 (96906)		EA	4						
X2 0 00105		WASHER, FLAT: round, 3/8 screw MS27183-14 (96906)		EA	8						
00106		GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS									
00107		7638 - PORTABLE FIRE FIGHTING EQUIPMENT									
P C 00108	4210-555-8837	EXTINGUISHER, FIRE W/BACKET MILE52031 (81349)		EA	1	*	*	*	*		
X2 0 00109		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)		EA	4						
X2 0 00110		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 1, 1g MS90725-8 (96906)		EA	4						
X2 0 00111		WASHER MS27183-10 (96906)		EA	8						
00112		GROUP 95 - GENERAL USE STANDARDIZED PARTS									
00113		9501 - HARDWARE SUPPLIES AND BULK MATERIAL, COMMON									
P 0 00114	4730-684-6032	HOSE: 1/2 id SAEJ30CL30RSTY1 (81348)		FT		*	*	*	*		

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS USABLE ON CODE	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
P 0 00115		WIRE, ELECTRICAL: copper, No. 6 uninsulated QQW343TYPEBCLASS1 (81349)	FT		*	*	*	*		

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
		PART II												
		REPAIR PARTS FOR DS, GS, AND DEPOT MAINTENANCE												
		GROUP 01 - ENGINE												
		0106 - ENGINE LUBRICATION SYSTEM												
00001														
00002														
0	4730-270-4581	ADAPTER: 1/2-20 X 1/4-18	EA	2	*	*	*	*	*	*	*	*		
00003														
P 0	4730-908-3194	CLAMP	EA	4	*	*	2	*	*	2	10	10		
00004		MS35842-11 (96906)												
0	4820-277-1765	COCK, PLUG, SPRING, KEY: 1/4-18 X 1/4-18	EA	2	*	*	*	*	*	*	*	*		
00005														
0	4730-278-6317	COUPLING: 1/4, iron pipe size	EA	2	*	*	*	*	*	*	*	*		
00006														
M 0		HOSE: 1/2-10 X 10 in. lg, oil drain	EA	2										
00007		SAEJ30CL30RSTYP1 (81348)												
		MANUFACTURE FROM:												
P 0	4730-684-6032	HOSE: 1/2-10, oil drain (As required)	FT					SEE	GRP	9501				
00008		SAEJ30CL30RS (81348)												
0	5310-584-5272	LOCK, WASHER: 1/2 in.	EA	2	*	*	*	*	*	*	*	*		
00009														
0	4730-196-1465	NIPPLE, CLOSE: 1/4, iron pipe size, X 7/8, lg	EA	2	*	*	*	*	*	*	*	*		
00010														
0	4730-196-1502	NIPPLE: 1/4, iron pipe size, X 1-1/2, lg	EA	2	*	*	*	*	*	*	*	*		
00011														
0	5310-282-7818	NUT: 1/2 in.	EA	2	*	*	*	*	*	*	*	*		
00012														
0	5330-684-3430	"O" RING	EA	2	*	*	*	*	*	*	*	*		
00013														
0	4730-277-6447	UNION, BULK HEAD	EA	2	*	*	*	*	*	*	*	*		
00014														
00015		GROUP 15 - FRAME, TOWING ATTACHMENTS, AND DRAWBARS												
		1501 - FRAME ASSEMBLY												
X2 0	2590-473-6331	BRACKET ASSEMBLY: liquid count, 5 gal	EA	4										
00017		MS53052-1 (96906)												
X2 0		BRACKET ASSEMBLY, SLEDGE HAMMER	EA	1										
00018		13214E1214 (97403)												
X2 0		CLAMP	EA	3										
00019		13212E3573 (97403)												
X2 0		CLAMP	EA	1										
00020		13212E3572 (97403)												
X2 0		CLAMP, GROUND ROD	EA	4										
00021		13212E3617-1 (97403)												
X2 0		CLIP SPRING, SLEDGE HAMMER	EA	1										
00022		13214E1213-1 (97403)												
X2 0		HOLDER, FUEL ADAPTER	EA	4										
00023		13211E4889-2 (97403)												
X2 0		HOLDER, FUEL DRUM ADAPTER	EA	2										
00024		13212E3553-1 (97403)												
X2 0		HOLDER, SPOUT, CAN, FLEXIBLE	EA	2										
00025		13212E3553-2 (97403)												
X2 0		NUT, PLAIN, HEXAGON: No. 4-40 machine, screw	EA	8										
00026		MS35649-242 (96906)												
X2 0		NUT, SELF-LOCKING, HEXAGON: 1/4-20	EA	6										
00027		MS51922-1 (96906)												
X2 0		NUT, SELF-LOCKING, HEXAGON: 1/4-20	EA	1										
00028		MS51922-1 (96906)												

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 30-DAY DS MAINT ALLOWANCE	(7) 30-DAY GS MAINT ALLOWANCE	(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
									(a)	(b)
					(a)	(b)	(c)	(a)	(b)	(c)
					1-20	21-50	51-100	1-20	21-50	51-100
X2 0 00029		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)		EA	2					
X2 0 00030		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)		EA	4					
X2 0 00031		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)		EA	8					
X2 0 00032		NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)		EA	16					
X2 0 00033		NUT, SELF-LOCKING, HEXAGON: 5/16-18 MS51922-9 (96906)		EA	4					
X2 0 00034		NUT, SELF-LOCKING, HEAD: 5/16-18 MS51922-9 (96906)		EA	4					
X2 0 00035		SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1, 1g MS90725-8 (96906)		EA	2					
X2 0 00036		SCREW, CAP, HEXAGON HEAD MS90725-8 (96906)		EA	6					
X2 0 00037		SCREW, CAP, HEXAGON HEAD: 1/4-20 X 3/4, 1g MS90725-6 (96906)		EA	1					
X2 0 00038		SCREW, CAP, HEXAGON HEAD: 1/4-20 X 3/4, 1g MS90725-6 (96906)		EA	2					
X2 0 00039		SCREW, CAP, HEXAGON HEAD: 3/8-16 X 1-1/4 MS90725-62 (96906)		EA	16					
X2 0 00040		SCREW, CAP, HEXAGON HEAD: 5/16-18 X 1, 1g MS90725-34 (96906)		EA	4					
X2 0 00041		SCREW, CAP, HEXAGON HEAD: 5/16-18 X 1, 1g MS90725-34 (96906)		EA	4					
X2 0 00042		SCREW, MACHINE: flat head, 1/4-20 X 3/4, 1g MS35190-289 (96906)		EA	8					
X2 0 00043		SCREW, MACHINE, PAN HEAD: 4-40 X 5/8, 1g MS35206-218 (96906)		EA	8					
X2 0 00044		WASHER, FLAT: round, 3/8, screw size MS27183-14 (96906)		EA	32					
X2 0 00045		WASHER, FLAT: round, 1/4, nominal size MS27183-10 (96906)		EA	8					
X2 0 00046		WASHER, FLAT: round, 1/4, nominal size MS27183-10 (96906)		EA	2					
X2 0 00047		WASHER, FLAT: round, 1/4, nominal size MS27183-10 (96906)		EA	4					
X2 0 00048		WASHER, FLAT: round, 1/4, screw size MS27183-10 (96906)		EA	12					
X2 0 00049		WASHER, FLAT: round, 1/4-20, screw size MS27183-10 (96906)		EA	4					
X2 0 00050		WASHER, FLAT: round, 4-10, screw size MS27183-3 (96906)		EA	16					
X2 0 00051		WASHER, FLAT: round, 5/16 MS27183-12 (96906)		EA	8					
X2 0 00052		WASHER, FLAT: round, 5/16, screw size MS27183-12 (96906)		EA	8					
X2 0 00053		WASHER, LOCK, SPLIT, HELICAL MS35338-40 (96906)		EA	8					

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
00054		1507 - LANDING GEAR, LEVELING JACKS (MECHANICAL OR HYDRAULIC)												
P 0 00055	2590-318-6691	TRAILER LEG, PROP ASSEMBLY 13214E1206 (97403)		EA 1	*	*	2	*	*	2	10	10		
X2 0 00056		BRACKET, TRAILER PROP ASSEMBLY 13214E1207 (97403)		EA 1										
X2 0 00057		FITTING, LUBRICATION: 1/8-27 thd MS15006-1 (96906)		EA 1										
X2 0 00058		LEG, BASE 13214E1212 (97403)		EA 1										
X2 0 00059		LEG, UPPER 13214E1208 (97403)		EA 1										
X2 0 00060		NUT 13214E1211 (97403)		EA 1										
X2 0 00061		NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)		EA 3										
X2 0 00062		PIN, COTTER: 1/8 dia, X 3/4, 1g MS24665-351 (96906)		EA 1										
X2 0 00063		RIVET, SOLID: universal head, 1/4 X 2, 1g MS20613-8P32 (96906)		EA 1										
X2 0 00064		SCREW 13214E1210 (97403)		EA 1										
X2 0 00065		SCREW, CAP, HEXAGON HEAD: 3/8-16 X 1-1/4 MS90725-62 (96906)		EA 3										
X2 0 00066		SHAFT 13214E1209 (97403)		EA 1										
X2 0 00067		WASHER, FLAT: round, 3/8, nominal size MS27183-14 (96906)		EA 6										
00068		GROUP 18 - BODY, CAB, HOOD AND HULL												
00069		1810 - CARGO BODY												
X2 DR 00070		TRAILER 13212E3552 (97403)		EA 1										
00071		GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS												
00072		2202 - ACCESSORY ITEMS												
P C 00073	2910-066-1235	ADAPTER ASSEMBLY, FUEL DRUM 13211E7541 (97403)		EA 2	*	*	2	*	*	2	10	10		
P 0 00074	7240-222-3088	CAN, GASOLINE: 5 gallon, Military MILG1283 (81349)		EA 4	*	*	2	*	*	2	10	10		
P C 00075	5120-203-4656	HAMMER HAND: double face, 8 lb GGGH86TYPEXCLASS1 (81348)		EA 1	*	*	2	*	*	2	10	10		
X2 0 00076		NUT, FLAIN, HEXAGON: brass, 3/8-16 MS16203-27 (96906)		EA 1										
P C 00077	5975-878-3791	ROD GROUND: w/attachments MILR11461TYPE2STYLE2 (81349)		EA 2	*	*	2	*	*	2	10	10		
X2 0 00078		SCREW, CAP, HEXAGON HEAD: 3/8-16 X 3/4, 1g MS35309-358 (96906)		EA 1										
X2 0 00079		SPOUT CAN: flexible, w/adaptor assembly MILS1285 (81349)		EA 2										
X2 0 00080		TERMINAL LUG, CRIMP: No. 6 3/8, stud MS20659-110 (96906)		EA 3										


(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 O 00081		WASHER, FLAT, BRASS, ELECTRIC: 3/8 thd size AN961-66T (88044)	EA	2										
00082		2210 - DATA PLATES AND INSTRUCTION HOLDERS												
X2 O 00083		PLATE, IDENTIFICATION: ground terminal 13205E4918 (97403)	EA	1										
X2 O 00084		PLATE, IDENTIFICATION 13205E4916-1 (97403)	EA	1										
X2 F 00085		PLATE INFORMATION, WIRING DIAGRAM 13214E1499 (97403)	EA	1										
00086		GROUP 40 - ELECTRICAL MOTOR AND GENERATORS												
00087		4000 - GENERATOR ASSEMBLY												
X2 FR 00088	6115-017-8237	GENERATOR SET: 3KW60HZ MILG52367 (81349)	EA	2										
X2 O 00089		NUT, SELF-LOCKING, HEXAGON: 1/2-13 unc MS51922-33 (96906)	EA	8										
X2 O 00090		SCREW, CAP, HEXAGON HEAD: 1/2-13 X 1-3/4 MS90725-114 (96906)	EA	8										
X2 O 00091		SPACER 13212E3554 (97403)	EA	8										
X2 O 00092		WASHER, BEVELED 13206E4482-2 (97403)	EA	8										
X2 O 00093		WASHER, FLAT: round, 1/2, screw size MS27183-18 (96906)	EA	8										
00094		4018 - TERMINAL BLOCKS, JUNCTION BOXES												
X2 F 00095		GASKET 13212E3610 (97403)	EA	1									2-8	24
X2 F 00096		NUT, PLAIN, HEXAGON: brass, 1/4-20, jam MS16203-37 (96906)	EA	8									2-8	26
X2 F 00097		NUT, PLAIN, HEXAGON: No. 10-24 MS35649-202 (96906)	EA	6									2-8	18
X2 F 00098		SCREW, MACHINE: pan head, No. 10-24 X 1, lg MS35206-267 (96906)	EA	6									2-8	21
X2 F 00099		TERMINAL BOARD 13212E3606 (97403)	EA	1									2-8	23
X2 F 00100		TERMINAL LOAD 13208E820-6 (97403)	EA	4									2-8	22
X2 F 00101		WASHER, FLAT: round, No. 8, nominal size MS27183-7 (96906)	EA	12									2-8	7
X2 F 00102		WASHER, FLAT: round, No. 10, nominal size MS27183-8 (96906)	EA	12									2-8	20
X2 F 00103		WASHER, LOCK, SPLIT, HELICAL: 1/4, nominal size MS35338-101 (96906)	EA	8									2-8	27
X2 F 00104		WASHER, LOCK, FLAT: internal tooth, 1/4, screw size MS35333-108 (96906)	EA	4									2-8	25
X2 F 00105		WASHER, LOCK, HELICAL, SPLIT: No. 10, nominal size MS35338-43 (96906)	EA	6									2-8	19

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT. ALLOWANCE			(7) 30-DAY GS MAINT. ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
00106		4019 - RADIO INTERFERENCE SUPPRESSION												
M 0 00107		LEAD, GROUND: generator No. 1 to stud, 10 ft MANUFACTURE FROM:	EA	1										
P 0 00108		WIRE, ELECTRICAL: copper, No. 6 QQW343TYPERBCLASS1 (81349)	FT					SEE	GRP	9501				
M 0 00109		LEAD, GROUND: generator No.2 to stud, 4 ft MANUFACTURE FROM:	EA	1										
P 0 00110		WIRE, ELECTRICAL: No. 6 QQW343TYPERBCLASS1 (81349)	FT					SEE	GRP	9501				
X2 0 00111		NUT, FLAIN, HEXAGON: 3/8-16 MS16203-39 (96906)	EA	2										
X2 0 00112		NUT, FLAIN, HEXAGON: brass, 3/8-16 MS16203-27 (96906)	EA	1										
X2 0 00113		NUT, FLAIN, WING: brass, 3/8-16 MS35425-28 (96906)	EA	1										
X2 0 00114		STUD 13214E1223 (97403)	EA	1										
X2 0 00115		WASHER, FLAT, ELECTRIC: 3/8 in. thd size AN961-66T (88044)	EA	4										
X2 0 00116		WASHER, LOCK: flat external tooth, 3/8 MS35335-91 (96906)	EA	2										
00117		GROUP 42 - ELECTRICAL EQUIPMENT												
00118		4206 - THERMOSTATIC, AUTOMATIC AND MANUAL CONTROL DEVICES												
P2 FR 00119	6110-999-6142	DISTRIBUTION BOX 13212E3555 (97403)	EA	2	*	*	*	*	*	*	2	2		
X2 F 00120		BOX, DISTRIBUTION 13212E3556 (97403)	EA	1									2-8	13
X2 F 00121		CABLE 13212E3570-1 (97403)	EA	1									2-8	15
X2 F 00122		CABLE 13212E3571-1 (97403)	EA	1									2-8	14
X2 F 00123		COVER, DISTRIBUTION BOX 13212E3557 (97403)	EA	1									2-8	1
X2 F 00124		LEAD, ELECTRICAL 13212E3567-1 (97403)	EA	1									2-8	10
X2 F 00125		LEAD, ELECTRICAL 13212E3567-2 (97403)	EA	1									2-8	11
X2 F 00126		LEAD, ELECTRICAL 13212E3567-3 (97403)	EA	1									2-8	12
X2 F 00127		LIGHT AND WIRE 13212E3560 (97403)	EA	2									2-8	2
X2 F 00128		NUT, FLAIN, HEXAGON: jam, 1/4-20 MS35691-1 (96906)	EA	4									2-8	9
X2 F 00129		PACKING, PREFORMED, HYDRAULIC "O" RING MS28775-011 (96906)	EA	4									2-8	4
X2 F 00130		PACKING, PREFORMED, HYDRAULIC "O" RING MS28775-132 (96906)	EA	2									2-8	17
X2 F 00131		PACKING, PREFORMED, HYDRAULIC "O" RING MS28775-111 (96906)	EA	1									2-8	29

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 F 00132	5930-878-6722	SCREW, MACHINE: pan head, 1/4-20 X 3/4 MS35206-281 (96906)	EA	4									2-8	3
X2 F 00133		SCREW, MACHINE: pan head, No. 8-32 X 1/2, 1g MS35206-245 (96906)	EA	12									2-8	5
X2 F 00134		STUFFING TUBE 1321ZE3582-4 (97403)	EA	2									2-8	16
P F 00135		SWITCH, ROTARY: 30 amp 13205E5022 (97403)	EA	1	*	*	*	*	*	*	2	2	2-8	28
X2 F 00136		WASHER, FLAT: round, 1/4,nominal size MS27183-11 (96906)	EA	4									2-8	8
X2 F 00137		WASHER, LOCK, SPLIT, HELICAL: No. 8 MS35338-42 (96906)	EA	12									2-8	6
X2 O 00138		NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)	EA	4										
X2 O 00139		PLATE 1321ZE3569 (97403)	EA	1										
X2 O 00140		SCREW, CAP, HEXAGON HEAD: 3/8-16 X 1-1/4 MS90725-62 (96906)	EA	4										
X2 O 00141		WASHER, FLAT: round, 3/8 screw MS27183-14 (96906)	EA	8										
00142		GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS												
00143		7638 - PORTABLE FIRE FIGHTING EQUIPMENT												
P C 00144		EXTINGUISHER, FIRE W/BACKET MILE52031 (81349)	EA	1	*	*	2	*	*	2	10	10		
X2 O 00145	4210-555-8837	NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)	EA	4										
X2 O 00146		SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1, 1g MS90725-8 (96906)	EA	4										
X2 O 00147		WASHER MS27183-10 (96906)	EA	8										
00148		GROUP 95 - GENERAL USE STANDARDIZED PARTS												
00149		9501 - HARDWARE SUPPLIES AND BULK MATERIAL, COMMON												
P O 00150		HOSE: 1/2, 1d SAEJ30CL30RSTIPE2 (81348)	FT		*	*	*	*	*	*	10	10		
P O 00151		WIRE, ELECTRICAL: copper, No.6,uninsulated QQW343TYPERBCLASS1 (81349)	FT		*	*	*	*	*	*	52	52		

LEGEND TO PARTS, FIGURE 2-8

ITEM NO.	FUNCT GROUP	ITEM NAME
1	4206	COVER
2	4206	LIGHT-WIRE
3	4206	SCREW
4	4206	PACKING
5	4206	SCREW
6	4206	WASHER
7	4018	WASHER
8	4206	WASHER
9	4206	NUT
10	4206	LEAD
11	4206	LEAD
12	4206	LEAD
13	4206	BOX
14	4206	CABLE
15	4206	CABLE
16	4206	STUFFING
17	4206	PACKING
18	4018	NUT
19	4018	WASHER
20	4018	WASHER
21	4018	SCREW
22	4018	TERMINAL LOAD
23	4018	TERMINAL BOARD
24	4018	GASKET
25	4018	WASHER
26	4018	NUT
27	4018	WASHER
28	4206	SWITCH
29	4206	PACKING

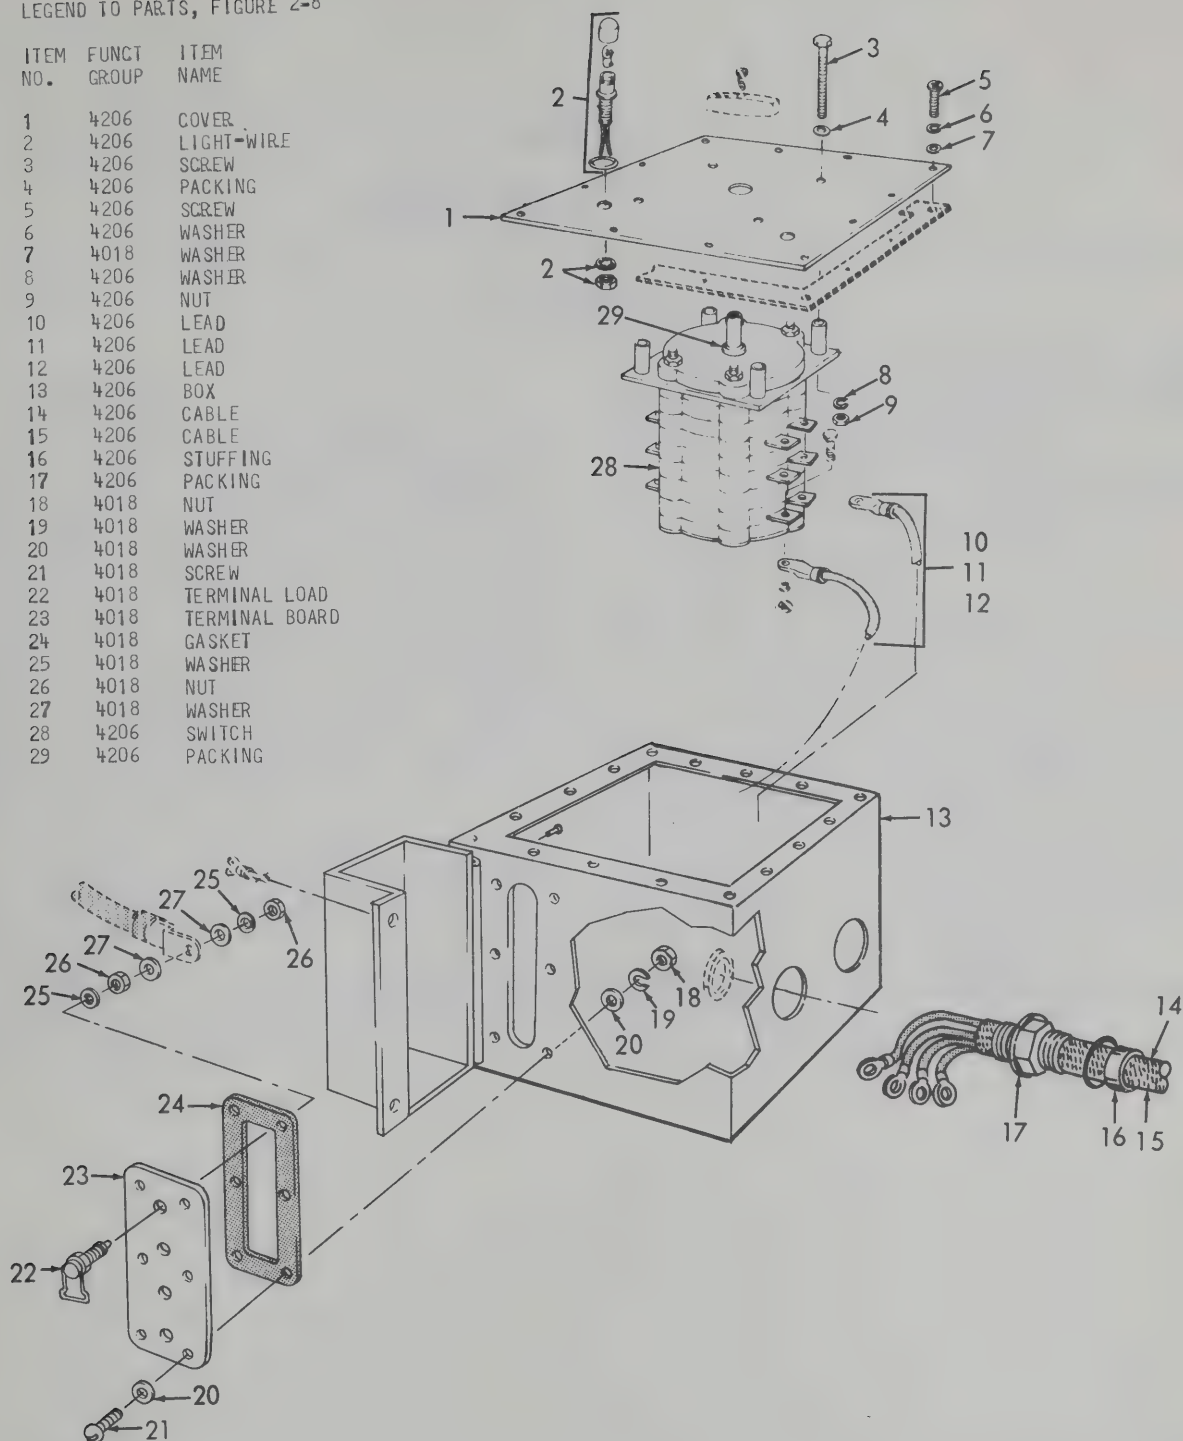

ME 6115-365-15/2-8

Figure 2-8. Distribution box.

CHAPTER 3

GENERATOR SET PU-619/M

Section I. DESCRIPTION AND DATA

3-1. Description

a. General. Two 10 kw, model SF 10.0-MD (military design) generator sets, mounted on 1/2-ton trailer, model M103A, constitute a self-contained mobile unit referred to as Trailer Mounted Generator Set PU 619/M (Refer to fig. 3-1). The two 10 kw generators are powered by directly coupled four-cylinder, 20 hp military standard model 4A084-II engines. A power transfer switch is provided for connecting the generators' output to a common load. PU 619/M includes the components listed below in Table 3-1.

b. Generators. For description and generator operation and maintenance information not covered in this chapter, refer to TM 5-6115-275-12.

c. Engines. For description and engine maintenance information not covered in this chapter, refer to TM 5-2805-259-14.

d. Trailer. For description and trailer maintenance information not covered in this chapter, refer to TM 9-2330-213-14.

e. Lubrication. Refer to LO 9-2330-213-12 and LO 5-2805-259-14 for all lubrication information required for PU-619/M.


3-2. Tabulated Data

Table 3-1 lists the components for PU-619/M.

Table 3-1. PU-619/M Components.

Fsn	Qty	Nomenclature
2330-141-8052	1	Trailer: M103A
6115-075-1641	2	Generator: 10kw, Model SF 10.0-MD
2590-741-1037	1	Log prop assembly, trailer
2910-066-1235	4	Adapter assembly, fuel drum
7240-222-3088	6	Can, gasoline: military 5-gallon
4210-555-8873	2	Fire extinguisher
5975-878-3791	2	Ground rod (w/attachments)
5120-251-4489	1	Sledge hammer

CAUTION: KEEP TARPAULIN ROLLED UP DURING OPERATION AND BE CERTAIN TO MAINTAIN THE MAXIMUM AMOUNT OF SPACE FOR VENTILATION AROUND THE GENERATOR SETS WHEN OPERATING.

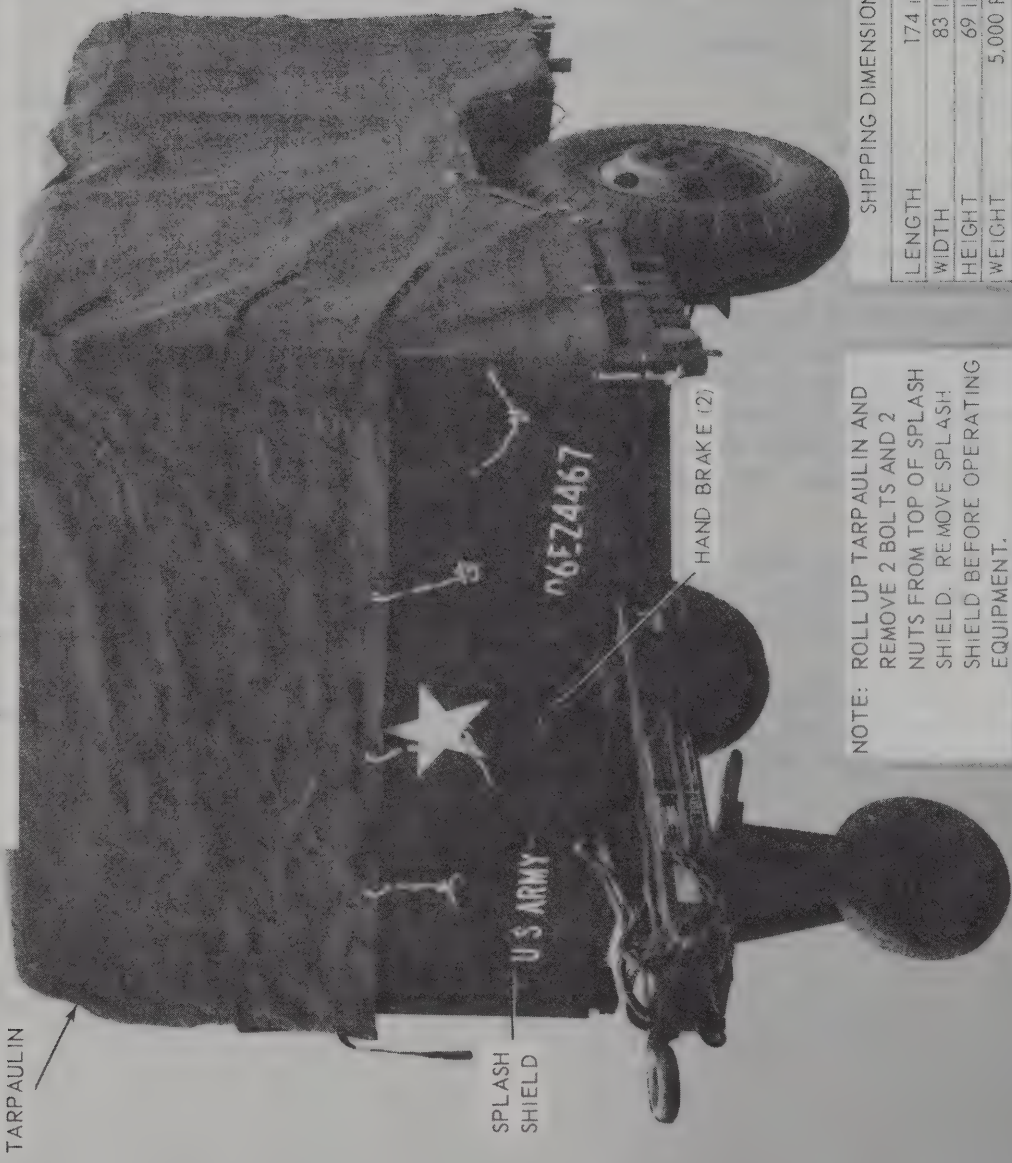

NOTE: ROLL UP TARPAULIN AND REMOVE 2 BOLTS AND 2 NUTS FROM TOP OF SPLASH SHIELD. REMOVE SPLASH SHIELD BEFORE OPERATING EQUIPMENT.

SHIPPING DIMENSIONS:	
LENGTH	174 INCHES
WIDTH	83 INCHES
HEIGHT	69 INCHES
WEIGHT	5,000 POUNDS

ME 6115-365-15 3-1 C1

Figure 3-1. PU-619/M, left front, 3/4 view.

Section II. OPERATING INSTRUCTIONS

3-3. Setting-Up Instructions

a. Leveling.

(1) Locate the trailer on as level a surface as possible in order for the generator sets to operate efficiently.

(2) Set brakes and block wheels securely to prevent any movement. Operate the hand-brake at weekly intervals to assure freedom of linkage.

(3) Pull leg support down and adjust length for firm contact with ground.

Warning: Wheels must be blocked, brakes set, and leg support down in support position before attempting to roll up the tarpaulin and before starting to assemble or set-up the equipment for operation.

b. Preparation for Starting.

(1) Roll up tarpaulin and remove splash shield as instructed in figure 3-1.

(2) Remove all loose auxiliary items and anything else that might block the free circulation of air through the trailer and around the generator sets.

Caution: It is of foremost importance that there be free circulation of air around the generator sets at all times during operation. Inadequate ventilation is a major cause of damage to the equipment.

(3) Be sure transfer switch load cables are connected to the generator sets as illustrated in figure 3-2.

c. Grounding.

Warning: Never operate the generator set until it has been properly grounded. Electrical defects in the load lines or equipment can cause death by electrocution when contact is made with an ungrounded system.

(1) The generator set must be grounded prior to operation. The ground may be any of three methods, depending on the location and terrain.

(a) A ground rod driven to a depth of 8 feet.

(b) An underground metallic water piping system.

(c) A metal plate (9 sq ft) buried at a depth of 4 feet.

(2) The ground lead must be No. 6 AWG copper wire bolted or clamped to the rod, plate, or piping system.

(3) Connect the other end of the ground lead to the generator set ground stud as shown in figure 3-3.

(4) Be sure that both generators are connected to the generator set ground stud as shown in figure 3-3.

d. Fuel Hose Connection. Connect the fuel hoses as illustrated in figure 3-4.

Warning: Never operate the generator set in an enclosed area unless the exhaust gases are piped to the outside. Inhalation of exhaust fumes will result in serious illness or death.

3-4. Starting

a. Perform the setting-up and pre-starting procedures (para 3-3).

b. Be sure the generator transfer switch is OFF (fig. 3-2).

c. Start the generator set as instructed in TM 5-6115-275-12.

3-5. Stopping

a. Turn generator transfer switch OFF or in position to select standby generator (figure 3-2).


b. Stop the generator set as instructed in TM 5-6115-275-12.

3-6. Operation

a. Start the generator (para 3-4) and position transfer switch to desired generator.


b. Operate the generator as instructed in TM 4-6115-275-12.

c. Perform the fuel transfer procedure as instructed in figure 3-4.

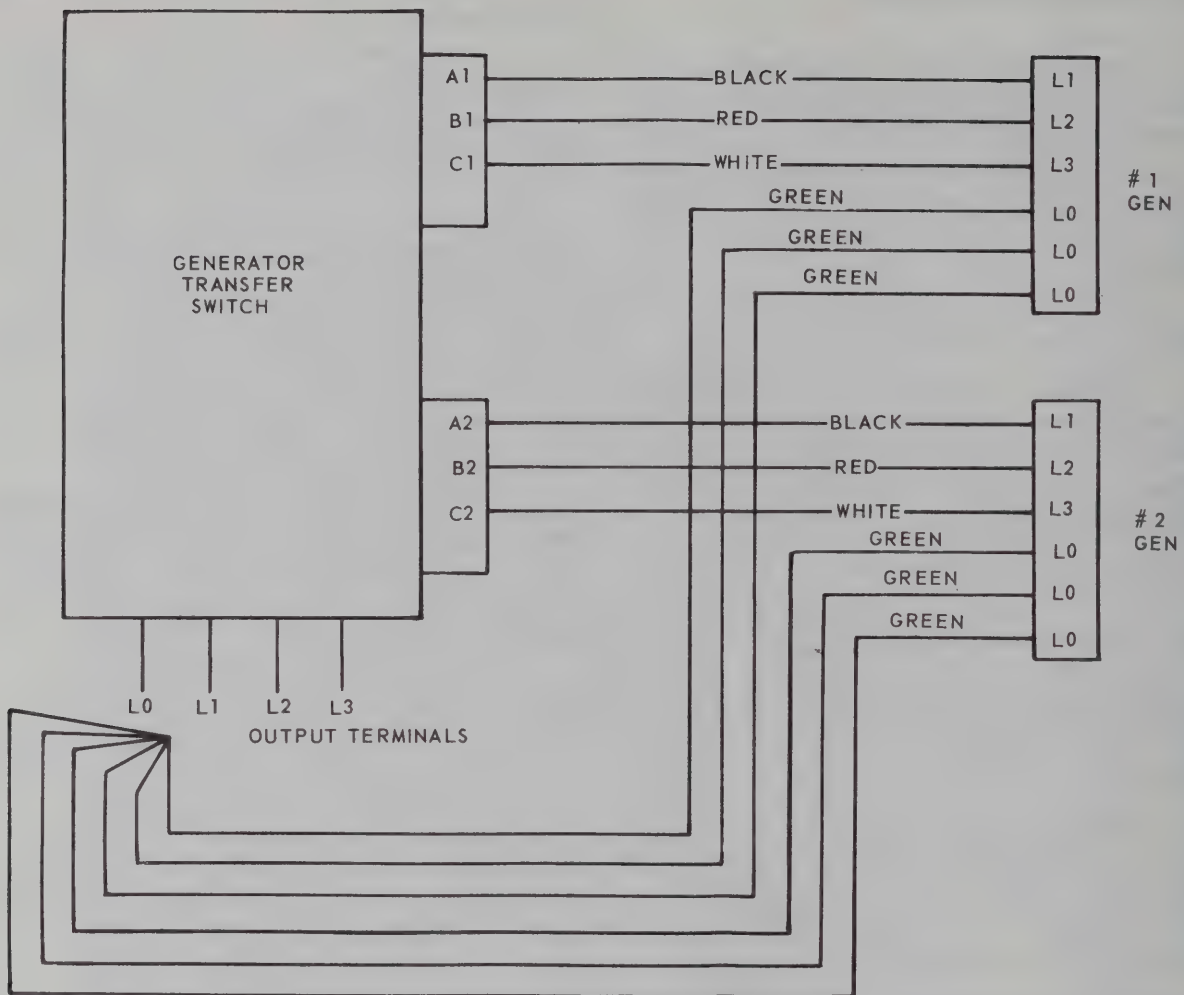

MEC 6115-365-15/3-2

Figure 3-2. Interconnection diagram, transfer switch-to-generators.

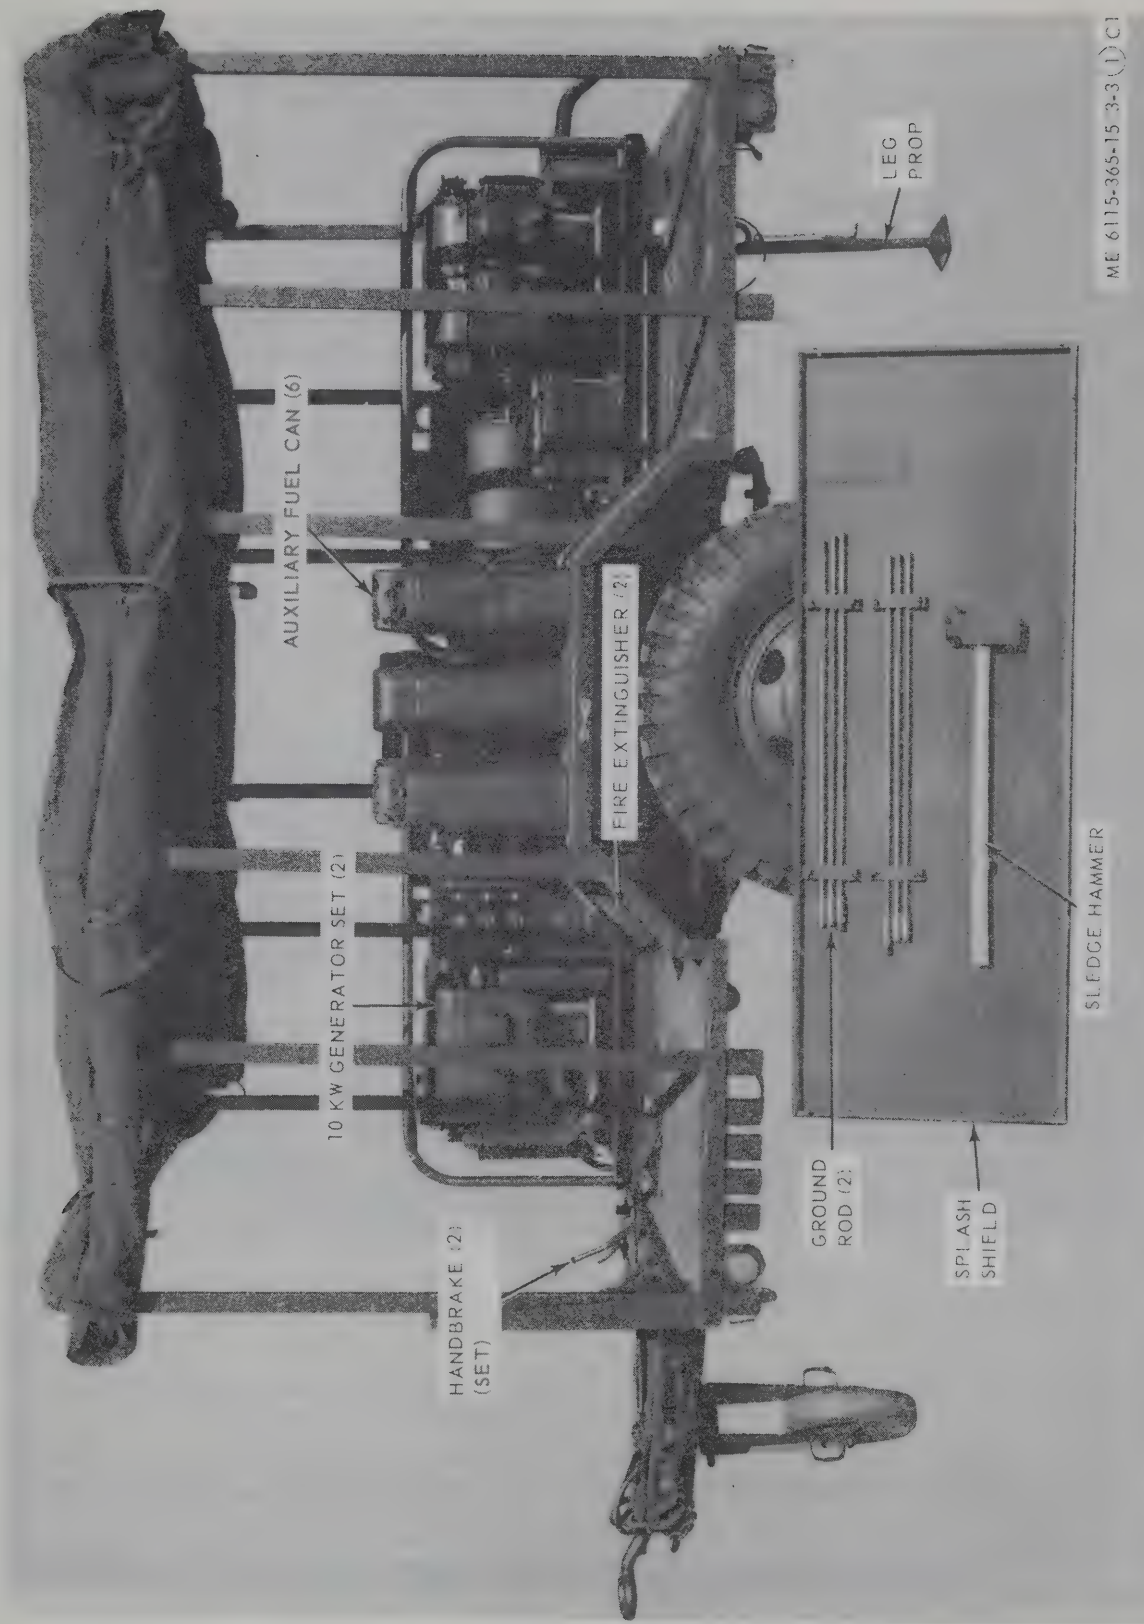

ME 6115-365-15 3-3 (1) C1

Figure 3-9. PU-619/M set up for operation.


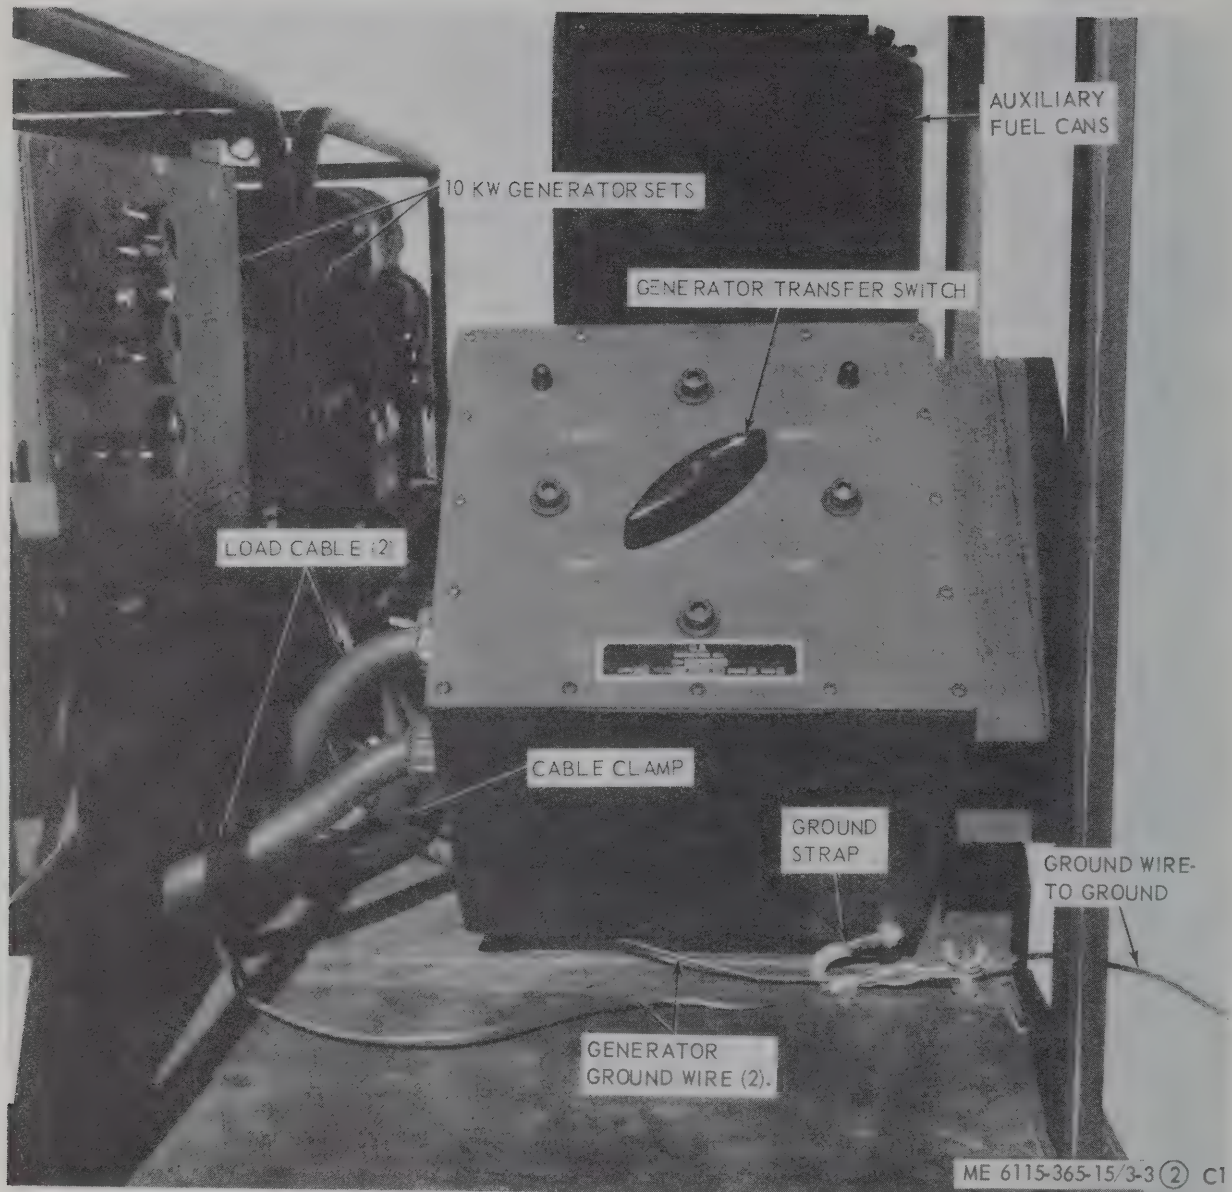


Figure 3-3—Continued.

WARNING: CLEAN UP ANY SPILLED FUEL IMMEDIATELY, AND LET FUMES EVAPORATE BEFORE STARTING THE GENERATOR.

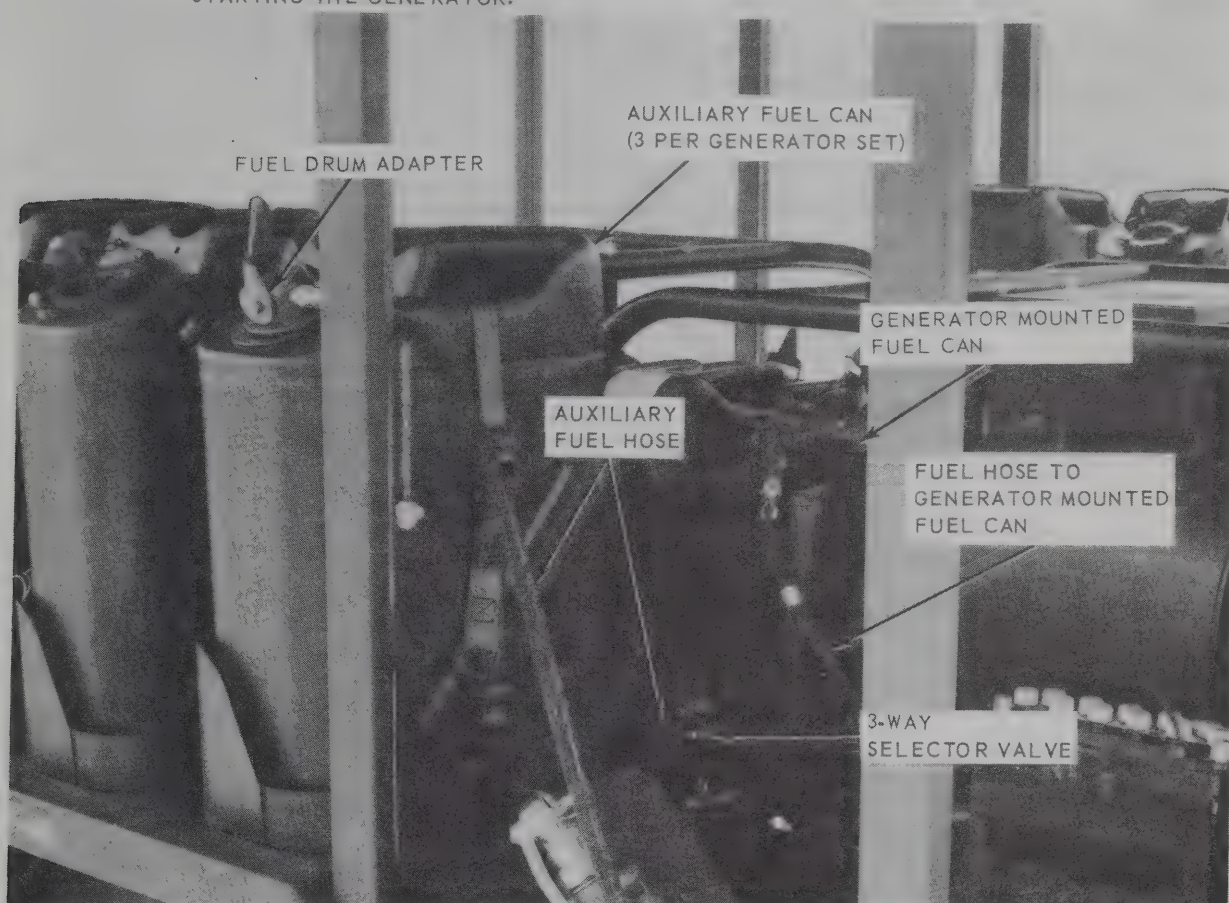

FUEL SYSTEM OPERATION

1. CONNECT THE AUXILIARY FUEL HOSE TO THE 3-WAY FUEL SELECTOR VALVE AND CONNECT THE OTHER END TO THE ADAPTER INSTALLED IN ONE OF THE 5-GALLON AUXILIARY FUEL CANS.
2. POSITION THE SELECTOR VALVE TO DRAW FUEL FROM THE GENERATOR-MOUNTED FUEL CAN. START THE GENERATOR AND BRING IT UP TO OPERATING SPEED.
3. POSITION THE SELECTOR VALVE TO DRAW FUEL FROM THE AUXILIARY FUEL CAN. OPERATE THE GENERATOR FOR APPROXIMATELY 4 HOURS ON THE AUXILIARY FUEL CAN, THEN TURN SELECTOR VALVE TO DRAW FUEL FROM THE GENERATOR-MOUNTED FUEL CAN.
4. SWITCH THE ADAPTER TO ANOTHER AUXILIARY FUEL CAN AND TURN THE SELECTOR VALVE BACK TO AUXILIARY FUEL SUPPLY POSITION.

NOTE: THIS PROCEDURE ELIMINATES NEED TO CHANGE FUEL CANS.

WARNING: DO NOT LET FUEL ADAPTERS COME IN CONTACT WITH THE BATTERIES.

ME 6115-365-15/3-4 CI

Figure 3-4. Fuel system connection and transfer procedure.


Section III. OPERATOR'S MAINTENANCE INSTRUCTIONS**3-7. Transfer Switch Indicating Lamps**

a. Removal. Remove lens and remove indicator or lamp as illustrated in figure 3-5.

b. Installation. Install the indicator lamp and lens as illustrated in figure 3-5.

3-8. Field Expedient Repairs

Trouble	Probable cause	Remedy
Power transfer switch will not supply power to load	Switch on terminal board defective.	Disconnect generator sets from transfer cables and connect load cables directly to the individual terminal boards of the generator sets

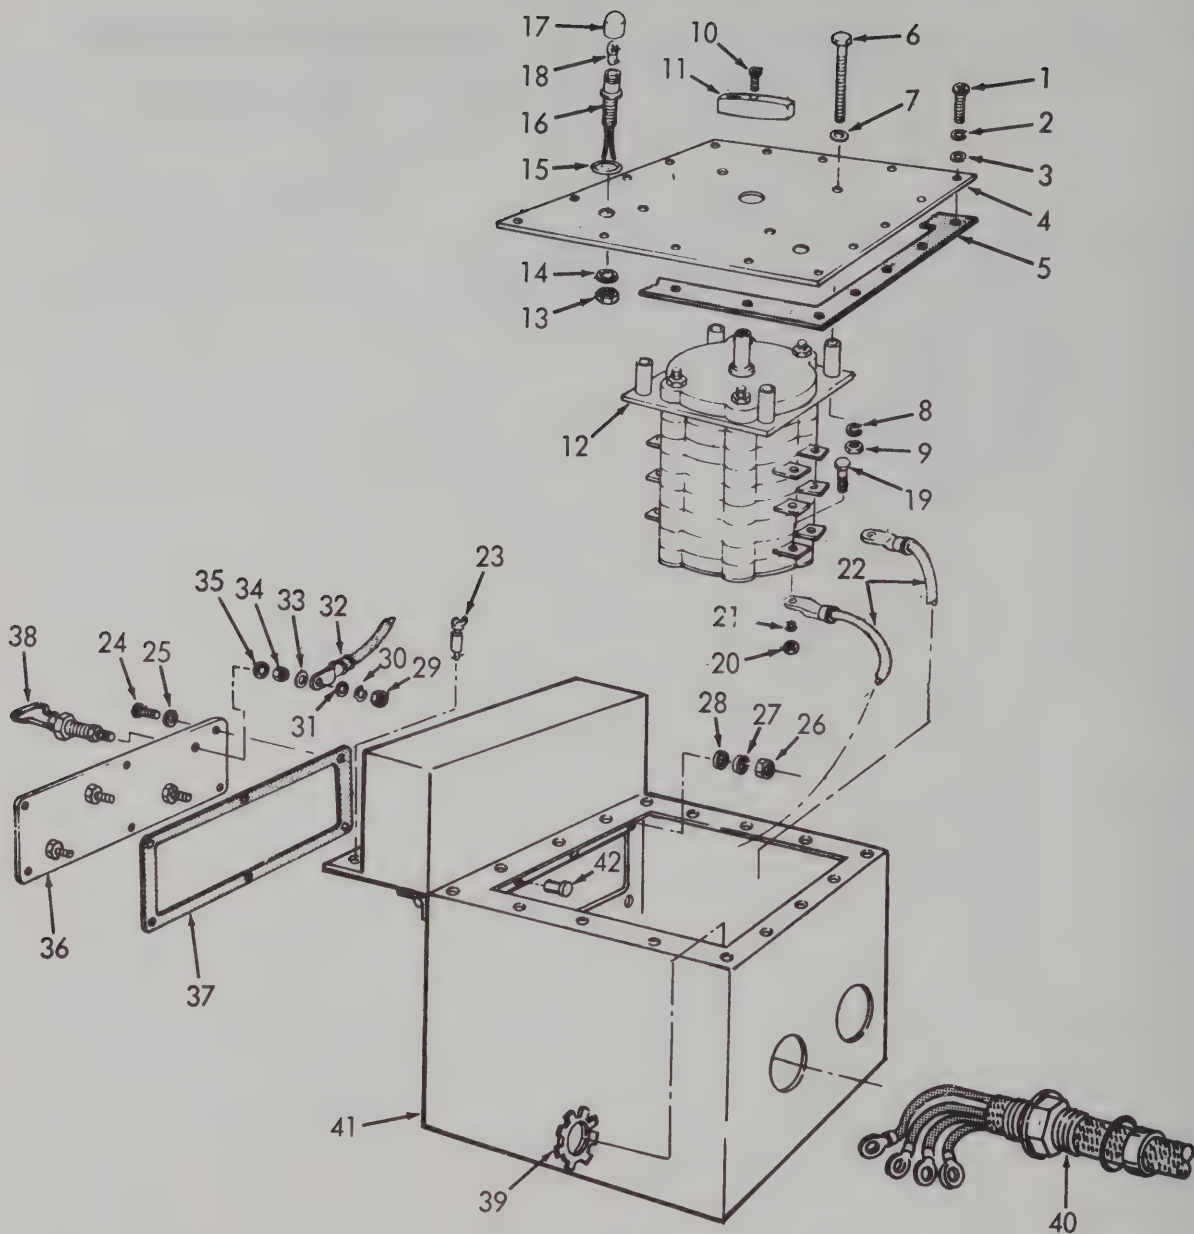

ME 6115-365-15/3-5 C1

- | | | |
|---------------|----------------------------|--------------------|
| 1 Screw | 9 Hexnut | 17 Lens |
| 2 Lockwasher | 10 Screw | 18 Lamp |
| 3 Flat washer | 11 Knob | 19 Screw |
| 4 Cover | 12 Transfer switch | 20 Hexnut |
| 5 Gasket | 13 Hex nut | 21 Lockwasher |
| 6 Screw | 14 Lockwasher | 22 Electrical lead |
| 7 Flat washer | 15 Preformed packing | 23 Fastener |
| 8 Lockwasher | 16 Light and wire assembly | 24 Screw |

Figure 3-5. Transfer switch, removal, disassembly, reassembly, and installation.

25 Flat washer	31 Flat washer	37 Gasket
26 Hexnut	32 Electrical lead	38 Terminal lug
27 Lockwasher	33 Flat washer	39 Locknut
28 Flat washer	34 Hex nut	40 Stuffing tube assembly
29 Hexnut	35 Lockwasher	41 Transfer switch box
30 Lockwasher	36 Terminal board	42 Rivet

Figure 3-5—Continued.

Section IV. ORGANIZATIONAL MAINTENANCE INSTRUCTIONS

3-9. Transfer Switch Indicating Lights

a. Removal. Remove the indicating lights as illustrated in figure 3-5.

b. Installation. Install the indicating lights as illustrated in figure 3-5.

3-10. Ground Wires, Strap, and Terminal Stud

a. Removal. Remove the ground strap, and wires from the ground terminal stud and generator set as shown in figure 3-3. Remove the terminal stud.

b. Installation. Install the ground strap, wires and terminal stud as shown in figure 3-3.

3-11. Tarpaulin, Roof Bows, and Leg Prop

a. Removal.

(1) Remove the tarpaulin from the unit.

(2) Pull out the chain-secured pins that secure the roof bows to the trailer bed and remove the bows.

(3) Remove the hardware that secures the leg prop to the rear underside of the trailer bed and remove the leg prop.

b. Cleaning and Inspection.

(1) Clean tarpaulin and bows with water and detergent. Clean leg prop with approved cleaning solvent. Dry thoroughly.

(2) Inspect tarpaulin for tears, holes, broken or missing ropes and straps, and other defects. Inspect bows and leg prop for cracks, bends, and any other defects.

c. Installation.

(1) Mount the leg prop to the underside of the trailer bed and secure with mounting hardware.

(2) Install the roof bows in the trailer bed and secure with pins. Install the tarpaulin and secure in desired position.

Section V. DIRECT AND GENERAL SUPPORT AND DEPOT MAINTENANCE INSTRUCTIONS

3-12. Generator Transfer Switch

a. Removal and Disassembly.

(1) Tag and disconnect leads from the output terminals to load.

(2) Remove and disassemble the transfer switch as illustrated in figure 3-5.

b. Reassembly and Installation.

(1) Reassemble and install the transfer switch as illustrated in figure 3-5.

(2) Connect load connections. (Refer to fig. 3-6).

3-13. Generator Sets

a. Removal. Using figure 3-7 as a guide, perform the following steps:

(1) Disconnect fuel lines.

(2) Disconnect electrical leads and load cables.

(3) Disconnect oil drain adapters.


(4) Remove 2 bolts and 2 nuts that secure the muffler pipe on the front generator set to the trailer.

(5) Remove the 8 bolts that secure the two generator sets to the trailer and remove the generator sets.

b. Installation. Using figure 3-7 as a guide, perform the following steps:

(1) Secure the 2 generator sets to the trailer bed with 8 bolts.

(2) Secure the front muffler pipe to trailer bed with 2 bolts and 2 nuts.

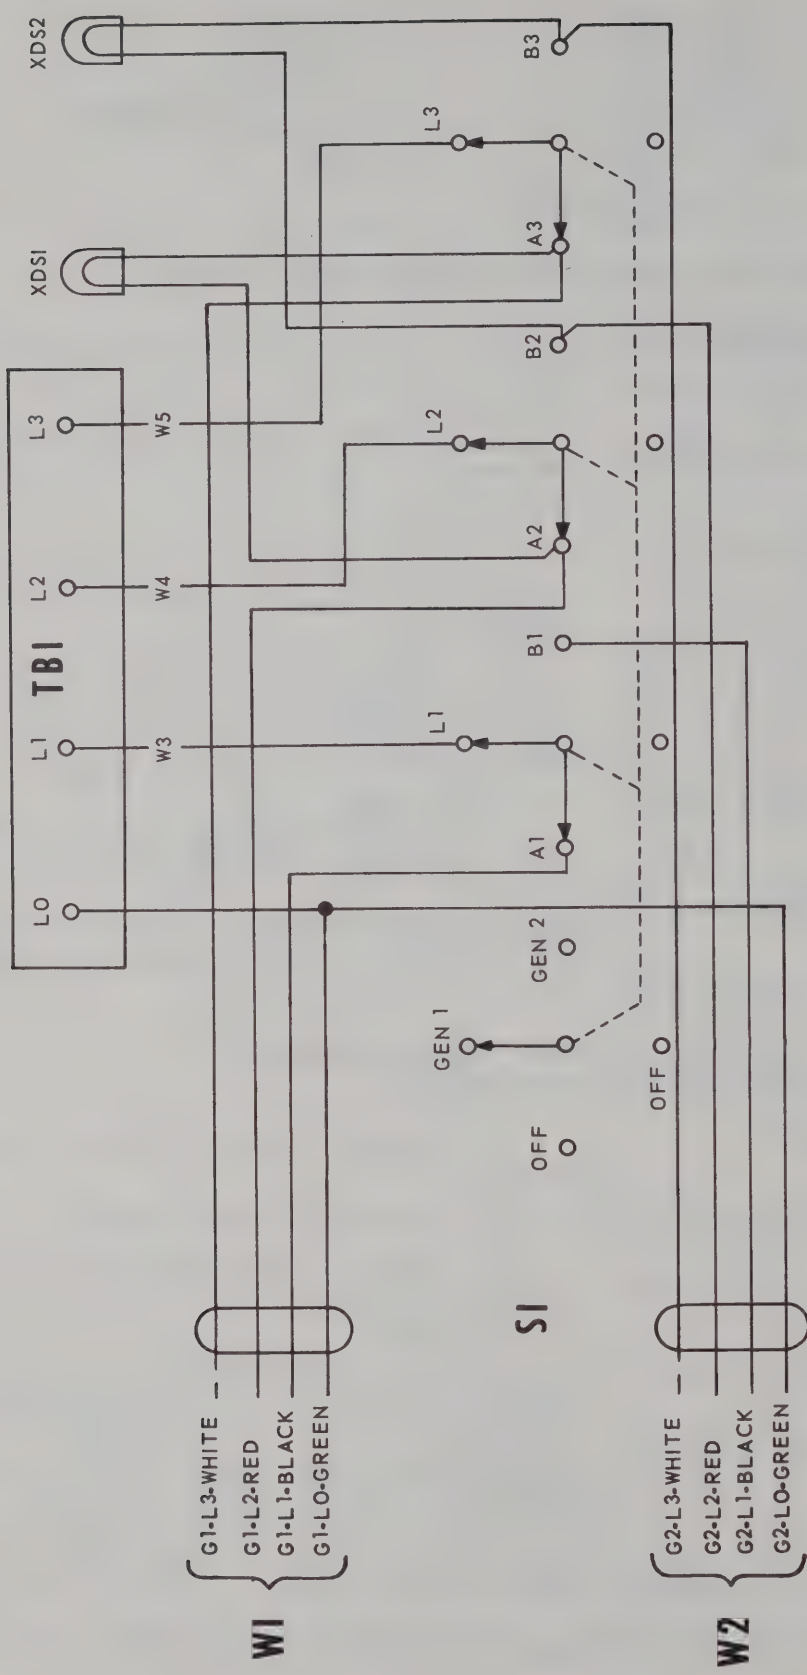

ME 6115-365-15/2-6 C1

Figure 3-6. Transfer switch wiring diagram.

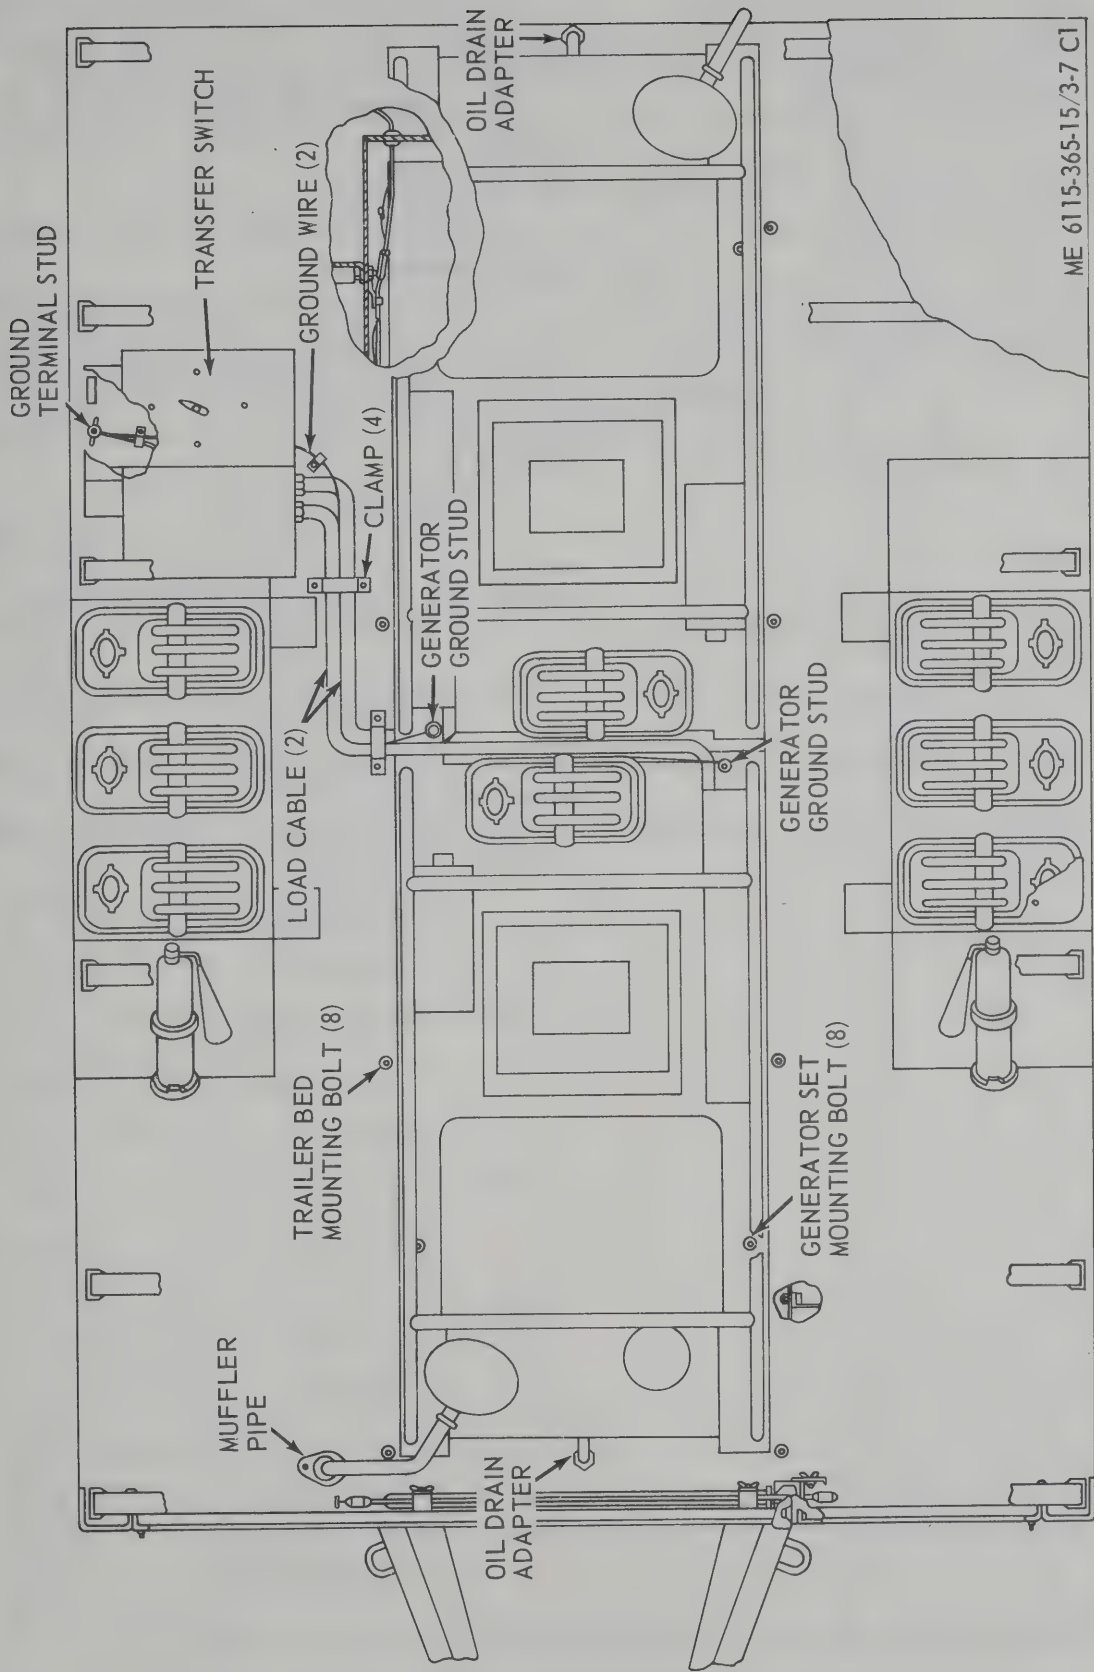


Figure 3-7. PU-619M overall component location diagram.

3-14. Tarpaulin, Roof Bows, and Leg Prop

a. Removal. Remove the tarpaulin, bows, and leg prop (para. 3-11).

b. Repair.

(1) Patch or sew rips and tears in the tarpaulin. Replace damaged or missing straps and ropes. Replace a tarpaulin that is too badly damaged to be repaired.

(2) Weld minor cracks and breaks in the bows or leg prop. Straighten bows where possible. Replace defective or missing hardware. Replace bows or leg prop that are damaged beyond repair.

c. Installation. Install tarpaulin, bows, and leg prop (para 3-11).

3-15. Trailer Bed

a. Removal.

(1) Remove the tarpaulin, roof bows, and leg prop (para 3-11).

(2) Remove the transfer switch from trailer (para 3-12).

(3) Remove the generator sets (para 3-13).

(4) Loosen straps and remove auxiliary fuel cans from trailer.

(5) Remove 8 bolts from the top surface of the trailer bed and 12 bolts from the underside that secure the gussets to the trailer.

(6) Disconnect the electrical leads from the trailer lights and remove the trailer bed from the trailer.

b. Cleaning, Inspection and Repair.

(1) Clean bed with approved cleaning solvent. Dry thoroughly.

(2) Inspect for broken welds, bends and dents, and any damage that prevents proper assembly of the unit. Weld cracks and breaks and straighten dents or bends where possible. Replace a trailer bed that is damaged beyond repair.

c. Installation.

(1) Install trailer bed on trailer and secure with 12 bolts on the underside and 8 bolts on the top. Connect wiring to lights.

(2) Install the generator sets (para 3-13).

(3) Install the transfer switch (para 3-12).

(4) Install the auxiliary fuel cans and secure with straps.

(5) Install leg prop, roof bows, and tarpaulin (para 3-11).

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALLOW				(7) ILLUS- TRATION	
						(a)	(b)	(c)	(d)	(a)	(b)
						1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
		PART I									
		REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE									
		GROUP 01 - ENGINE									
		0106 - ENGINE LUBRICATION SYSTEM									
00001											
00002											
0	4730-766-7908	NIPPLE TUBE		EA	2	*	*	*	*		
00003											
0	5310-282-7822	NUT, PLAIN, HEXAGON, RAIN HOSE		EA	2	*	*	*	*		
00004											
0	5310-059-6372	WASHER, LOCK: oil drain union		EA	2	*	*	*	*		
00005											
00006		GROUP 15 - FRAME, TOWING ATTACHMENTS, AND DRAWBARS									
		GROUP 1501 - FRAME ASSEMBLY									
00007											
X2 0	7240-222-3088	BRACKET ASSEMBLY: 5 gallon		EA	6						
00008		MS53052-1 (96906)									
X2 0		BRACKET		EA	6						
00009		13214EL204 (97403)									
X2 0	5340-999-4286	BUCKLE		EA	12						
00010		MS51940-7 (96906)									
X2 0		FASTENER		EA	6						
00011		13214EL205 (97403)									
X2 0		HOOK, DRIP RAIL		EA	6						
00012		13212E3616 (97403)									
M 0		STRAP, TOP: 30 in. lg		EA	6						
00013		13214EL203-2 (97403)									
		MANUFACTURE FROM:									
P 0	5340-922-5653	STRAP, WEBBING		FT			SEE	GRP	9501		
00014		1403 (06716)									
M 0		STRAP, BOTTOM: 18 in. lg		EA	6						
00015		13214EL203-3 (97403)									
		MANUFACTURE FROM:									
P 0	5340-922-5653	STRAP, WEBBING		FT			SEE	GRP	9501		
00016		1403 (06716)									
X2 0	5340-999-6277	BRACKET ASSEMBLY, SLEDGE HAMMER		EA	1						
00017		13214EL214 (97403)									
X2 0	2590-932-7298	CLAMP, GROUND ROD		EA	4						
00018		13212E3617-1 (97403)									
X2 0	5340-914-2578	CLIP, SPRING, TENSION		EA	1						
00019		13214EL213-1 (97403)									
X2 0		NUT, PLAIN, HEXAGON, JAM: 3/8-16		EA	3						
00020		MS16203-39 (96906)									
0	5310-543-4717	NUT, PLAIN, WING, BRASS		EA	1	*	*	*	*		
00021											
0	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4 x 20		EA	2	*	*	*	*		
00022											
0	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4 x 20		EA	1	*	*	*	*		
00023											
0	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4 x 20		EA	8	*	*	*	*		
00024											
0	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8 x 16		EA	24	*	*	*	*		
00025											
0	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4 x 20 x 1 lg		EA	2	*	*	*	*		
00026											
0	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4 x 20 x 1 lg		EA	1	*	*	*	*		
00027											
0	5305-269-3213	SCREW, CAP, HEXAGON HEAD: 3/8 x 16 x 1-1/4		EA	24	*	*	*	*		
00028											
0	5305-958-5247	SCREW, MACHINE, FLAT HEAD: 1/2 x 20 x 1 lg		EA	8	*	*	*	*		
00029											
X2 0		STUD: 3/8-16 x 2-1/2		EA	1						
00030		13214EL223 (97403)									

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALLOW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
		REF NUMBER & MFR CODE								
X2 0 00031		WASHER, FLAT, ELECTRICAL: 3/8 thd size AN916-616T (88044)	EA	4						
0 00032	5310-809-4058	WASHER, FLAT: round	EA	2	*	*	*	*		
0 00033	5310-809-4058	WASHER, FLAT: round, 1/4 screw size	EA	4	*	*	*	*		
0 00034	5310-809-4058	WASHER, FLAT: round, 1/4 screw size	EA	8	*	*	*	*		
0 00035	5310-809-4061	WASHER, FLAT: round, 3/8 screw size	EA	24	*	*	*	*		
0 00036	5310-913-9776	WASHER, LOCK: external tooth, flat, 3/8	EA	2	*	*	*	*		
00037		GROUP 18 - BODY, CAB, HOOD AND HULL								
00038		1801 - BODY, CAB, HOOD, HULL ASSEMBLIES								
0 00039	5310-080-8495	NUT, PLAIN, WING: 1/4 x 20	EA	2	*	*	*	*		
X2 0 00040		PLATE, FRONT, SHIELD 13212E3611-1 (97403)	EA	1						
0 00041	5305-721-8010	SCREW, CAP, HEXAGON HEAD: 1/4 x 20 x 2 lg	EA	2	*	*	*	*		
0 00042	5310-809-4058	WASHER, FLAT: round, 1/4 screw size	EA	4	*	*	*	*		
0 00043	5310-933-8121	WASHER, LOCK: spring, helical, 1/4 screw	EA	2	*	*	*	*		
00044		1810 - CARGO BODY								
X2 0 00045		BOLT, HEXAGON HEAD: 5/8-11 x 6-1/2 lg FFB575 (97403)	EA	2						
0 00046	5310-269-4040	NUT, SELF-LOCKING, HEXAGON: 5/8 x 11	EA	8	*	*	*	*		
0 00047	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8 x 16	EA	12	*	*	*	*		
0 00048	5305-269-3211	SCREW, CAP, HEXAGON HEAD: 3/8 x 16 x 1 lg	EA	16	*	*	*	*		
0 00049	5305-724-5911	SCREW, CAP, HEXAGON HEAD: 5/8-11 x 1-3/4	EA	6	*	*	*	*		
X2 0 00050		SHIM (As required) 13212E3590 (97403)								
0 00051	5310-809-4061	WASHER, FLAT: round, 3/8 screw size	EA	28	*	*	*	*		
0 00052	5310-823-8803	WASHER, FLAT: round, 5/8 screw size	EA	16	*	*	*	*		
0 00053	5310-637-9541	WASHER, LOCK: spring, helical, 3/8 screw	EA	4	*	*	*	*		
00054		GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS								
00055		2201 - CANVAS ITEMS								
P 0 00056	2540-924-8478	BOW, TRAILER TARPAULIN 13212E3597-1 (97403)	EA	4	*	*	*	*		
P 0 00057	2540-926-1003	BOW, TRAILER TARPAULIN 13212E3597-2 (97403)	EA	2	*	*	*	*		
P 0 R 00058	2540-914-2558	TARPAULIN 13212E3598 (97403)	EA	1	*	*	*	2		
00059		2202 - ACCESSORY ITEMS								
X2 0 00060	7240-222-3088	CAN, GASOLINE: 5-gallon military MILC1283 (81349)	EA	6						
P C 00061	5120-265-7462	HAMMER, HAND: double faced, 8 lb GGGH86TYPEXCLASS1 (81348)	EA	1	*	*	*	*		
0 00062	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20	EA	12	*	*	*	*		
X2 0 00063	9905-202-3639	REFLECTOR, CLEARANCE: amber MS35387-2 (96906)	EA	2						
X2 0 00064	9905-205-2795	REFLECTOR, CLEARANCE: red MS35387-1 (96906)	EA	4						

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) QTY INC IN UNIT	15-DAY ORGANIZATIONAL MAINTENANCE ALLOW				ILLUS- TRATION	
						(a)	(b)	(c)	(d)	(a)	(b)
						1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
P C 00065	5975-642-8937	ROD, GROUND: Type 2, Style 2 MILR11461TYPE2STYLE2 (81349)		EA	2	*	*	*	*		
X2 0 00066		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 1 lg MS90725-5 (96906)		EA	12						
0 00067 00068	5310-809-8546	WASHER, FLAT: round, 1/4 screw size 2210 - DATA PLATES		EA	20	*	*	*	*		
X2 0 00069	6115-916-9734	PLATE, IDENTIFICATION 13205E4916-3 (97403)		EA	1						
X2 0 00070		PLATE, IDENTIFICATION, GROUND TERMINAL 13205E4918 (97403)		EA	1						
X2 0 00071		PLATE, INFORMATION WIRING, DIAGRAM 13212E3587 (97403)		EA	1						
0 00072	5305-989-7434	SCREW, MACHINE, PAN HEAD: 10-32 x 1/2 lg		EA	16	*	*	*	*	3-8	5
0 00073	5310-809-8546	WASHER, FLAT: round, 10-32 screw size		EA	16	*	*	*	*	3-8	7
0 00074 00075	5310-045-3296	WASHER, LOCK, HELICAL, SPLIT: No. 10 size GROUP 29 - AUXILIARY GENERATOR AND ENGINE AND CONTROLS (SPECIAL PURPOSE)		EA	16	*	*	*	*	3-8	6
00076		2941 - ENGINE MUFFLER, EXHAUST AND TAIL PIPES									
X2 0 00077	6115-947-3380	EXHAUST TUBE 13214E1238 (97403)		EA	1						
X2 0 00078	6115-934-7878	TUBE, EXHAUST 13214E1389 (97403)		EA	1						
X2 0 00079	5340-940-7332	CLAMP ASSEMBLY 13212E3592-14 (97403)		EA	2						
0 00080	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4 x 20		EA	2	*	*	*	*		
0 00081	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4 x 20 x 1 lg		EA	2	*	*	*	*		
0 00082 00083	5310-809-4058	WASHER, FLAT: round, 1/4 screw size GROUP 40 - ELECTRIC MOTORS AND GENERATORS		EA	4	*	*	*	*		
00084		4000 - GENERATOR ASSEMBLY									
0 00085	5310-269-4040	NUT, SELF-LOCKING, HEXAGON: 5/8-11		EA	8	*	*	*	*		
0 00086	5305-724-5911	SCREW, CAP, HEXAGON HEAD: 5/8 x 11 x 1-3/4		EA	8	*	*	*	*		
0 00087 00088	5310-823-8803	WASHER, FLAT: round head, 5/8 screw GROUP 42 - ELECTRICAL EQUIPMENT		EA	16	*	*	*	*		
00089		4206 - THERMOSTATIC, AUTOMATIC AND MANUAL CONTROL DEVICES									
X2 0 00090		LIGHT AND WIRE: 12 in. lg 13212E3581-1 (97403)		EA	1					3-8	2
0 00091	5310-225-6993	NUT, SELF-LOCKING, HEXAGON: 1/2-13		EA	4	*	*	*	*	3-8	10
0 00092	5310-225-6993	NUT, SELF-LOCKING, HEXAGON: 1/2-13		EA	4	*	*	*	*		
X2 0 00093	5330-618-5361	PACKING, PREFORMED, "O" RING MS28775-015 (96906)		EA	4					3-8	4
X2 0 00094	5330-579-7916	PACKING, PREFORMED, "O" RING MS28775-115 (96906)		EA	1					3-8	32
X2 0 00095		PACKING, PREFORMED, "O" RING MS28775-142 (96906)		EA	2					3-8	15
X2 0 00096		PLATE, INFORMATION WIRING, DIAGRAM 13212E3587 (97403)		EA	1		SEE	GRP	2210		

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
0 00097 0 00098 0 00099 0 00100 00101	5305-044-4153	SCREW, CAP, HEXAGON HEAD: 1/2-13 x 1 lg	EA	4	*	*	*	*		
	5305-983-7467	SCREW, CAP: socket head, 1/2-13unc-3A x 3 lg	EA	4	*	*	*	*	3-8	3
	5310-809-3079	WASHER, FLAT, ROUND, BOX MOUNTING: 1/2 screw size	EA	8	*	*	*	*		
	5310-809-5998	WASHER, FLAT: round, 1/2 in. screw	EA	8	*	*	*	*	3-8	9
		4216 - MISCELLANEOUS WIRING AND FITTINGS								
X2 0 00102		CLAMP, CABLE, DOUBLE 13212E3591-5 (97403)	EA	2						
X2 0 00103		CLAMP, CUSHIONED, SUPPORT LOOP: 1/8 MS21334-2 (96906)	EA	2						
0 00104 X2 0 00105	5310-918-6921	NUT, PLAIN, HEXAGON: jam, 3/8-16	EA	1	*	*	*	*		
		NUT, PLAIN, HEXAGON: machine screw, 10-24 MS35649-202 (96906)	EA	2						
0 00106 0 00107 X2 0 00108	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20	EA	4	*	*	*	*		
	5305-071-2241	SCREW, CAP, HEXAGON HEAD: 1/4-20 x 1-1/4	EA	4	*	*	*	*		
		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 3/4 lg MS35309-58 (96906)	EA	1						
0 00109 0 00110 0 00111 0 00112 0 00113 M 0 00114	5305-984-6211	SCREW, MACHINE, PAN HEAD: 10-24 x 5/8 lg	EA	2	*	*	*	*		
	5310-809-4058	WASHER, FLAT: round, 1/4 thd size	EA	8	*	*	*	*		
	5310-809-8546	WASHER, FLAT: round, No. 10 screw size	EA	4	*	*	*	*		
	5310-913-9776	WASHER, LOCK: external tooth, flat, 3/8	EA	1	*	*	*	*		
	5310-045-3296	WASHER, LOCK: spring, helical, No. 10	EA	2	*	*	*	*		
		WIRE, ELECTRICAL: No. 6, copper, uninsulated QQW343TYPERBCLASS1 (81348) MANUFACTURE FROM:	FT							
P 0 00115	6145-299-6188	WIRE, ELECTRICAL: copper, uninsulated, No. 6 (As required) QQW343TYPERBCLASS1 (81348)	FT			SEE	GRP	9501		
00116		GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS								
00117		7638 - PORTABLE FIRE FIGHTING EQUIPMENT								
P C 00118	4210-555-8837	EXTINGUISHER, FIRE, W/BRACKET MILE52031 (81349)	EA	2	*	*	*	*		
0 00119 X2 0 00120	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20	EA	8	*	*	*	*		
		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 5/8 lg MS90725-6 (96906)	EA	8						
0 00121 00122	5310-809-8546	WASHER, FLAT: round, 1/4 screw size	EA	16	*	*	*	*		
		GROUP 95 - GENERAL USE STANDARDIZED PARTS								
00123		9501 - HARDWARE SUPPLIES AND BULK MATERIAL, COMMON								
P 0 00124	5340-922-5653	WEBBING, STRAP 1403 (06716)	FT		*	*	*	*		
P 0 00125	6145-299-6188	WIRE, ELECTRICAL: No. 6, copper, uninsulated QQW343TYPERBCLASS1 (81348)	FT		*	*	*	*		

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 30-DAY DS MAINT ALLOWANCE	(7) 30-DAY GS MAINT ALLOWANCE	(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
									(a)	(b)
					(a)	(b)	(c)	(a)	(b)	(c)
					1-20	21-50	51-100	1-20	21-50	51-100
		PART II								
		REPAIR PARTS FOR DS, GS, AND DEPOT MAINTENANCE								
		GROUP 01 - ENGINE								
00001										
00002		0106 - ENGINE LUBRICATION SYSTEM								
0	4730-766-7908	NIPPLE TUBE		EA	2	*	*	*	*	*
00003	5310-282-7822	NUT, FLAIN, HEXAGON, RAIN HOSE		EA	2	*	*	*	*	*
00004	5310-059-6372	WASHER, LOCK: oil drain union		EA	2	*	*	*	*	*
00005		GROUP 15 - FRAME, TOWING ATTACHMENTS, AND DRAWBARS								
00006		1501 - FRAME ASSEMBLY								
00007										
X2 0	7240-222-3088	BRACKET ASSEMBLY: 5 gallon		EA	6					
00008		MS53052-1 (96906)								
X2 0		BRACKET		EA	6					
00009		13214EL204 (97403)								
X2 0	5340-999-4286	BUCKLE		EA	12					
00010		MS51940-7 (96906)								
X2 0		FASTENER		EA	6					
00011		13214EL205 (97403)								
X2 0		HOOK, DRIP RAIL		EA	6					
00012		13212E3616 (97403)								
M 0		STRAP, TOP: 30 in. lg		EA	6					
00013		13214EL203-2 (97403)								
		MANUFACTURE FROM:								
P 0	5340-922-5653	STRAP, WEBBING		FT				SEE	GHP	9501
00014		1403 (06716)								
M 0		STRAP, BOTTOM: 18 in. lg		EA	6					
00015		13214EL203-3 (97403)								
		MANUFACTURE FROM:								
P 0	5340-922-5653	STRAP, WEBBING		FT				SEE	GHP	9501
00016		1403 (06716)								
X2 0	5340-999-6277	BRACKET ASSEMBLY, SLEDGE HAMMER		EA	1					
00017		13214EL214 (97403)								
X2 0	2590-932-7298	CLAMP, GROUND ROD		EA	4					
00018		13212E3617-1 (97403)								
X2 0	5340-914-2578	CLIP, SPRING, TENSION		EA	1					
00019		13214EL213-1 (97403)								
X2 0		NUT, FLAIN, HEXAGON, JAM: 3/8-16		EA	3					
00020		MS16203-39 (96906)								
0	5310-543-4717	NUT, FLAIN, WING, BRASS		EA	1	*	*	*	*	*
00021										
0	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4 x 20		EA	2	*	*	*	*	*
00022										
0	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4 x 20		EA	1	*	*	*	*	*
00023										
0	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4 x 20		EA	8	*	*	*	*	*
00024										
0	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8 x 16		EA	24	*	*	*	*	*
00025										
0	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4 x 20 x 1		EA	2	*	*	*	*	*
00026		lg								
0	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4 x 20 x 1		EA	1	*	*	*	*	*
00027		lg								

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 30-DAY DS MAINT ALLOWANCE	(7) 30-DAY GS MAINT ALLOWANCE	(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
									(a)	(b)
					(a)	(b)	(c)	(a)	(b)	(c)
					1-20	21-50	51-100	1-20	21-50	51-100
0 00028	5305-269-3213	SCREW, CAP, HEXAGON HEAD: 3/8 x 16 x 1-1/4		EA	24	*	*	*	*	*
0 00029	5305-958-5247	SCREW, MACHINE, FLAT HEAD: 1/4 x 20 x 1 lg		EA	8	*	*	*	*	*
X2 0 00030		STUD: 3/8-16 x 2-1/2 13214EL223 (97403)		EA	1					
X2 0 00031		WASHER, FLAT, ELECTRICAL: 3/8 thd size AN916-616T (88044)		EA	4					
0 00032	5310-809-4058	WASHER, FLAT: round		EA	2	*	*	*	*	*
0 00033	5310-809-4058	WASHER, FLAT: round, 1/4 screw size		EA	4	*	*	*	*	*
0 00034	5310-809-4058	WASHER, FLAT: round, 1/4 screw size		EA	8	*	*	*	*	*
0 00035	5310-809-4061	WASHER, FLAT: round, 3/8 screw size		EA	24	*	*	*	*	*
0 00036	5310-913-9776	WASHER, LOCK: external tooth, flat, 3/8		EA	2	*	*	*	*	*
00037		GROUP 18 - BODY, CAB, HOOD AND HULL								
00038		1801 - BODY, CAB, HOOD, HULL ASSEMBLIES								
0 00039	5310-080-8495	NUT, PLAIN, WING: 1/4 x 20		EA	2	*	*	*	*	*
X2 0 00040		PLATE, FRONT, SHIELD 13212E3611-1 (97403)		EA	1					
0 00041	5305-721-8010	SCREW, CAP, HEXAGON HEAD: 1/4 x 20 x 2 lg		EA	2	*	*	*	*	*
0 00042	5310-809-4058	WASHER, FLAT: round, 1/4 screw size		EA	4	*	*	*	*	*
0 00043	5310-933-8121	WASHER, LOCK: spring, helical, 1/4 screw		EA	2	*	*	*	*	*
00044		1810 - CARGO BODY								
X2 DR 00045		BODY, TRAILER 13214EL495 (97403)		EA	1					
X2 0 00046		BOLT, HEXAGON HEAD: 5/8-11 x 6-1/2 lg FFB575 (97403)		EA	2					
X2 DR 00047		CHASSIS, TRAILER: M103A3 13212E3588-2 (97403)		EA	1					
0 00048	5310-269-4040	NUT, SELF-LOCKING, HEXAGON: 5/8 x 11		EA	8	*	*	*	*	*
0 00049	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8 x 16		EA	12	*	*	*	*	*
0 00050	5305-269-3211	SCREW, CAP, HEXAGON HEAD: 3/8 x 16 x 1 lg		EA	16	*	*	*	*	*
0 00051	5305-724-5911	SCREW, CAP, HEXAGON HEAD: 5/8-11 x 1-3/4		EA	6	*	*	*	*	*
X2 0 00052		SHIM (As required) 13212E3590 (97403)								
0 00053	5310-809-4061	WASHER, FLAT: round, 3/8 screw size		EA	28	*	*	*	*	*
0 00054	5310-823-8803	WASHER, FLAT: round, 5/8 screw size		EA	16	*	*	*	*	*
0 00055	5310-637-9541	WASHER, LOCK: spring, helical, 3/8 screw		EA	4	*	*	*	*	*
00056		GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS								
00057		2201 - CANVAS ITEMS								
P 0 00058	2540-924-8478	BOW, TRAILER TARPULIN 13212E3597-1 (97403)		EA	4	*	*	2	*	2

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
P O 00059	2540-926-1003	BOW, TRAILER TARPULIN 13212E3597-2 (97403)		EA	2	*	*	*	*	*	*	4	4	
P O R 00060	2540-914-2558	TARPULIN 13212E3598 (97403)		EA	1	*	2	2	*	2	2	13	13	
M F 00061	2540-922-7651	STRAP, WEBBING: 16 x 3/4 x 18 lg 13212E3598-1 (97403) MANUFACTURE FROM:		EA	8									
P F 00062	2540-914-2558	STRAP, WEBBING 13212E3598-1-2-3 (97403)		FT				SEE	GRP	9501				
M F 00063	2540-914-2569	STRAP, WEBBING: 16 x 3/4 x 53 lg 13212E3598-2 (97403) MANUFACTURE FROM:		EA	8									
P F 00064	2540-914-2558	STRAP, WEBBING 13212E3598-1-2-3 (97403)		FT				SEE	GRP	9501				
M F 00065		STRAP, WEBBING: 16 x 3/4 x 18-1/2 lg 13212E3598-3 (97403) MANUFACTURE FROM:		EA	6									
P F 00066	2540-914-2558	STRAP, WEBBING 13212E3598-1-2-3 (97403)		FT				SEE	GRP	9501				
X2 F 00067		STRAP, WEBBING: 16 x 1 x 16 lg 13212E3598-4 (97403)		EA	12									
X2 F 00068		STRAP, WEBBING: 16 x 1 x 19-1/2 lg 13212E3598-5 (97403)		EA	12									
X2 F 00069		TEE, HOOK 13214E1497 (97403)		EA	22									
X2 F 00070	5340-057-6956	BUCKLE: spring action MS51929-2 (96906)		EA	12									
X2 F 00071		CHAPE ASSEMBLY 13214E1392 (97403)		EA	12									
X2 F 00072	5340-078-7029	CLIP, END STRAP: black brass No. 1 MS51926-3 (96906)		EA	24									
X2 F 00073		DEE, RING: bronze MS51925-8 (96906)		EA	14									
X2 F 00074		ROPE: sisal, nom dia, x 30 lg 13212E3598-11 (97403)		EA	27									
00075		2202 - ACCESSORY ITEMS												
X2 O 00076	7240-222-3088	CAN, GASOLINE: 5-gallon military MILC1283 (81349)		EA	6									
P C 00077	5120-265-7462	HAMMER, HAND: double faced, 8 lb GGGH86TYPECLASS1 (81348)		EA	1	*	*	2	*	*	2	10	10	
O 00078	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20		EA	12	*	*	*	*	*	*	*	*	
X2 O 00079	9905-202-3639	REFLECTOR, CLEARANCE: amber MS35387-2 (96906)		EA	2									
X2 O 00080	9905-205-2795	REFLECTOR, CLEARANCE: red MS35387-1 (96906)		EA	4									
P C 00081	5975-642-8937	ROD, GROUND: Type 2, Style 2 MILRL1461TYPE2STYLE2 (81349)		EA	2	*	*	2	*	*	2	10	10	
X2 O 00082		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 1 lg MS90725-5 (96906)		EA	12									
O 00083	5310-809-8546	WASHER, FLAT: round, 1/4 screw size		EA	20	*	*	*	*	*	*	*	*	
O 00084		2210 - DATA PLATES												
X2 O 00085	6115-916-9734	PLATE, IDENTIFICATION 13205E4916-3 (97403)		EA	1									

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 O 00086		PLATE, IDENTIFICATION, GROUND TERMINAL 13205E4918 (97403)	EA	1										
X2 O 00087		PLATE, INFORMATION WIRING, DIAGRAM 13212E3587 (97403)	EA	1										
O 00088	5305-989-7434	SCREW, MACHINE, PAN HEAD: 10-32 x 1/2 lg	EA	16	*	*	*	*	*	*	*	*	3-8	5
O 00089	5310-809-8546	WASHER, FLAT: round, 10-32 screw size	EA	16	*	*	*	*	*	*	*	*	3-8	7
O 00090	5310-045-3296	WASHER, LOCK, HELICAL, SPLIT: No. 10 size	EA	16	*	*	*	*	*	*	*	*	3-8	6
00091		GROUP 29 - AUXILIARY GENERATOR AND ENGINE AND CONTROLS (SPECIAL PURPOSE)												
00092		2941 - ENGINE MUFFLER, EXHAUST AND TAIL PIPES												
X2 O 00093	6115-947-3380	EXHAUST TUBE 13214E1238 (97403)	EA	1										
X2 O 00094	6115-934-7878	TUBE, EXHAUST 13214E1389 (97403)	EA	1										
X2 O 00095	5340-940-7332	CLAMP ASSEMBLY 13212E3592-14 (97403)	EA	2										
O 00096	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20	EA	2	*	*	*	*	*	*	*	*		
O 00097	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4 x 20 x 1 lg	EA	2	*	*	*	*	*	*	*	*		
O 00098	5310-809-4058	WASHER, FLAT: round, 1/4 screw size	EA	4	*	*	*	*	*	*	*	*		
00099		GROUP 40 - ELECTRIC MOTORS AND GENERATORS												
00100		4000 - GENERATOR ASSEMBLY												
X2 FR 00101	6115-792-8260	GENERATOR SET: Model 10KW50HZ MILG52280 (81349)	EA	2										
O 00102	5310-269-4040	NUT, SELF-LOCKING, HEXAGON: 5/8 x 11	EA	8	*	*	*	*	*	*	*	*		
O 00103	5305-724-5911	SCREW, CAP, HEXAGON HEAD: 5/8 x 11 x 1-3/4	EA	8	*	*	*	*	*	*	*	*		
O 00104	5310-823-8803	WASHER, FLAT: round head, 5/8 screw	EA	16	*	*	*	*	*	*	*	*		
00105		4018 - TERMINAL BLOCKS, JUNCTION BOXES												
X2 H 00106		GASKET, TERMINAL 13212E3583 (97403)	EA	1										
X2 H 00107		TERMINAL BOARD 13211E4775 (97403)	EA	1										
00108		GROUP 42 - ELECTRICAL EQUIPMENT												
00109		4206 - THERMOSTATIC, AUTOMATIC AND MANUAL CONTROL DEVICES												
X2 FR 00110	6110-913-9276	DISTRIBUTION BOX 13212E3577 (97403)	EA	1										
X2 H 00111		BOX 13212E3578 (97403)	EA	1									3-8	19
X2 O 00112		PLATE, INFORMATION WIRING, DIAGRAM 13212E3587 (97403)	EA	1				SEE	GRP	2210				
X2 H 00113	6115-948-7389	CABLE ASSEMBLY 13212E3584-1 (97403)	EA	1				SEE	GRP	4216			3-8	17
X2 H 00114	6115-948-7390	CABLE ASSEMBLY 13212E3585-1 (97403)	EA	1				SEE	GRP	4216			3-8	18


(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 F 00115	5940-943-7740	CONNECTOR, TERMINAL, POST 13213E3949 (97403)		EA	4								3-8	22
X2 F 00116		COVER, DISTRIBUTION BOX 13212E3579 (97403)		EA	1								3-8	1
X2 H 00117		GASKET, TERMINAL BOARD 13212E3583 (97403)		EA	1			SEE	GRP	4018			3-8	20
X2 H 00118		LEAD, ELECTRICAL 13212E3586-2 (97403)		EA	1								3-8	13
X2 H 00119		LEAD, ELECTRICAL 13212E3586-3 (97403)		EA	1								3-8	14
X2 H 00120		LEAD, ELECTRICAL 13212E3586-1 (97403)		EA	1								3-8	12
X2 O 00121		LIGHT AND WIRE: 12 in. lg 13212E3581-1 (97403)		EA	1								3-8	2
X2 H 00122		LIGHT AND WIRE: 17 in. lg 13212E3581-2 (97403)		EA	1								3-8	8
X2 H 00123		NUT, FLAIN, HEXAGON, BRASS: 3/8-24 MS20341-616A (96906)		EA	9								3-8	29
X2 F 00124		NUT, FLAIN, HEXAGON, JAM MS16203-41 (96906)		EA	8								3-8	26
O 00125	5310-225-6993	NUT, SELF-LOCKING, HEXAGON: 1/2-13		EA	4	*	*	*	*	*	*	*	3-8	10
H 00126	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20		EA	6			*	*	*	*	*	3-8	28
X2 O 00127	5330-618-5361	PACKING, PREFORMED, "O" RING MS28775-015 (96906)		EA	4								3-8	4
X2 O 00128	5330-579-7916	PACKING, PREFORMED, "O" RING MS28775-115 (96906)		EA	1								3-8	32
X2 O 00129		PACKING, PREFORMED, "O" RING MS28775-142 (96906)		EA	2								3-8	15
O 00130	5305-983-7467	SCREW, CAP: socket head, 1/2-13unc- 3A x 3 lg		EA	4	*	*	*	*	*	*	*	3-8	3
H 00131	5305-988-1727	SCREW, MACHINE, PAN HEAD: 1/4-20 unc- 2A x 1 lg		EA	6			*	*	*	*	*	3-8	23
H 00132	5305-954-9020	SCREW, MACHINE, PAN HEAD: 3/8-24 x 3/4 lg		EA	9			*	*	*	*	*	3-8	11
X2 H 00133		STUFFING TUBE 13212E3582-3 (97403)		EA	2								3-8	16
X2 F 00134		SWITCH, ROTARY: 200 amp 13205E5024 (97403)		EA	1								3-8	31
X2 H 00135		TERMINAL BOARD 13211E4775 (97403)		EA	1			SEE	GRP	4018			3-8	21
H 00136	5310-809-4058	WASHER, FLAT: round, steel, 1/4 screw size		EA	12			*	*	*	*	*	3-8	24
X2 F 00137		WASHER, FLAT: round, brass, 1/2 in. AN961-816T (88044)		EA	8								3-8	27
O 00138	5310-809-5998	WASHER, FLAT: round, 1/2 in. screw		EA	8	*	*	*	*	*	*	*	3-8	9
F 00139	5310-042-4229	WASHER, LOCK, FLAT: 1/2 nom size		EA	4	*	*	*	*	*	*	*	3-8	25
H 00140	5310-913-9776	WASHER, LOCK, FLAT: external tooth, 3/8		EA	9			*	*	*	*	*	3-8	30
O 00141	5310-225-6993	NUT, SELF-LOCKING, HEXAGON: 1/2-13		EA	4	*	*	*	*	*	*	*		
O 00142	5305-044-4153	SCREW, CAP, HEXAGON HEAD: 1/2-13 x 1 lg		EA	4	*	*	*	*	*	*	*		
X2 F 00143		TERMINAL, LUG: 22-18 3/8, stud MS25036-105 (96906)		EA	4									

(1)	(2)	(3)	(4)	(5)	(6)			(7)			(8)	(9)	(10)		
SMR CODE	FEDERAL STOCK NUMBER	DESCRIPTION	USABLE ON CODE	UNIT OF MEAS	QTY INC IN UNIT	30-DAY DS MAINT ALLOWANCE			30-DAY GS MAINT ALLOWANCE			1-YR ALW PER 100 EQUIP CNTGY	DEPOT MAINT ALW PER 100 EQUIP	ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
		REF NUMBER & MFR CODE				1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
O 00144	5310-809-3079	WASHER, FLAT, ROUND, BOX MOUNTING: 1/2 screw size		EA	8	*	*	*	*	*	*	*	*		
00145		4216 - MISCELLANEOUS WIRING AND FITTINGS													
X2 H 00146	6115-948-7389	CABLE ASSEMBLY 13212E3584-1 (97403)		EA	1										
X2 H 00147	6115-948-7390	CABLE ASSEMBLY 13212E3585-1 (97403)		EA	1										
X2 O 00148		CLAMP, CABLE, DOUBLE 13212E3591-5 (97403)		EA	2										
X2 O 00149		CLAMP, CUSHIONED, SUPPORT LOOP: 1/8 MS21334-2 (96906)		EA	2										
O 00150	5310-918-6921	NUT, PLAIN, HEXAGON: jam, 3/8-16		EA	1	*	*	*	*	*	*	*	*		
X2 O 00151		NUT, PLAIN, HEXAGON: machine screw, 10-24 MS35649-202 (96906)		EA	2										
O 00152	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20		EA	4	*	*	*	*	*	*	*	*		
O 00153	5305-071-2241	SCREW, CAP, HEXAGON HEAD: 1/4-20 x 1-1/4		EA	4	*	*	*	*	*	*	*	*		
X2 O 00154		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 3/4 lg MS35309-58 (96906)		EA	1										
O 00155	5305-984-6211	SCREW, MACHINE, PAN HEAD: 10-24 x 5/8 lg		EA	2	*	*	*	*	*	*	*	*		
F 00156	5940-688-6010	TERMINAL, LUG: No. 6-3/8 stud		EA	4	*	*	*	*	*	*	*	*		
O 00157	5310-809-4058	WASHER, FLAT: round, 1/4 thd size		EA	8	*	*	*	*	*	*	*	*		
O 00158	5310-809-8546	WASHER, FLAT: round, No. 10 screw size		EA	4	*	*	*	*	*	*	*	*		
O 00159	5310-913-9776	WASHER, LOCK: external tooth, flat, 3/8		EA	1	*	*	*	*	*	*	*	*		
O 00160	5310-045-3296	WASHER, LOCK: spring, helical, No. 10		EA	2	*	*	*	*	*	*	*	*		
M O 00161		WIRE, ELECTRICAL: No. 6, copper, unin- sulated QQW343TYPRECLASS1 (81348) MANUFACTURE FROM:		FT											
P O 00162	6145-299-6188	WIRE, ELECTRICAL: copper, uninsul- ated, No. 6 (As required) QQW343TYPRECLASS1 (81348)		FT					SEE	GRP	9501				
00163		GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS													
00164		7638 - PORTABLE FIRE FIGHTING EQUIPMENT													
P C 00165	4210-555-8837	EXTINGUISHER, FIRE, W/BRACKET MILE52031 (81349)		EA	2	*	*	2	*	*	2	10	10		
O 00166	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20		EA	8	*	*	*	*	*	*	*	*		
X2 O 00167		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 5/8 lg MS90725-6 (96906)		EA	8										
O 00168	5310-809-8546	WASHER, FLAT: round, 1/4 screw size		EA	16	*	*	*	*	*	*	*	*		

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 30-DAY DS MAINT ALLOWANCE	(7) 30-DAY GS MAINT ALLOWANCE	(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
									(a)	(b)
					(a)	(b)	(c)	(a)	(b)	(c)
					1-20	21-50	51-100	1-20	21-50	51-100
00169		GROUP 95 - GENERAL USE STANDARDIZED PARTS								
00170		9501 - HARDWARE SUPPLIES AND BULK MATERIAL, COMMON								
X2 F 00171		ROPE: sisal, 3/8 13212E3598-11 (97403)		FT						
P F 00172	2540-914-2558	STRAP, WEBBING: 1-16 x 3/4 in. 13212E3598-1-2-3 (97403)		FT	*	*	*	*	*	*
P O 00173	5340-922-5653	WEBBING, STRAP 1403 (06716)		FT	*	*	*	*	*	*
P O 00174	6145-299-6188	WIRE, ELECTRICAL: No. 6, copper, uninsulated QQW343TYPERBCLASS1 (81348)		FT	*	*	*	*	*	*

LEGEND TO PARTS, FIGURE 3-8

ITEM NO.	FUNCT GROUP	ITEM NAME
1	4206	COVER
2	4206	LIGHT-WIRE
3	4206	SCREW
4	4206	PACKING
5	2210	SCREW
6	2210	WASHER
7	2210	WASHER
8	4206	LIGHT-WIRE
9	4206	WASHER
10	4206	NUT
11	4206	SCREW
12	4206	LEAD
13	4206	LEAD
14	4206	LEAD
15	4206	PACKING
16	4206	STUFFING
17	4206	CABLE AY
18	4206	CABLE AY
19	4206	BOX
20	4206	GASKET
21	4206	TERMINAL BOARD
22	4206	CONNECTOR
23	4206	SCREW
24	4206	WASHER
25	4206	WASHER
26	4206	NUT
27	4206	WASHER
28	4206	NUT
29	4206	NUT
30	4206	WASHER
31	4206	SWITCH
32	4206	PACKING

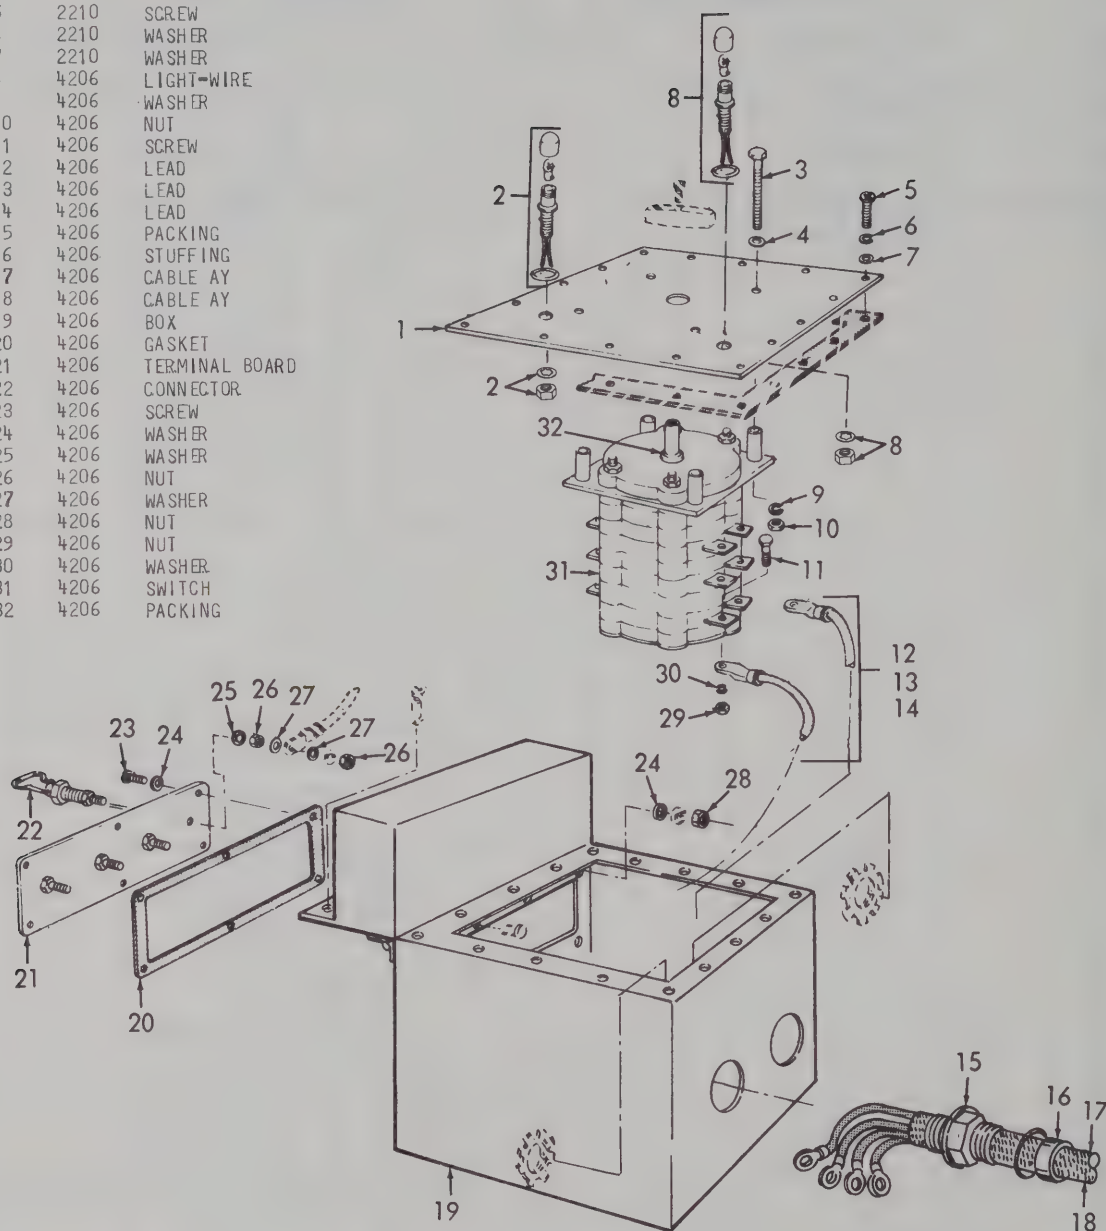

ME 6115-365-15/3-8

Figure 3-8. Distribution box.

Figure 3-8. Distribution box.

CHAPTER 4

GENERATOR SETS PU-618/M AND PU-620-M

Section I. DESCRIPTION AND DATA

4-1. Description

a. General. The trailer mounted generator sets, PU-618/M and PU-620/M, consist of two 5 kw, Model SF 5.0 Military Design generator sets mounted on a modified 1-1/2 ton, 2-wheel cargo trailer, Model 103A3 (PU-618/M), or a modified 3/4 ton, 2-wheel cargo trailer, Model M116A1 (PU-620/M), (refer to figures 4-1 and 4-2).

b. Generators. Each generator is powered by a directly-coupled, 2-cylinder, 10 hp, Military Standard Model 2A042-1 engine. For description and generator operation and maintenance, refer to TM 5-6115-332-12. A power transfer switch is provided for connecting the generators to a common load. Table 4-1 lists the components of the PU-618/M and PU-620/M generator sets.

c. Engines. For description and engine maintenance information not covered in this chapter, refer to TM 5-2805-258-14.

d. Trailers. For description and maintenance of the trailer for PU-618/M, refer to TM 9-2330-213-14. For PU-620/M trailer, refer to TM 9-2330-202-14.

e. Lubrication. For lubrication instructions for the engines refer to LO 5-2805-258-14. The trailer lubrication information is contained in LO 9-2330-213-12 (PU-618/M) and LO 9-2330-202-12 (PU-620/M).

4-2. Tabulated Data

Table 4-1 lists components for PU-618/M and PU-620/M generator sets.

Table 4-1. PU-618/M and PU-620/M components.

FSN	QTY	Nomenclature
2330-141-8052	1	Trailer; M103A3 (PU-618/M)
2330-898-6780	1	Trailer; M116A1 (PU-620/M)
2590-318-6691	1	Leg prop assembly, trailer
6115-017-8240 or	2	Generator; 5 kw, Model SF 5.0 MD
6115-074-8330	2	Generator; 5 kw, MEP-016A
2910-066-1235	4	Adapter assembly, fuel drum
7240-222-3088	6	Can, gasoline; military, 5-gallon
4210-555-8873	2	Fire extinguisher
5975-878-3791	2	Ground rod assemblies
5120-251-4489	1	Sledge hammer




SHIPPING DIMENSIONS

LENGTH	175 INCHES
WIDTH	83 INCHES
HEIGHT	66 INCHES
WEIGHT	4 360 POUNDS

NOTE: ROLL UP TARPAULIN AND REMOVE 2 BOLTS AND 2 NUTS FROM TOP OF SPLASH SHIELD. REMOVE SPLASH SHIELD BEFORE OPERATING EQUIPMENT.

ME 6115-365-15-4-1 C1

Figure 4-1. PU-618/M, right front, 3/4 view.

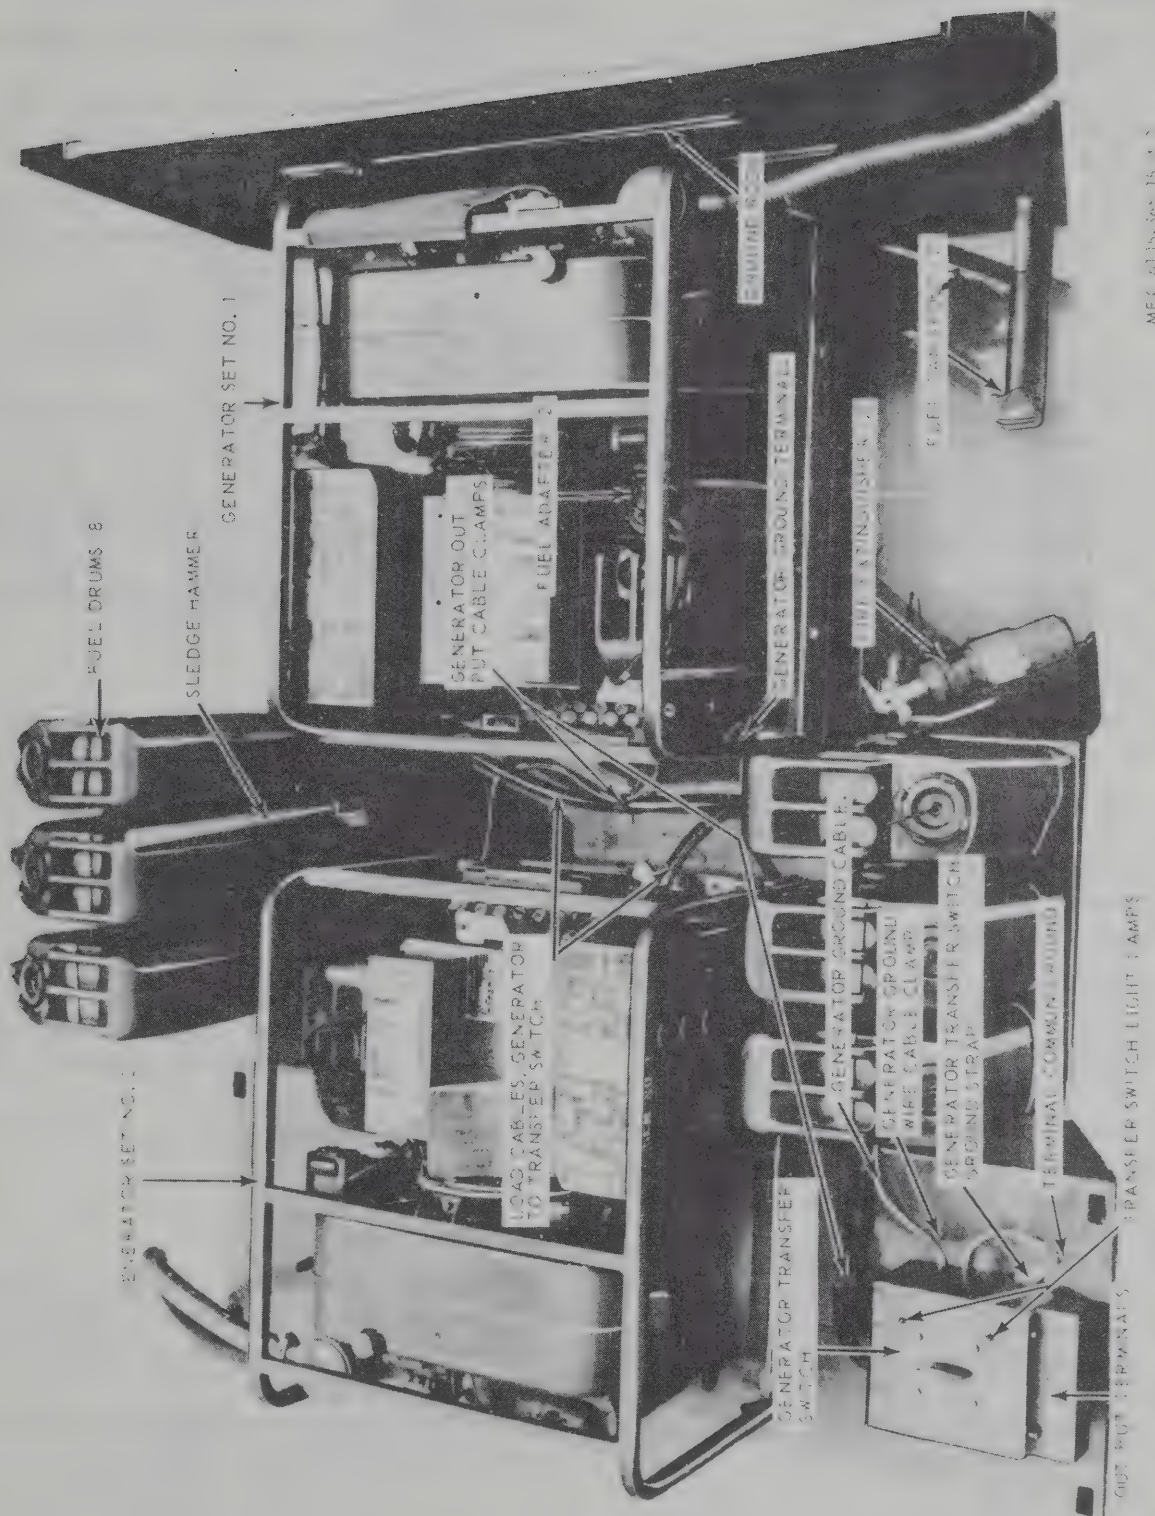

MEK 613-65-15-4-2

Figure 4-2. PU-620/M, top view, tarpaulin removed.

Section II. OPERATING INSTRUCTIONS

4-3. Setting-Up Instructions

a. Leveling.

(1) Locate the trailer on as level a surface as possible in order for the generator sets to operate efficiently.

(2) Set brakes and block wheels securely to prevent any movement. Operate the hand-brake at weekly intervals to assure freedom of linkage.

(3) Pull leg support down and adjust length for firm contact with ground.

Warning: Wheels must be blocked, brakes set, and leg prop down in support position before attempting to roll up the tarpaulin and before starting to set-up or assemble the equipment for operation.

b. Preparation for Starting.

(1) Roll up tarpaulin and remove splash shield as shown in figure 4-1.

(2) Remove all loose auxiliary items and anything else that might block the free circulation of air through the trailer and around the generator sets.

Caution: It is of foremost importance that there be free circulation of air around the generator sets at all times during operation. Inadequate ventilation is a major cause of damage to the equipment.

(3) Be sure transfer switch load cables are connected to the generator sets as illustrated in figure 4-3.

c. Grounding.

Warning: Never operate the generator set until it has been properly grounded. Electrical defects in the load lines or equipment can cause death by electrocution when contact is made with an ungrounded system.

(1) The generator set must be grounded prior to operation. The ground may be any of three methods, depending on the location and terrain.

(a) A ground rod driven to a depth of 8 feet.

(b) An underground metallic water piping system.

(c) A metal plate (9 sq ft) buried at a depth of 4 feet.

(2) The ground lead must be No. 6 AWG copper wire bolted or clamped to the rod, plate, or piping system.

(3) Connect the other end of the ground lead to the generator set ground stud as shown in figure 4-4.

(4) Be sure that both generators are connected to the generator set ground stud as shown in figure 4-4.

d. *Fuel Hose Connection.* Connect the fuel hoses as illustrated in figure 4-5.

Warning: Never operate the generator set in an enclosed area unless the exhaust gases are piped to the outside. Inhalation of exhaust fumes will result in serious illness or death.

4-4. Starting

a. Perform the setting-up and pre-starting procedures (para 4-3).

b. Be sure the generator transfer switch is OFF (fig. 4-3).

c. Start the generator set as instructed in TM 5-6115-332-12.

4-5. Stopping

a. Turn the generator transfer switch OFF or in position to select standby generator (fig. 4-3).


b. Stop the generator set as instructed in TM 5-6115-332-12.

4-6. Operation

a. Start the generator (para 4-4) and position transfer switch to desired generator.

b. Operate the generator as instructed in TM 5-6115-332-12.


c. Perform the fuel transfer procedure as instructed in figure 4-5.

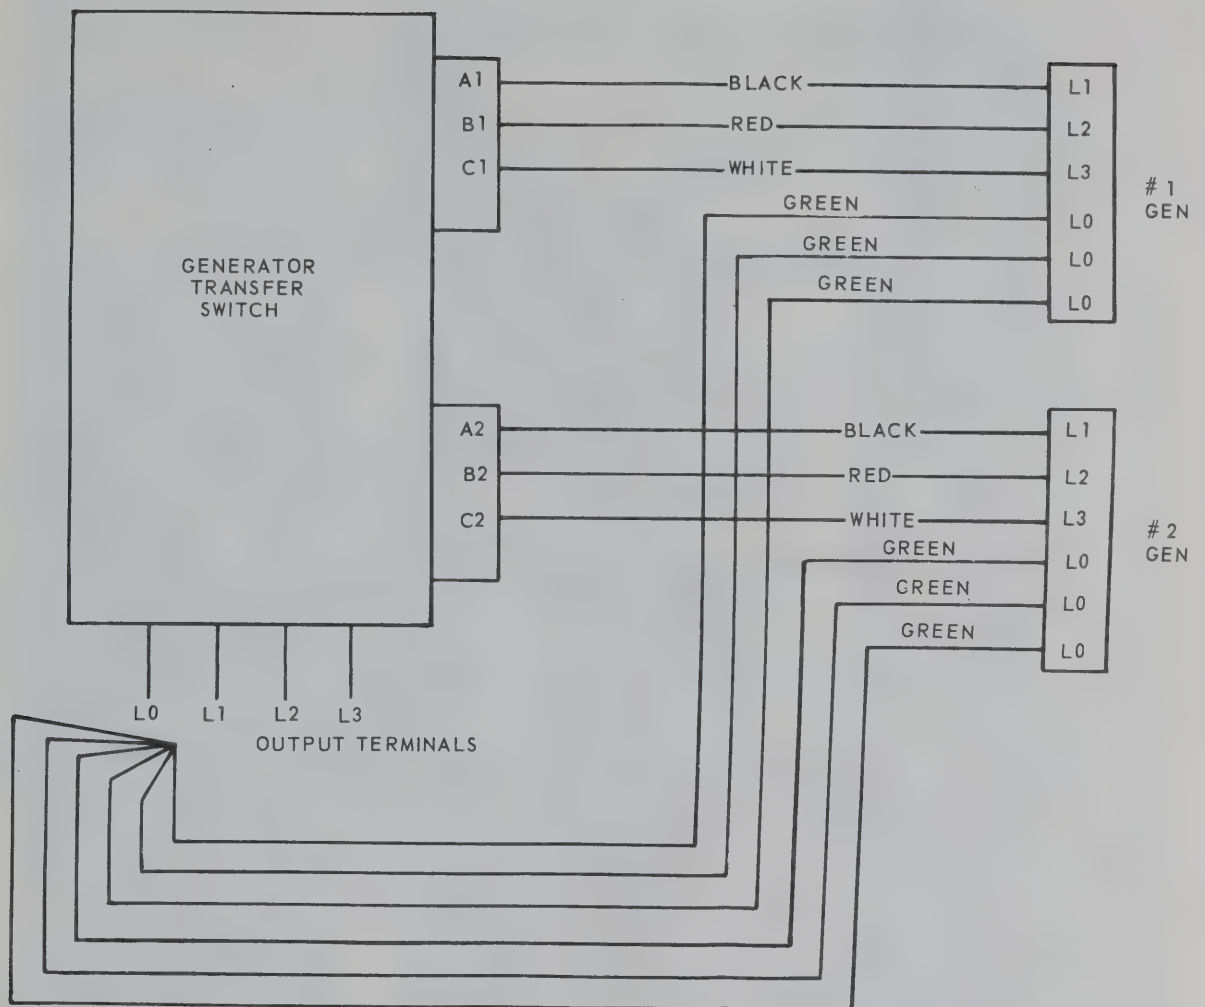

MEC 6115-365-15/4-3

Figure 4-3. Interconnection diagram, transfer switch-to-generators.

CAUTION: KEEP TARPULIN ROLLED UP DURING OPERATION AND BE CERTAIN TO MAINTAIN THE MAXIMUM AMOUNT OF SPACE AROUND THE GENERATORS SO AIR CIRCULATES FREELY AT ALL TIMES.

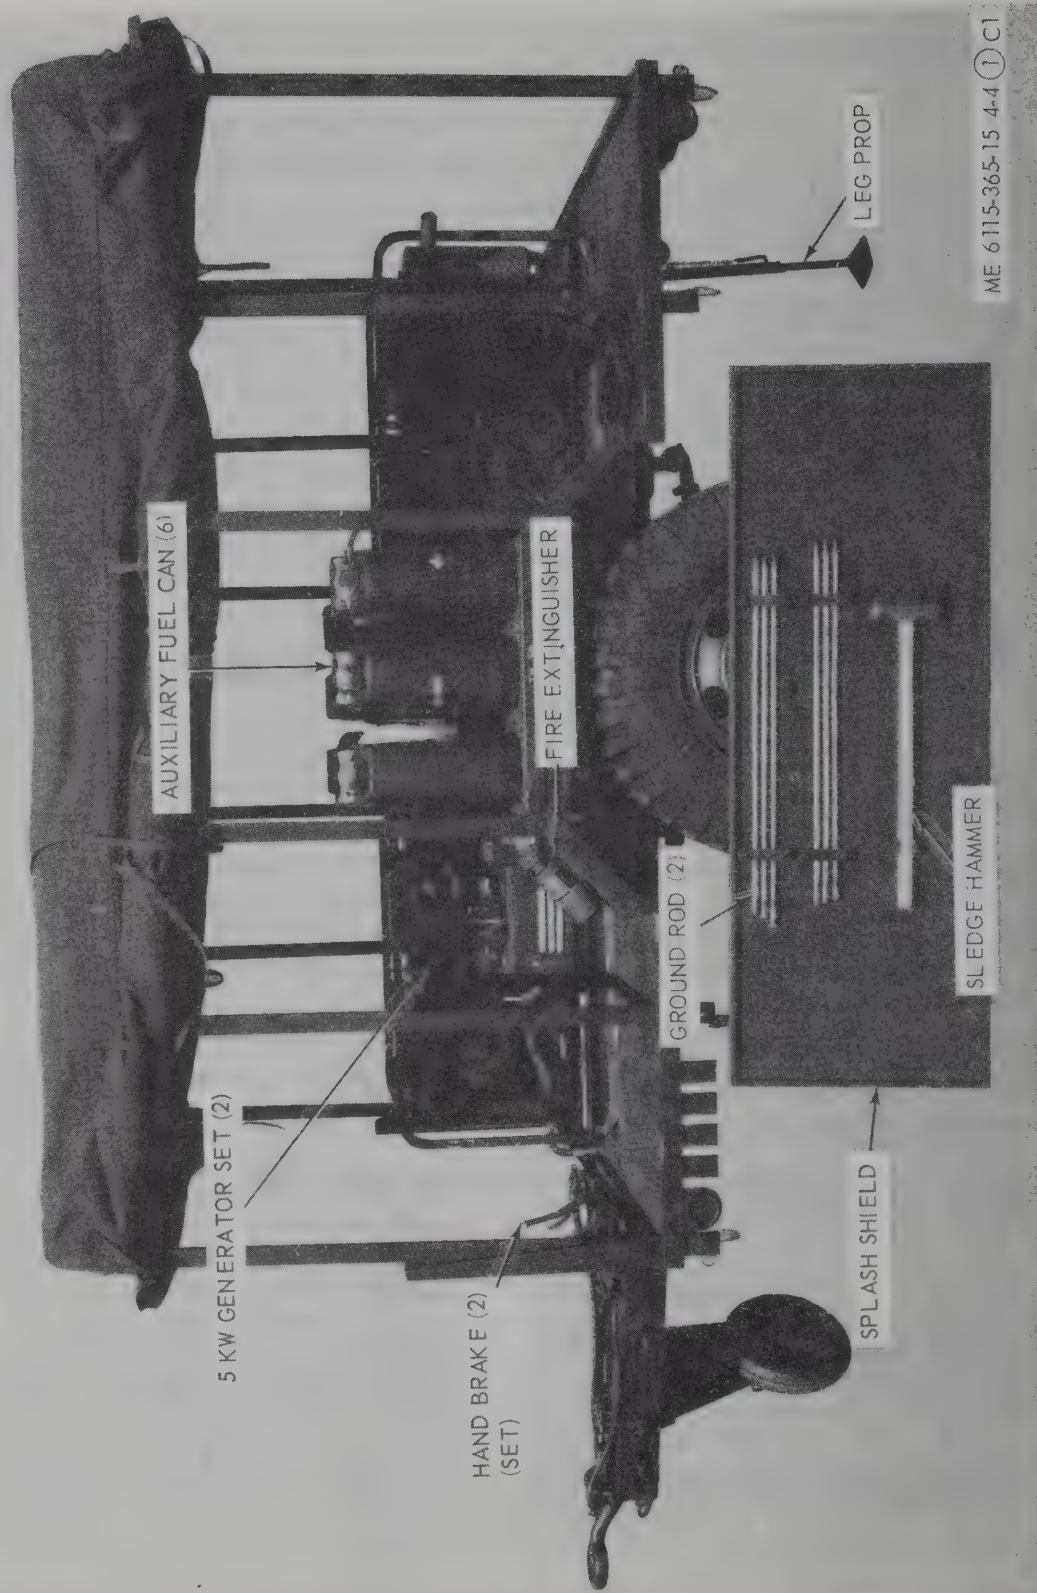

ME 6115-365-15 4-4 (1) C1

Figure 4-4. PU-618M set up for operation.


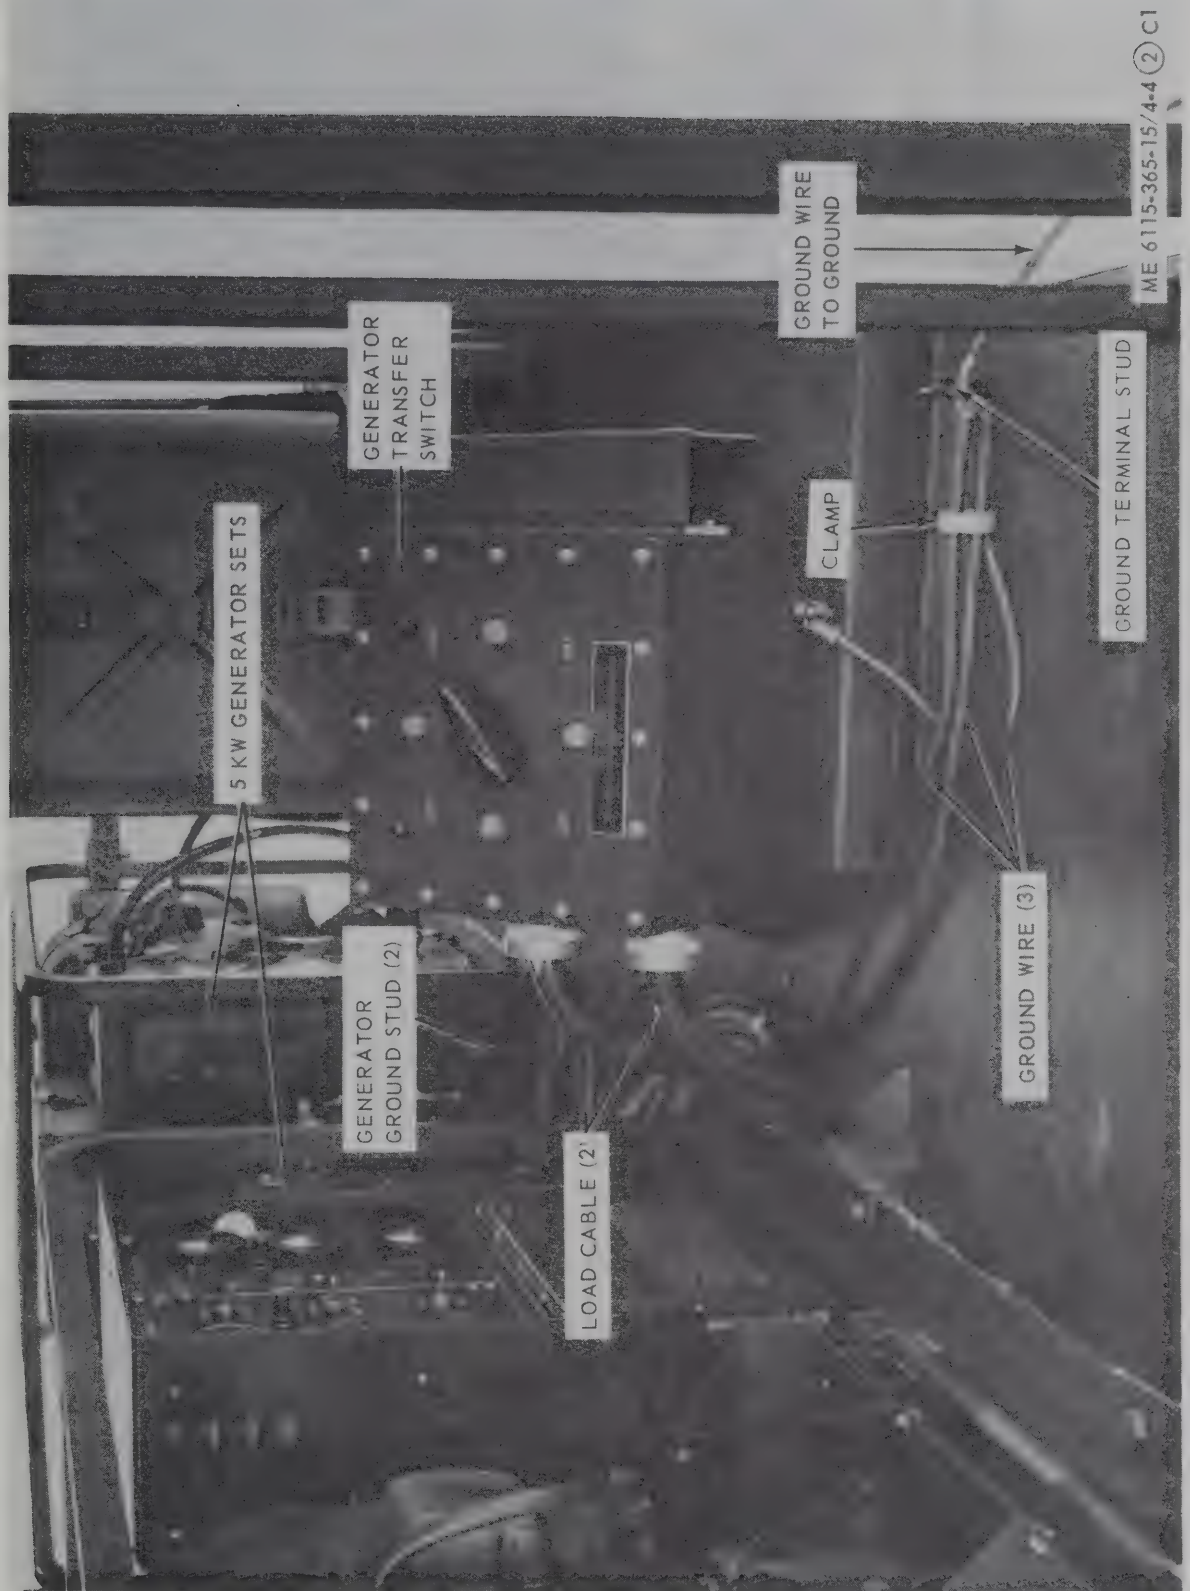


Figure 4-4—Continued.

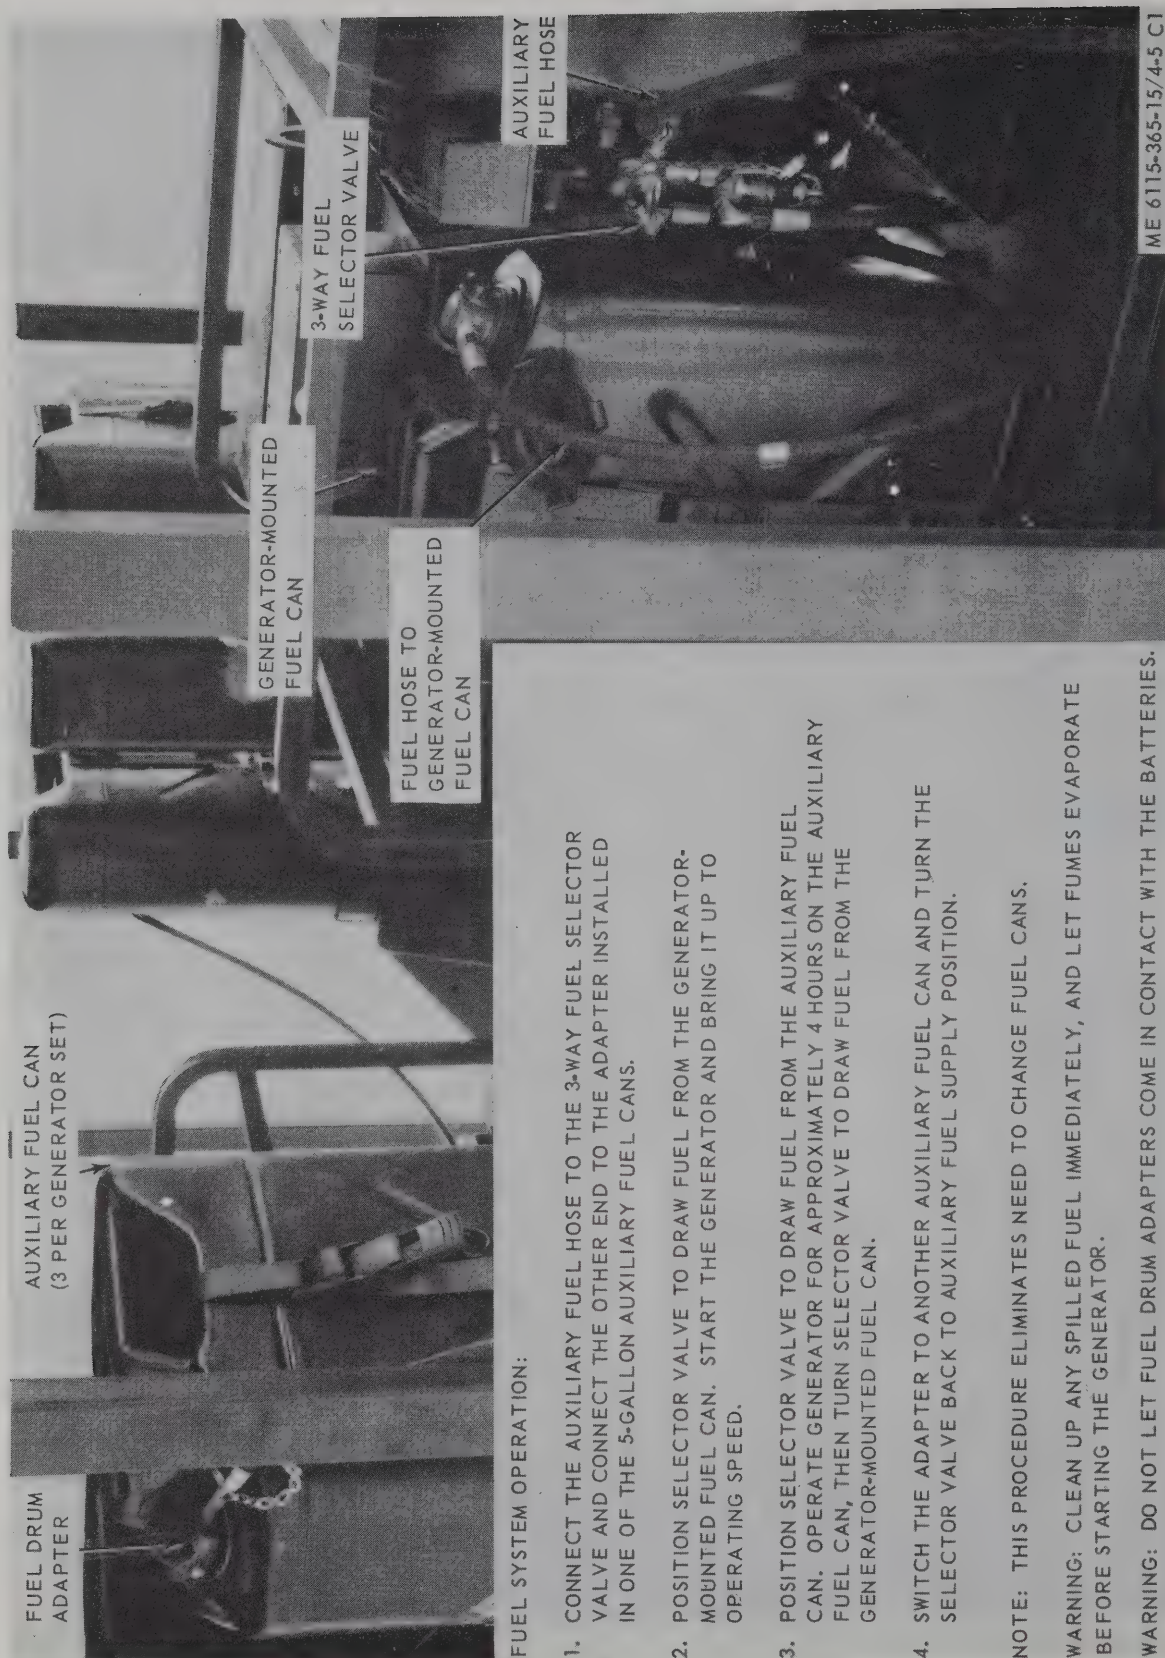

FUEL SYSTEM OPERATION:

1. CONNECT THE AUXILIARY FUEL HOSE TO THE 3-WAY FUEL SELECTOR VALVE AND CONNECT THE OTHER END TO THE ADAPTER INSTALLED IN ONE OF THE 5-GALLON AUXILIARY FUEL CANS.
2. POSITION SELECTOR VALVE TO DRAW FUEL FROM THE GENERATOR-MOUNTED FUEL CAN. START THE GENERATOR AND BRING IT UP TO OPERATING SPEED.
3. POSITION SELECTOR VALVE TO DRAW FUEL FROM THE AUXILIARY FUEL CAN. OPERATE GENERATOR FOR APPROXIMATELY 4 HOURS ON THE AUXILIARY FUEL CAN, THEN TURN SELECTOR VALVE TO DRAW FUEL FROM THE GENERATOR-MOUNTED FUEL CAN.
4. SWITCH THE ADAPTER TO ANOTHER AUXILIARY FUEL CAN AND TURN THE SELECTOR VALVE BACK TO AUXILIARY FUEL SUPPLY POSITION.

NOTE: THIS PROCEDURE ELIMINATES NEED TO CHANGE FUEL CANS.

WARNING: CLEAN UP ANY SPILLED FUEL IMMEDIATELY, AND LET FUMES EVAPORATE BEFORE STARTING THE GENERATOR.

WARNING: DO NOT LET FUEL DRUM ADAPTERS COME IN CONTACT WITH THE BATTERIES.

Figure 4-5. Fuel system connection and transfer procedure.

Section III. OPERATOR'S MAINTENANCE INSTRUCTIONS


4-7. Transfer Switch Indicating Lamps

a. Removal. Remove lens and remove indicator lamp as illustrated in figure 4-6.

b. Installation. Install the indicator lamp and lens as illustrated in figure 4-6.

4-8. Field Expedient Repairs

Trouble	Probable cause	Remedy
Power transfer switch will not supply power to load.	Switch on terminal board defective.	Disconnect generator from transfer cables and connect load cables directly to the individual terminal boards of the generator sets.

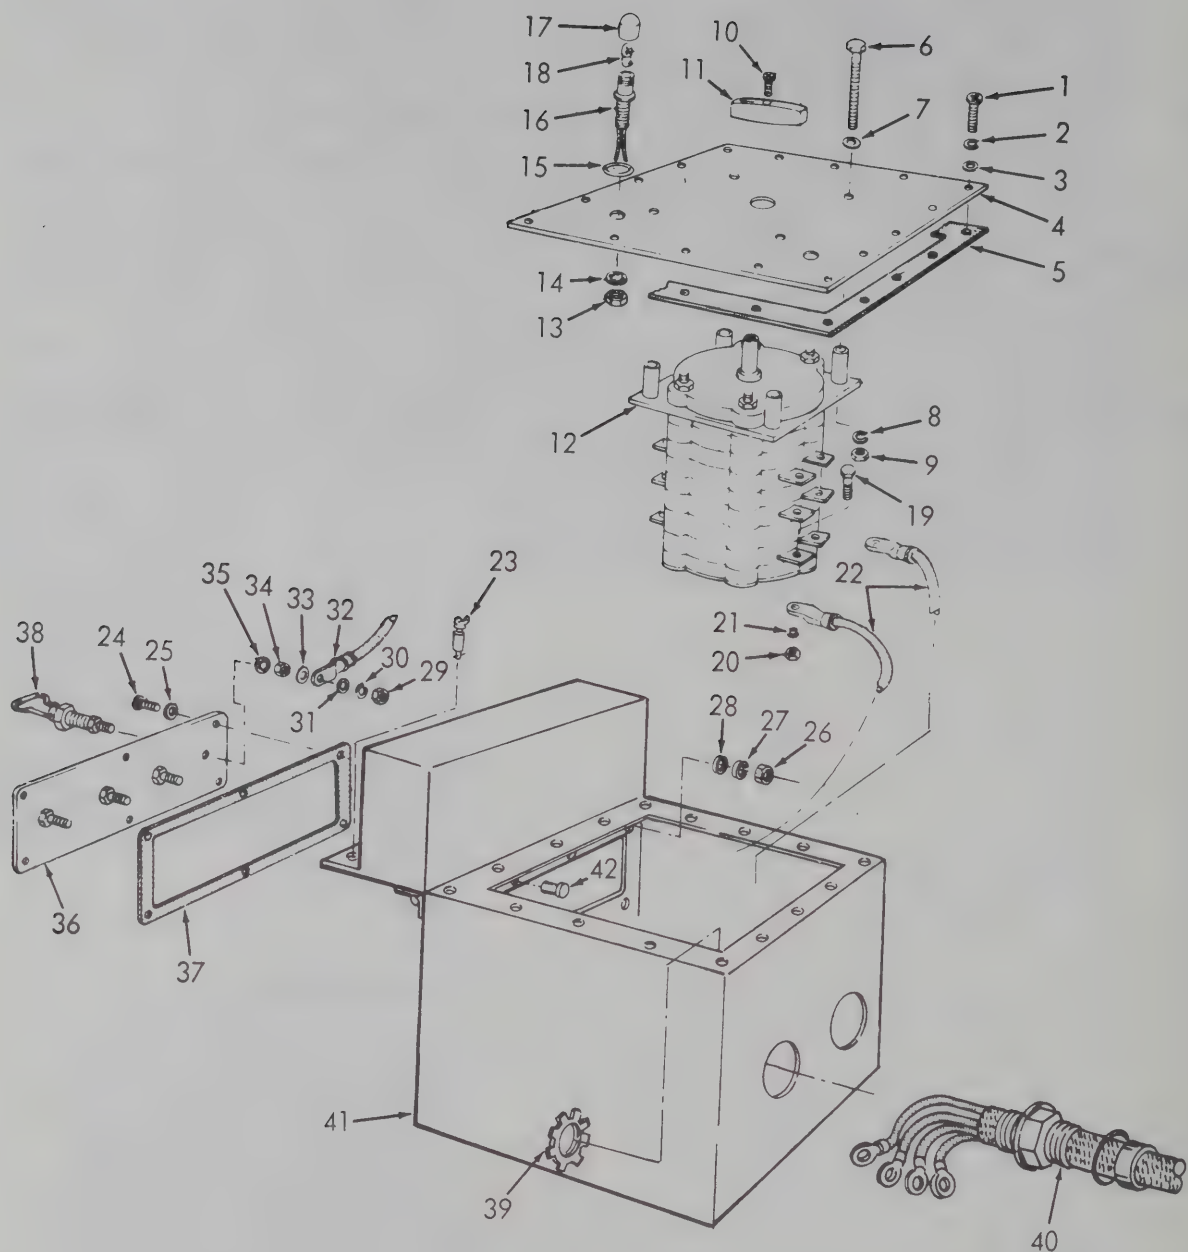

ME 6115-365-15/4-6 C1

- | | | |
|--------------|----------------------------|--------------------|
| 1 Screw | 9 Hexnut | 17 Lens |
| 2 Lockwasher | 10 Screw | 18 Lamp |
| 3 Flatwasher | 11 Knob | 19 Screw |
| 4 Cover | 12 Transfer switch | 20 Hexnut |
| 5 Gasket | 13 Hexnut | 21 Lockwasher |
| 6 Screw | 14 Lockwasher | 22 Electrical lead |
| 7 Flatwasher | 15 Preformed packing | 23 Fastener |
| 8 Lockwasher | 16 Light and wire assembly | 24 Screw |

Figure 4-6. Transfer switch, removal, disassembly, reassembly, and installation.

25 Flatwasher	31 Flatwasher	37 Gasket
26 Hexnut	32 Electrical lead	38 Terminal lug
27 Lockwasher	33 Flatwasher	39 Locknut
28 Flatwasher	34 Hexnut	40 Stuffing tube assembly
29 Hexnut	35 Lockwasher	41 Transfer switch box
30 Lockwasher	36 Terminal board	42 Rivet

Figure 4-6—Continued.

Section IV. ORGANIZATIONAL MAINTENANCE INSTRUCTIONS

4-9. Transfer Switch Indicating Lights

a. Removal. Remove the indicating lights as illustrated in figure 4-6.

b. Installation. Install the indicating lights as illustrated in figure 4-6.

4-10. Ground Wires, and Terminal Stud

a. Removal. Remove the ground wires from the ground terminal stud and generator sets as shown in figure 4-4. Remove the terminal stud.

b. Installation. Install the ground wires, and terminal stud as shown in figure 4-4.

4-11. Tarpaulin, Roof Bows, and Leg Prop

a. Removal.

(1) Remove the tarpaulin from the unit.

(2) Pull out the chain-secured pins that secure the roof bows to the trailer bed and remove the bows.

(3) Remove the hardware that secures the leg prop to the rear underside of the trailer bed and remove the leg prop.

b. Cleaning and Inspection.

(1) Clean tarpaulin and roof bows with water and detergent. Clean leg prop with approved cleaning solvent. Dry thoroughly.

(2) Inspect tarpaulin for tears, holes, broken or missing ropes or straps and other defects. Inspect bows and leg prop for cracks, bends, and any other defects.

c. Installation.

(1) Mount the leg prop to the underside of the trailer bed and secure with mounting hardware.

(2) Install the roof bows in the trailer bed and secure with pins. Install the tarpaulin and secure in the desired position.

Section V. DIRECT AND GENERAL SUPPORT AND DEPOT MAINTENANCE INSTRUCTIONS

4-12. Generator Transfer Switch

a. Removal and Disassembly.

(1) Tag and disconnect leads from the output terminals to load.

(2) Remove and disassemble the transfer switch as illustrated in figure 4-6.

b. Reassembly and Installation.

(1) Reassemble and install the transfer switch as illustrated in figure 4-6.

(2) Connect load connections. (Refer to figure 4-7).

4-13. Generator Sets

a. Removal. Use figure 4-8 as a guide and perform the following steps:

(1) Disconnect fuel lines.

(2) Disconnect electrical leads and cables.

(3) Disconnect oil drain adapters.


(4) Remove 2 bolts and 2 nuts that secure the front muffler pipe to the trailer and remove pipe.

(5) Remove the 8 bolts (4 to each set) that secure the generator sets to the trailer and remove the generator sets.

b. Installation. Using figure 4-8 as a guide, perform the following steps:


(1) Secure the two generator sets to the trailer bed with 8 bolts.

(2) Secure front muffler pipe to trailer bed with 2 bolts and 2 screws.

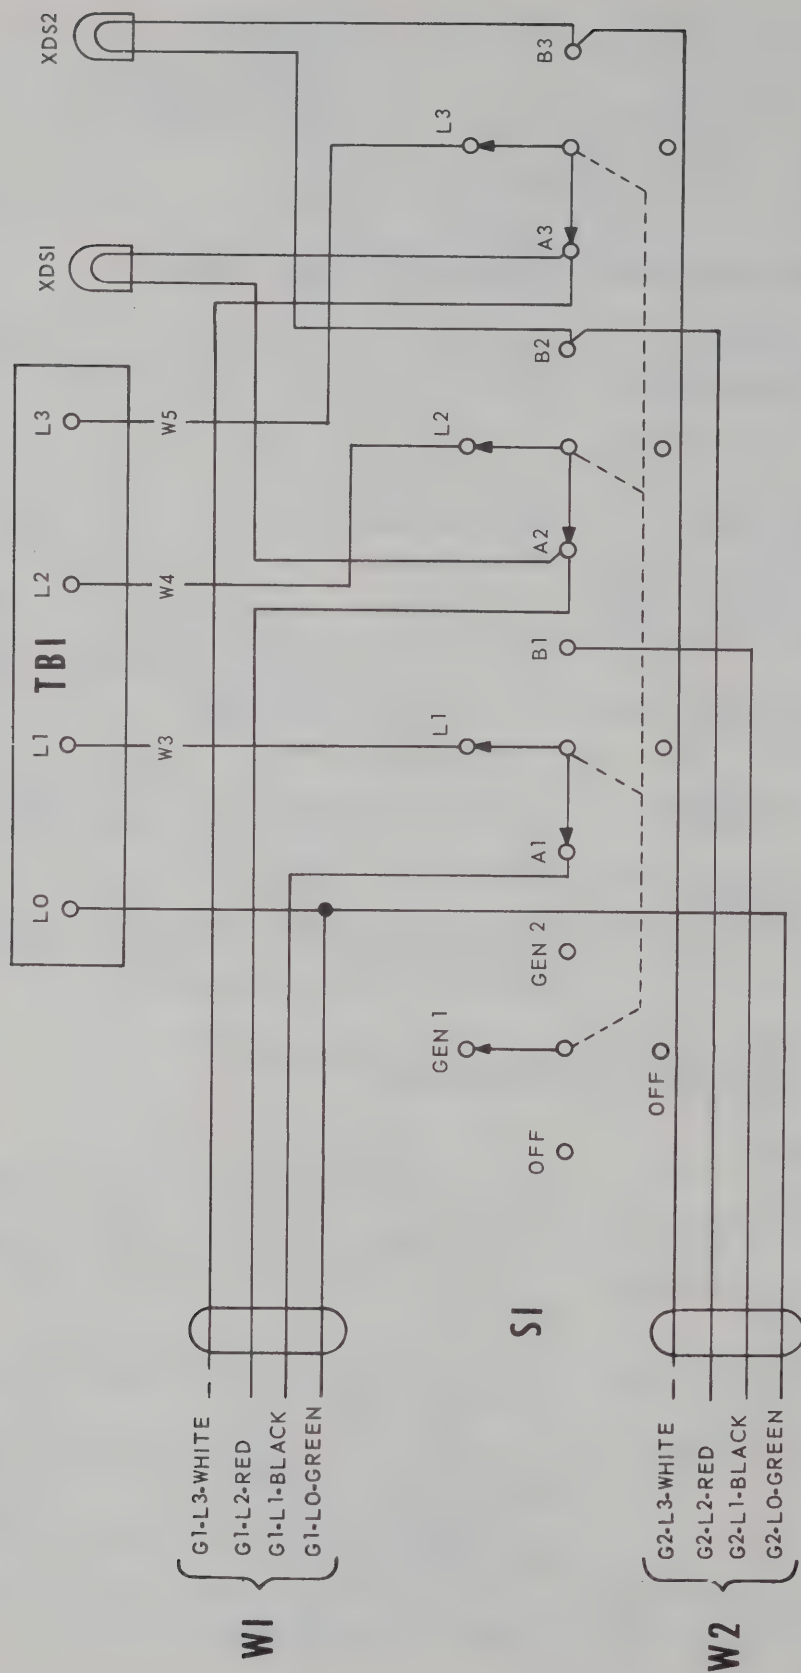

ME 6115-365-15/2-6 C1

Figure 4-7. Transfer switch wiring diagram.

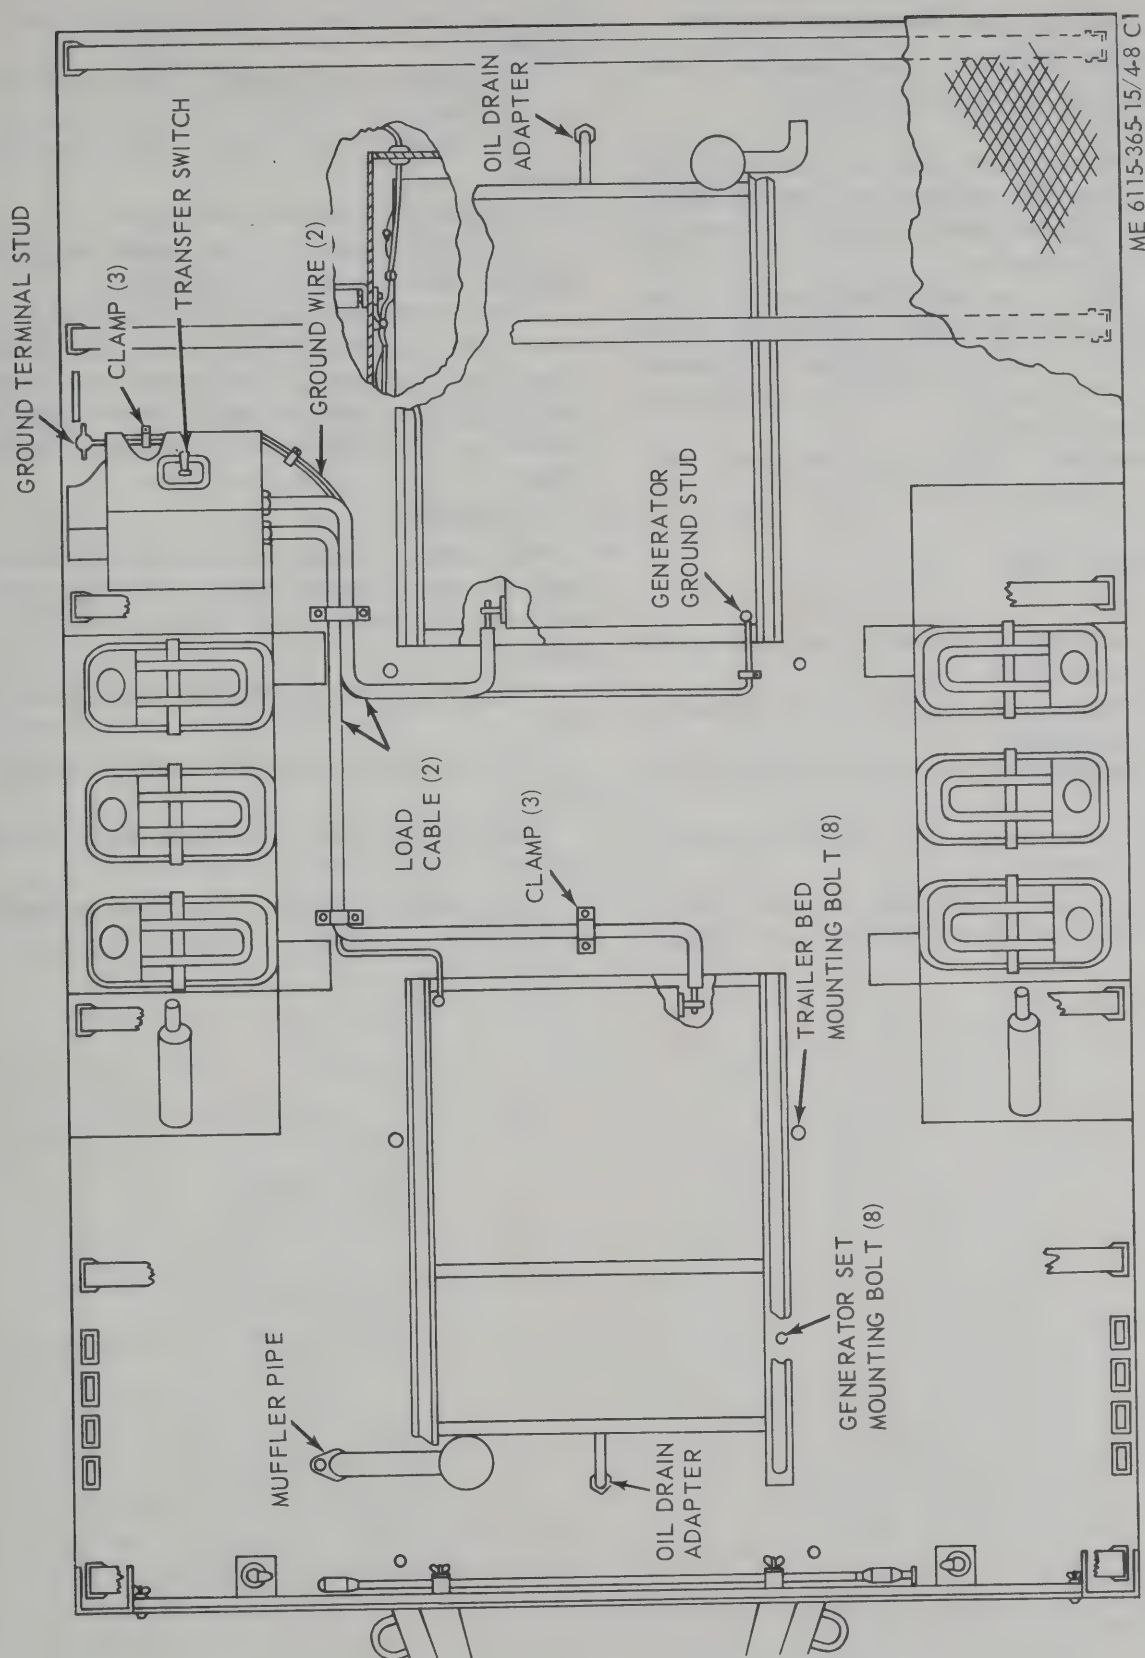

ME 6115-365-15/4-8 C1

Figure 4-8. PU-618M overall component location diagram.

4-14. Tarpaulin, Roof Bows, and Leg Prop

a. Removal. Remove the tarpaulin, roof bows, and leg prop (para 4-11).

b. Repair.

(1) Patch or sew rips and tears in the tarpaulin. Replace damaged or missing straps and ropes. Replace a tarpaulin that is too badly damaged to be repaired.

(2) Weld minor cracks and breaks in the roof bows and leg prop. Straighten bows where possible. Replace defective or missing hardware. Replace bows or leg prop that are damaged beyond repair.

c. Installation. Install the tarpaulin, roof bows, and leg prop (para 4-11).

4-15. Trailer Bed

a. Removal.

(1) Remove the tarpaulin, roof bows and leg prop (para 4-11).

(2) Remove the transfer switch from the trailer (para 4-12).

(3) Remove the generator sets (para 4-13).

(4) Loosen straps and remove the auxiliary fuel cans from trailer.

(5) Remove 8 bolts from the top surface of the trailer bed and 12 bolts from the under-

side that secure the trailer bed gussets to the trailer.

(6) Disconnect electrical leads from the trailer lights.

(7) Remove the trailer bed from the trailer.

b. Cleaning, Inspection, and Repair.

(1) Clean trailer bed with approved cleaning solvent and dry thoroughly.

(2) Inspect for broken welds, bends, and dents, and any damage that prevents proper assembly of the unit. Weld cracks and breaks and straighten dents or bends where possible. Replace a trailer bed that is damaged beyond repair.

c. Installation.

(1) Install trailer bed on the trailer and secure with 12 bolts on the underside and 8 bolts on the top. Connect wiring to trailer lights.

(2) Install the generator sets (para 4-13).

(3) Install the transfer switch (para 4-12).

(4) Install fuel cans and secure with straps.

(5) Install leg prop, bows, and tarpaulin (para 4-11).

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS USABLE ON CODE	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
		PART I REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE GROUP 01 - ENGINE 0106 - ENGINE LUBRICATION SYSTEM								
00001										
00002										
X2 0 00003	4720-913-6422	HOSE, OIL DRAIN 13214E4918 (97403)	EA	2						
0 00004	4730-766-7908	NIPPLE, TUBE, OIL DRAIN	EA	2	*	*	*	*		
0 00005	5310-282-7822	NUT, UNION: oil drain hose	EA	2	*	*	*	*		
X2 0 00006		REDUCER, BUSHING: 3/4-14 X 1/2-14 SAEJ530 (81343)	EA	2						
0 00007	5310-754-2005	WASHER, LOCK: oil drain hose	EA	2	*	*	*	*		
00008		GROUP 15 - FRAME, TOWING ATTACHMENTS, AND DRAWBARS 1501 - FRAME ASSEMBLY								
00009										
X2 0 00010	2590-473-6331	BRACKET ASSEMBLY: liquid count, 5 gallon MS53052-1 (96906)	EA	6						
X2 0 00011		BRACKET 13214E1204 (97403)	EA	6						
X2 0 00012	5340-999-4286	BUCKLE MS51940-7 (96906)	EA	12						
X2 0 00013		FASTENER 13214E1205 (97403)	EA	6						
X2 0 00014		HOOK, DRIP RAIL 13212E1316 (97403)	EA	6						
M 0 00015		STRAP: bottom 18 in. lg. nylon webb 13214E1203-3 (97403) MANUFACTURE FROM:	EA	6						
P 0 00016	5340-922-5653	WEBBING, NYLON MILW530TYPE2CLASSA (31349)	FT			SEE	GRP	9501		
M 0 00017		STRAP: top, 30 in. lg. nylon webb 13214E1203-2 (97403) MANUFACTURE FROM:	EA	6						
P 0 00018	5340-922-5653	WEBBING, NYLON 1403 (06716)	FT			SEE	GRP	9501		
X2 0 00019	5340-999-6277	BRACKET ASSEMBLY: sledge hammer 13214E1214 (97403)	EA	1						
X2 0 00020		CLAMP CABLE: double 13212E3591-2 (97403)	EA	1						
X2 0 00021		CLAMP CABLE: single 13212E3612 (97403)	EA	2						
X2 0 00022	5340-526-2559	CLAMP, CUSHIONED SUPPORT: loop type MS21333-2 (96906)	EA	1						
X2 0 00023	2590-932-7298	CLAMP, GROUND ROD 13212E3617-1 (97403)	EA	4						
X2 0 00024	5340-914-2578	CLIP, SPRING 13214E1213-1 (97403)	EA	1						
X2 0 00025	7240-920-5327	HOLLER, FUEL DRUM ADAPTER 13212E3553-1 (97403)	EA	2						
0 00026	5310-934-9758	NUT, PLAIN, HEXAGON: No. 10-24	EA	1	*	*	*	*		
0 00027	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20	EA	3	*	*	*	*		
0 00028	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20	EA	2	*	*	*	*		

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS USABLE ON CODE	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
0	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20, size	EA	4	*	*	*	*		
00029	0	5310-088-1251	EA	1	*	*	*	*		
00030	0	5310-088-1251	EA	2	*	*	*	*		
00031	0	5310-087-4652	EA	24	*	*	*	*		
00032	0	5310-984-3806	EA	4	*	*	*	*		
00033	0	5305-071-2241	EA	2	*	*	*	*		
00034	0	5305-071-2241	EA	4	*	*	*	*		
00035	0	5305-068-0502	EA	1	*	*	*	*		
00036	0	5305-068-0502	EA	2	*	*	*	*		
00037	0	5305-269-3213	EA	24	*	*	*	*		
00038	0	5306-225-8499	EA	4	*	*	*	*		
00039	0	5305-958-5247	EA	8	*	*	*	*		
00040	0	5305-984-6212	EA	1	*	*	*	*		
00041	0	5310-809-4058	EA	4	*	*	*	*		
00042	0	5310-809-8546	EA	2	*	*	*	*		
00043	0	5310-809-4058	EA	8	*	*	*	*		
00044	0	5310-809-4058	EA	8	*	*	*	*		
00045	0	5310-809-4058	EA	4	*	*	*	*		
00046	0	5310-809-4058	EA	1	*	*	*	*		
00047	0	5310-809-4061	EA	48	*	*	*	*		
00048	0	5310-081-4219	EA	8	*	*	*	*		
00049	0	5310-045-3296	EA	1	*	*	*	*		
00050		GROUP 18 - BODY, CAB, HOOD AND HULL								
00051		1801 - BODY, CAB, HOOD AND HULL ASSEMBLIES								
00052										
X2 0	6115-929-8144	PLATE, FRONT SHIELD	EA	1						
00053		13212E3611-2 (97403)								
0	5310-080-8495	NUT, PLAIN, WING: 1/4-20 screw size	EA	2	*	*	*	*		
00054	0	5305-721-8010	EA	2	*	*	*	*		
00055	0	5310-809-4058	EA	4	*	*	*	*		
00056	X2 0	WASHER, LOCK: split helical, 1/4	EA	2						
00057	00058	MS35338-139 (96906)								
00058		1810 - CARGO BODY								
X2 0		BOLT, MACHINE, HEXAGON HEAD: 5/8-11 X 7, 1g	EA	2						
00059		FFB575TYPE3 (97403)								
0	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16	EA	12	*	*	*	*		
00060	0	5310-269-4040	EA	8	*	*	*	*		
00061	0	5305-269-3213	EA	16	*	*	*	*		
00062	0	5305-724-5911	EA	6	*	*	*	*		
00063	0	5310-809-4061	EA	28	*	*	*	*		
00064	0	5310-823-8803	EA	16	*	*	*	*		
00065	0	5310-959-4675	EA	4	*	*	*	*		
00066		WASHER, LOCK: helical split heavy, 3/8								

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
						(a)	(b)	(c)	(d)	(a)	(b)
						1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
00067		GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS									
00068		2201 - CANVAS, RUBBER, OR PLASTIC ITEMS									
P 0 00069	2540-924-8478	BOW, TRAILER TARPAULIN 13215E3597-1 (97403)		EA	4	*	*	*	*		
P 0 00070	2540-926-1003	BOW, TRAILER TARPAULIN 13212E3597-2 (97403)		EA	2	*	*	*	*		
P O R 00071		TARPAULIN 13216E7434 (97403)		EA	1	*	*	*	2		
00072		2202 - ACCESSORY ITEMS									
X2 0 00073	2910-066-1235	ADAPTER ASSEMBLY: fuel drum 13211E7541 (97403)		EA	2						
X2 0 00074	7240-222-3088	CAN, GASOLINE: 5 gallon, Military MILC1283 (81349)		EA	6						
X2 0 00075	5120-251-4489	HAMMER HAND GGGH86 (97403)		EA	1						
0 00076	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20		EA	12	*	*	*	*		
P 0 00077	9905-202-3639	REFLECTOR, CLEARANCE: amber MS35387-2 (96906)		EA	2	*	*	*	*		
P 0 00078	9905-205-2795	REFLECTOR, CLEARANCE: red MS35387-1 (96906)		EA	4	*	*	*	2		
X2 0 00079	5975-878-3791	ROD: ground, w/attachments MILR11461 (81349)		EA	2						
0 00080	5305-068-0502	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 3/4, lg		EA	12	*	*	*	*		
0 00081	5310-809-4058	WASHER, FLAT: round, 1/4 in.		EA	24	*	*	*	*		
00082		2210 - DATA PLATES AND INSTRUCTION HOLDERS									
X2 0 00083		PLATE, IDENTIFICATION 13205E4918 (97403)		EA	1						
X2 0 00084		PLATE, INFORMATION: wiring diagram 13212E3587 (97403)		EA	1						
00085		GROUP 29 - AUXILIARY GENERATOR AND ENGINE AND CONTROLS									
00086		2941 - ENGINE MUFFLER, EXHAUST AND TAIL PIPES									
X2 0 00087	6115-947-3331	EXHAUST TUBE 13214E1486 (97403)		EA	1						
X2 0 00088	6115-947-3335	EXHAUST TUBE 13214E1487 (97403)		EA	1						
0 00089	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20		EA	2	*	*	*	*		
0 00090	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1, lg		EA	2	*	*	*	*		
0 00091	5310-809-4058	WASHER, FLAT: round, 1/4-20 screw size		EA	4	*	*	*	*		
00092		GROUP 40 - ELECTRIC MOTORS AND GENERATORS									
00093		4000 - GENERATOR ASSEMBLY									
0 00094	5310-225-6993	NUT, SELF-LOCKING, HEXAGON: 1/2-13		EA	8	*	*	*	*		
0 00095	5305-782-9494	SCREW, CAP, HEXAGON HEAD: 1/2-13 X 1-3/4		EA	8	*	*	*	*		
X2 0 00096		WASHER, BEVELED 13206E4482-2 (97403)		EA	8						
0 00097	5310-809-5998	WASHER, FLAT: round, 1/2 in.		EA	8	*	*	*	*		

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
00098		4019 - RADIO INTERFERENCE SUPPRESSION								
X2 0 00099		CLAMP, CUSHIONED SUPPORT: 1/4, loop MS21334-2 (96906)	EA	2						
X2 0 00100		NUT, PLAIN, HEXAGON: brass, 3/8-16 MS16203-39 (96906)	EA	3						
X2 0 00101		NUT, PLAIN, HEXAGON, JAM: brass, 3/8-16 MS16203-39 (96906)	EA	1						
0 00102	5310-934-9758	NUT, PLAIN, HEXAGON: No. 10-24	EA	2	*	*	*	*		
0 00103	5310-543-4717	NUT, PLAIN, WING: brass, 3/8-16	EA	1	*	*	*	*		
X2 0 00104		SCREW, CAP, HEXAGON HEAD: 3/8-16 X 3/4, 1g MS35309-358 (96906)	EA	1						
0 00105	5305-984-6212	SCREW, MACHINE: pan head, No. 10-24 X 3/4, 1g	EA	2	*	*	*	*		
X2 0 00106		STUD 13214E1223 (97403)	EA	1						
X2 0 00107		WASHER, FLAT: brass, 3/8 thd size AN961-616T (88044)	EA	4						
0 00108	5310-809-8546	WASHER, FLAT: round, No. 10 thd size	EA	4	*	*	*	*		
0 00109	5310-913-9776	WASHER, LOCK, FLAT: external tooth	EA	1	*	*	*	*		
0 00110	5310-913-9776	WASHER, LOCK, FLAT: external tooth, 3/8	EA	2	*	*	*	*		
0 00111	5310-045-3296	WASHER, LOCK: helical, No. 10 screw size	EA	2	*	*	*	*		
00112		GROUP 42 - ELECTRICAL EQUIPMENT								
00113		4206 - THERMOSTATIC, AUTOMATIC AND MANUAL CONTROL DEVICES								
0 00114	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16	EA	4	*	*	*	*		
X2 0 00115		PLATE, INFORMATION: wiring diagram 13212E3587 (97403)	EA	1		SEE	GRP	2210		
0 00116	5305-269-3211	SCREW, CAP, HEXAGON HEAD: 3/8-16 X 1, 1g	EA	4	*	*	*	*		
0 00117	5305-989-7434	SCREW, MACHINE: pan head, 10-32 X 1/2, 1g	EA	16	*	*	*	*	4-9	5
0 00118	5310-809-8546	WASHER, FLAT: round, No. 10 screw size	EA	16	*	*	*	*	4-9	7
0 00119	5310-809-4061	WASHER, FLAT: round, 3/8 screw size	EA	8	*	*	*	*		
0 00120	5310-045-3296	WASHER, LOCK: helical, No. 10 screw	EA	16	*	*	*	*	4-9	6
00121		GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS								
00122		7638 - PORTABLE FIRE FIGHTING EQUIPMENT (INCLUDES FIRE EXTINGUISHERS)								
X2 0 00123	4210-555-8837	FIRE, EXTINGUISHER: w/bracket MILE52031 (81349)	EA	2						
0 00124	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4 X 20	EA	8	*	*	*	*		
0 00125	5305-068-0502	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 3/4, 1g	EA	8	*	*	*	*		
0 00126	5310-809-4058	WASHER, FLAT: round, 1/4 screw size	EA	16	*	*	*	*		
00127		GROUP 95 - GENERAL USE STANDARDIZED PARTS								
00128		9501 - HARDWARE SUPPLIES AND BULK MATERIAL, COMMON								
P 0 00129	5340-922-5653	WEBBING MILW530TTYPE2CLASS4 (81349)	FT							

1 SMR CODE	2 FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 30-DAY DS MAINT ALLOWANCE (a) (b) (c)	(7) 30-DAY GS MAINT ALLOWANCE (a) (b) (c)	(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION (a) (b)	
									FIG. NO.	ITEM NO.
		PART II								
		REPAIR PARTS FOR DS, GS, AND DEPOT MAINTENANCE								
		GROUP 01 - ENGINE								
		0106 - ENGINE LUBRICATION SYSTEM								
00001										
00002										
X2 0	4720-913-6422	HOSE, OIL DRAIN		EA	2					
00003		1321E4918 (97403)								
0	4730-766-7908	NIPPLE, TUBE, OIL DRAIN		EA	2	*	*	*	*	*
00004										
0	5310-282-7822	NUT, UNION: oil drain hose		EA	2	*	*	*	*	*
00005										
X2 0		REDUCER, BUSHING: 3/4-14 X 1/2-14		EA	2					
00006		SAEW530 (81343)								
0	5310-754-2005	WASHER, LOCK: oil drain hose		EA	2	*	*	*	*	*
00007										
00008		GROUP 15 - FRAME, TOWING ATTACHMENTS, AND DRAWBARS								
		1501 - FRAME ASSEMBLY								
00009										
X2 0	2590-473-6331	BRACKET ASSEMBLY: liquid count, 5 gallon		EA	6					
00010		MS53052-1 (96906)								
X2 0		BRACKET		EA	6					
00011		1321E1204 (97403)								
X2 0	5340-999-4286	BUCKLE		EA	12					
00012		MS51940-7 (96906)								
X2 0		FASTENER		EA	6					
00013		1321E1205 (97403)								
X2 0		HOOK, DRIP RAIL		EA	6					
00014		1321E1316 (97403)								
M 0		STRAP: bottom 18 in. lg, nylon webb		EA	6					
00015		1321E1203-3 (97403)								
		MANUFACTURE FROM:								
P 0	5340-922-5653	WEBBING, NYLON		FT		SEE	GRP	9501		
00016		MILW530TYPE2CLASSA (81349)								
M 0		STRAP: top, 30 in. lg, nylon webb		EA	6					
00017		1321E1203-2 (97403)								
		MANUFACTURE FROM:								
P 0	5340-922-5653	WEBBING, NYLON		FT		SEE	GRP	9501		
00018		1403 (06716)								
X2 0	5340-999-6277	BRACKET ASSEMBLY: sledge hammer		EA	1					
00019		1321E1214 (97403)								
X2 0		CLAMP CABLE: double		EA	1					
00020		1321E3591-2 (97403)								
X2 0		CLAMP CABLE: single		EA	2					
00021		1321E3612 (97403)								
X2 0	5340-526-2559	CLAMP, CUSHIONED SUPPORT: loop type		EA	1					
00022		MC21333-2 (96906)								
X2 0	2590-932-71298	CLAMP, GROUND ROD		EA	4					
00023		1321E3617-1 (97403)								
X2 0	5340-914-2578	CLIP, SPRING		EA	1					
00024		1321E1213-1 (97403)								
X2 0	7240-920-5321	HOLDER, FUEL DRUM ADAPTER		EA	2					
00025		1321E3553-1 (97403)								

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
						1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
0 00026 0 00027 0 00028 0 00029 0 00030 0 00031 0 00032 0 00033 0 00034 0 00035 0 00036 0 00037 0 00038 0 00039 0 00040 0 00041 0 00042 0 00043 0 00044 0 00045 0 00046 0 00047 0 00048 0 00049 0 00050 00051	5310-934-9758 5310-088-1251 5310-088-1251 5310-088-1251 5310-088-1251 5310-088-1251 5310-087-4652 5310-984-3806 5305-071-2241 5305-071-2241 5305-068-0502 5305-068-0502 5305-269-3213 5306-225-8499 5305-958-5247 5305-984-6212 5310-809-4058 5310-809-8546 5310-809-4058 5310-809-4058 5310-809-4058 5310-809-4058 5310-809-4058 5310-809-4061 5310-081-4219 5310-045-3296	NUT, PLAIN, HEXAGON: No. 10-24 NUT, SELF-LOCKING, HEXAGON: 1/4-20 NUT, SELF-LOCKING, HEXAGON: 1/4-20 NUT, SELF-LOCKING, HEXAGON: 1/4-20, size NUT, SELF-LOCKING, HEXAGON: 1/4-20 NUT, SELF-LOCKING, HEXAGON: 1/4-20 NUT, SELF-LOCKING, HEXAGON: 3/8-16, screw NUT, SELF-LOCKING, HEXAGON: 5/16-18 SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1-1/4 SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1-1/4 SCREW, CAP, HEXAGON HEAD: 1/4-20 X 3/4, 1g SCREW, CAP, HEXAGON HEAD: 1/4-20 X 3/4, 1g SCREW, CAP, HEXAGON HEAD: 3/8-16 X 1-1/4 SCREW, CAP, HEXAGON HEAD: 5/16-18 X 1, 1g SCREW, MACHINE: flat head, 1/4 X 20 X 1, 1g SCREW, MACHINE: pan head, 10-24 X 3/4, 1g WASHER, FLAT: round, 1/4 screw size WASHER, FLAT: round, No. 10 screw size WASHER, FLAT: round, 1/4 screw size WASHER, FLAT: round, 1/4 screw size WASHER, FLAT: round, 1/4 screw size WASHER, FLAT: round, 1/4 screw size WASHER, FLAT: round, 3/8 screw size WASHER, FLAT: round, 5/16 screw size WASHER, LOCK: helical		EA	1 8 2 4 1 2 24 4 2 4 4 1 2 24 4 8 1 4 2 8 8 4 1 48 8 1	* 									


(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
O 00063	5310-269-4040	NUT, SELF-LOCKING, HEXAGON: 5/8-11	EA	8	*	*	*	*	*	*	*	*		
O 00064	5305-269-3213	SCREW, CAP, HEXAGON HEAD: 3/8-16 X 1-1/4	EA	16	*	*	*	*	*	*	*	*		
O 00065	5305-724-5911	SCREW, CAP, HEXAGON HEAD: 5/8-11 X 1-3/4	EA	6	*	*	*	*	*	*	*	*		
X2 D 00066		SHIM (As required) 13212E3590 (97403)												
O 00067	5310-809-4061	WASHER, FLAT: round, 3/8	EA	28	*	*	*	*	*	*	*	*		
O 00068	5310-823-8803	WASHER, FLAT: round, 5/8	EA	16	*	*	*	*	*	*	*	*		
O 00069	5310-959-4675	WASHER, LOCK: helical split heavy, 3/8	EA	4	*	*	*	*	*	*	*	*		
00070		GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS												
00071		2201 - CANVAS, RUBBER, OR PLASTIC ITEMS												
P O 00072	2540-924-8478	BOW, TRAILER TARPULIN 13215E3597-1 (97403)	EA	4	*	*	2	*	*	2	8	8		
P O 00073	2540-926-1003	BOW, TRAILER TARPULIN 13212E3597-2 (97403)	EA	2	*	*	*	*	*	*	4	4		
P O R 00074		TARPULIN 13216E7434 (97403)	EA	1	*	2	2	*	2	2	13	13		
X2 F 00075		BUCKLE MS51920 (96906)	EA	18										
X2 F 00076		CHAPE ASSEMBLY 13214E1392 (97403)	EA	12										
X2 F 00077		HOOK TEE 13214E1497 (97403)	EA	22										
X2 F 00078		RING, DEE MS51925 (96906)	EA	14										
X2 F 00079		TIP END MS51926 (96906)	EA	24										
00080		2202 - ACCESSORY ITEMS												
X2 O 00081	2910-066-1235	ADAPTER ASSEMBLY: fuel drum 13211E7541 (97403)	EA	2										
X2 O 00082	7240-222-3088	CAN, GASOLINE: 5 gallon, Military MILC1283 (81349)	EA	6										
X2 O 00083	5120-251-4489	HAMMER HAND GGGH86 (97403)	EA	1										
O 00084	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20	EA	12	*	*	*	*	*	*	*	*		
P O 00085	9905-202-3639	REFLECTOR, CLEARANCE: amber MS35387-2 (96906)	EA	2	*	*	*	*	*	*	6	6		
P O 00086	9905-205-2795	REFLECTOR, CLEARANCE: red MS35387-1 (96906)	EA	4	*	2	2	*	2	2	12	12		
X2 O 00087	5975-878-3791	ROD: ground, w/attachments MILR11461 (81349)	EA	2										
O 00088	5305-068-0502	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 3/4, 1g	EA	12	*	*	*	*	*	*	*	*		
O 00089	5310-809-4058	WASHER, FLAT: round, 1/4 in.	EA	24	*	*	*	*	*	*	*	*		
P F 00090	6145-395-8799	WIRE, ELECTRICAL: copper, No. 6 AWG QQW343 (81348)						SEE	GRP	9501				
00091		2210 - DATA PLATES AND INSTRUCTION HOLDERS												
X2 O 00092		PLATE, IDENTIFICATION 13205E4918 (97403)	EA	1										
X2 O 00093		PLATE, INFORMATION: wiring diagram 13212E3587 (97403)	EA	1										

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
00094		GROUP 29 - AUXILIARY GENERATOR AND ENGINE AND CONTROLS												
00095		2941 - ENGINE MUFFLER, EXHAUST AND TAIL PIPES												
X2 O 00096	6115-947-3331	EXHAUST TUBE 13214E1486 (97403)	EA	1										
X2 O 00097	6115-947-3335	EXHAUST TUBE 13214E1487 (97403)	EA	1										
O 00098	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20	EA	2	*	*	*	*	*	*	*	*		
O 00099	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1, 1g	EA	2	*	*	*	*	*	*	*	*		
O 00100	5310-809-4058	WASHER, FLAT: round, 1/4-20 screw size	EA	4	*	*	*	*	*	*	*	*		
O 00101		GROUP 40 - ELECTRIC MOTORS AND GENERATORS												
O 00102		4000 - GENERATOR ASSEMBLY												
X2 FR 00103	6115-074-8330	GENERATOR SET MILG52279TYPE1 (81349)	EA	2										
O 00104	5310-225-6993	NUT, SELF-LOCKING, HEXAGON: 1/2-13	EA	8	*	*	*	*	*	*	*	*		
O 00105	5305-782-9494	SCREW, CAP, HEXAGON HEAD: 1/2-13 X 1-3/4	EA	8	*	*	*	*	*	*	*	*		
X2 O 00106		WASHER, BEVELED 13206E4482-2 (97403)	EA	8										
O 00107	5310-809-5998	WASHER, FLAT: round, 1/2 in.	EA	8	*	*	*	*	*	*	*	*		
O 00108		4018 - TERMINAL BLOCKS, JUNCTION BOXES												
X2 F 00109		GASKET 13212E3610 (97403)	EA	1										
F 00110	5305-984-6214	SCREW, MACHINE, PAN HEAD: 10-24 thd size, 1 in. lg	EA	6	*	*	*	*	*	*	*	*		
X2 F 00111		TERMINAL BOARD 13212E3606 (97403)	EA	1										
X2 F 00112	5940-904-9634	TERMINAL LOAD 13208E5820-6 (97403)	EA	4										
F 00113	5310-809-8546	WASHER, FLAT, ROUND: No. 10	EA	12	*	*	*	*	*	*	*	*		
F 00114	5310-184-8970	WASHER, LOCK: 1/4 in.	EA	8	*	*	*	*	*	*	*	*		
O 00115		4019 - RADIO INTERFERENCE SUPPRESSION												
X2 O 00116		CLAMP, CUSHIONED SUPPORT: 1/4, loop MS21334-2 (96906)	EA	2										
X2 O 00117		NUT, PLAIN, HEXAGON: brass, 3/8-16 MS16203-39 (96906)	EA	3										
X2 O 00118		NUT, PLAIN, HEXAGON, JAM: brass, 3/8-16 MS16203-39 (96906)	EA	1										
O 00119	5310-934-9758	NUT, PLAIN, HEXAGON: No. 10-24	EA	2	*	*	*	*	*	*	*	*		
O 00120	5310-543-4717	NUT, PLAIN, WING: brass, 3/8-16	EA	1	*	*	*	*	*	*	*	*		
X2 O 00121		SCREW, CAP, HEXAGON HEAD: 3/8-16 X 3/4, 1g MS35309-358 (96906)	EA	1										
O 00122	5305-984-6212	SCREW, MACHINE: pan head, No. 10-24 X 3/4, 1g	EA	2	*	*	*	*	*	*	*	*		
X2 O 00123		STUD 13214E1223 (97403)	EA	1										
X2 F 00124		TERMINAL, LUG: No. 6 wire, 3/8 stud MS20659-110 (96906)	EA	4										

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 30-DAY DS MAINT ALLOWANCE	(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION				
						(a)	(b)	(c)			(a)	(b)	(c)	(a)	(b)
						1-20	21-50	51-100			1-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 O 00125		WASHER, FLAT: brass, 3/8 thd size AN961-616T (88044)		EA	4										
O 00126	5310-809-8546	WASHER, FLAT: round, No. 10 thd size		EA	4	*	*	*	*	*	*	*	*		
O 00127	5310-913-9776	WASHER, LOCK, FLAT: external tooth		EA	1	*	*	*	*	*	*	*	*		
O 00128	5310-913-9776	WASHER, LOCK, FLAT: external tooth, 3/8		EA	2	*	*	*	*	*	*	*	*		
O 00129	5310-045-3296	WASHER, LOCK: helical, No. 10 screw size		EA	2	*	*	*	*	*	*	*	*		
O 00130		GROUP 42 - ELECTRICAL EQUIPMENT													
O 00131		4206 - THERMOSTATIC, AUTOMATIC AND MANUAL CONTROL DEVICES													
X2 FR 00132	6110-913-9275	DISTRIBUTION BOX 1321ZE3601 (97403)		EA	1										
X2 F 00133	6115-104-4550	BOX 1321ZE3602 (97403)		EA	1							4-9	18		
X2 F 00134	6115-948-7169	CABLE 1321ZE3607 (97403)		EA	1			SEE	GRP	4216		4-9	16		
X2 F 00135	6115-948-7170	CABLE 1321ZE3608 (97403)		EA	1			SEE	GRP	4216		4-9	17		
X2 F 00136		CABLE: 600v 13216E7479 (97403)		EA	2										
X2 F 00137		COVER 1321ZE3603 (97403)		EA	1							4-9	1		
X2 F 00138		GASKET 1321ZE3610 (97403)		EA	1			SEE	GRP	4018		4-9	19		
M F 00139		LEAD, ELECTRICAL 1321ZE3609-1 (97403) MANUFACTURE FROM:		EA	1							4-9	11		
P F 00140	6145-284-0656	WIRE, ELECTRICAL: 600v, aircraft AN6 (As required) MILW5086 (81349)		FT				SEE	GRP	9501					
M F 00141		LEAD, ELECTRICAL 1321ZE3609-3 (97403) MANUFACTURE FROM:		EA	1							4-9	13		
P F 00142	6145-284-0656	WIRE, ELECTRICAL: 600v, aircraft AN6 (As required) MILW5086 (81349)		FT				SEE	GRP	9501					
M F 00143		LEAD, ELECTRICAL 1321ZE3609-2 (97403) MANUFACTURE FROM:		EA	1							4-9	12		
P F 00144	6145-284-0656	WIRE, ELECTRICAL: 600v, aircraft AN6 (As required) MILW5086 (81349)		FT				SEE	GRP	9501					
P F 00145		LEAD, ELECTRICAL 13216E7476 (97403)		EA	1										
X2 F 00146		LIGHT AND WIRE: 12 in. lg 1321ZE3581-1 (97403)		EA	2							4-9	2		
X2 F 00147		NUT, PLAIN, HEXAGON: jam, 1/4-20 MS16203-37 (96906)		EA	8							4-9	25		
F 00148	5310-924-4218	NUT, PLAIN, HEXAGON: 1/4-28		EA	9	*	*	*	*	*	*	4-9	28		
F 00149	5310-934-9758	NUT, PLAIN, HEXAGON: machine screw		EA	6	*	*	*	*	*	*	4-9	27		
O 00150	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16		EA	4	*	*	*	*	*	*				
X2 F 00151	5330-802-5905	PACKING, PREFORMED "O" RING MS28775-132 (96906)		EA	2							4-9	14		

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 F 00152	5330-579-8108	PACKING, PREFORMED "O" RING MS28775-111 (96906)	EA	1									4-9	31
X2 F 00153	5330-684-3420	PACKING, PREFORMED "O" RING MS28775-013 (96906)	EA	4									4-9	4
X2 O 00154		PLATE, INFORMATION: wiring diagram 13212E3587 (97403)	EA	1				SEE	GRP	2210				
F 00155	5305-984-6214	SCREW, MACHINE: pan head	EA	6				SEE	GRP	4018			4-9	22
F 00156	5305-954-9003	SCREW, MACHINE: pan head	EA	9	*	*	*	*	*	*	*	*		
O 00157	5305-989-7434	SCREW, MACHINE: pan head, 10-32 X 1/2, 1g	EA	16	*	*	*	*	*	*	*	*	4-9	5
F 00158	5305-984-5695	SCREW, MACHINE: pan head, 3/8-16 X 2, 1g	EA	4	*	*	*	*	*	*	*	*	4-9	3
X2 F 00159		STUFFING TUBE 13212E3582-20 (97403)	EA	2									4-9	15
P2 F 00160		SWITCH, ROTARY: 60 amp 13205E023 (97403)	EA	1	*	*	*	*	*	*	2	2	4-9	30
X2 F 00161		TERMINAL BOARD 13212E3606 (97403)	EA	1				SEE	GRP	4018			4-9	20
X2 F 00162	5940-904-9634	TERMINAL LOAD 13208E5820-6 (97403)	EA	4				SEE	GRP	4018			4-9	21
X2 F 00163		TERMINAL, LUG: size 6 stud, 1/4 (As required) MS25036-20 (96906)												
F 00164	5940-660-3631	TERMINAL, LUG: 18-22 stud, 1/4	EA	4	*	*	*	*	*	*	*	*		
F 00165	5310-809-8546	WASHER, FLAT: round, No. 10	EA	12				SEE	GRP	4018			4-9	23
O 00166	5310-809-8546	WASHER, FLAT: round, No. 10 screw size	EA	16	*	*	*	*	*	*	*	*	4-9	7
F 00167	5310-080-6004	WASHER, FLAT: round 3/8 screw size	EA	8	*	*	*	*	*	*	*	*	4-9	8
X2 F 00168		WASHER, LOCK, FLAT: external tooth, 1/4 MS35335-89 (96906)	EA	9									4-9	29
F 00169	5310-045-3296	WASHER, LOCK: helical spring, No. 10	EA	6	*	*	*	*	*	*	*	*		
O 00170	5310-045-3296	WASHER, LOCK: helical, No. 10 screw	EA	16	*	*	*	*	*	*	*	*	4-9	6
F 00171	5310-184-8970	WASHER, LOCK: helical spring, 1/4 in.	EA	8				SEE	GRP	4018			4-9	24
F 00172	5310-022-8834	WASHER, LOCK: internal tooth flat, 1/4	EA	4	*	*	*	*	*	*	*	*	4-9	26
F 00173	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16	EA	4	*	*	*	*	*	*	*	*	4-9	9
O 00174	5305-269-3211	SCREW, CAP, HEXAGON HEAD: 3/8-16 X 1, 1g	EA	4	*	*	*	*	*	*	*	*	4-9	10
X2 F 00175		STRAP, CABLE ADJUSTER: 1-1/2, maximum building size MS17821-1-9 (96906)	EA	1										
O 00176	5310-809-4061	WASHER, FLAT: round, 3/8 screw size	EA	8	*	*	*	*	*	*	*	*		
00177		4216 - MISCELLANEOUS WIRING AND FITTINGS												
X2 F 00178	6115-948-7170	CABLE 13212E3608 (97403)	EA	1										
X2 F 00179	6115-948-7169	CABLE 13212E3607 (97403)	EA	1										
00180		GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS												
00181		7638 - PORTABLE FIRE FIGHTING EQUIPMENT (INCLUDES FIRE EXTINGUISHERS)												
X2 O 00182	4210-555-8837	FIRE, EXTINGUISHER: w/bracket MILE52031 (81349)	EA	2										

1) SMR CODE	2) FEDERAL STOCK NUMBER	3) DESCRIPTION REF NUMBER & MFR CODE	4) USABLE ON CODE	5) UNIT OF MEAS	6) QTY INC IN UNIT	30-DAY DS MAINT ALLOWANCE			30-DAY GS MAINT ALLOWANCE			8) 1-YR ALW PER 100 EQUIP CNTGY	9) DEPOT MAINT ALW PER 100 EQUIP	10) ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
						1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
O 00183 O 00184 C 00185 00186	5310-088-1251 5305-068-0502 5310-809-4058	NUT, SELF-LOCKING, HEXAGON: 1/4 X 20 SCREW, CAP, HEXAGON HEAD: 1/4-20 X 3/4, 1g WASHER, FLAT: round, 1/4 screw size		EA	8	*	*	*	*	*	*	*	*		
		GROUP 95 - GENERAL USE STANDARDIZED PARTS													
		9501 - HARDWARE SUPPLIES AND BULK MATERIAL, COMMON													
P O 00188	5340-922-5653	WEBBING MILW530TYPE2CLASS4 (81349)		FT	*	*	*	*	*	*	20	20			
P F 00189	6145-395-8799	WIRE, ELECTRICAL: copper, No. 6, AWG QQW343 (81348)		FT	*	*	*	*	*	*	*	*			
P F 00190	6145-284-0656	WIRE, ELECTRIC: 600v, aircraft AN6 MILW5086 (81349)		FT	*	*	*	*	*	*	*	*			

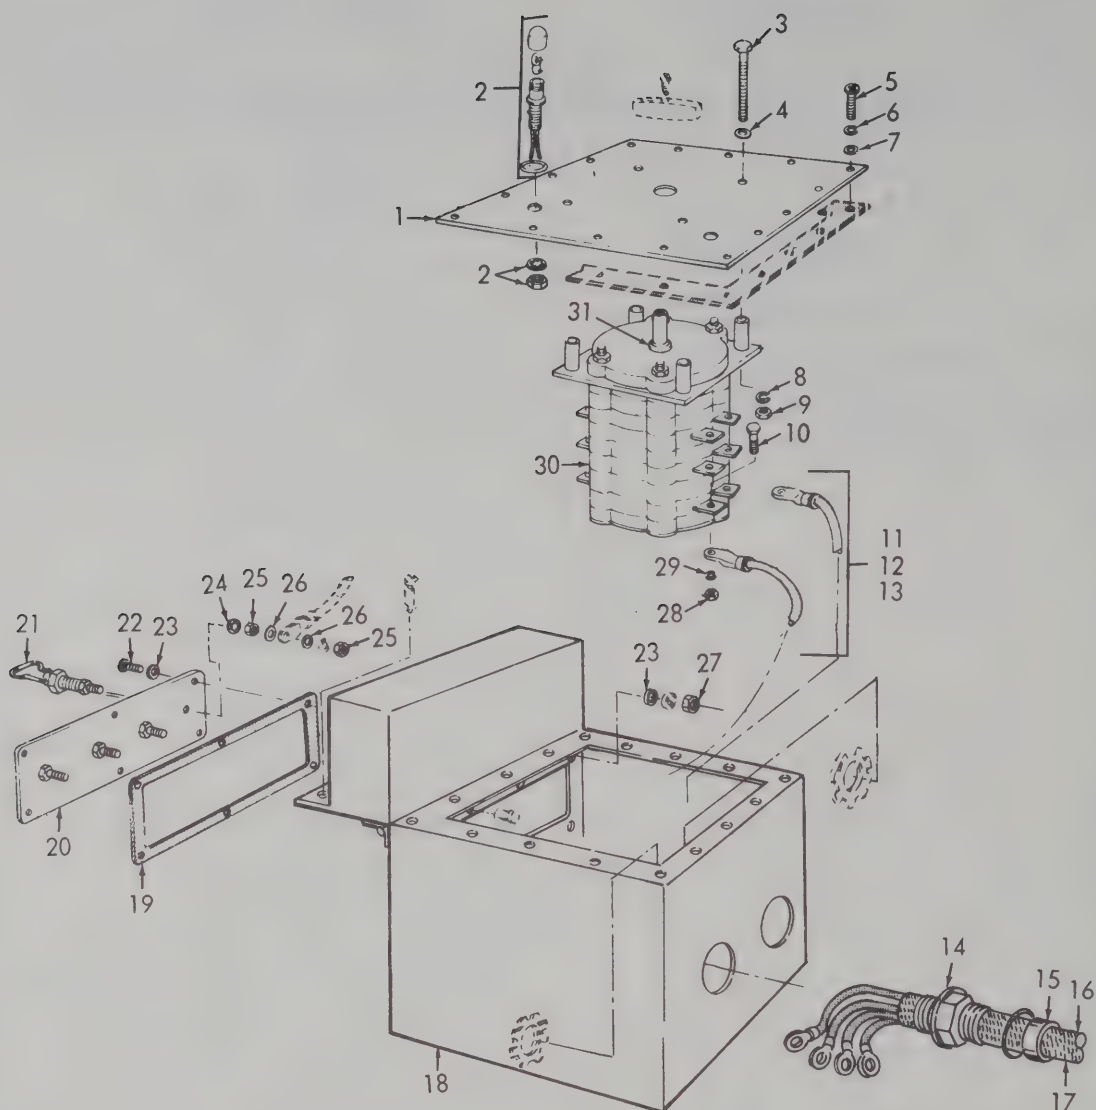

ME 6115-365-15/4-9

Figure 4-9. Distribution box.

LEGEND TO PARTS, FIGURE 4-9

ITEM NO.	FUNCT GROUP	ITEM NAME	ITEM NO.	FUNCT GROUP	ITEM NAME	ITEM NO.	FUNCT GROUP	ITEM NAME
1	4206	COVER	12	4206	LEAD	22	4206	SCREW
2	4206	LIGHT-WIRE	13	4206	LEAD	23	4206	WASHER
3	4206	SCREW	14	4206	PACKING	24	4206	WASHER
4	4206	PACKING	15	4206	STUFFING	25	4206	NUT
5	4206	SCREW	16	4206	CABLE	26	4206	WASHER
6	4206	WASHER	17	4206	CABLE	27	4206	NUT
7	4206	WASHER	18	4206	BOX	28	4206	NUT
8	4206	WASHER	19	4206	GASKET	29	4206	WASHER
9	4206	NUT	20	4206	TERMINAL BOARD	30	4206	SWITCH
10	4206	SCREW	21	4206	TERMINAL LOAD	31	4206	PACKING
11	4206	LEAD						

Figure 4-9. Distribution box.

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS USABLE ON CODE	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
00001		PART III - PU-620/M								
00002		REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE								
00005		GROUP 15 - FRAME								
00005		1507 - LEVELING JACKS								
X2 0 00006	5310-087-4652	NUT, SELF-LOCKING: 3/8-16 UNC MS51922-17 (96906)	EA	3					4- 10	42
X2 0 00007	5305-269-3213	SCREW, CAP, HEXAGON HEAD 3/8-16 X 1 1/4 IN. LG MS90725-62 (96906)	EA	3					4- 10	44
P 0 00008	2590-318-6691	TRAILER LEG PROP ASSEMBLY 13214E1206 (97403)	EA	1	*	*	*	*	4- 10	41
X2 0 00009	5310-809-4061	WASHER, FLAT: 3/8 IN. BSC SIZE MS27183-15 (96906)	EA	6					4- 10	43
00010		GROUP 18 - BODY								
00011		1810 - CARGO BODY								
X2 0 00013	5310-087-4652	NUT, SELF-LOCKING: 3/8-16 UNC MS51922-17 (96906)	EA	34					4- 10	3
X2 0 00014	5305-269-3213	SCREW, CAP, HEXAGON HEAD: 3/8-16 X 1 1/4 IN. LG MS90725-62 (96906)	EA	34					4- 10	5
X2 0 00016	5310-809-4061	WASHER, FLAT: 3/8 in. BSC SIZE MS27183-15 (96906)	EA	68					4- 10	4
00017		GROUP 22 - BODY ACCESSORY ITEMS								
00018		2201 - CANVAS ITEMS								
P O R 00019	2540-926-0993	TARPAULIN 13214E1219 (97403)	EA	1	*	*	*	*	4- 11	29
X2 0 00020	5340-057-6956	BUCKLE, SPRING ACTION MS51929-2 (96906)	EA	8						
X2 0 00021		CHAPE ASSEMBLY 13214E1392 (97403)	EA	12						
X2 0 00022	5340-078-7029	CLIP, END, STRAP MS51926-3 (96906)	EA	20						
X2 0 00023		DEE RING MS51925-8 (96906)	EA	14						
X2 0 00024		TEE HOOK 13214E1497 (97403)	EA	22						
00025		2202 - ACCESSORY ITEMS								
P 0 00026	2910-066-1235	ADAPTER ASSEMBLY, FUEL DRUM 13211E7541 (97403)	EA	2	*	*	*	*	4- 11	6
X2 0 00027		BOW, TRAILER TARPAULIN 13214E1218 (97403)	EA	4					4- 11	30
X2 0 00028	2510-706-4504	BRACKET ASSEMBLY: LIQUID CONTAINER, 5 GALLON MS53052 (96906)	EA	6					4- 10	45
X2 0 00029	5340-999-6277	BRACKET ASSEMBLY, SLEDGE HAMMER 13214E1214 (97403)	EA	1					4- 11	14

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00030	7240-222-3088	CAN, GASOLINE: MILITARY, 5 GALLON MILC1283 (81349)	EA	6					4- 10	47
X2 0 00031	2590-932-7298	CLAMP, GROUND ROD 13212E3617-1 (97403)	EA	4					4- 11	10
X2 0 00032	5340-914-2578	CLIP, SPRING, SLEDGE HAMMER 13214E1213-1 (97403)	EA	1					4- 11	18
X2 0 00033	7240-920-5327	HOLDER, FUEL DRUM ADAPTER 31213E3553-1 (97403)	EA	2					4- 11	2
X2 0 00034	5310-080-8495	NUT, FLAIN, WING: 1/4-20 UNC, 2B MS35425-39 (96906)	EA	2					4- 10	51
X2 0 00035	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)	EA	8					4- 11	23
X2 0 00036	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)	EA	4					4- 11	22
X2 0 00037	5310-087-4652	NUT, SELF-LOCKING: 3/8-16 UNC MS51922-17 (96906)	EA	24					4- 10	46
X2 0 00038	5310-984-3806	NUT, SELF-LOCKING: 5/16-18 UNC MS51922-9 (96906)	EA	4					4- 11	3
X2 0 00039	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)	EA	8					4- 11	7
X2 0 00040	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)	EA	2					4- 11	11
X2 0 00041	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)	EA	1					4- 11	15
X2 0 00042		PLATE, FRONT, SHIELD 13214E1217-1 (97403)	EA	4					4- 10	50
X2 0 00043	9905-202-3639	REFLECTOR, INDICATING, AMBER MS35387-2 (96906)	EA	2					4- 11	26
X2 0 00044	9905-205-2795	REFLECTOR, INDICATING CLEARANCE, RED MS35387-1 (96906)	EA	4					4- 11	22
X2 0 00045	5305-068-0501	SCREW, CAP, HEXAGON: 1/4-20 X 5/8 IN. LG MS90725-5 (96906)	EA	8					4- 11	21
X2 0 00046	5305-068-0501	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 5/8 in. lg MS90725-5 (96906)	EA	4					4- 11	25
X2 0 00047	5305-269-3211	SCREW, CAP, HEXAGON HEAD: 3/8-16 X 1 IN. LG MS90725-60 (96906)	EA	24					4- 10	48
X2 0 00048	5305-071-2237	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 2 IN. MS90725-14 (96906)	EA	2					4- 10	54
X2 0 00049	5306-225-8497	SCREW, CAP, HEXAGON HEAD: 5/16-18 X 3/4 IN. LG MS90725-32 (96906)	EA	4					4- 11	5
X2 0 00050	5305-068-0501	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 5/8 IN. LG MS90725-5 (96906)	EA	2					4- 11	13
X2 0 00051	5305-068-0501	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 5/8 IN. LG MS90725-5 (96906)	EA	1					4- 11	17
X2 0 00052	5305-958-5246	SCREW, MACHINE: 1/4-20 X 3/4 IN. LG MS35190-289 (96906)	EA	8					4- 11	9
X2 0 00053	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC MS27183-10 (96906)	EA	16					4- 11	20

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS USABLE ON CODE	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00054	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	8					4- 11	24
X2 0 00055	5310-809-4061	WASHER, FLAT: 3/8 IN. BSC SIZE MS27183-15 (96906)	EA	48					4- 10	47
X2 0 00056	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	4					4- 10	53
X2 0 00057	5310-081-4219	WASHER, FLAT: 5/16 IN. BSC SIZE MS27183-12 (96906)	EA	8					4- 11	4
X2 0 00058	5310-809-4058	WASHER, FLAT: ROUND, 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	8					4- 11	8
X2 0 00059	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	4					4- 11	12
X2 0 00060	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	2					4- 11	16
X2 0 00061	5310-042-6758	WASHER, LOCK: 1/4 IN. SCREW SIZE MS35338-82 (96906)	EA	2					4- 10	52
00062		2210 - DATA PLATES								
X2 0 00063		PLATE, IDENTIFICATION: GROUND TERMINAL 13205E4918 (97403)	EA	1					4- 10	55
X2 0 00064		PLATE, IDENTIFICATION: PU620/M 13205E4916-4 (97403)	EA	1					4- 11	28
00065		GROUP 29 - AUXILIARY GENERATOR AND ENGINE								
00072		2941 - ENGINE EXHAUST								
X2 0 00073	6115-947-3335	EXHAUST, TUBE 13214E1487 (97403)	EA	1					4- 10	11
X2 0 00074	6115-947-3331	EXHAUST, TUBE 13214E1486 (97403)	EA	1					4- 10	15
X2 0 00075	5310-088-1251	NUT, SELF-LOCKING MS51922-1 (96906)	EA	2					4- 10	12
X2 0 00076	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)	EA	2					4- 10	14
X2 0 00077	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	4					4- 10	13
00078		GROUP 42 - ELECTRICAL EQUIPMENT								
00079		4202 - ELECTRICAL CONTROLS								
X2 0 00098	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16 THD SIZE	EA	4						
X2 0 00102		PLATE, INFORMATION: WIRING DIAGRAM 13212E3587 (97403)	EA	1						
X2 0 00105	5305-989-7434	SCREW, MACHINE: PAN HEAD, 10-32 X 1/2 IN. LG	EA	16					4- 9	5
X2 0 00114	5310-809-8546	WASHER, FLAT: ROUND, NO. 10	EA	16					4- 9	7
X2 0 00118	5310-045-3296	WASHER, LOCK: HELICAL SPRING, NO. 10	EA	16					4- 9	6
X2 0 00122	5305-269-3211	SCREW, CAP, HEXAGON HEAD: 3/8-16 X 1 IN. LG	EA	4						

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00124	5310-809-4061	WASHER, FLAT: ROUND, 3/8 IN.	EA	8						
00125		4216 - MISCELLANEOUS WIRING AND FITTINGS								
X2 0 00126		CLAMP, CABLE, DOUBLE 13212E3591-4 (97403)	EA	2					4- 10	28
X2 0 00127		CLAMP, CABLE, SINGLE 13212E3612 (97403)	EA	1					4- 10	24
X2 0 00128	5340-526-2559	CLAMP, CUSHIONED: 1/8 IN. ID MS21919-2 (96906)	EA	2					4- 10	33
X2 0 00129	5310-012-0361	NUT, PLAIN, HEXAGON: 10-24 UNC 2B MS35649-102 (96906)	EA	2					4- 10	29
X2 0 00130		NUT, PLAIN, HEXAGON: 3/8-16 UNC 2B FFN836TYPE2 (81348)	EA	1					4- 10	39
X2 0 00131		NUT, PLAIN, HEXAGON: 3/8-16 UNC 2B FFN836TYPE2 (81348)	EA	1					4- 10	56
X2 0 00132		NUT, PLAIN, HEXAGON: JAM, 3/8-16 UNC 2B FFN836TYPE2 (81348)	EA	2					4- 10	37
X2 0 00133	5310-543-4717	NUT, PLAIN, WING: BRASS, 3/8-16 THD SIZE MS35425-28 (96906)	EA	1					4- 10	40
X2 0 00134	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)	EA	2					4- 10	21
X2 0 00135	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)	EA	4					4- 10	25
X2 0 00136	5305-225-3840	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 7/8 IN. LG MS90725-7 (96906)	EA	2					4- 10	23
X2 0 00137	5305-225-3840	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 7/8 IN. LG MS90725-7 (96906)	EA	4					4- 10	27
X2 0 00138	5305-543-4718	SCREW, CAP, HEXAGON HEAD: 3/8-16 3/4 in. lg MS35309-358 (96906)	EA	1					4- 10	58
X2 0 00139	5305-984-6211	SCREW, MACHINE: PAN HEAD, 10-24 X 5/8 IN. LG MS35206-264 (96906)	EA	2					4- 10	32
X2 0 00140	5307-722-9437	STUD, GROUNDING 13214E1223 (97403)	EA	1					4- 10	35
X2 0 00141	5940-688-6010	TERMINAL, LUG: NO. 6 WIRE, 3/8 IN. STUD MS20659-10 (96906)	EA	3					4- 10	59
X2 0 00142	5310-913-9776	WASHER, LOCK: FLAT 3/8 IN. SIZE MS35335-91 (96906)	EA	2					4- 10	36
X2 0 00143	5310-913-9776	WASHER, LOCK: FLAT 3/8 IN. SIZE MS35335-91 (96906)	EA	1					4- 10	57
X2 0 00144	5310-187-2413	WASHER, FLAT: ELECTRICAL, BRASS, 3/8 IN. AN961-616T (88044)	EA	4					4- 10	38
X2 0 00145	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	4					4- 10	22
X2 0 00146	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	8					4- 10	26
X2 0 00147	5310-809-8546	WASHER, FLAT: NO. 10 BSC SIZE MS27183-8 (96906)	EA	4					4- 10	31
X2 0 00148	5310-045-3296	WASHER, LOCK: NO. 10 SIZE MS35338-43 (96906)	EA	2					4- 10	30

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION			
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)		
						1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.		
		PART IV - PU620/M															
00001		REPAIR PARTS FOR DS, GS AND DEPOT MAINTENANCE															
00002		GROUP 15 - FRAME															
00003		1501 - FRAME ASSEMBLY															
X2D R 00004	2330-898-6780	CHASSIS TRAILER: M116A1 13214E1201 (97403)		EA	1											4- 10	1
00005		1507 - LEVELING JACKS															
X2 O 00006	5310-087-4652	NUT, SELF-LOCKING: 3/8-16 UNC MS51922-17 (96906)		EA	3											4- 10	42
X2 O 00007	5305-269-3213	SCREW, CAP, HEXAGON HEAD: 3/8-16 X 1 1/4 IN. LG MS90725-62 (96906)		EA	3											4- 10	44
P O 00008	2590-318-6691	TRAILER LEG PROP ASSEMBLY 13214E1206 (97403)		EA	1	*	*	2	*	*	2	10	10			4- 10	41
X2 O 00009	5310-809-4061	WASHER, FLAT: 3/8 IN. BSC SIZE MS27183-15 (96906)		EA	6											4- 10	43
00010		GROUP 18 - BODY															
00011		1810 - CARGO BODY															
X2D R 00012		BODY, TRAILER 13214E1202 (97403)		EA	1											4- 10	2
X2 O 00013	5310-087-4652	NUT, SELF-LOCKING: 3/8-16 UNC MS51922-17 (96906)		EA	34											4- 10	3
X2 O 00014	5305-269-3213	SCREW, CAP, HEXAGON HEAD: 3/8-16 X 1 1/4 IN. LG MS90725-62 (96906)		EA	34											4- 10	5
X2 D 00015		SHIM (AS REQUIRED) 13214E1494 (97403)		EA												4- 11	1
X2 O 00016	5310-809-4061	WASHER, FLAT: 3/8 IN. BSC SIZE MS27183-15 (96906)		EA	68											4- 10	4
00017		GROUP 22 - BODY ACCESSORY ITEMS															
00018		2201 - CANVAS ITEMS															
P O R 00019	2540-926-0993	TARPAULIN 13214E1219		EA	1	*	*	2	*	*	2	10	10			4- 11	29
X2 O 00020	5340-057-6956	BUCKLE, SPRING ACTION MS51929-2 (96906)		EA	8												
X2 O 00021		CHAPE ASSEMBLY 13214E1392 (97403)		EA	12												
X2 O 00022	5340-078-7029	CLIP, END, STRAP MS51926-3 (96906)		EA	20												
X2 O 00023		DEE RING MS51925-8 (96906)		EA	14												
X2 O 00024		TEE HOOK 13214E1497 (97403)		EA	22												
00025		2202 - ACCESSORY ITEMS															
P O 00026	2910-066-1235	ADAPTER ASSEMBLY, FUEL DRUM 13211E7541 (97403)		EA	2	*	*	2	*	*	2	10	10			4- 11	6


(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 0 00027		BOW, TRAILER TARPAULIN 13214E1218 (97403)	EA	4									4- 11	30
X2 0 00028	2510-706-4504	BRACKET ASSEMBLY: LIQUID CONTAINER, 5 GALLON MS53052 (96906)	EA	6									4- 10	45
X2 0 00029	5340-999-6277	BRACKET ASSEMBLY, SLEDGE HAMMER 13214E1214 (97403)	EA	1									4- 11	14
X2 0 00030	7240-222-3088	CAN, GASOLINE: MILITARY, 5 GALLON MILC1283 (81349)	EA	6									4- 10	47
X2 0 00031	2590-932-7298	CLAMP, GROUND ROD 13212E3617-1 (97403)	EA	4									4- 11	10
X2 0 00032	5340-914-2578	CLIP, SPRING, SLEDGE HAMMER 13214E1213-1 (97403)	EA	1									4- 11	18
X2 0 00033	7240-920-5327	HOLDER, FUEL DRUM ADAPTER 13212E3553-1 (97403)	EA	2									4- 11	2
X2 0 00034	5310-080-8495	NUT, PLAIN, WING: 1/4-20 UNC, 2B MS35425-39 (96906)	EA	2									4- 10	51
X2 0 00035	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)	EA	8									4- 11	23
X2 0 00036	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)	EA	4									4- 11	22
X2 0 00037	5310-087-4652	NUT, SELF-LOCKING: 3/8-16 UNC MS51922-17 (96906)	EA	24									4- 10	46
X2 0 00038	5310-984-3806	NUT, SELF-LOCKING: 5/16-18 UNC MS51922-9 (96906)	EA	4									4- 11	3
X2 0 00039	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)	EA	8									4- 11	7
X2 0 00040	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)	EA	2									4- 11	11
X2 0 00041	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)	EA	1									4- 11	15
X2 0 00042		PLATE, FRONT, SHIELD 13214E1217-1 (97403)	EA	4									4- 10	50
X2 0 00043	9905-202-3639	REFLECTOR, INDICATING, AMBER MS35387-2 (96906)	EA	2									4- 11	26
X2 0 00044	9905-205-2795	REFLECTOR, INDICATING CLEARANCE, RED MS35387-1 (96906)	EA	4									4- 11	22
X2 0 00045	5305-068-0501	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 5/8 IN. LG MS90725-5 (96906)	EA	8									4- 11	21
X2 0 00046	5305-068-0501	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 5/8 IN. LG MS90725-5 (96906)	EA	4									4- 11	25
X2 0 00047	5305-269-3211	SCREW, CAP, HEXAGON HEAD: 3/8-16 X 1 IN. LG MS90725-60 (96906)	EA	24									4- 10	48
X2 0 00048	5305-071-2237	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 2 IN. LG MS90725-14 (96906)	EA	2									4- 10	54
X2 0 00049	5306-225-8497	SCREW, CAP, HEXAGON HEAD: 5/16-18 X 3/4 IN. LG MS90725-32 (96906)	EA	4									4- 11	5
X2 0 00050	5305-068-0501	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 5/8 IN. LG MS90725-5 (96906)	EA	2									4- 11	13

SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 O 00051	5305-068-0501	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 5/8 IN. LG MS90725-5 (96906)	EA	1									4- 11	17
X2 O 00052	5305-958-5246	SCREW, MACHINE: 1/4-20 X 3/4 IN. LG MS35190-289 (96906)	EA	8									4- 11	9
X2 O 00053	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC MS27183-10 (96906)	EA	16									4- 11	20
X2 O 00054	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	8									4- 11	24
X2 O 00055	5310-809-4061	WASHER, FLAT: 3/8 IN. BSC SIZE MS27183-15 (96906)	EA	48									4- 10	47
X2 O 00056	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	4									4- 10	53
X2 O 00057	5310-081-4219	WASHER, FLAT: 5/16 IN. BSC SIZE MS27183-12 (96906)	EA	8									4- 11	4
X2 O 00058	5310-809-4058	WASHER, FLAT: ROUND, 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	8									4- 11	8
X2 O 00059	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	4									4- 11	12
X2 O 00060	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	2									4- 11	16
X2 O 00061	5310-042-6758	WASHER, LOCK: 1/4 IN. SIZE MS35338-82 (96906)	EA	2									4- 10	52
00062		2210 - DATA PLATES												
X2 O 00063		PLATE, IDENTIFICATION: GROUND TERMINAL 13295E4918 (97403)	EA	1									4- 10	55
X2 O 00064		PLATE, IDENTIFICATION: PU620/M 13205E4916-4 (97403)	EA	1									4- 11	28
00065		GROUP 29 - AUXILIARY GENERATOR AND ENGINE												
00066		2901 - GENERATOR AND ENGINE ASSEMBLY												
X2F R 00067	6115-017-8240	GENERATOR SET: SF 5.0 MD MILG52279 (81349)	EA	2									4- 10	6
X2 F 00068	5310-225-6993	NUT, SELF-LOCKING: 1/2-13 UNC MS51922-33 (96906)	EA	8									4- 10	7
X2 F 00069	5305-071-1769	SCREW, CAP, HEXAGON HEAD: 1/2-13 X 2 IN. LG MS90725-115 (96906)	EA	8									4- 10	10
X2 F 00070	5310-520-3091	WASHER, BEVELED 13206EA482-2 (97403)	EA	8									4- 10	9
X2 F 00071	5310-809-5998	WASHER, FLAT: 1/2 IN. ID X 1 1/2 IN. OD MS27183-18 (96906)	EA	8									4- 10	8
		2941 - ENGINE EXHAUST												
X2 O 00073	6115-947-3335	EXHAUST, TUBE 13214E1487 (97403)	EA	1									4- 10	11
X2 O 00074	6115-947-3331	EXHAUST, TUBE 13214E1486 (97403)	EA	1									4- 10	15
X2 O 00075	5310-088-1251	NUT, SELF-LOCKING MS51922-1 (96906)	EA	2									4- 10	12

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
						1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 O 00076	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)		EA	2									4- 10	14
X2 O 00077	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	4									4- 10	13
00078		GROUP 42 - ELECTRICAL EQUIPMENT													
00079		4202 - ELECTRICAL CONTROLS													
P F 00080	6110-913-9275	DISTRIBUTION BOX 13212E3601 (97403)		EA	1	*	*	*	*	*	*	2	2	4- 10	20
X2 F 00081	6115-104-4550	BOX 13212E3602 (97403)		EA	1									4- 9	18
X2 F 00082	6115-948-7169	CABLE 13212E3607 (97403)		EA	1									4- 9	16
X2 F 00083	6115-948-7170	CABLE 13212E3608 (97403)		EA	1									4- 9	17
X2 F 00084		CABLE 13216E7479 (97403)		EA	2										
X2 F 00085		COVER 13212E3603 (97403)		EA	1									4- 9	1
X2 F 00086		GASKET 13212E3610 (97403)		EA	1									4- 9	19
M F 00087		LEAD, ELECTRICAL 13212E609-1 (97403) MANUFACTURE FROM:		EA	1									4- 9	11
P F 00088	6145-284-0656	WIRE, ELECTRICAL: 600V AIRCRAFT, AN6, MIL-3-5-5086		FT											
M F 00089		LEAD, ELECTRICAL 13212E3609-3 (97403) MANUFACTURE FROM:		EA	1									4- 9	13
P F 00090	6145-284-0656	WIRE, ELECTRICAL: 600V AIRCRAFT, AN6, MIL-W-5086		FT											
M F 00091		LEAD, ELECTRICAL 13212E3609-2 (97403) MANUFACTURE FROM:		EA	1									4- 9	12
P F 00092	6145-284-0656	WIRE, ELECTRICAL: 600V AIRCRAFT, AN6, MIL-W-5086		FT											
P F 00093		LEAD, ELECTRICAL 13216E7476 (97403)		EA	1										
X2 F 00094		LIGHT AND WIRE: 12 IN. LG 13212E3581-1 (97403)		EA	2									4- 9	2
X2 F 00095		NUT, PLAIN, HEXAGON: JAM, 1/4-20 THD SIZE MS16203-37 (96906)		EA	8									4- 9	25
X2 F 00096	5310-924-4218	NUT, PLAIN, HEXAGON: 1/4-28 THD SIZE		EA	9									4- 9	28
X2 F 00097	5310-934-9758	NUT, PLAIN, HEXAGON: MACHINE SCREW		EA	6									4- 9	27
X2 O 00098	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16 THD SIZE		EA	4										
X2 F 00099	5330-802-5905	PACKING, PREFORMED: O RING MS28775-132 (96906)		EA	2									4- 9	14
X2 F 00100	5330-579-8108	PACKING, PREFORMED: O RING MS28775-111 (96906)		EA	1									4- 9	31
X2 F 00101	5330-684-3420	PACKING, PREFORMED: O RING MS28775-013 (96906)		EA	4									4- 9	4


(1)	(2)	(3)	(4)	(5)	(6)			(7)			(8)	(9)	(10)			
SMR CODE	FEDERAL STOCK NUMBER	DESCRIPTION	USABLE ON CODE	UNIT OF MEAS	QTY INC IN UNIT	30-DAY DS MAINT ALLOWANCE			30-DAY GS MAINT ALLOWANCE			1-YR ALW PER 100 EQUIP CNTGY	DEPOT MAINT ALW PER 100 EQUIP	ILLUS- TRATION		
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)	
REF NUMBER & MFR CODE																
X2 O 00102		PLATE, INFORMATION: WIRING DIAGRAM 13212E3587 (97403)	EA	1												
X2 F 00103	5305-984-6214	SCREW, MACHINE: PAN HEAD	EA	6											4-9	22
X2 F 00104		SCREW, MACHINE: PAN HEAD 1/4-28 X 7/16 IN. LG MS35215-68 (96906)	EA	9											4-9	10
X2 O 00105	5305-989-7434	SCREW, MACHINE: PAN HEAD, 10-32 X 1/2 IN. LG	EA	16											4-9	5
X2 F 00106	5305-984-5695	SCREW, MACHINE: PAN HEAD, 3/8-16 X 2 IN. LG	EA	4											4-9	3
X2 F 00107		STUFFING TUBE 13212E3583-20 (97403)	EA	2											4-9	15
P F 00108	5930-829-3243	SWITCH, ROTARY: 60 AMP 13205E023 (97403)	EA	1	*	*	*	*	*	*	*	2	2		4-9	30
X2 F 00109		TERMINAL, BOARD 13212E3606 (97403)	EA	1											4-9	20
X2 F 00110	5940-904-9634	TERMINAL, LOAD 13208E5820-6 (97403)	EA	4											4-9	21
X2 F 00111		TERMINAL, LUG: SIZE 6 STUD, 1/4 IN. (AS REQUIRED) MS25036-20 (96906)	EA													
X2 F 00112	5940-660-3631	TERMINAL, LUG: 18-22 STUD, 1/4 IN.	EA	4												
X2 F 00113	5310-809-8546	WASHER, FLAT: ROUND, No. 10	EA	12											4-9	23
X2 O 00114	5310-809-8546	WASHER, FLAT: ROUND, No. 10	EA	16											4-9	7
X2 F 00115	5310-080-6004	WASHER, FLAT: ROUND, 3/8 IN.	EA	8											4-9	8
X2 F 00116		WASHER, LOCK: FLAT, EXTERNAL TOOTH, 1/4 IN. MS35335-89 (96906)	EA	9											4-9	29
X2 F 00117	5310-045-3296	WASHER, LOCK: HELICAL SPRING, NO. 10	EA	6												
X2 O 00118	5310-045-3296	WASHER, LOCK: HELICAL SPRING, NO. 10	EA	16											4-9	6
X2 F 00119	5310-184-8970	WASHER, LOCK: HELICAL SPRING,	EA	8											4-9	24
X2 F 00120	5310-022-8834	WASHER, LOCK: FLAT, INTERNAL TOOTH, 1/4 IN.	EA	4											4-9	26
X2 F	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16 THD SIZE	EA	4											4-9	9
X2 O 00122	5305-269-3211	SCREW, CAP, HEXAGON HEAD: 3/8-16 X 1 IN. LG	EA	4												
X2 F 00123		STRAP, CABLE ADJUSTER: 1 1/2 IN. MAXIMUM BINDING SIZE MS17821-1-0 (96906)	EA	1												
X2 O 00124	5310-809-4061	WASHER, FLAT: ROUND, 3/8 IN.	EA	8												
00125		4216 - MISCELLANEOUS WIRING AND FITTINGS														
X2 O 00126		CLAMP, CABLE, DOUBLE 13212E3591-4 (97403)	EA	2											4-10	28
X2 O 00127		CLAMP, CABLE, SINGLE 13212E3612 (97403)	EA	1											4-10	24

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 0 00128	5340-526-2559	CLAMP, CUSHIONED: 1/8 IN. ID MS21919-2 (96906)	EA	2									4- 10	33
X2 0 00129	5310-012-0361	NUT, PLAIN, HEXAGON: No. 10-24 UNC 2B MS35649-102 (96906)	EA	2									4- 10	29
X2 0 00130		NUT, PLAIN, HEXAGON: 3/8-16 UNC 2B FFN836TYPE2 (81348)	EA	1									4- 10	39
X2 0 00131		NUT, PLAIN, HEXAGON: 3/8-16 UNC 2B FFN836TYPE2 (81348)	EA	1									4- 10	56
X2 0 00132		NUT, PLAIN, HEXAGON: JAM, 3/8-16 UNC 2B FFN836TYPE2 (81348)	EA	2									4- 10	37
X2 0 00133	5310-543-4717	NUT, PLAIN, WING: BRASS, 3/8-16 THD SIZE MS35425-28 (96906)	EA	1									4- 10	40
X2 0 00134	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)	EA	2									4- 10	21
X2 0 00135	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)	EA	4									4- 10	25
X2 0 00136	5305-225-3840	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 7/8 IN. LG MS90725-7 (96906)	EA	2									4- 10	23
X2 0 00137	5305-225-3840	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 7/8 IN. LG MS90725-7 (96906)	EA	4									4- 10	27
X2 0 00138	5305-543-4718	SCREW, CAP, HEXAGON HEAD: 3/8-16 3/4 IN. LG MS35309-358 (96906)	EA	1									4- 10	58
X2 0 00139	5305-984-6211	SCREW, MACHINE: PAN HEAD, No. 10-24 X 5/8 IN. LG MS35206-26# (96906)	EA	2									4- 10	32
X2 0 00140	5307-722-9437	STUD, GROUNDING 13214E1223 (97403)	EA	1									4- 10	35
X2 0 00141	5940-688-6010	TERMINAL, LUG: No. 6 WIRE, 3/8 IN. STUD MS20659-10 (96906)	EA	3									4- 10	59
X2 0 00142	5310-913-9776	WASHER, LOCK: FLAT 3/8 IN. SIZE MS35335-91 (96906)	EA	2									4- 10	36
X2 0 00143	5310-913-9776	WASHER, LOCK: FLAT 3/8 IN. SIZE MS35335-91 (96906)	EA	1									4- 10	57
X2 0 00144	5310-187-2413	WASHER, FLAT: ELECTRICAL, BRASS, 3/8 IN. AN961-616T (88044)	EA	4									4- 10	38
X2 0 00145	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10	EA	4									4- 10	22
X2 0 00146	5310-809-4058	WASHER, FLAT: 1/4 in. BSC SIZE MS27183-10 (96906)	EA	8									4- 10	26
X2 0 00147	5310-809-8546	WASHER, FLAT: No. 10 BSC SIZE MS27183-8 (96906)	EA	4									4- 10	31
X2 0 00148	5310-045-3296	WASHER, LOCK: No. 10 SCREW SIZE MS35338-43 (96906)	EA	2									4- 10	30
P F 00149	6145-395-8799	WIRE, ELECTRIC, UNINSULATED: No. 6 AWG QQW343TYPERB	FT	15	*	*	*	*	*	*	*	*	4- 10	60

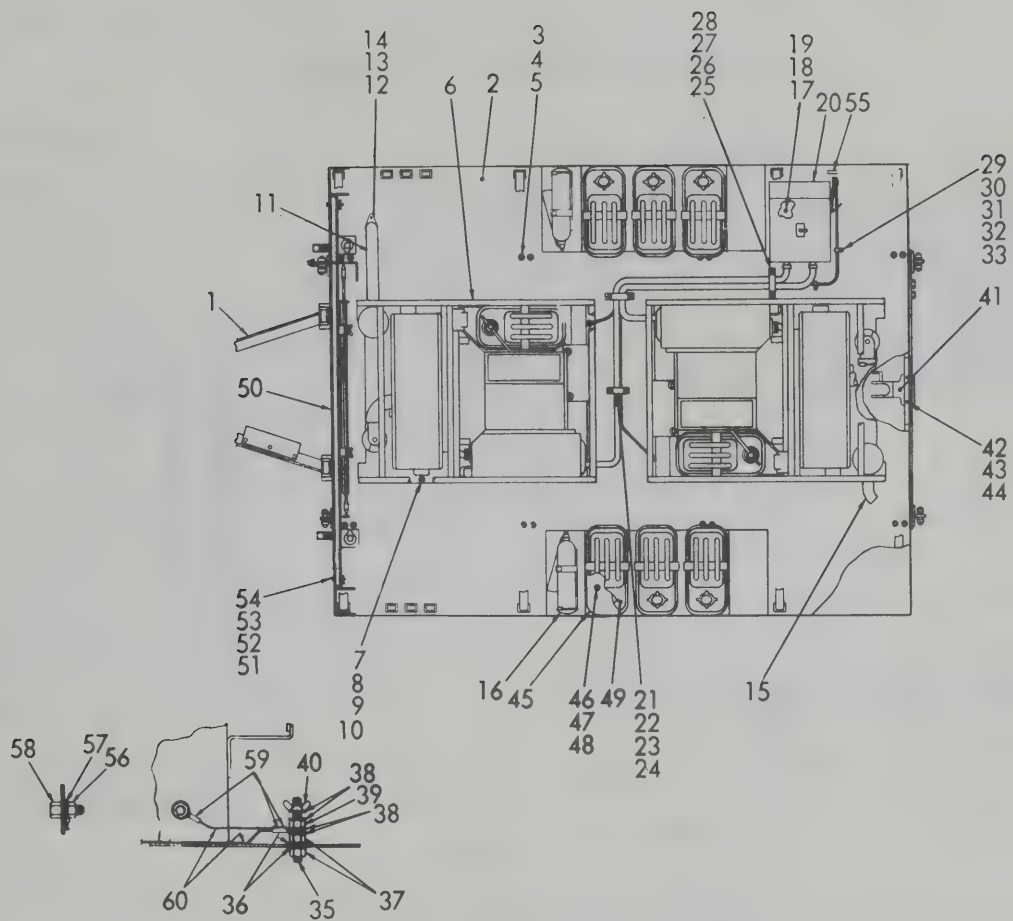

ME 6115-365-15/4-10 C3

Figure 4-10. PU-620/M power unit.

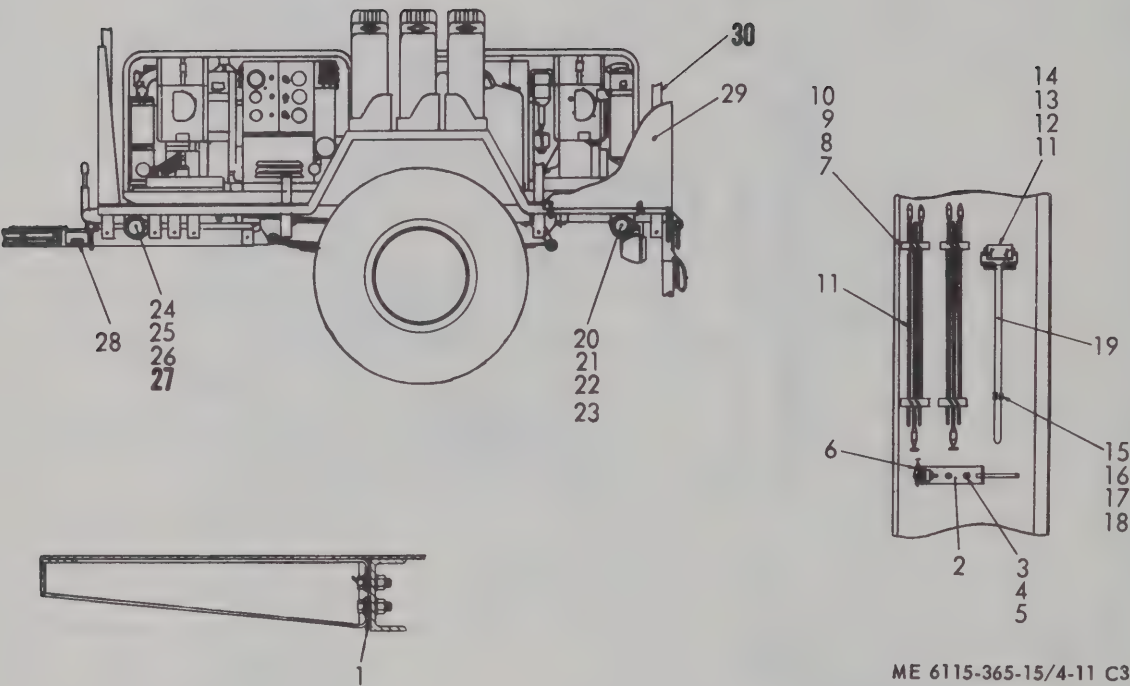

ME 6115-365-15/4-11 C3

Figure 4-11. PU-620/M accessories.

CHAPTER 5

GENERATOR SETS PU-406/M and PU-402/M

Section I. DESCRIPTION AND DATA

5-1. Description

a. General. A 30-kw, 60-cycle, diesel engine driven generator, capable of supplying 25-kw, 50 cycle power, mounted on an M-200A1 trailer (modified), comprise a self-contained mobile unit referred to as Trailer-Mounted Generator Set, PU-406/M. Refer to figures 5-1 and 5-2. A 15-kw, 60 cycle, diesel engine-driven generator, capable of supplying 12.5-kw, 50-cycle power, mounted on a M-200A1 trailer, comprise a self-contained mobile unit referred to as Trailer-Mounted Generator Set, PU-402/M.

b. Function. PU-406/M is a mobile power plant and may be used to supply power to any system requiring a 30-kw, 60-cycle current. PU-402/M is a mobile power source capable of furnishing 15-kw, 60-cycle current.

Note. The only difference between the PU-406/M and PU-402/M generator sets is in the output. The sets are similar to each other in appearance.

d. Generator and Engine. For description and further operation and maintenance information on the PU-406/M generator and engine not covered in this chapter, refer to TM

5-6115-321-15. For PU-402/M, refer to applicable TM for generator set used. (See DA PAM 310-4).

e. Trailer. For description and maintenance information on the M-200A1 trailer, refer to TM 9-2330-205-14.

f. Lubrication. Refer to LO 9-2330-205-14 for lubrication information required on the M-200A1 trailer.

5-2. Tabulated Data

Table 5-1 lists the components that comprise PU-406/M and PU-402/M.

Table 5-1. PU-406/M and PU-402/M Components.

Fsn	Qty	Nomenclature
2330-331-2307	1	Trailer: M-200A1
6115-077-8600	1	Generator set: 30 kw, DED (PU-406/M)
6115-317-4919	1	Generator set: 15 kw, DED (PU-402/M)
7240-222-3088	2	Can, gasoline, military 5-gallon
4210-555-8837	1	Fire extinguisher
5975-878-3791	2	Ground rod (w/attachments)
5120-251-4489	1	Sledge hammer


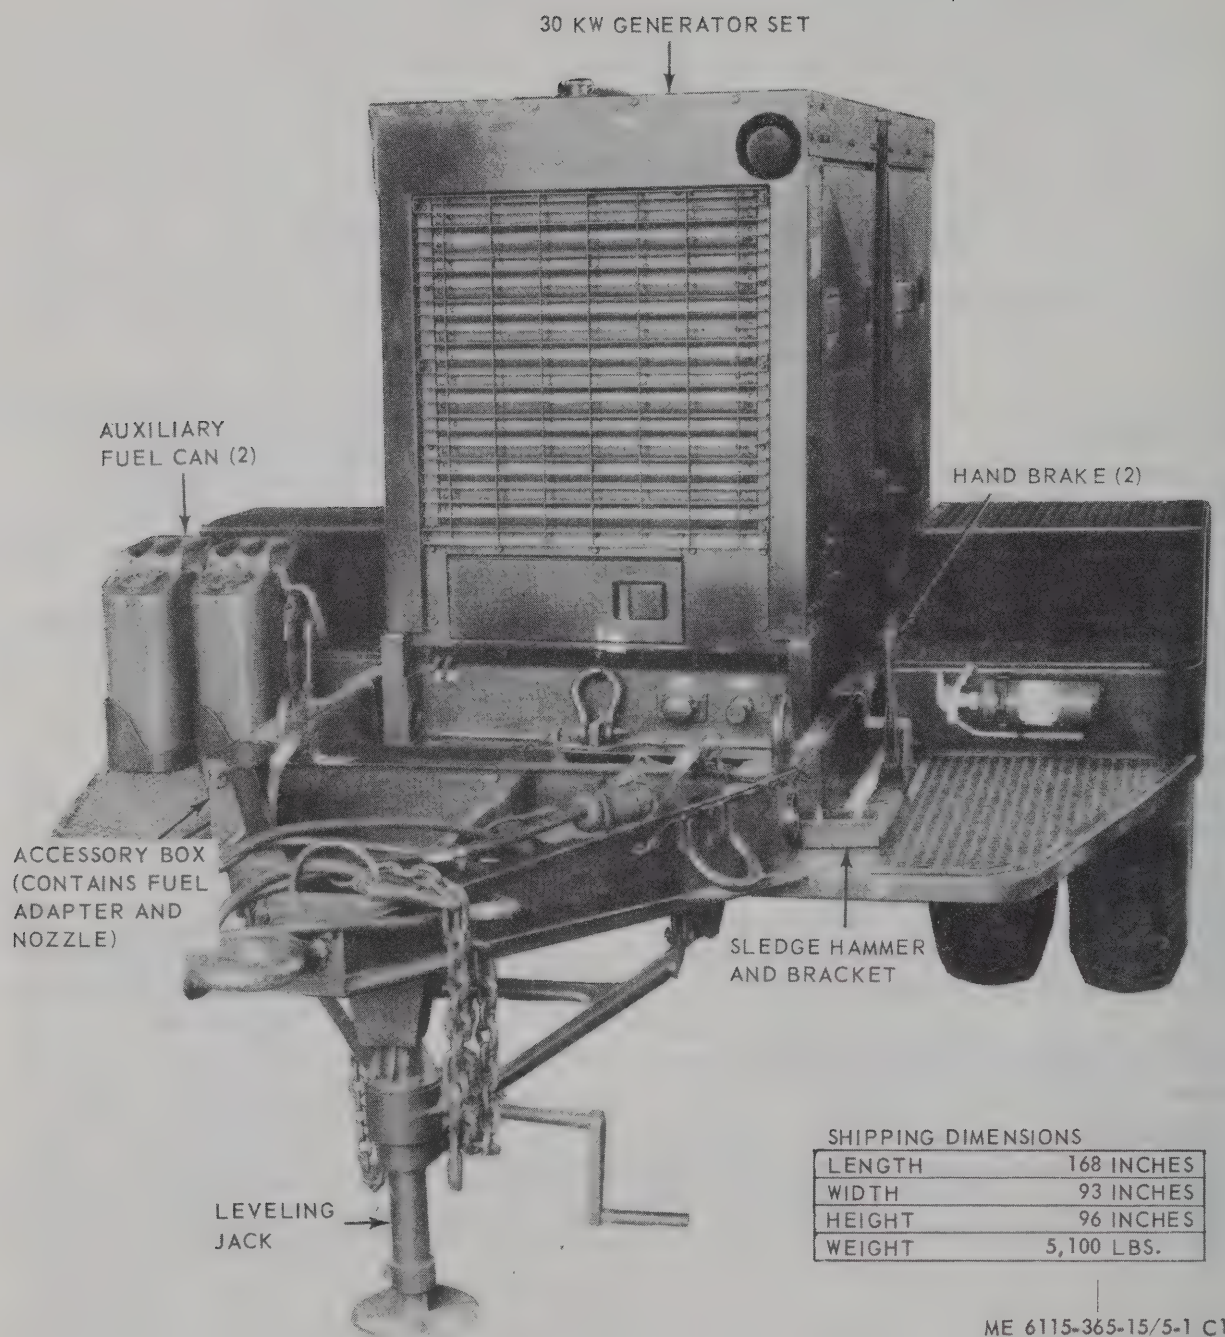


Figure 5-1. PU-406M, left front, 3/4 view.

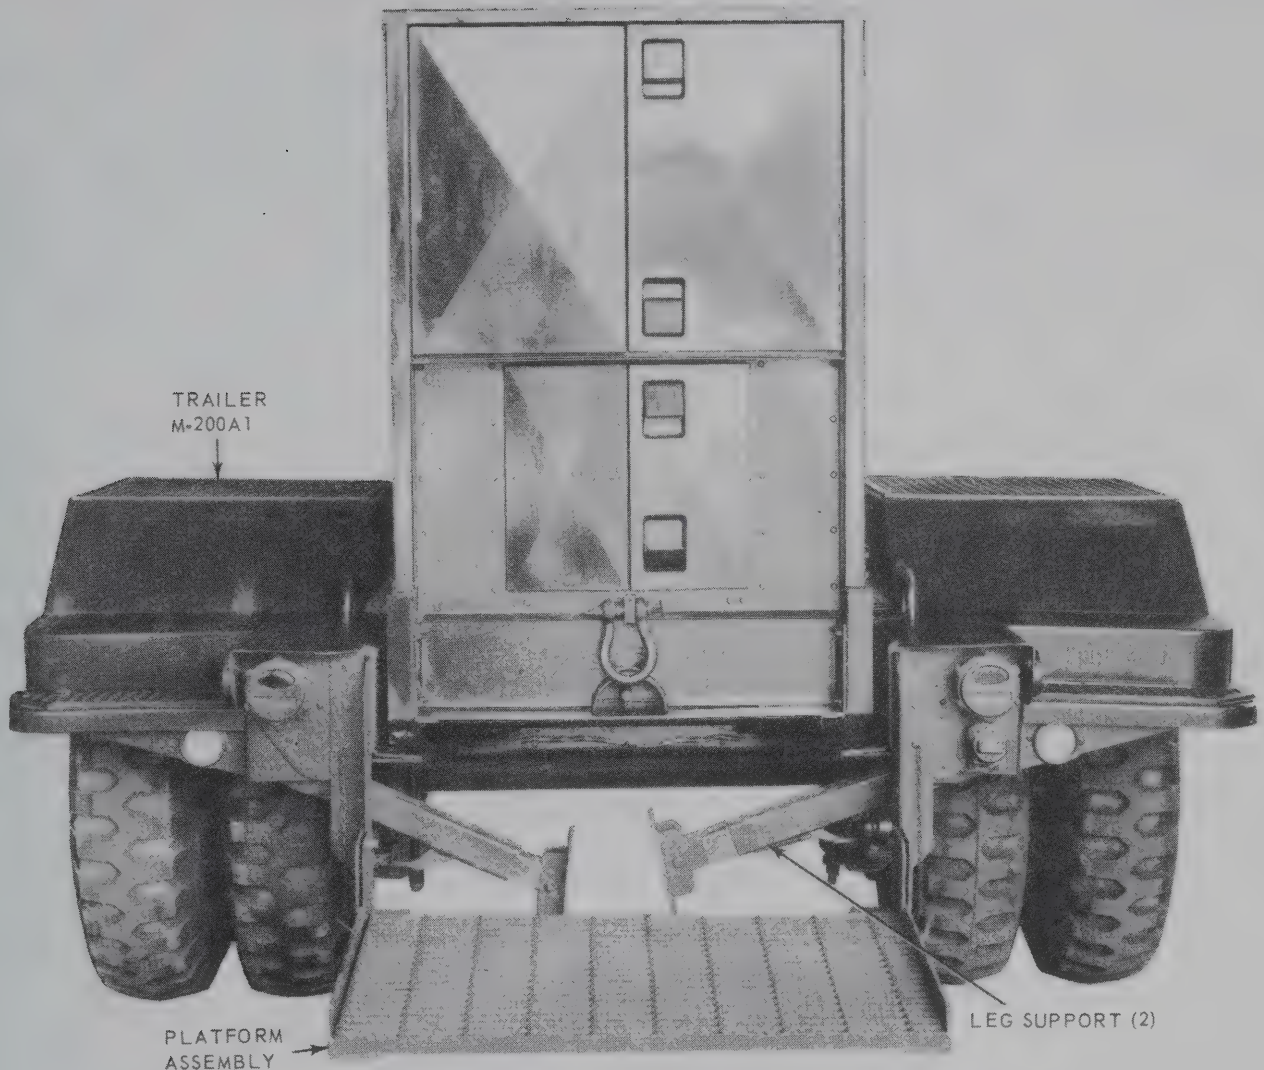

ME 6115-365-15/5-2 C1

Figure 5-2. PU-406/M, rear view.

Section II. OPERATING INSTRUCTIONS

5-3. Setting-Up Instructions

a. Leveling.

(1) Locate the trailer on as level a surface as possible in order for the generator set to operate efficiently.

(2) Set brakes and block wheels securely to prevent any movement. Operate the hand-brakes at weekly intervals to assure freedom of linkage.

(3) Pull leg supports down and adjust length for firm contact with ground.

Warning: Wheels must be blocked, brakes set, and leg supports down in support position before operating the equipment.

b. Grounding.

Warning: Never operate the generator set until it has been properly grounded. Electrical defects in the load lines or equipment can cause death by electrocution when contact is made with an ungrounded system.

(1) The generator set must be grounded prior to operation. The ground may be any of

three methods, depending on the location and the terrain.

(a) A ground rod driven to a depth of 8 feet.

(b) An underground metallic water piping system.

(c) A metal plate (9 sq. ft.) buried at a depth of 4 feet.

(2) The ground lead must be No. 6 AWG copper wire bolted or clamped to the rod, plate, or piping system.

(3) Connect the other end of the ground lead to the generator set ground stud.

Warning: Never operate the generator set in an enclosed area unless the exhaust gases are piped to the outside. Inhalation of

exhaust fumes will result in serious illness or death.

5-4. Starting

a. Perform the pre-starting procedures described in paragraph 5-3.

b. Start the generator set as instructed in TM 5-6115-321-12.

5-5. Stopping

Stop the generator set as instructed in TM 5-6115-321-12.

5-6. Operation

Operate the generator set as instructed in TM 5-6115-321-12.

Section III. DIRECT AND GENERAL SUPPORT AND DEPOT MAINTENANCE INSTRUCTIONS

5-7. Generator Set

a. *Removal.* Remove the generator set from the trailer as illustrated in figure 5-3.

b. *Installation.* Install the generator set as illustrated in figure 5-3.

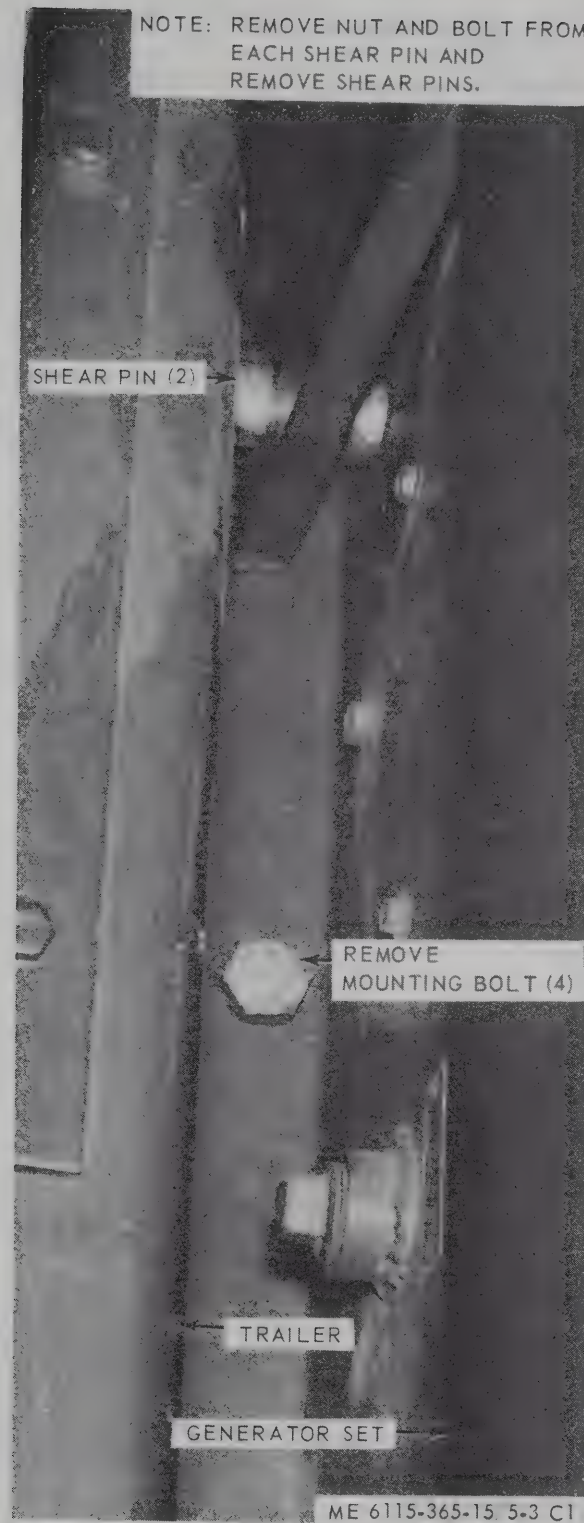


Figure 5-3. Generator set, removal and installation.

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
		REF NUMBER & MFR CODE								
		PART I								
		REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE								
00001		GROUP 15 - FRAME, TOWING ATTACHMENTS, AND DRAWBARS								
00002		1501 - FRAME ASSEMBLY								
X2 0 00003		BRACKET ASSEMBLY: liquid count, 5 gal MS53052-1 (96906)	EA	2						
X2 0 00004		BRACKET ASSEMBLY: sledge hammer 13214E1214 (97403)	EA	1						
X2 0 00005		BRACKET FIRE EXTINGUISHER: 5 lb 13214E1235 (97403)	EA	1						
X2 0 00006		CLIP SPRING 13214E1213-1 (97403)	EA	1						
X2 0 00007		NUT, PLAIN, HEXAGON: jam, 3/8-16 n/mag MS16203-39 (96906)	EA	3						
X2 0 00008		NUT, PLAIN, WING: brass, 3/8-16 MS35425-28 (96906)	EA	1						
X2 0 00009		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)	EA	1						
X2 0 00010		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)	EA	2						
X2 0 00011		NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)	EA	4						
X2 0 00012		NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)	EA	8						
X2 0 00013		NUT, SELF-LOCKING, HEXAGON: 5/16-18 MS51922-9 (96906)	EA	2						
X2 0 00014		PIN, SHEAR 13214E1254-1 (97403)	EA	2						
X2 0 00015		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4, 1g MS90725-6 (96906)	EA	2						
X2 0 00016		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4, 1g MS90725-6 (96906)	EA	1						
X2 0 00017		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 7/8, 1g MS90725-59 (96906)	EA	8						
X2 0 00018		SCREW, CAP, HEXAGON HEAD: 5/16-18 x 2-1/4 MS90725-41 (96906)	EA	2						
X2 0 00019		SCREW, MACHINE, PAN HEAD: 3/8-16 x 1, 1g MS35206-311 (96906)	EA	4						
X2 0 00020		STUD, GROUND 13214E1223 (97403)	EA	1						
X2 0 00021		WASHER, FLAT, ELECTRIC: brass, 3/8, size AN961-616T (88044)	EA	4						
X2 0 00022		WASHER, FLAT: round, 1/4 BSC, size MS27183-10 (96906)	EA	1						
X2 0 00023		WASHER, FLAT: round, 1/4 BSC, size MS27183-10 (96906)	EA	2						
X2 0 00024		WASHER, FLAT: round, 3/8 BSC, size MS27183-14 (96906)	EA	4						
X2 0 00025		WASHER, FLAT: round, 3/8 BSC, size MS27183-14 (96906)	EA	8						
X2 0 00026		WASHER, FLAT: round, 5/16 MS27183-13 (96906)	EA	2						

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00027		WASHER, LOCK, FLAT: external tooth, 3/8 MS35335-91 (96906)		EA	2					
00028		GROUP 18 - BODY, CAB, HOOD AND HULL								
00029		1808 - BOXES, CARRYING CASES								
X2 0 00030		ACCESSORY BOX 13214E1256 (97403)		EA	1					
X2 0 00031		NUT, SELF-LOCKING, HEXAGON: 5/16-18 MS51922-9 (96906)		EA	3					
X2 0 00032		SCREW, CAP, HEXAGON HEAD: 5/16-18 x 1, 1g MS90725-34 (96906)		EA	3					
X2 0 00033		WASHER, FLAT: round, 5/16, screw size MS27183-13 (96906)		EA	3					
00034		GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS								
00035		2202 - ACCESSORY ITEMS								
P C 00036	2910-066-1235	ADAPTER ASSEMBLY: fuel drum 13211E7541 (97403)		EA	1	*	*	*	*	
P O 00037	7240-222-3088	CAN, GASOLINE, MILITARY: 5 gal MILC1283 (81349)		EA	2	*	*	*	*	
P C 00038	5120-203-4656	HAMMER HAND: double face GGG14-86TYPEX (81348)		EA	1	*	*	*	*	
P C 00039	5975-878-3791	ROD, GROUND ASSEMBLY MILR11461TYPE (81349)		EA	2	*	*	*	*	
X2 0 00040		SPOUT CAN: flexible MILS1285 (81349)		EA	1					
00041		2210 - DATA PLATES								
X2 0 00042		PLATE, IDENTIFICATION, GENERATOR SET 13205E4916-9 (97403)		EA	1					
X2 0 00043		PLATE, IDENTIFICATION GROUND 13205E4918 (97403)		EA	1					
00044		GROUP 40 - ELECTRIC MOTORS AND GENERATORS								
00045		4000 - GENERATOR ASSEMBLY								
X2 0 00046		BOLT, MACHINE: 5/8-18 x 1-41/64, 1g AN10-14A (88044)		EA	4					
X2 0 00047		NUT, SELF-LOCKING, HEXAGON: 5/8-18 MS51922-53 (96906)		EA	4					
X2 0 00048		SPACER, GENERATOR MOUNTING 13212E3554 (97403)		EA	4					
X2 0 00049		WASHER, FLAT: round, 5/8, screw size MS27183-22 (96906)		EA	4					
00050		4019 - RADIO INTERFERENCE SUPPRESSION								
M O 00051		WIRE, ELECTRIC: uninsulated, copper, 6 AWG, 6 ft QQW343TYPE (81348) MANUFACTURE FROM:		FT	1					
X2 0 00052		TERMINAL, LUG: Type 1, cylinder, No. 6-3/8 MS20659-110 (96906)		EA	1					
P O 00053		WIRE, ELECTRIC: uninsulated, copper, 6 AWG (As required) QQW343TYPE (81348)		FT		SEE	GRP	9501		

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS USABLE ON CODE	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
00054		GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS								
00055		7638 - PORTABLE FIRE FIGHTING EQUIPMENT (INCLUDES FOR FIRE EXTINGUISHER)								
P C 00056	4210-270-4572	EXTINGUISHER, FIRE CO, 25 lb OE910TYPEI (81348)	EA	1	*	*	*	*		
00057		GROUP 95 - GENERAL USE STANDARDIZED PARTS								
00058		9501 - HARDWARE SUPPLIES AND BULK MATERIAL, COMMON								
P O 00059		WIRE, ELECTRICAL: uninsulated, copper, 6 AWG QQ343TYPEPBCLASS1 (81348)	FT		*	*	*	*		

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 30-DAY DS MAINT ALLOWANCE	(7) 30-DAY GS MAINT ALLOWANCE	(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
									(a)	(b)
					(a)	(b)	(c)	(a)	(b)	(c)
					1-20	21-50	51-100	1-20	21-50	51-100
		PART II								
		REPAIR PARTS FOR DS, GS, AND DEPOT MAINTENANCE								
00001		GROUP 15 - FRAME, TOWING ATTACHMENTS, AND DRAWBARS								
00002		1501 - FRAME ASSEMBLY								
X2 0 00003		BRACKET ASSEMBLY: liquid count, 5 gal MS53052-1 (96906)		EA	2					
X2 0 00004		BRACKET ASSEMBLY: sledge hammer 13214E1214 (97403)		EA	1					
X2 0 00005		BRACKET FIRE EXTINGUISHER: 5 lb 13214E1235 (97403)		EA	1					
X2 0 00006		CLIP SPRING 13214E1213-1 (97403)		EA	1					
X2 0 00007		NUT, PLAIN, HEXAGON: jam, 3/8-16 n/mag MS16203-39 (96906)		EA	3					
X2 0 00008		NUT, PLAIN, WING: brass, 3/8-16 MS35425-28 (96906)		EA	1					
X2 0 00009		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)		EA	1					
X2 0 00010		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)		EA	2					
X2 0 00011		NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)		EA	4					
X2 0 00012		NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)		EA	8					
X2 0 00013		NUT, SELF-LOCKING, HEXAGON: 5/16-18 MS51922-9 (96906)		EA	2					
X2 0 00014		PIN, SHEAR 13214E1254-1 (97403)		EA	2					
X2 0 00015		SCREW, CAP, HEXAGON HEAD: 1/4-20 X 3/4, 1g MS90725-6 (96906)		EA	2					
X2 0 00016		SCREW, CAP, HEXAGON HEAD: 1/4-20 X 3/4, 1g MS90725-6 (96906)		EA	1					
X2 0 00017		SCREW, CAP, HEXAGON HEAD: 3/8-16 X 7/8, 1g MS90725-59 (96906)		EA	8					
X2 0 00018		SCREW, CAP, HEXAGON HEAD: 5/16-18 X 2-1/4 MS90725-41 (96906)		EA	2					
X2 0 00019		SCREW, MACHINE, PAN HEAD: 3/8-16 X 1, 1g MS35206-311 (96906)		EA	4					
X2 0 00020		STUD, GROUND 13214E1223 (97403)		EA	1					
X2 0 00021		WASHER, FLAT, ELECTRIC: brass, 3/8, size AN961-616T (88044)		EA	4					
X2 0 00022		WASHER, FLAT: round, 1/4 BSC, size MS27183-10 (96906)		EA	1					
X2 0 00023		WASHER, FLAT: round, 1/4 BSC, size MS27183-10 (96906)		EA	2					
X2 0 00024		WASHER, FLAT: round, 3/8 BSC, size MS27183-14 (96906)		EA	4					

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 0 00025		WASHER, FLAT: round, 3/8 BSC, size MS27183-14 (96906)	EA	8										
X2 0 00026		WASHER, FLAT: round, 5/16 MS27183-13 (96906)	EA	2										
X2 0 00027		WASHER, LOCK, FLAT: external tooth, 3/8 MS35335-91 (96906)	EA	2										
00028		GROUP 18 - BODY, CAB, HOOD AND HULL												
00029		1808 - BOXES, CARRYING CASES												
X2 0 00030		ACCESSORY BOX 13214E1256 (97403)	EA	1										
X2 0 00031		NUT, SELF-LOCKING, HEXAGON: 5/16-18 MS51922-9 (96906)	EA	3										
X2 0 00032		SCREW, CAP, HEXAGON HEAD: 5/16-18 X 1, 1g MS90725-34 (96906)	EA	3										
X2 0 00033		WASHER, FLAT: round, 5/16, screw size MS27183-13 (96906)	EA	3										
00034		1810 - CARGO BODY												
X2 DR 00035		TRAILER 13214E1257 (97403)	EA	1										
00036		GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS												
00037		2202 - ACCESSORY ITEMS												
P C 00038	2910-066-1235	ADAPTER ASSEMBLY: fuel drum 13211E7541 (97403)	EA	1	*	*	2	*	*	2	10	10		
P O 00039	7240-222-3088	CAN, GASOLINE, MILITARY: 5 gal MIL-C-1283 (81349)	EA	2	*	*	2	*	*	2	10	10		
P C 00040	5120-203-4656	HAMMER HAND: double face GGG-14-86TYPEX (81348)	EA	1	*	*	2	*	*	2	10	10		
P C 00041	5975-878-3791	ROD GROUND ASSEMBLY MIL-R-11461 TYPE (81349)	EA	2	*	*	2	*	*	2	10	10		
X2 0 00042		SPOUT CAN: flexible MIL-S-1285 (81349)	EA	1										
00043		2210 - DATA PLATES												
X2 0 00044		PLATE, IDENTIFICATION, GENERATOR SET 13205E4916-9 (97403)	EA	1										
X2 0 00045		PLATE, IDENTIFICATION GROUND 13205E4918 (97403)	EA	1										
00046		GROUP 40 - ELECTRIC MOTORS AND GENERATORS												
00047		4000 - GENERATOR ASSEMBLY												
X2 0 00048		BOLT, MACHINE: 5/8-18 X 1-41/64, 1g AN10-14A (88044)	EA	4										
X2 FR 00049	6115-935-5111	GENERATOR SET, DIESEL: 30KW60HZ, skid MIL-G-52147TYPE (81349)	EA	1										
X2 0 00050		NUT, SELF-LOCKING, HEXAGON: 5/8-18 MS51922-53 (96906)	EA	4										
X2 0 00051		SPACER, GENERATOR MOUNTING 13212E3554 (97403)	EA	4										
X2 0 00052		WASHER, FLAT: round, 5/8, screw size MS27183-22 (96906)	EA	4										

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 30-DAY DS MAINT ALLOWANCE	(7) 30-DAY GS MAINT ALLOWANCE	(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
									(a)	(b)
					(a)	(b)	(c)	(a)	(b)	(c)
					1-20	21-50	51-100	1-20	21-50	51-100
00053		4019 - RADIO INTERFERENCE SUPPRESSION								
M O 00054		WIRE, ELECTRIC: uninsulated, copper, 6 AWG, 6 ft QQ-W343TYPE (81348) MANUFACTURE FROM:		FT 1						
X2 O 00055		TERMINAL, LUG: type 1, cylinder, No. 6-3/8 MS20659-110 (96906)		EA 1						
P O 00056		WIRE, ELECTRIC: uninsulated, copper, 6 AWG (As required) QQ-W-343TYPE (81348)		FT				SEE GRP 9501		
00057		GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS								
00058		7638 - PORTABLE FIRE FIGHTING EQUIPMENT (INCLUDES FOR FIRE EXTINGUISHER)								
P C 00059	4210-270-4572	EXTINGUISHER, FIRE CO: 25 lb O-E-910TYPEI (81348)		EA 1	*	*	2	*	*	2
00060		GROUP 95 - GENERAL USE STANDARDIZED PARTS								
00061		9501 - HARDWARE SUPPLIES AND BULK MATERIAL, COMMON								
P O 00062		WIRE, ELECTRICAL: uninsulated, copper, 6 AWG QQ343TYPEPBCLASS1 (81348)		FT	*	*	*	*	*	*

CHAPTER 6

GENERATOR SETS PU-409/M AND PU-409A/M

Section I. DESCRIPTION AND DATA

6-1. Description

a. *General.* The PU-409A/M is a self-contained, mobile, general purpose power supply (fig. 6-1). The set is comprised of a 5 KW, Model SF-5.0-MD, Military Standard Generator Set mounted on an M-101-A1 $\frac{3}{4}$ -ton trailer and includes the components listed in table 6-1. The generator is powered by a directly coupled 2-cylinder 10-horsepower engine (MIL-STD Model 2A042-II).

b. *Difference in Models.* PU-409/M uses a liquid cooled gasoline engine-driven generator. PU-409A/M uses a Military Standard air-cooled gasoline engine-driven generator.

c. *Generator.* For description and generator operation and maintenance information not covered in this chapter, refer to TM 5-6115-332-12.

d. *Engine.* For description and engine main-

tenance not covered in this chapter, refer to TM 5-2805-258-14.

e. *Trailer.* For description and trailer maintenance not covered in this chapter, refer to TM 9-2330-202-14.

f. *Lubrication.* Refer to LO 9-2330-202-14 and LO 5-2805-258-14 for lubrication information required on PU-409A/M.

6-2. Tabulated Data

Table 6-1 lists the components for PU-409A/M.

Table 6-1. PU-409A/M Components

FSN	Qty	Nomenclature
2330-898-6779	1	Trailer: M101-A1
6115-017-8240	1	Generator: 5 KW, Model SF-5.OMD
2590-420-8929	1	Leg prop assembly, trailer
2910-066-1235	2	Adapter assembly, fuel drum
7240-222-3088	6	Can, gasoline, military 5-gallon
4210-555-8837	1	Fire extinguisher
5975-878-3791	2	Ground rod w/attachments
5120-265-7462	1	Sledge hammer

CAUTION: REMOVE TARPAULIN, BOWS, AND RACKS BEFORE OPERATING. BE SURE TAILGATE IS DOWN AND REMOVE ANYTHING IN THE TRAILER THAT MIGHT OBSTRUCT THE FREE CIRCULATION OF AIR.

TARPAULIN

FIRE EXTINGUISHER

HANDBRAKE (2)

SHIPPING DIMENSIONS	
LENGTH	147 INCHES
WIDTH	73 1/2 INCHES
HEIGHT	83 INCHES
WEIGHT	2200 POUNDS

ME 6115-365-15/6-1 C2

Figure 6-1. PU-409A/M, right front, 3/4 view.

Section II. OPERATING INSTRUCTIONS

6-3. Setting-up Instructions

a. Leveling.

(1) Locate the trailer on as level a surface as possible in order for the generator set to operate as efficiently as possible.

(2) Set brakes and block wheels securely to prevent any movement. Operate handbrake at weekly intervals to insure freedom of linkage.

(3) Pull leg prop down and adjust length for firm contact with ground.

WARNING

Wheels must be blocked, brakes set, and leg prop down in the support position before attempting to roll up the tarpaulin and before starting to assemble or set up the equipment for operation.

b. Preparation for Starting.

(1) Remove the canvas tarpaulin and remove the roof bows and racks as shown in figure 6-2.

(2) Open the trailer tailgate and remove all loose auxiliary items and anything else that might block the free circulation of air through the trailer and around the generator sets.

CAUTION

It is of foremost importance that there be free circulation of air around the generator sets at all times during operation.

WARNING

Never operate the generator set in an enclosed area unless the exhaust gases are piped to the outside. Inhalation of exhaust fumes will result in serious illness or death.

c. Grounding.

WARNING

Never operate the generator set until it has been properly grounded. Electrical defects in the load lines or equipment can cause death by electrocution when contact is made with an ungrounded system.

(1) The generator set must be grounded prior to operation. The ground may be any of three methods, depending on the location and the terrain.

(a) A ground rod driven to a depth of 8 feet.

(b) An underground metallic water piping system.

(c) A metal plate (9 square ft.) buried to a depth of 4 feet.

(2) The ground lead must be No. 6 AWG copper wire bolted or clamped to the rod, plate, or piping system.

(3) Connect the other end of the ground lead to the trailer ground terminal stud as shown in figure 6-3.

6-4. Starting

a. Perform pre-starting and setting-up procedures (para 6-3).

b. Start the generator as instructed in TM 5-6115-332-12.

6-5. Stopping

Stop the generator set as instructed in TM 5-6115-332-12.

6-6. Operation

a. Operate the generator set as instructed in TM 5-6115-332-12.

b. Perform the fuel transfer procedure as instructed in figure 6-4.



Figure 6-2. Roof bows and racks, removal and installation.



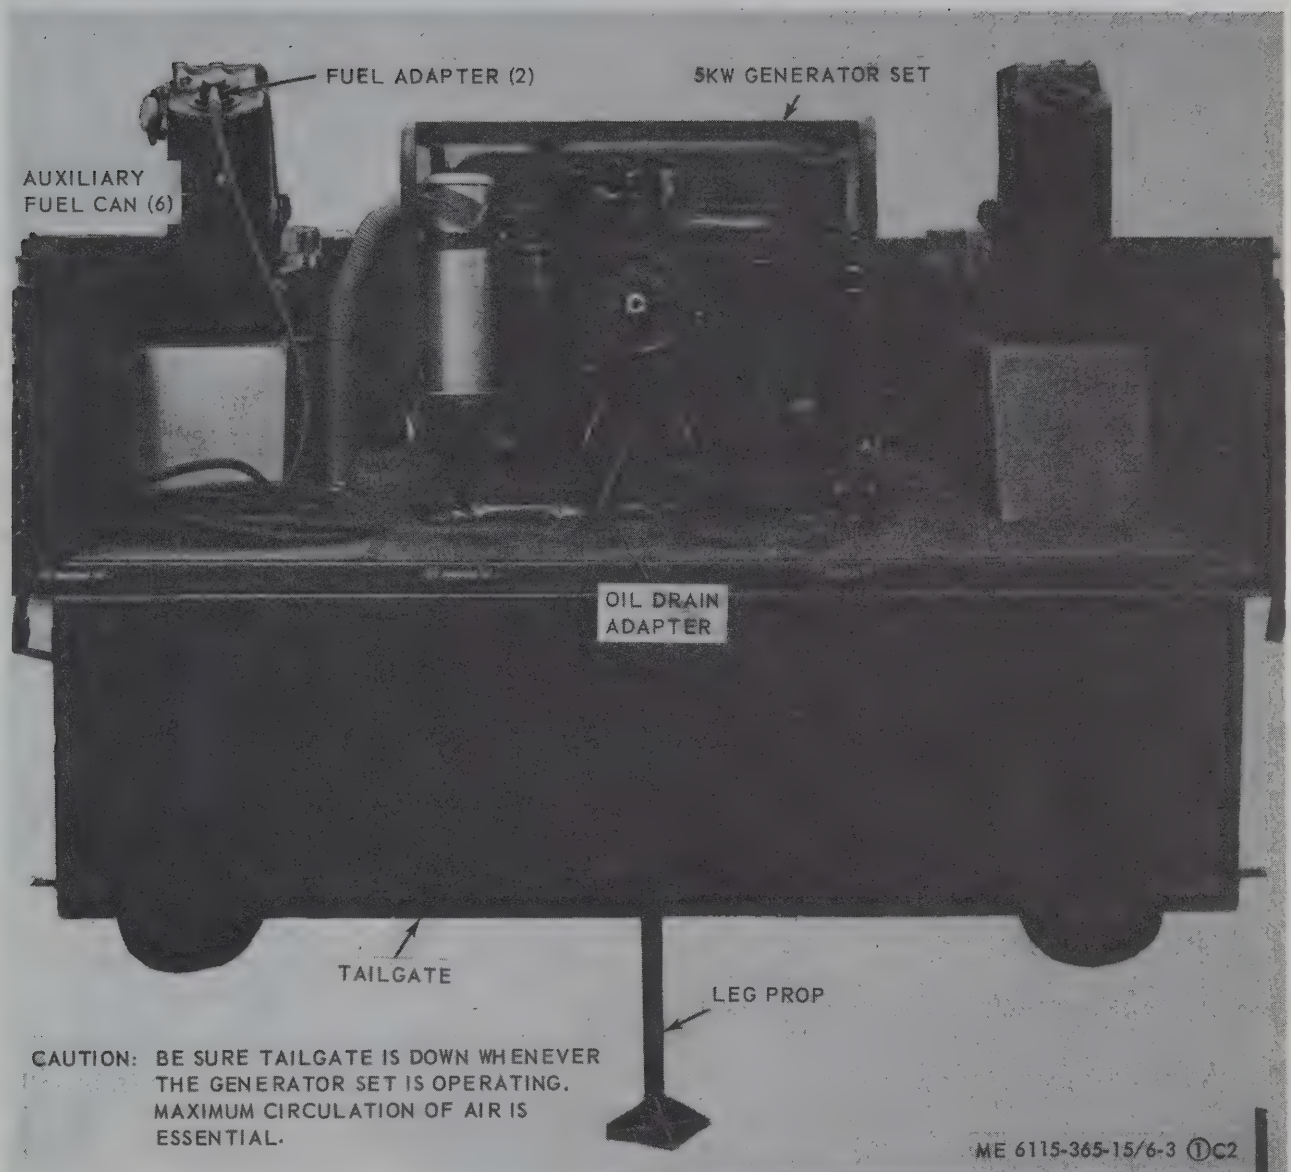


Figure 6-3. PU-409A/M set up for operation (sheet 1 of 2).

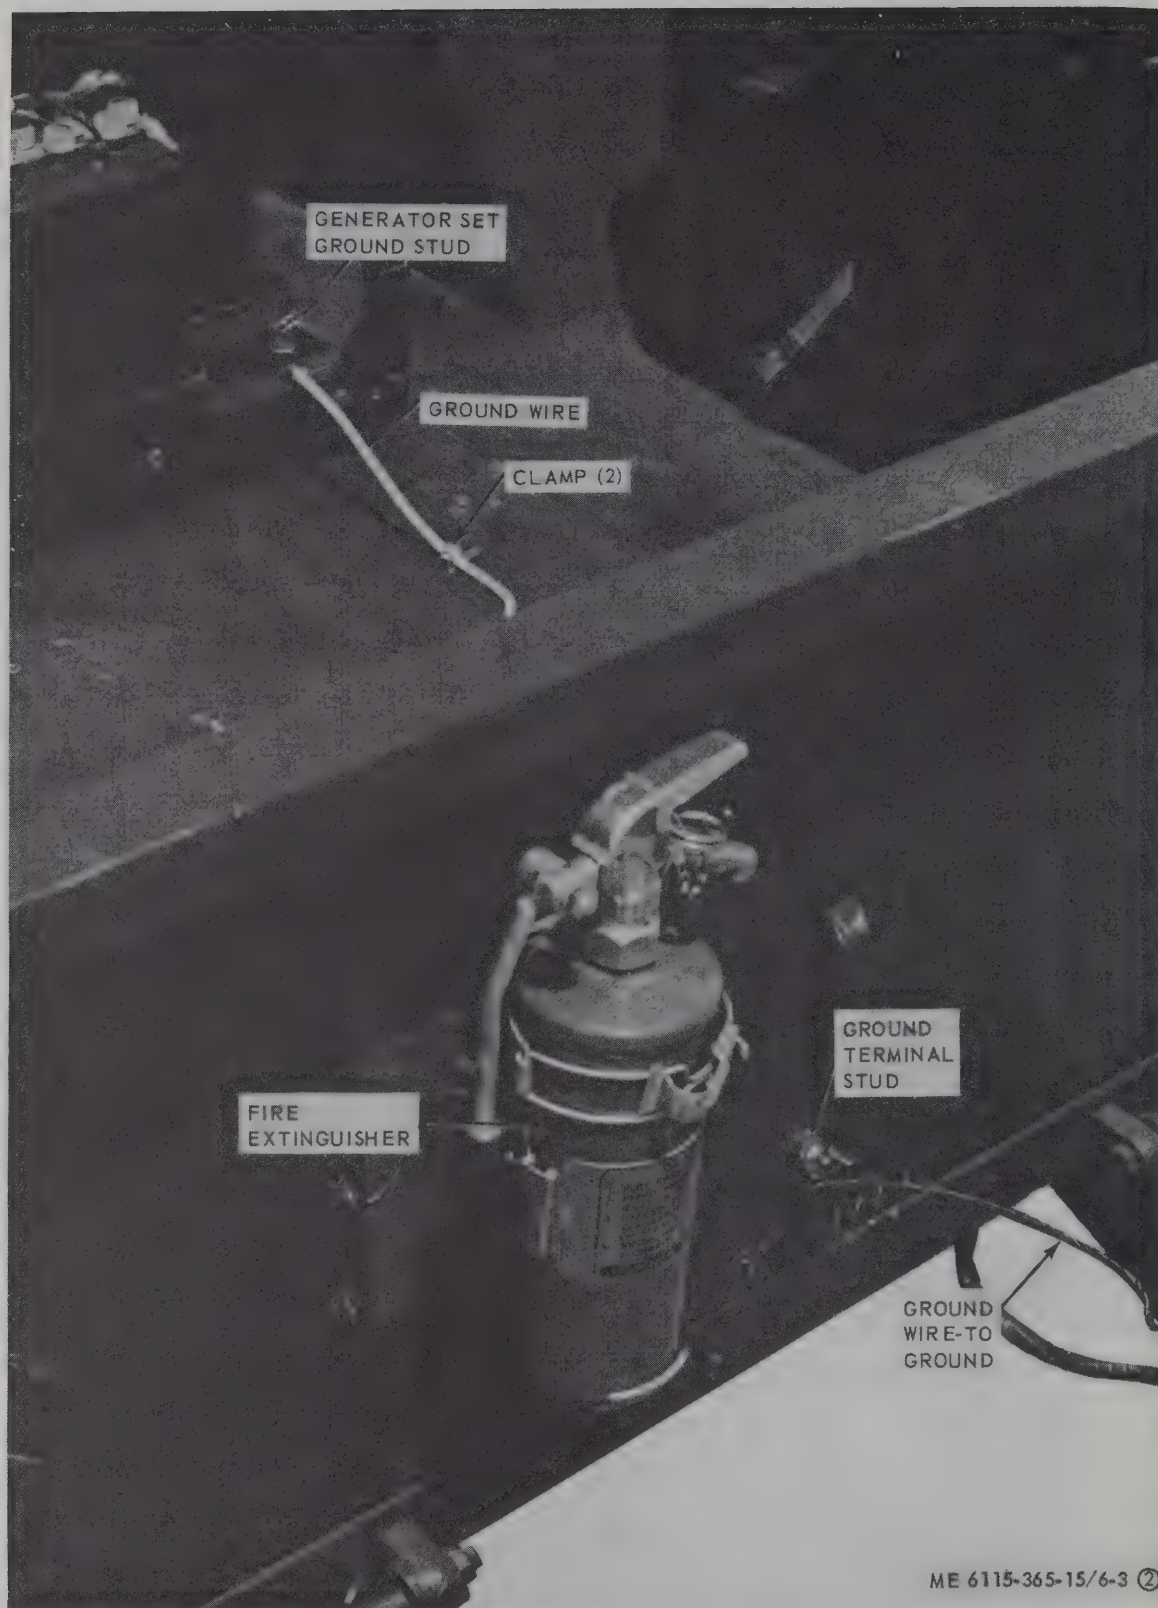

ME 6115-365-15/6-3 ②C2

Figure 6-3. PU-409A/M set up for operation (sheet 2 of 2).

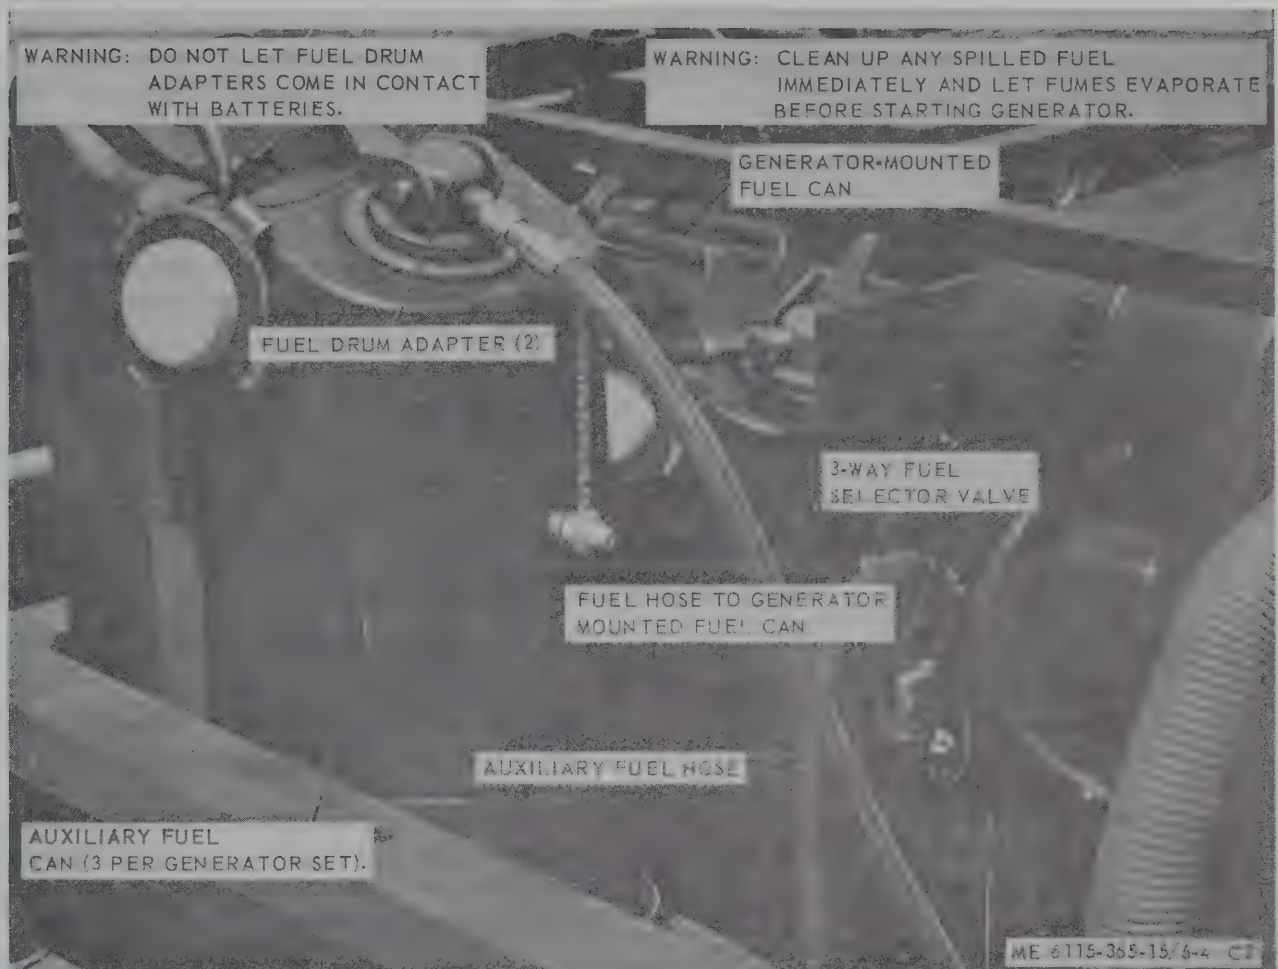

FUEL SYSTEM OPERATION:

1. CONNECT THE TWO FUEL HOSES TO THE 3-WAY SELECTOR VALVE AND CONNECT THE OTHER ENDS TO THE ADAPTERS IN THE GENERATOR-MOUNTED FUEL CAN AND ONE OF THE AUXILIARY FUEL CANS.
2. POSITION THE SELECTOR VALVE TO DRAW FUEL FROM THE GENERATOR-MOUNTED FUEL CAN. START THE GENERATOR AND BRING IT UP TO OPERATING SPEED.
3. POSITION THE SELECTOR VALVE TO DRAW FUEL FROM THE AUXILIARY FUEL CAN. OPERATE THE GENERATOR FOR ABOUT 4 HOURS ON THE AUXILIARY FUEL CAN; THEN TURN THE SELECTOR VALVE TO DRAW FUEL FROM THE GENERATOR-MOUNTED FUEL CAN.
4. SWITCH THE ADAPTER TO ANOTHER AUXILIARY FUEL CAN AND TURN SELECTOR VALVE BACK TO AUXILIARY FUEL SUPPLY POSITION.

NOTE: THIS PROCEDURE PERMITS LONGER OPERATION BETWEEN REFUELING PERIODS.

Figure 6-4. Fuel system connection and transfer procedure.

Section III. ORGANIZATIONAL MAINTENANCE INSTRUCTIONS

6-7. Ground Wires and Terminal Stud

a. Removal. Remove the ground wires from the terminal stud and generator set as shown in figure 6-3.

b. Installation. Install the ground wires and terminal stud as shown in figure 6-3.

6-8. Tarpaulin, Roof Bows, Racks, and Leg Prop

a. Removal.

(1) Remove the tarpaulin from the unit.

(2) Remove the roof bows and racks as shown in figure 6-2.

(3) Remove the hardware that secures the leg prop to the rear underside of the trailer bed and remove the leg prop.

b. Cleaning and Inspection.

(1) Clean tarpaulin, bows, and racks with water and detergent. Clean leg prop with approved cleaning solvent and dry thoroughly.

(2) Inspect tarpaulin for tears, holes, and broken or missing ropes and straps, and other defects. Inspect bows, racks, and leg prop for cracks, bends, missing pins, and other defects.

c. Installation.

(1) Mount leg prop to the underside of the trailer and secure with mounting hardware.

(2) Install racks and roof bows as shown in figure 6-2.

(3) Install tarpaulin and secure in desired position.

Section IV. DIRECT SUPPORT, GENERAL SUPPORT, AND DEPOT MAINTENANCE INSTRUCTIONS

6-9. Generator Set

a. Removal. Using figure 6-5 as a guide, perform the following steps:

(1) Disconnect fuel lines.

(2) Disconnect electrical leads and cables.

(3) Disconnect oil drain adapters.

(4) Remove the 4 bolts that secure the generator set to the trailer bed and remove the generator set.

b. Installation. Using figure 6-5 as a guide, perform the following steps:

(1) Secure the generator set to the trailer bed with four bolts.

(2) Connect the oil drain adapter.

(3) Connect the electrical leads and cables.

(4) Connect the fuel lines.

6-10. Tarpaulin, Roof Bows, Racks, and Leg Prop


a. Removal. Remove the tarpaulin, roof bows, racks, and leg prop (para 6-8).

b. Repair.

(1) Patch or sew rips and tears in the tarpaulin. Replace damaged or missing straps or ropes. Replace a tarpaulin that is too badly damaged to be repaired.

(2) Weld minor cracks or breaks in the bows and leg prop. Straighten bent bows where possible. Replace defective or missing pins and hardware. Replace bows, racks, or leg prop that are damaged beyond repair.

c. Installation. Install racks, roof bows, and leg prop and install tarpaulin (para 6-8).

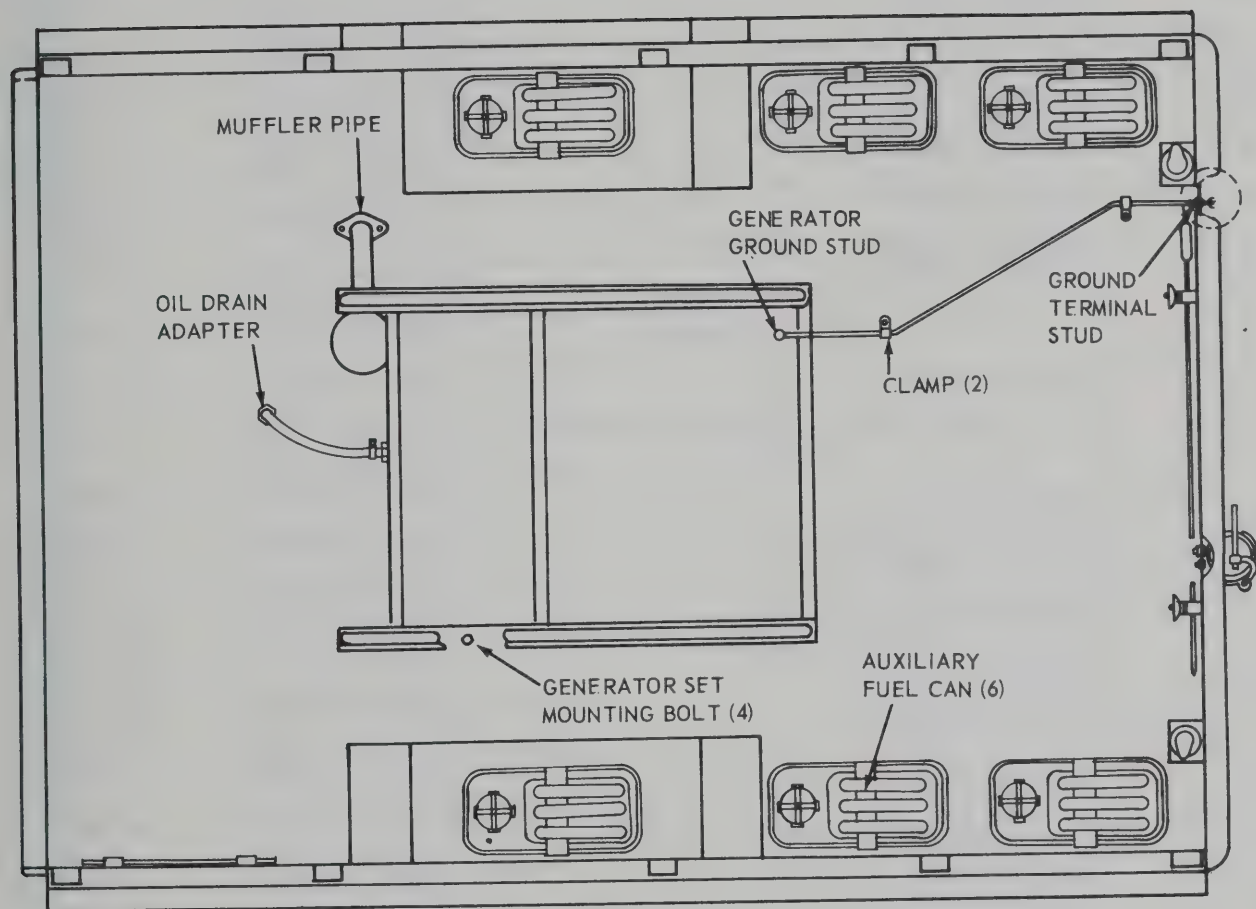

ME 6115-365-15/6-5 C2

Figure 6-5. Overall component location diagram.

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS USABLE ON CODE	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALLOW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
		PART I								
		REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE								
		GROUP 01 - ENGINE								
		0106 - ENGINE LUBRICATION SYSTEM								
00001										
00002										
X2 0 00003		CLAMP, HOSE: low pressure, 2 in. max od MS35842-12 (96906)		EA	2				6-7	11
M 0 00004		HOSE, FUEL, RUBBER: .875 in x 12 lg SAEJ30CL30R2 (81343) MANUFACTURE FROM:		EA	1				6-7	12
P 0 00005	4730-684-6032	HOSE, RUBBER (12 in. required)		FT		SEE	GRP	9501		
X2 0 00006		NIPPLE, PIPE, THREADED: 1/2 x 2-1/2 WVN351TYPE1 (81348)		EA	1				6-7	13
X2 0 00007		NUT, PLAIN, HEXAGON TUBE: 5/8 x 7/8-14 AN924-10 (88044)		EA	1				6-7	9
X2 0 00008	4730-277-6447	UNION, FLARED BULKHEAD AND UNIVERSAL FITTING AN832-10 (88044)		EA	1				6-7	14
X2 0 00009		WASHER, LOCK, SPLIT HELICAL: 7/8 nominal size MS35338-52 (96906)		EA	1				6-7	10
00010		GROUP 04 - EXHAUST SYSTEM								
00011		0401 - MUFFLER AND PIPES								
X2 0 00012	6115-947-3335	EXHAUST, TUBE 13214E1487 (97403)		EA	1				6-6	1
00013		GROUP 15 - FRAME, TOWING ATTACHMENTS AND DRAWBARS								
00014		1501 - FRAME ASSEMBLY								
P 0 00015	2590-473-6331	BRACKET ASSEMBLY MS53052-1 (96906)		EA	6	*	*	*	6-6	6
X2 0 00016	5340-999-6277	BRACKET ASSEMBLY, HAMMER MOUNTING 13214E1214 (97403)		EA	1				6-7	33
X2 0 00017	2590-932-7298	CLAMP, GROUND ROD: 1.64 hole, spc 13212E3617-1 (97403)		EA	4				6-7	1
X2 0 00018		CLAMP, LOOP: 3/16 nominal tube, od MS2110403 (96906)		EA	2				6-6	12
X2 0 00019	5340-914-2578	CLIP, SPRING, HAMMER MOUNTING 13214E1213-1 (97403)		EA	1				6-7	26
X2 0 00020		HOLDER, FUEL ADAPTER 13211E4889-1 (97403)		EA	4				6-7	15
X2 0 00021	7240-920-5327	HOLDER, FUEL DRUM ADAPTER 13212E3553-1 (97403)		EA	2				6-7	23
X2 0 00022		NUT, PLAIN, HEXAGON: machine, No. 6-32 MS35649-264 (96906)		EA	8				6-7	19
X2 0 00023		NUT, PLAIN, HEXAGON: non-mag, 3/8-16 MS16203-27 (96906)		EA	1				6-7	39
X2 0 00024		NUT, PLAIN, HEXAGON: non-mag, 3/8-16 MS16203-39 (96906)		EA	2				6-7	37
X2 0 00025		NUT, PLAIN, HEXAGON: screw, No. 10-24 MS35649-202 (96906)		EA	2				6-6	10
X2 0 00026		NUT, PLAIN, WING: 3/8-16, brass MS35425-28 (96906)		EA	1				6-7	35
X2 0 00027		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)		EA	1				6-7	29

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
						(a)	(b)	(c)	(d)	(a)	(b)
						1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00028		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)		EA	2					6-7	32
X2 0 00029		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)		EA	2					6-6	2
X2 0 00030		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)		EA	8					6-7	4
X2 0 00031		NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)		EA	24					6-7	42
X2 0 00032		NUT, SELF-LOCKING: 5/16-18 MS51922-9 (96906)		EA	4					6-7	22
X2 0 00033		PLATE, IDENTIFICATION: PU-409A/M 13205E4916-12 (97403)		EA	1					6-6	11
X2 0 00034		SCREW, CAP, HEXAGON HEAD: 1/4-20 MS90725-6 (96906)		EA	1					6-7	27
X2 0 00035		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 1 lg MS90725-8 (96906)		EA	2					6-6	4
X2 0 00036		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4 lg MS90725-6 (96906)		EA	2					6-7	30
X2 0 00037		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 7/8 lg MS90725-59 (96906)		EA	24					6-7	41
X2 0 00038		SCREW, CAP, HEXAGON HEAD: 5/16-18 x 3/4 lg MS90725-32 (96906)		EA	4					6-7	20
X2 0 00039		SCREW, MACHINE: flat head, 1/4-20 x 7/8 lg MS35190-290 (96906)		EA	8					6-7	2
X2 0 00040		SCREW, MACHINE: pan head, 10-24 x 5/8 in. lg MS35206-264 (96906)		EA	2					6-6	7
X2 0 00041		SCREW, MACHINE: pan head, No. 6-32 x 1/2 MS35206-230 (96906)		EA	8					6-7	16
X2 0 00042		STUD, GROUNDING: 3/8-16 x 2-1/2 lg 13214E1223 (97403)		EA	1					6-7	34
X2 0 00043		WASHER, FLAT, ELECTRIC: brass, 3/8 id AN961-616T (88044)		EA	4					6-7	36
X2 0 00044		WASHER, FLAT, ROUND MS27183-15 (96906)		EA	24					6-7	43
X2 0 00045		WASHER, FLAT, ROUND: 10-24 nominal size MS27183-8 (96906)		EA	4					6-6	8
X2 0 00046		WASHER, FLAT, ROUND: 1/4 nominal size MS27183-10 (96906)		EA	2					6-6	3
X2 0 00047		WASHER, FLAT, ROUND: 1/4 id nominal size MS27183-10 (96906)		EA	4					6-7	31
X2 0 00048		WASHER, FLAT, ROUND: 1/4 nominal size MS27183-10 (96906)		EA	4					6-7	28
X2 0 00049		WASHER, FLAT, ROUND: 1/4 id nominal size MS27183-10 (96906)		EA	8					6-7	3
X2 0 00050		WASHER, FLAT, ROUND: 5/16 nominal size MS27183-12 (96906)		EA	8					6-7	21
X2 0 00051		WASHER, FLAT, ROUND: 6-32 nominal size MS27183-6 (96906)		EA	8					6-7	17
X2 0 00052		WASHER, LOCK: flat, internal tooth, 3/8 MS35333-110 (96906)		EA	3					6-7	38
X2 0 00053		WASHER, LOCK, SPLIT HELICAL: No. 10 MS35333-43 (96906)		EA	2					6-6	9


(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00054		WASHER, LOCK: split helical, No. 6 nominal size MS35338-41 (96906)	EA	8					6-7	18
00055		1507 - LANDING GEAR, LEVELING JACKS								
X2 0 00056	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)	EA	3					6-7	45
X2 0 00057		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 1-1/4 MS90725-62 (96906)	EA	3					6-7	47
P 0 00058	2509-420-8929	TRAILER LEG, PROP ASSEMBLY 13214E1206 (97403)	EA	1	*	*	*	*	6-7	44
X2 0 00059		WASHER, FLAT, ROUND: 3/8 nominal size, id MS27183-15 (96906)	EA	6					6-7	46
00060		GROUP 22 - BODY, CHASSIS OR HULL, AND ACCESSORY ITEMS								
00061		2202 - ACCESSORY ITEMS								
P 0 00062	7240-222-3088	CAN, GASOLINE: Military, 5 gallon MILC1283 (81349)	EA	6	*	*	*	*	6-6	5
P C 00063	5120-265-7462	HAMMER HAND: double face, 8 lb GGGH86TYPEX (81348)	EA	1	*	*	*	*	6-7	24
P C 00064	5975-878-3791	ROD, GROUND ASSEMBLY: with attachments MILR11461 (81349)	EA	2	*	*	*	*	6-7	25
00065		GROUP 40 - GENERATORS								
00066		4000 - GENERATOR ASSEMBLY								
X2 0 00067		NUT, SELF-LOCKING, HEXAGON: 1/2-13 MS51922-33 (96906)	EA	4					6-7	5
X2 0 00068		SCREW, CAP, HEXAGON HEAD: 1/2-13 x 1-3/8 MS90725-112 (96906)	EA	4					6-7	8
X2 0 00069		SPACER, GENERATOR MOUNTING 13214E1222-4 (97403)	EA	4					6-7	6
X2 0 00070		WASHER, BEVELED 13206E4482-2 (97403)	EA	4					6-7	7
00071		GROUP 42 - ELECTRICAL EQUIPMENT								
00072		4216 - MISCELLANEOUS WIRING AND FITTINGS								
X2 0 00073		TERMINAL, LUG, WIRE: 3/8 stud MS20659-110 (96906)	EA	1					6-7	40
X2 0 00074	6145-395-8799	WIRE, ELECTRIC: 5 ft, copper, uninsulated QQW343TYPERB (81348)	EA	1					6-6	13
00075		GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS								
00076		7638 - PORTABLE FIRE FIGHTING EQUIPMENT								
P C 00077	4210-555-8837	EXTINGUISHER, FIRE: 2-3/4 w/bracket MILE52031 (81349)	EA	1	*	*	*	*	6-6	14
X2 0 00078	5310-088-1251	NUT, FIRE EXTINGUISHER: 1/4-20 s/lock MS51922-1 (96906)	EA	4					6-6	17
X2 0 00079	5305-068-0502	SCREW, FIRE EXTINGUISHER MOUNTING: 1/4-20 x 3/4 MS90725-6 (96906)	EA	4					6-6	15
X2 0 00080	5310-809-4058	WASHER, FLAT, FIRE EXTINGUISHER MOUNTING: 1/4 MS27183-10 (96906)	EA	8					6-6	16
00081		GROUP 95 - GENERAL USE STANDARDIZED PARTS								
00082		9501 - HARDWARE SUPPLIES AND BULK MATERIEL, COMMON								
X2 0 00083	4730-684-6032	HOSE, FUEL, RUBBER: .875 id SAEJ30CL30R2 (81343)	FT	AR						
X2 0 00084	6145-395-8799	WIRE, ELECTRIC: copper, No. 6 AWG, uninsulated QQW343TYPERB (81348)	FT	AR						

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 30-DAY DS MAINT ALLOWANCE (a) (b) (c)	(7) 30-DAY GS MAINT ALLOWANCE (a) (b) (c)	(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION (a) (b)	
									FIG. NO.	ITEM NO.
		PART II								
		REPAIR PARTS FOR DS, GS, AND DEPOT MAINTENANCE								
		GROUP 01 - ENGINE								
		0106 - ENGINE LUBRICATION SYSTEM								
00001										
00002										
X2 0 00003		CLAMP, HOSE: low pressure, 2 in. max od MS35842-12 (96906)		EA	2				6-7	11
M 0 00004		HOSE, FUEL, RUBBER: .875 id x 12 lg SAEJ30CL30R2 (81343) MANUFACTURE FROM:		EA	1				6-7	12
P 0 00005	4730-684-6032	HOSE, RUBBER (12 in. lg required)		FT		SEE	GRP	9501		
X2 0 00006		NIPPLE, PIPE, THREADED: 1/2 x 2-1/2 WN351TYPE1 (81348)		EA	1				6-7	13
X2 0 00007		NUT, PLAIN, HEXAGON TUBE: 5/8 x 7/8-14 AN924-10 (88044)		EA	1				6-7	9
X2 0 00008	4730-277-6447	UNION, FLARED, BULKHEAD AND UNIVERSAL FITTING AN832-10 (88044)		EA	1				6-7	14
X2 0 00009		WASHER, LOCK, SPLIT HELICAL: 7/8 nominal size MS35338-52 (96906)		EA	1				6-7	10
00010		GROUP 04 - EXHAUST SYSTEM								
00011		0401 - MUFFLER AND PIPES								
X2 0 00012	6115-947-3335	EXHAUST, TUBE 13214E1487 (97403)		EA	1				6-6	1
00013		GROUP 15 - FRAME, TOWING ATTACHMENTS AND DRAWBARS								
00014		1501 - FRAME ASSEMBLY								
P 0 00015	2590-473-6331	BRACKET ASSEMBLY MS53052-1 (96906)		EA	6	*	*	2	10	10
X2 0 00016	5340-999-6277	BRACKET ASSEMBLY, HAMMER MOUNTING 13214E1214 (97403)		EA	1				6-7	33
X2 0 00017	2590-932-7298	CLAMP, GROUND ROD: 1.64 hole, spc 13212E3617-1 (97403)		EA	4				6-7	1
X2 0 00018		CLAMP, LOOP: 3/16 nominal tube, od MS2110403 (96906)		EA	2				6-6	12
X2 0 00019	5340-914-2578	CLIP, SPRING, HAMMER MOUNTING 13214E1213-1 (97403)		EA	1				6-7	26
X2 0 00020		HOLDER, FUEL ADAPTER 13211E4889-1 (97403)		EA	4				6-7	15
X2 0 00021	7240-920-5327	HOLDER, FUEL DRUM ADAPTER 13212E3553-1 (97403)		EA	2				6-7	23
X2 0 00022		NUT, PLAIN, HEXAGON: machine, No. 6-32 MS35649-264 (96906)		EA	8				6-7	19
X2 0 00023		NUT, PLAIN, HEXAGON: non-mag, 3/8-16 MS16203-27 (96906)		EA	1				6-7	39
X2 0 00024		NUT, PLAIN, HEXAGON: non-mag, 3/8-16 MS16203-39 (96906)		EA	2				6-7	37
X2 0 00025		NUT, PLAIN, HEXAGON: screw, No. 10-24 MS35649-202 (96906)		EA	2				6-6	10

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 0 00026		NUT, PLAIN, WING: 3/8-16, brass MS35425-28 (96906)		EA	1								6-7	35
X2 0 00027		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)		EA	1								6-7	29
X2 0 00028		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)		EA	2								6-7	32
X2 0 00029		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)		EA	2								6-6	2
X2 0 00030		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)		EA	8								6-7	4
X2 0 00031		NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)		EA	24								6-7	42
X2 0 00032		NUT, SELF-LOCKING: 5/16-18 MS51922-9 (96906)		EA	4								6-7	22
X2 0 00033		PLATE, IDENTIFICATION: PU-409A/M 13205E4916-12 (97403)		EA	1								6-6	11
X2 0 00034		SCREW, CAP, HEXAGON HEAD: 1/4-20 MS90725-6 (96906)		EA	1								6-7	27
X2 0 00035		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 1 lg MS90725-8 (96906)		EA	2								6-6	4
X2 0 00036		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4 lg MS90725-6 (96906)		EA	2								6-7	30
X2 0 00037		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 7/8 lg MS90725-59 (96906)		EA	24								6-7	41
X2 0 00038		SCREW, CAP, HEXAGON HEAD: 5/16-18 x 3/4 lg MS90725-32 (96906)		EA	4								6-7	20
X2 0 00039		SCREW, MACHINE: flat head, 1/4-20 x 7/8 lg MS35190-290 (96906)		EA	8								6-7	2
X2 0 00040		SCREW, MACHINE: pan head, 10-24 x 5/8 in. lg MS35206-264 (96906)		EA	2								6-6	7
X2 0 00041		SCREW, MACHINE: pan head, No. 6-32 x 1/2 MS35206-230 (96906)		EA	8								6-7	16
X2 0 00042		STUD GROUNDING: 3/8-16 x 2-1/2 lg 13214E1223 (97403)		EA	1								6-7	34
X2 0 00043		WASHER, FLAT, ELECTRIC: brass, 3/8 id AN961-616T (88044)		EA	4								6-7	36
X2 0 00044		WASHER, FLAT, ROUND MS27183-15 (96906)		EA	24								6-7	43
X2 0 00045		WASHER, FLAT, ROUND: 10-24 nominal size MS27183-8 (96906)		EA	4								6-6	8
X2 0 00046		WASHER, FLAT, ROUND: 1/4 nominal size MS27183-10 (96906)		EA	2								6-6	3
X2 0 00047		WASHER, FLAT, ROUND: 1/4 id nominal size MS27183-10 (96906)		EA	4								6-7	31
X2 0 00048		WASHER, FLAT, ROUND: 1/4 nominal size MS27183-10 (96906)		EA	4								6-7	28
X2 0 00049		WASHER, FLAT, ROUND: 1/4 id nominal size MS27183-10 (96906)		EA	8								6-7	3
X2 0 00050		WASHER, FLAT, ROUND: 5/16 nominal size MS27183-12 (96906)		EA	8								6-7	21
X2 0 00051		WASHER, FLAT, ROUND: 6-32 nominal size MS27183-6 (96906)		EA	8								6-7	17


(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 0 00052		WASHER, LOCK: flat, internal tooth, 3/8 MS35333-110 (96906)	EA	3									6-7	38
X2 0 00053		WASHER, LOCK, SPLIT HELICAL: No. 10 MS35338-43 (96906)	EA	2									6-6	9
X2 0 00054	5310-045-3296	WASHER, LOCK: split helical, No. 6 nominal MS35338-41 (96906)	EA	8									6-7	18
00055		1507 - LANDING GEAR, LEVELING JACKS												
X2 0 00056	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)	EA	3									6-7	45
X2 0 00057		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 1-1/4 MS90725-62 (96906)	EA	3									6-7	47
P 0 00058	2509-420-8929	TRAILER LEG, PROP ASSEMBLY 13214E1206 (97403)	EA	1	*	*	*	*	*	*	5	2	6-7	44
X2 0 00059		WASHER, FLAT, ROUND: 3/8 nominal size, 1d MS27183-15 (96906)	EA	6									6-7	46
00060		GROUP 18 - BODY, CAB, HOOD AND HULL												
00061		1810 - CARGO BODY												
X2 DR 00062	2330-898-6779	TRAILER: M101 13214E1225-2 (97403)	EA	1									6-6	18
00063		GROUP 22 - BODY, CHASSIS OR HULL, AND ACCESSORY ITEMS												
00064		2202 - ACCESSORY ITEMS												
P 0 00065	7240-222-3088	CAN, GASOLINE: Military, 5 gallon MILC1283 (81349)	EA	6	*	*	*	*	*	*	10	10	6-6	5
P C 00066	5120-265-7462	HAMMER, HAND: double face, 8 lb GGGH86TYPEX (81348)	EA	1	*	*	2	*	*	2	10	10	6-7	24
P C 00067	5975-878-3791	ROD, GROUND ASSEMBLY: with attachments MILR11461 (81349)	EA	2	*	*	2	*	*	2	10	10	6-7	25
00068		GROUP 40 - GENERATORS												
00069		4000 - GENERATOR ASSEMBLY												
X2 FR 00070	6115-017-8240	GENERATOR SET: 5/60 md skid, mtd MILG52279TYPE1 (81349)	EA	1									6-6	19
X2 0 00071		NUT, SELF-LOCKING, HEXAGON: 1/2-13 MS51922-33 (96906)	EA	4									6-7	5
X2 0 00072		SCREW, CAP, HEXAGON HEAD: 1/2-13 x 1-3/8 MS90725-112 (96906)	EA	4									6-7	8
X2 0 00073		SPACER, GENERATOR MOUNTING 13214E1222-4 (97403)	EA	4									6-7	6
X2 0 00074		WASHER, BEVELED 13206E4482-2 (97403)	EA	4									6-7	7
00075		GROUP 42 - ELECTRICAL EQUIPMENT												
00076		4216 - MISCELLANEOUS WIRING AND FITTINGS												
X2 0 00077		TERMINAL, LUG, WIRE: 3/8 stud MS20659-110 (96906)	EA	1									6-7	40
X2 0 00078	6145-395-8799	WIRE, ELECTRIC: 5 ft, copper, uninsulated QQW343TYPERB (81348)	EA	1									6-6	13

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
00079		GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS												
00080		7638 - PORTABLE FIRE FIGHTING EQUIPMENT												
P C 00081	4210-555-8837	EXTINGUISHER, FIRE: 2-3/4 w/bracket MILE52031 (81349)	EA	1	*	*	2	*	*	2	10	10	6-6	14
X2 0 00082	5310-088-1251	NUT, FIRE EXTINGUISHER: 1/4-20 s/lock MS51922-1 (96906)	EA	4									6-6	17
X2 0 00083	5305-068-0502	SCREW, FIRE EXTINGUISHER MOUNTING: 1/4-20 x 3/4 MS90725-6 (96906)	EA	4									6-6	15
X2 0 00084	5310-809-4058	WASHER, FLAT, FIRE EXTINGUISHER MOUNTING: 1/4 MS27183-10 (96906)	EA	8									6-6	16
00085		GROUP 95 - GENERAL USE STANDARDIZED PARTS												
00086		9501 - HARDWARE SUPPLIES AND BULK MATERIEL, COMMON												
X2 0 00087	4730-684-6032	HOSE, FUEL, RUBBER: .875 Id SAEJ30CL30R2 (81343)	FT	AR										
X2 0 00088	6145-395-8799	WIRE, ELECTRIC: copper, No. 6 AWG, uninsulated QOW343TYPERB (81348)	FT	AR										

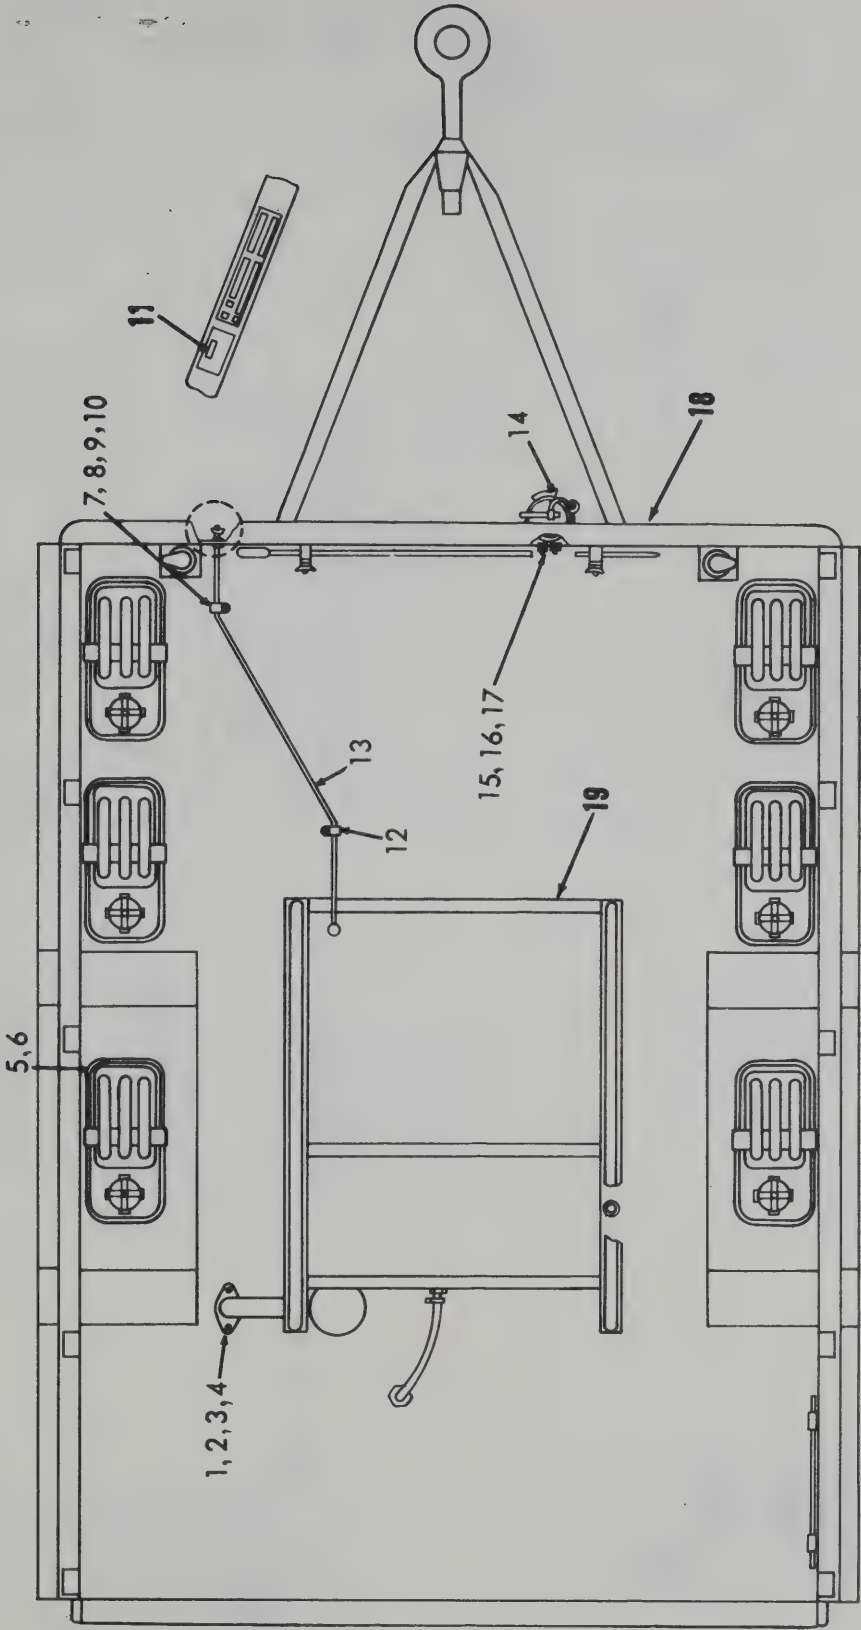

ME 6115-365-15/6-6, C2

Figure 6-6. Power unit components.

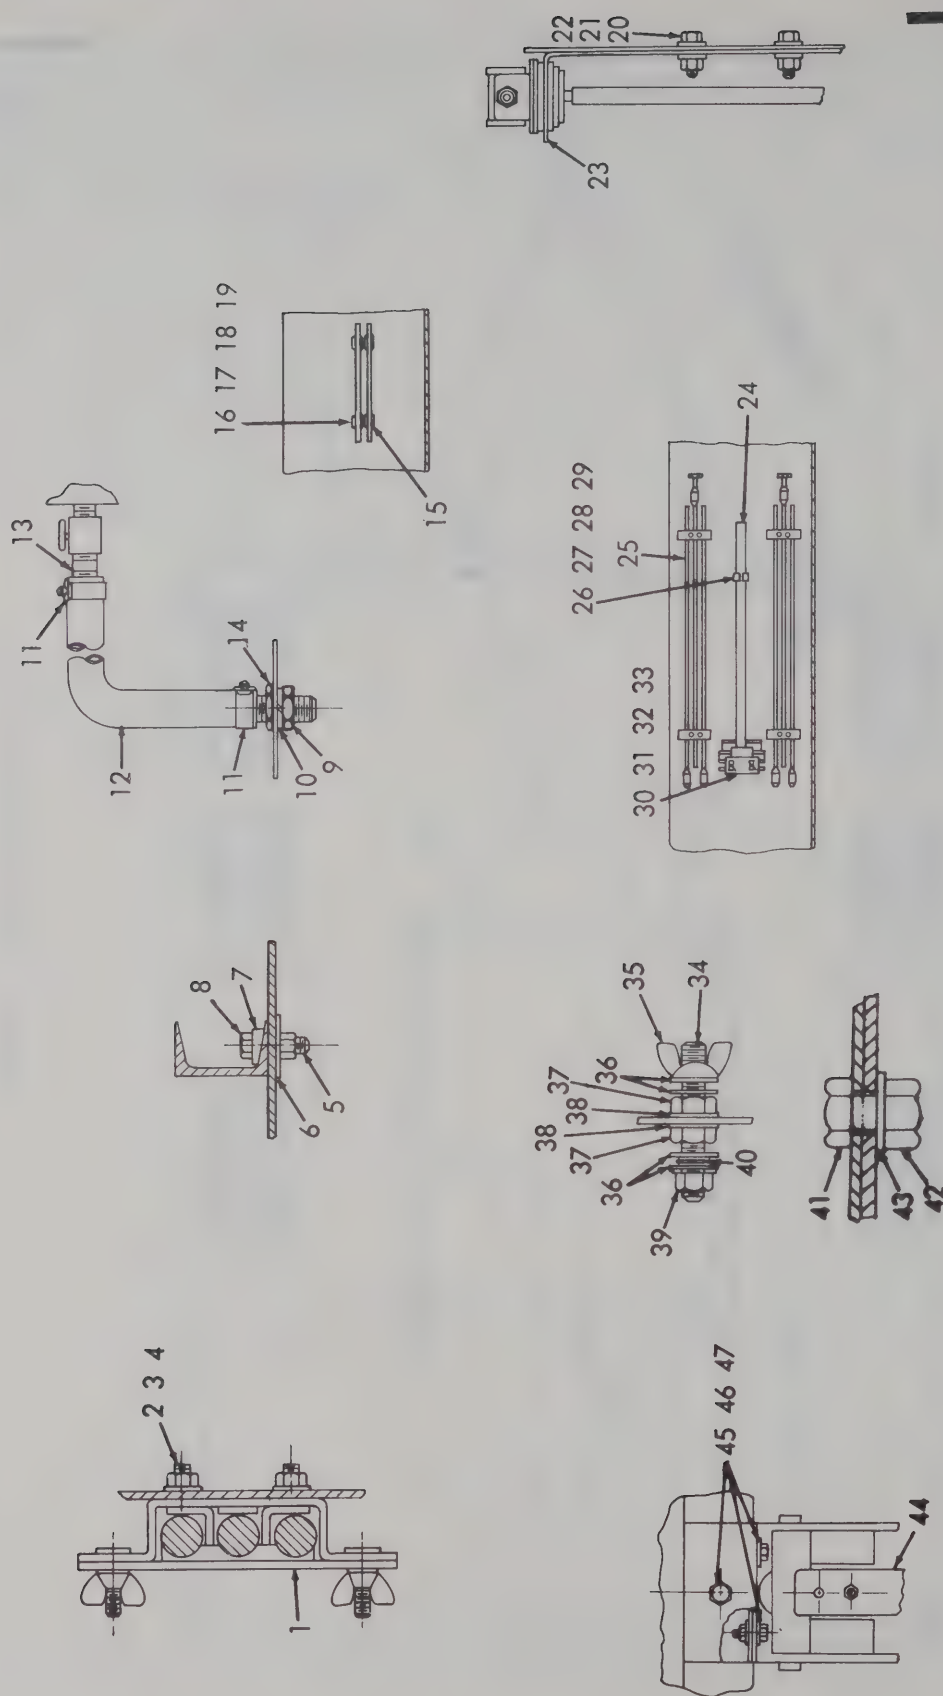

ME 6115-365-15/6-7, C2

Figure 6-7. Detail components.

CHAPTER 7

GENERATOR SET PU-236B/G

Section I. DESCRIPTION AND DATA

7-1. Description

a. General. A general purpose, air-cooled, gasoline engine-driven generator, supplying 60-cycle, 5-kw power, mounted on a two-wheeled, box type steel body, 1½-ton capacity, cargo trailer, model M-105E3 comprise a PU-236B/G generator set.

b. Generator. For description and further generator information for sets with 5-kw, 60-cycle, model SF5-MD generators, refer to applicable technical manual, as shown on nameplate or in DA Pam 310-4.

c. Engine. For description and further generator information for sets using a Military Standard engine model 2A042-1, refer to applicable technical

manual, as shown on nameplate or in DA Pam 310-4.

d. Trailer. For description and further trailer information, refer to applicable technical manual, as shown on trailer nameplate or in DA Pam 310-4.

e. Lubrication. Lubricate model 2A042-1 Military Standard engine in accordance with instructions outlined in applicable lubrication order, as shown in DA Pam 310-4. Refer to applicable technical manual and applicable lubrication order, as shown in DA Pam 310-4, for trailer lubrication instructions.

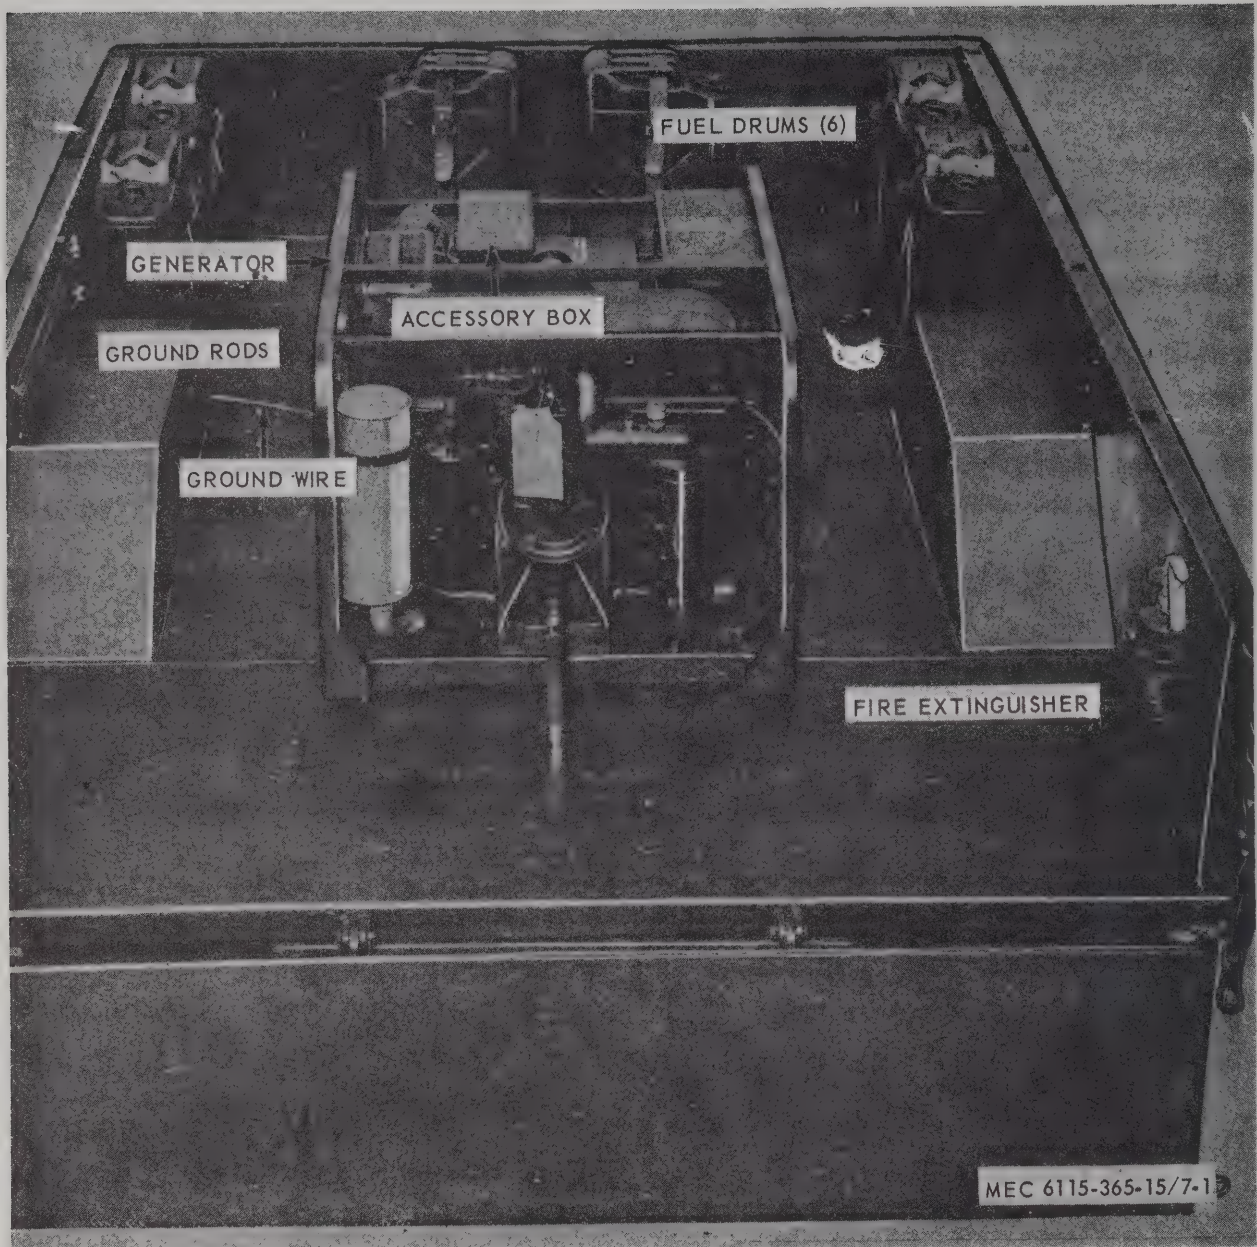


Figure 7-1. Generator Set PU-236B/G.


Section II. REPAIR PARTS LIST

TM 5-6115-365-15

LINE NO.	SOURCE CODES			FEDERAL STOCK NUMBER	DESCRIPTION	MANUFACTURER'S	UNIT OF ISSUE	QTY INCORPORATED IN UNIT	GUIDE QTY(S) PER MAJ EQUIPS					ILLUSTR	
	MATERIAL SOURCE	MAINT	RECOVERABILITY						15 DAYS MAINTENANCE			DEPT MAINT	FIGURE NO.	ITEM NO.	
									ORGANIZATION	DS	GS				
															1-5
0002					GROUP 01 - ENGINE										
0003					0106 - ENGINE LUBRICATION SYSTEM										
0004	X20			4730-278-3888	REDUCER BUSHING: 3/4-1 1/4 NPTF EXTERNAL THD X 1/2-14 NPTF INTERNAL THD, OIL DRAIN	81343 SAE-J530		1	*	*	*	*	*	7-2 1	
0005	X20			4720-913-6422	HOSE, OIL DRAIN	97403 13211E4918		1	*	*	*	*	*		
0006	0			4730-766-7908	UNION, FLARED TUBE, BULKHEAD: OIL DRAIN	88044 AN832-10		1	*	*	*	*	*		
0007	0			5310-059-6372	WASHER, LOCK: OIL DRAIN HOSE UNION	96906 MS35337-52		1	*	*	*	*	*		
0008	0			5310-282-7822	NUT, UNION: OIL DRAIN HOSE	88044 AN924-10		1	*	*	*	*	*		
0009					GROUP 04 - EXHAUST SYSTEM										
0010					0401 - MUFFLER AND PIPES										
0011	X20			6115-913-9291	TUBE, EXHAUST	97403 13212E3621		1	*	*	*	*	*		
0012	X20				CLAMP, EXHAUST TUBE SECURING	97403 13212E3622		1	*	*	*	*	*		
0013	0			5310-209-5306	WASHER, LOCK	96906 MS35337-24		1	*	*	*	*	*		
0014	0			5310-012-0614	NUT, PLAIN, HEXAGON	96906 MS35650-102		1	*	*	*	*	*		
0015	0			5305-043-6755	SCREW, MACHINE	96906 MS35226-68		1	*	*	*	*	*		
0016	0			5310-550-0777	NUT, PLAIN, HEXAGON: HOOK	96906 MS35690-402		2	*	*	*	*	*		
0017					GROUP 15 - FRAME, TOWING ATTACHMENTS, AND DRAWBARS										
0018					1501 - FRAME ASSEMBLY										
0019	X20			2510-706-4504	BRACKET ASSEMBLY, FUEL CAN	97403 13214E1203		6	*	*	*	*	*		
0020	X20				HOOK, DRIP RAIL: STRAP	97403 13212E3616		6	*	*	*	*	*		
0021	X20				FASTENER	97403 13214E1205		6	*	*	*	*	*		
0022	X20				BUCKLE	96906 MS51940-7		12	*	*	*	*	*		
0023	M O				STRAP: TOP	97403 13214E1203-2		6	*	*	*	*	*		
0024	P O			8305-267-3009	MANUFACTURE FROM: WEBBING, NYLON (30 IN. REQUIRED FOR EACH STRAP)	06716 1403	FT		SEE	GRP	9501				
0025	M O				STRAP: BOTTOM	97403 13214E1203-3		6	*	*	*	*	*		
0026	P O			8305-267-3009	MANUFACTURE FROM: WEBBING, NYLON (18 IN. REQUIRED FOR EACH STRAP)	06716 1403	FT		SEE	GRP	9501				
0027	X20				BRACKET	97403 13214E1204		6	*	*	*	*	*		
0028	X20			5305-269-3210	SCREW, CAP, HEXAGON HEAD: FUEL CAN										
0029	0			5310-809-4061	BRACKET MTG, 3/8-16 X 7/8 IN. LG	96906 MS90725-59		24	*	*	*	*	*		
0030	0			5310-087-4652	WASHER, FLAT: FUEL CAN BRACKET MTG	96906 MS27183-15		24	*	*	*	*	*		
0031	X20			5340-032-2708	NUT, SELF-LOCKING, HEXAGON: FUEL CAN										
0032	0			5305-984-6211	BRACKET MTG	96906 MS51922-17		24	*	*	*	*	*		
0033	0			5310-809-8546	LOOP, STRAP FASTENER: FUEL CAN	96906 MS51939-2		4	*	*	*	*	*		
0034	0			5310-167-0662	SCREW, MACHINE: LOOP MTG	96906 MS35206-264		8	*	*	*	*	*		
0035	0			5310-012-0361	WASHER, FLAT: LOOP MTG	96906 MS27183-8		8	*	*	*	*	*		
0036	X20			6115-016-2362	WASHER, LOCK: LOOP MTG	96906 MS35337-43		8	*	*	*	*	*		
0037	0			5305-889-3000	NUT, PLAIN, HEXAGON: LOOP MTG	96906 MS35649-102		8	*	*	*	*	*		
0038	0			5310-082-1404	HOLDER: FUEL DRUM ADAPTER EXTENSION	97403 13211E4889-1		4	*	*	*	*	*		
0039	0			5310-013-1181	SCREW, MACHINE: EXTENSION HOLDER MTG	96906 MS35205-230		8	*	*	*	*	*		
0040	0			5310-062-0912	WASHER, FLAT: EXTENSION HOLDER MTG	96906 MS27183-6		8	*	*	*	*	*		
0041	X20			7240-920-5327	WASHER, LOCK: EXTENSION HOLDER MTG	96906 MS35337-22		8	*	*	*	*	*		
0042	X20			5306-225-8497	NUT, PLAIN, HEXAGON: EXTENSION HOLDER MTG	96906 MS35649-64		8	*	*	*	*	*		
0043	0			5310-081-4219	HOLDER: FUEL DRUM ADAPTER	13212E3553-1		2	*	*	*	*	*		
0044	0			5310-984-3806	SCREW, BOLT MACHINE: ADAPTER HOLDER										
0045	X20				MTG 5/16-18 X 3/4 IN. LG	96906 MS90725-32		4	*	*	*	*	*		
0046	X1				WASHER, FLAT: ADAPTER HOLDER MTG	96906 MS27183-12		8	*	*	*	*	*		
0047	0				NUT, SELF-LOCKING, HEXAGON: ADAPTER										
0048	X20			5310-012-6177	HOLDER MTG	96906 MS51922-9		4	*	*	*	*	*		
0049	0				BRACKET ASSEMBLY, SLEDGE HAMMER	97403 13214E1214		1	*	*	*	*	*		
0050	0				BRACKET	97403 13214E1215		1	*	*	*	*	*		
0051	0				NUT, PLAIN, WING	96906 MS35425-39		2	*	*	*	*	*		
0052	X20			5310-012-0392	PLATE, HOLD DOWN	97403 13214E1216		1	*	*	*	*	*		
0053	0			5310-043-5862	WASHER, FLAT	96906 MS27183-10		2	*	*	*	*	*		
0054	X20			5340-914-2578	WASHER, LOCK	96906 MS35337-82		2	*	*	*	*	*		
0055	X20			5305-068-0502	CLIP, SPRING: SLEDGE HAMMER HANDLE	97403 13214E1213-1		1	*	*	*	*	*		
0056	0				SCREW, CAP, HEXAGON HEAD: SLEDGE HAMMER										
0057	0				BRACKET AND SPRING CLIP MTG, 1/4-20 X 3/4 IN. LG	96069 MS90725-6		3	*	*	*	*	*		
0058	0				WASHER, FLAT: SLEDGE HAMMER BRACKET, SPRING CLIP AND GROUND ROD CLAMP MTG	96906 MS27183-10		10	*	*	*	*	*		
0059	0				NUT, SELF-LOCKING, HEXAGON: SLEDGE HAMMER										
0060	0				BRACKET, SPRING CLIP AND GROUND ROD										
0061	0				CLAMP MTG	96906 MS51922-1		7	*	*	*	*	*		
0062	X20				CLAMP ASSEMBLY, GROUND ROD	97403 13212E3617		2	*	*	*	*	*		
0063	0				SCREW, MACHINE: GROUND ROD CLAMP MTG	96906 MS35190-289		4	*	*	*	*	*		

LINE NO.	SOURCE CODES		FEDERAL STOCK NUMBER	DESCRIPTION	UNIT OF ISSUE	QTY INCORPORATED IN UNIT	GUIDE QTY(S) PER MAJ EQUIPS					ILLUST		
	MATERIAL	MAINT					RECOVERABILITY	15 DAYS MAINTENANCE			DEPOT MAINT		FIGURE NO.	ITEM NO.
								ORGANIZATION	DS	GS				
			CODE	PART NO.	1-5	6-10	100 EQUIPMENTS							
0057	0		5340-526-2559	CLAMP, CUSHIONED: GROUND WIRE	96906	MS21919F2	2	*	*	*	*	*		
0058	0		5305-984-6211	SCREW, MACHINE: GROUND WIRE CLAMP MTG	96906	MS35206-264	2	*	*	*	*	*		
0059	0		5310-809-8546	WASHER, FLAT: GROUND WIRE CLAMP MTG	96906	MS27183-8	4	*	*	*	*	*		
0060	0		5310-167-0662	WASHER, LOCK: GROUND WIRE CLAMP MTG	96906	MS35337-43	2	*	*	*	*	*		
0061	0		5310-012-0361	NUT, PLAIN, HEXAGON: GROUND WIRE CLAMP MOUNTING	96906	MS35649-102	2	*	*	*	*	*		
0062	X20		5307-722-9437	STUD: GROUND	97403	13214E1223	1	*	*	*	*	*		
0063	X20			WASHER, LOCK: BRONZE, EXTERNAL TOOTH, 3/8 IN., GROUND STUD	96906	MS35335-91	2	*	*	*	*	*		
0064	0		5310-720-8531	NUT, PLAIN, HEXAGON: BRASS GROUND STUD TO TRAILER	96906	MS35691-611	2	*	*	*	*	*		
0065	X20		5310-900-6323	WASHER, FLAT: BRASS, .390 ID, GROUND STUD	96906	MS45901-7	4	*	*	*	*	*		
0066	0		5310-720-8528	NUT, PLAIN, HEXAGON: BRASS GROUND STUD	96906	MS35690-611	1	*	*	*	*	*		
0067	0		5310-543-4717	NUT, PLAIN, WING: BRASS, GROUND STUD	96906	MS35425-28	1	*	*	*	*	*		
0068				1507 - LANDING GEAR, LEVELING JACKS (MECHANICAL OR HYDRAULIC)										
0069	X20		2590-318-6691	LEG ASSEMBLY, TRAILER PROP	97403	13214E1206	1	*	*	*	*	*		
0070	X20			BRACKET	97403	13214E1207	1	*	*	*	*	*		
0071	X20			LEG ASSEMBLY, UPPER	97403	13214E1208	1	*	*	*	*	*		
0072	X20			CHAIN: PIN RETAINING	97403	13214E1208-6	1	*	*	*	*	*		
0073	X20			PIN	97403	13214E1208-5	1	*	*	*	*	*		
0074	X20			LEG, BASE	97403	13214E1212	1	*	*	*	*	*		
0075	X20			SHAFT	97403	13214E1209	1	*	*	*	*	*		
0076	0		4730-172-0049	FITTING, LUBRICATION	96906	MS15006-1	1	*	*	*	*	*		
0077	X20			SCREW	97403	13214E1210	1	*	*	*	*	*		
0078	X20			NUT	97403	13214E1211	1	*	*	*	*	*		
0079	X20			RIVET, SOLID, UNIVERSAL HEAD: 1/4 IN. DIA, 2 IN. LG	96906	MS20613-8P32	1	*	*	*	*	*		
0080	X20			PIN, COTTER: 1/8 IN. DIA, 3/4 IN. LG	96906	MS24665-351	1	*	*	*	*	*		
0081	X20			SCREW, CAP, HEXAGON HEAD: LEG ASSEMBLY TO TRAILER, 3/8-16 X 1 1/4 IN. LG	96906	MS90725-62	3	*	*	*	*	*		
0082	0		5310-809-4061	WASHER, FLAT: LEG ASSEMBLY TO TRAILER	96906	MS27183-15	6	*	*	*	*	*		
0083	0		5310-087-4652	NUT, SELF-LOCKING, HEXAGON: LEG ASSEMBLY TO TRAILER	96906	MS51922-17	3	*	*	*	*	*		
0084				GROUP 18 - BODY, CAB, HOOD AND HULL										
0085				1810 - CARGO BODY (DUMP, STAKE, AND PLATFORM)										
0086	X2F		2330-141-8050	TRAILER: M105 MODIFIED	97403	13214E1221-1	1		*	*	*	*		
0087				GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS										
0088				2202 - ACCESSORY ITEMS										
0089	X20		7240-222-3088	CAN, GASOLINE: MILITARY, 5 GAL			6	*	*	*	*	*	7-2	3
0090	X20		2910-066-1235	ADAPTER ASSEMBLY, FUEL DRUM	97403	13211E7541	2	*	*	*	*	*		
0091	X20			PIPE	97403	13211E7543	2	*	*	*	*	*		
0092	X20			WASHER, BRASS	97403	13211E7544	2	*	*	*	*	*		
0093	X20			SCREW, SHOULDER	97403	13211E7545	4	*	*	*	*	*		
0094	X20			RING, SEALING	97403	13211E7546	2	*	*	*	*	*		
0095	X20			WASHER, RUBBER	97403	13211E7547	2	*	*	*	*	*		
0096	X20			HEAD	97403	13211E7548	2	*	*	*	*	*		
0097	X20			WASHER, STEEL	97403	13200E6361	2	*	*	*	*	*		
0098	X20			CLAMP	97403	13200E6363	2	*	*	*	*	*		
0099	0		5310-209-1239	WASHER, LOCK: SHOULDER SCREW	96906	MS35335-60	4	*	*	*	*	*		
0100	X20			PIPE, EXTENSION	97403	13211E7542	2	*	*	*	*	*		
0101	0		4730-278-3357	ADAPTER, STRAIGHT: HOSE			2	*	*	*	*	*		
0102				2210 - DATA PLATES AND INSTRUCTION HOLDERS										
0103	X2F		9905-577-4219	PLATE, DATA: CORPS OF ENGINEERS TYPE A	97403	13212E3599	1		*	*	*	*		
0104	F		5310-058-2950	WASHER, LOCK: DATA PLATE MTG	96906	MS35337-77	4		*	*	*	*		
0104A	X2F		5305-058-2088	SCREW, TAPPING, THREAD FORMING: DATA PLATE MTG No. 2-32 X 1 1/4 IN. LG			4		*	*	*	*		
0105				GROUP 40 - ELECTRIC MOTORS AND GENERATORS										
0106				4000 - MAJOR ASSEMBLAGE										
0107	X2FR		6115-074-8830	GENERATOR, GASOLINE ENGINE DRIVEN: 5 KW, MIL-G-5279			1		*	*	*	*	7-2	4
0108	X2F		5310-520-3091	WASHER, BEVELED: GENERATOR FRAME TO TRAILER	97403	13206E4482-2	4		*	*	*	*		
0109	X2F		5305-782-9495	SCREW, CAP, HEXAGON HEAD: GENERATOR FRAME TO TRAILER, 1/2-13 X 1 1/4 IN. LG	96906	MS90725-111	4		*	*	*	*		

LINE NO.	SOURCE CODES			FEDERAL STOCK NUMBER	DESCRIPTION	UNIT OF ISSUE	QTY INCORPORATED IN UNIT	GUIDE QTY(S) PER MAJ EQUIPS						ILLUST		
	MATERIAL	SOURCE	MAINT					15 DAYS MAINTENANCE					DEPOT MAINT	FIGURE NO.	ITEM NO.	
								ORGANIZATION	DS	GS						
MANUFACTURER'S		CODE	PART NO.													
0110	X2F			SPACER, SHIM	97403	13214E1222-4		4			*	*	*			
0111	X2F			NUT, SELF-LOCKING, HEXAGON: GENERATOR FRAME TO TRAILER	96906	MS51922-33		4			*	*	*			
0112				4019 - RADIO INTERFERENCE SUPPRESSION												
0113	M O			WIRE, GROUND: GENERATOR TO GROUND STUD				1							7-2 5	
0114	P O	6145-299-6188		MANUFACTURE FROM: WIRE (LENGTH AS REQUIRED)			FT		SEE GRP 9501							
0115				GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS												
0116				7603 - FIRE EXTINGUISHERS												
0117	P10	4210-555-8873		EXTINGUISHER, FIRE				1	*	*	*	*	*	*	7-2 6	
0118	X20	5305-068-0502		SCREW, CAP, HEXAGON HEAD: EXTINGUISHER MTG, 1/4-20 X 3/4 IN. LG	96906	MS90725-6		4	*	*	*	*	*	*		
0119	O	5310-809-4058		WASHER, FLAT: EXTINGUISHER MTG	96906	MS27183-10		8	*	*	*	*	*	*		
0120	O	5310-088-1251		NUT, SELF-LOCKING, HEXAGON: EXTINGUISHER MOUNTING	96906	MS51922-1		4	*	*	*	*	*	*		
0121				GROUP 95 - GENERAL USE STANDARDIZED PARTS												
0122				9501 - BULK MATERIAL												
0123	P O	8305-267-3009		WEBBING, NYLON	06716	1403	FT		*	*	*	*	*	*		
0124	P O	6145-299-6188		WIRE, ELECTRICAL			FT		*	*	*	*	*	*		

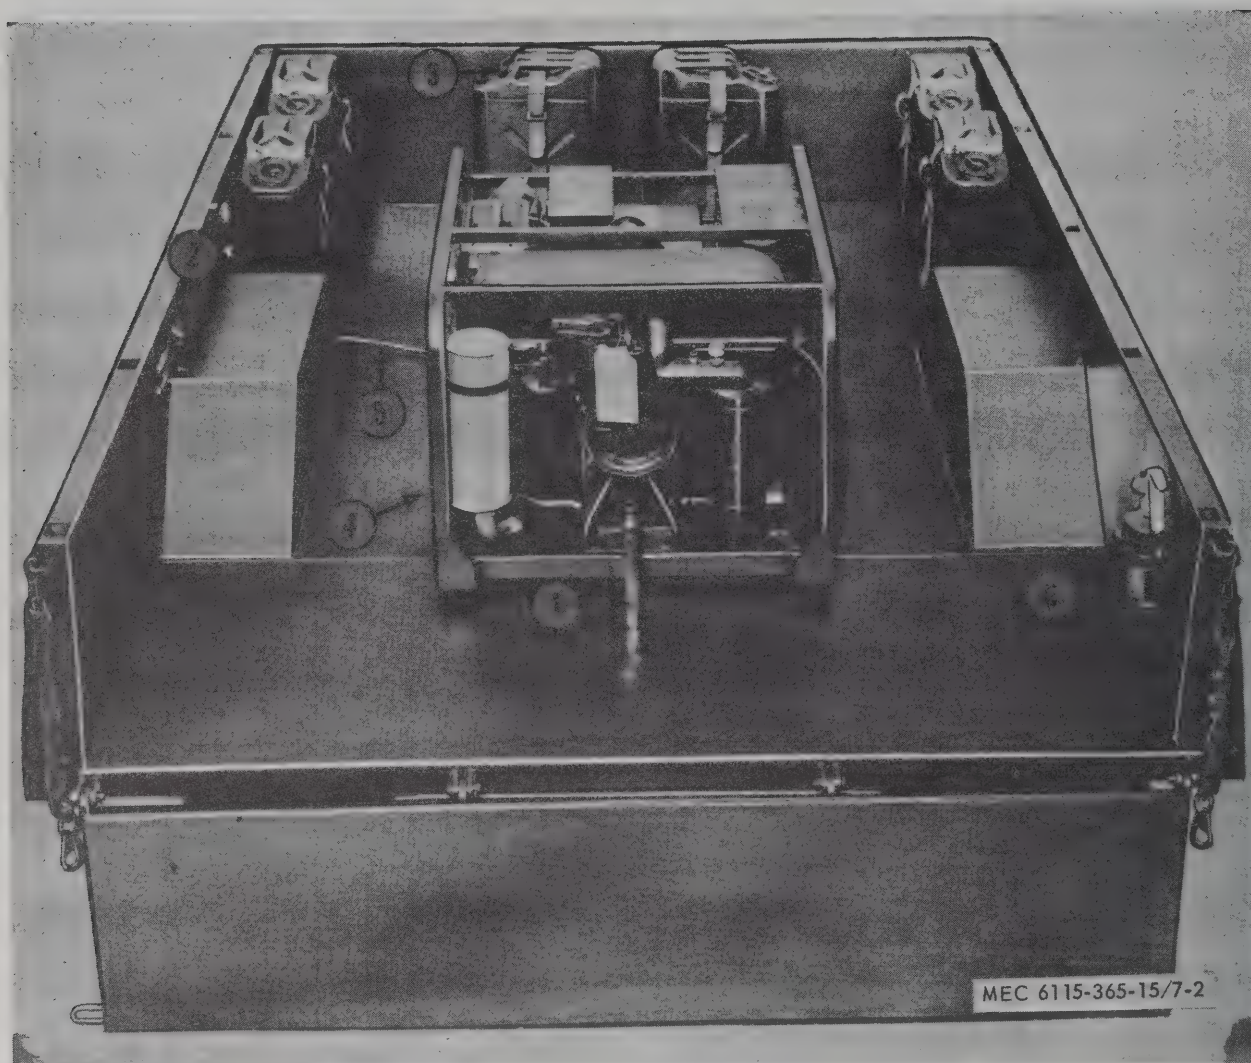

- 1 Hose
- 2 Clamp
- 3 Can

- 4 Generator
- 5 Wire
- 6 Extinguisher

Figure 7-2. Accessories.

CHAPTER 8

GENERATOR SETS PU-236/G AND PU-236A/G

Section I. DESCRIPTION AND DATA

8-1. Description

a. General. A 5-kw, 60-cycle, gasoline engine-driven generator, mounted on a two-wheeled, box type, steel body, 1½-ton capacity, model M105-A-2, M105-E-3, or Model M105-A-1 cargo trailer, comprise Generator Sets PU-236/G and PU-236A/G.

b. Function. The PU-236/G and PU-236A/G provide a trailer-mounted source of 5-kw, 120/240-volt, 60-cycle, single-phase ac power for various radio sets.

c. Difference in Models. The PU-236/G uses a PU-58/G generator (O'Keefe and Merritt, Number 1000-36), driven by a Willys Overland model MB-441 engine. The PU-236A/G uses either a Kurtz and Root generator, model XP536, or a Master Vibrator generator model EG144.


d. Generator. For description and further information about units having Master Electric Company style 224936, type AG generator and/or Master Vibrator generator set model EG-144 refer to applicable technical manual, as shown on nameplate or in DA Pam 310-4. For units having a Kurtz and Root Company model XP536 generator and/or Hol-Gar model CE-52M-AC generator set refer to applicable technical manuals, as shown on nameplate or in DA Pam 310-4.

e. Engine. For description and further information on sets using Aerojet General Corporation model 305665 engine refer to applicable technical manual, as shown on nameplate or in DA Pam 310-4. Applicable technical manuals, as shown on nameplate or in DA Pam 310-4, describe and provide instructions for sets equipped with Continental Engine model NS56.

f. Power Unit. For description and additional information on PU-58/G refer to applicable technical manual, as shown on generator set nameplate or in DA Pam 310-4.

g. Trailer. For description and further trailer information refer to applicable technical manual, as shown on trailer nameplate or in DA Pam 310-4.

h. Lubrication. Lubricate the trailer as prescribed in applicable lubrication order, as shown in DA Pam 310-4. Lubrication order, as shown in DA Pam 310-4, contains instructions for lubrication of the Hol-Gar model CE-52M-AC Generator Set. Lubricate Master Vibrator model EG-144 generator set in accordance with instructions outlined in applicable lubrication order, as shown in DA Pam 310-4. Lubricate Aerojet General Corporation model 305665 engine as directed by applicable lubrication order, as shown in DA Pam 310-4. Refer to applicable technical manual, as shown in DA Pam 310-4, and figure 16 for lubricating instructions for the PU-58/G power unit.

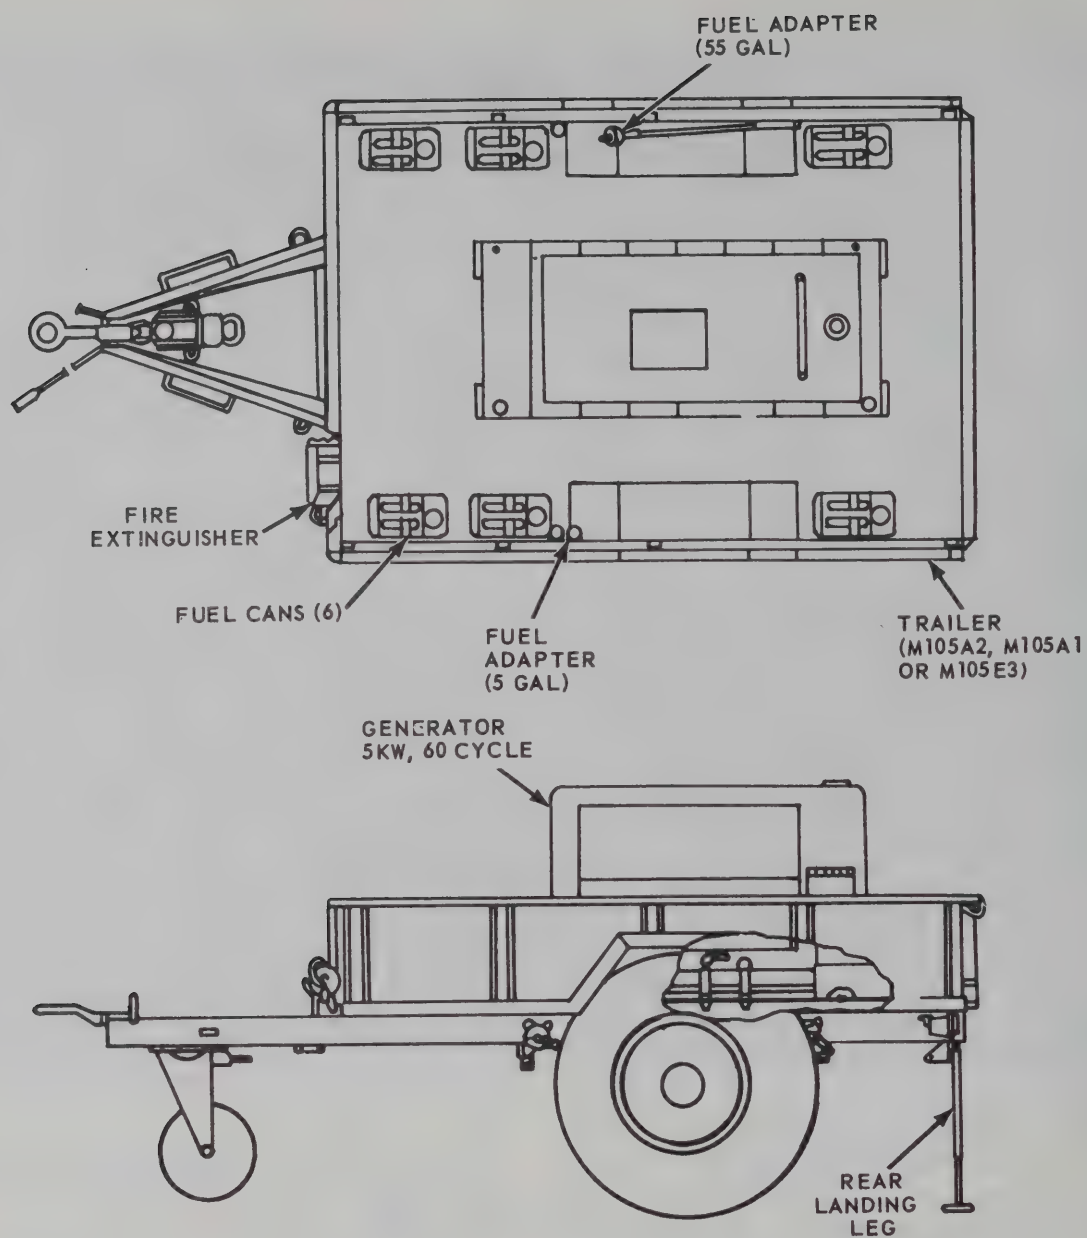

MEC 6115-365-15/8-1

Figure 8-1. Generator Set PU-236A/G.

Section II. REPAIR PARTS LIST

TM 5-6115-365-15

LINE NO.	SOURCE CODES			FEDERAL STOCK NUMBER	DESCRIPTION	UNIT OF ISSUE	QTY INCORPORATED IN UNIT	GUIDE QTY(S) PER MAJ EQUIPS					ILLUST	
	MATERIAL	SOURCE	MAINT					RECOVERABILITY	15 DAYS MAINTENANCE			DEPOT MAINT	FIGURE NO.	ITEM NO.
									ORGANIZATION	DS	GS			
					MANUFACTURER'S			1-5	6-10	100 EQUIPMENTS				
					CODE	PART NO.								
0001					SECTION II - REPAIR PARTS LIST									
0002					GROUP 15 - FRAME, TOWING ATTACHMENTS, AND DRAWBARS									
0003					1501 - FRAME ASSEMBLY									
0004	X20	2510-706-4504			BRACKET ASSEMBLY, FUEL CAN	97403 13214E1203	6	*	*	*	*	*		
0005					GROUP 18 - BODY, CAB, HOOD AND HULL									
0006					1810 - CARGO BODY (DUMP, STAKE, AND PLATFORM)									
0007	X2F	2330-835-8631			TRAILER, CARGO: M105E3 MODIFIED		1			*	*	*		
0008					GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS									
0009					2202 - ACCESSORY ITEMS									
0010	X20	7240-222-3088			CAN, GASOLINE: MILITARY, 5 GAL		6	*	*	*	*	*		
0011	X20	6115-379-3991			ADAPTER KIT, FUEL DRUM: 55 GAL		1	*	*	*	*	*		
0012	X20	7240-177-6154			TUBE: FLEXIBLE NOZZLE		1	*	*	*	*	*		
0013					GROUP 40 - ELECTRIC MOTORS AND GENERATORS									
0014					4000 - GENERATOR SET									
0015	X2FR	6115-635-8590			GENERATOR SET, GASOLINE ENGINE DRIVEN: 5 KW		1			*	*	*		
0016					GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS									
0017					7603 - FIRE EXTINGUISHERS									
0018	P10	4210-555-8837			EXTINGUISHER, FIRE		1	*	*	*	*	*		

CHAPTER 9

GENERATOR SET PU-401/M

Section I. DESCRIPTION AND DATA

9-1. Description

a. General. A diesel engine-driven, 45-kw, 400-cycle, ac generator, mounted on a two-wheeled, flat-bed steel body, 2½-ton capacity, model M-200A1 trailer comprise the Generator Set PU-401/M.

b. Function. The PU-401/M Generator Set is part of Defense System, Antiaircraft AN/MSG-4. The unit is a mobile source of 400-cycle power for the Weapons Monitoring Center, the Radar Processing Center, and the Maintenance Van.

c. Generator Sets. For description and further information on Stewart and Stevenson sets, model 52300, refer to applicable technical manual, as shown on generator set nameplates, or in DA Pam 310-4. See applicable technical manuals, as shown on generator set nameplates or DA Pam 310-4, for description and further information on Consolidated Diesel model 4060 Generator Sets.

d. Generators. For repair parts information on sets having General Electric Company model No. 5SJ1006A3 Generators, refer to applicable technical

manuals, as shown on nameplates or in DA Pam 310-4.

e. Engine. Applicable technical manual, as shown on nameplates or in DA Pam 310-4, contains description and maintenance instructions for the Cummins model J1S-600 diesel engines.

f. Trailer. For description and further trailer information refer to applicable technical manual, as shown on trailer nameplate or in DA Pam 310-4.

g. Lubrication. Applicable lubrication order, as shown in DA Pam 310-4, contains lubrication instructions for Consolidated Diesel model 4060 diesel engine-driven generators. Refer to applicable lubrication order, as shown in DA Pam 310-4, for lubricating instructions for Stewart and Stevenson model 52300 diesel engine-driven generators. Cummins model J1S-600 diesel engine lubricating instructions are contained within applicable lubrication order, as shown in DA Pam 310-4. Refer to applicable technical manual, as shown in DA Pam 310-4, for trailer lubrication information.

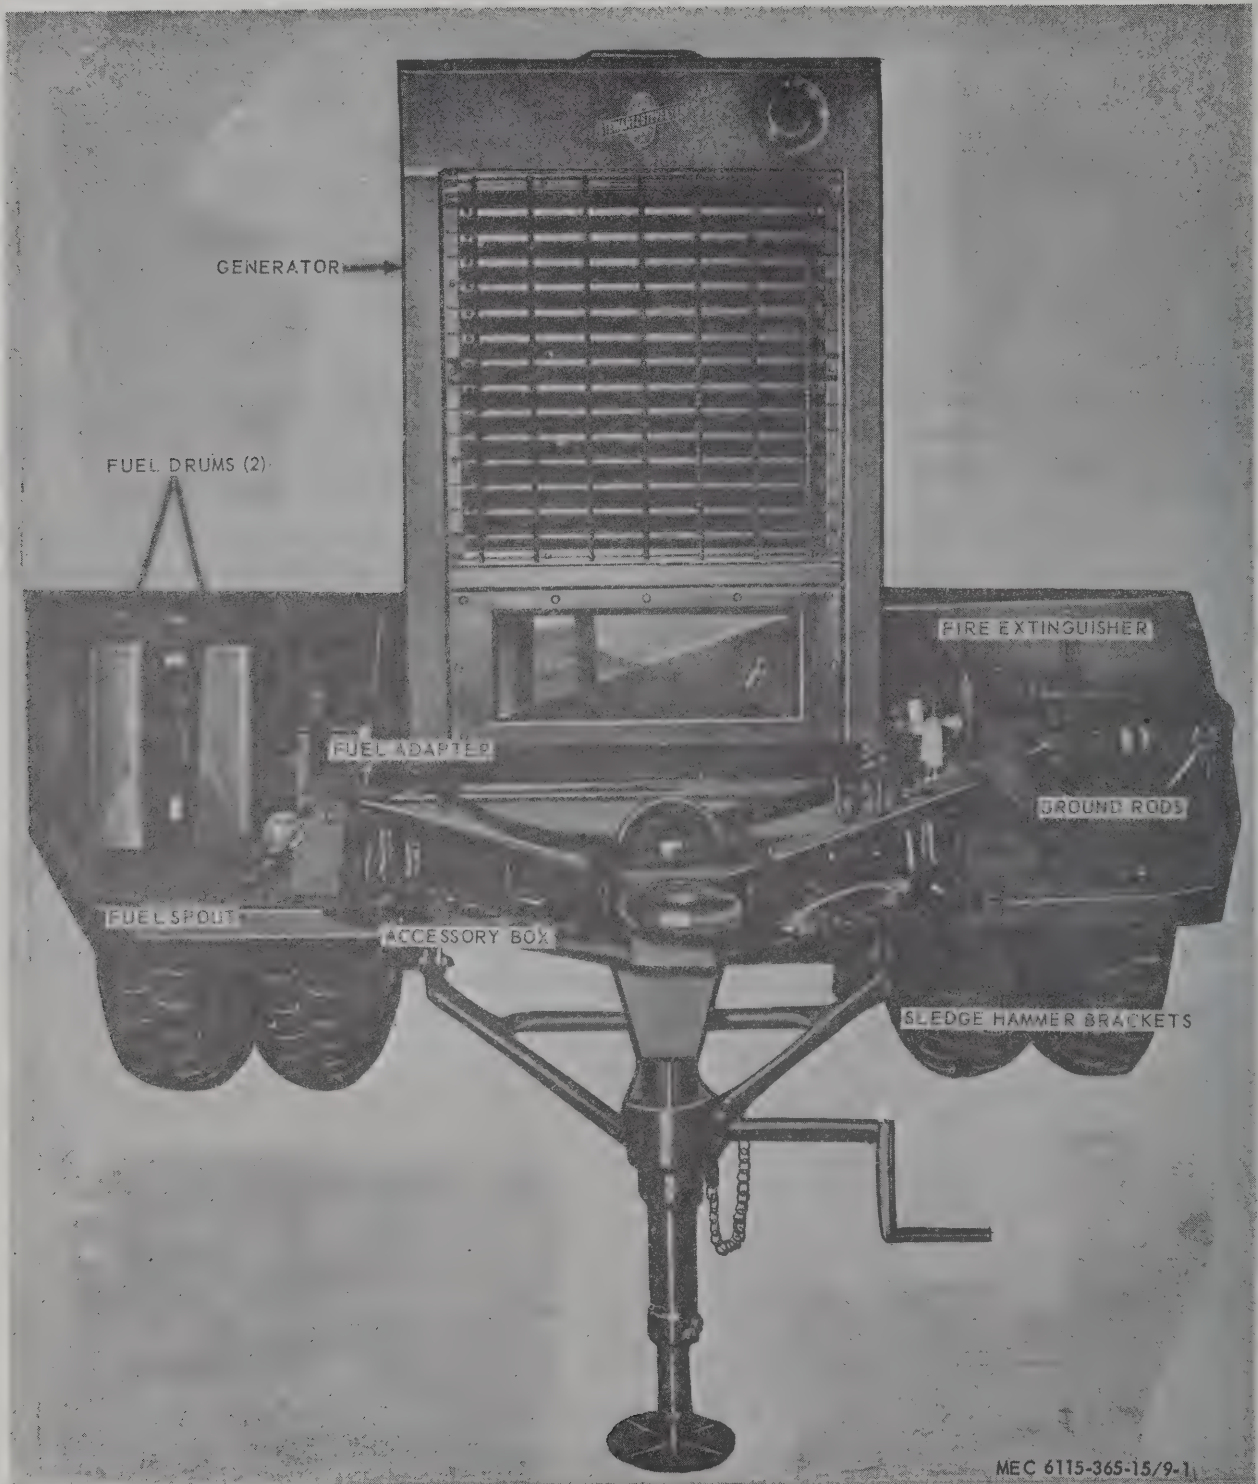


Figure 9-1. Generator Set PU-401/M.


Section II. REPAIR PARTS LIST

TM 5-6115-365-15

LINE NO.	SOURCE CODES			FEDERAL STOCK NUMBER	DESCRIPTION	UNIT OF ISSUE	QTY INCORPORATED IN UNIT	GUIDE QTY(S) PER MAJ EQUIPS						ILLUST	
	MATERIAL	SOURCE	MAINT RECOVERABILITY					15 DAYS MAINTENANCE			DEPOT MAINT	FIGURE NO.	ITEM NO.		
								ORGANIZATION	DS	GS					
						1-5	6-10	100 EQUIPMENTS							
0002					GROUP 15 - FRAME, TOWING ATTACHMENTS, AND DRAWBARS										
0003					1501 - FRAME ASSEMBLY										
0004	X20			2590-473-6331	BRACKET, LIQUID CONTAINER, FUEL CAN	97403	13214E1203	2	*	*	*	*	*	9-2 1	
0005	X20				BRACKET	97403	13214E1204	2	*	*	*	*	*		
0006	X20				BUCKLE	96906	MS51940-7	2	*	*	*	*	*		
0007	X20				FASTENER	97403	13214E1205	2	*	*	*	*	*		
0008	X20				HOOK, DRIP RAIL	97403	13212E3616	2	*	*	*	*	*		
0009	M 0				STRAP, BOTTOM	97403	13214E1203-3	2							
0010	P 0			8305-267-3009	MANUFACTURE FROM: WEBBING, NYLON (18 IN. REQUIRED FOR EACH STRAP)	06716	1403	FT	SEE	GRP	9501				
0011	M 0				STRAP, TOP	97403	13214E1203-2	2							
0012	P 0			8305-267-3009	MANUFACTURE FROM: WEBBING, NYLON (18 IN. REQUIRED FOR EACH STRAP)	06716	1403	FT	SEE	GRP	9501				
0013	0			5310-984-3806	NUT, SELF-LOCKING, HEXAGON: FUEL CAN										
0014	X20			5305-225-8499	BRACKET MTO	96906	MS51922-9	8	*	*	*	*	*		
0015	0			5310-081-4219	BOLT, MACHINE: FUEL CAN BRACKET MTO	96906	MS90725-34	8	*	*	*	*	*		
0016	X20				WASHER, FLAT: FUEL CAN BRACKET MTO	96906	MS27183-12	8	*	*	*	*	*		
0017	X20				BRACKET, MOUNTING, GROUND ROD	97403	13214E1288	1	*	*	*	*	*		
0018	X20				BRACKET, GROUND ROD	14850	A116-726	1	*	*	*	*	*		
0019	X20				HOLDER, GROUND ROD	14850	D116-125Y	1	*	*	*	*	*		
0020	X20			5310-081-4219	SCREW, CAP, HEXAGON HEAD: GROUND ROD MTO	96906	MS90725-33	2	*	*	*	*	*		
0021	X20			5310-984-3806	WASHER, FLAT: GROUND ROD MTO	96906	MS27183-12	2	*	*	*	*	*		
0022	X20				NUT, SELF-LOCKING: GROUND ROD MTO	96906	MS51922-9	2	*	*	*	*	*		
0023	X20				BRACKET, DOUBLE ANGLE, SLEDGE HAMMER	97403	13214E1214	1	*	*	*	*	*		
0024	X20				BRACKET, SLEDGE HAMMER	14850	A116-740Y	1	*	*	*	*	*		
0025	X20			5340-914-2578	HOLDER, SLEDGE HAMMER	14850	D116-741X	1	*	*	*	*	*		
0026	0			5310-088-1251	CLIP, SPRING TENSION: SLEDGE HAMMER										
0027	0			5305-068-0502	BRACKET	97403	13214E1213-1	1	*	*	*	*	*		
0028	0			5310-809-4058	NUT, SELF-LOCKING, HEXAGON: SLEDGE HAMMER	96906	MS51922-1	3	*	*	*	*	*		
0029	X20			5307-722-9437	BRACKET MTO	96906	MS90725-6	3	*	*	*	*	*		
0030	0			5310-720-8530	SCREW, CAP, HEXAGON HEAD: SLEDGE HAMMER	96906	MS27183-10	3	*	*	*	*	*		
0031	0			5310-543-4717	BRACKET MTO	96906	MS90725-34	1	*	*	*	*	*		
0032	X20			5310-900-6323	WASHER, FLAT: SLEDGE HAMMER BRACKET MTO	96906	MS35691-611	3	*	*	*	*	*		
0033	X20				STUD, CONTINUOUS THREAD, GROUND WIRE	96906	MS35425-28	1	*	*	*	*	*		
0034	X20			5975-878-3791	NUT, PLAIN, HEXAGON: GROUND STUD	96906	MS45901-7	4	*	*	*	*	*		
0035					WASHER, LOCK, FLAT, EXTERNAL TOOTH:										
0036					GROUND STUD, PHOSPHOR BRONZE, 3/8 ID. ROD, GROUND	96906	MS35335-91 TYPE11STYLE2	1	*	*	*	*	*		
0037	X20			6115-705-4604				1	*	*	*	*	*		
0038	0			5310-984-3806				1	*	*	*	*	*		
0039	X20			5306-225-8499	GROUP 18 - BODY, CAB, HOOD AND HULL										
0040	0			5310-081-4219	1808 - STOWAGE RACKS, BOXES, STRAPS, CARRYING CASES, CABLE REELS, HOSE REELS, ETC.										
0041															
0042	X2FR			2330-331-2307	BOX, ACCESSORY, STOWAGE	97403	13214E1273	1	*	*	*	*	*	9-2 3	
0043					NUT, SELF-LOCKING, HEXAGON: ACCESSORY										
0044					BOX MTO	96906	MS51922-9	2	*	*	*	*	*		
0045	X20			6145-189-6695	BOLT, MACHINE: ACCESSORY BOX MTO	96906	MS90725-34	2	*	*	*	*	*		
0046	X20			7040-222-3088	WASHER, FLAT: ACCESSORY BOX MTO	96906	MS27183-12	2	*	*	*	*	*		
0047	X20			7240-177-6154											
0048	X20			2910-066-1235	1810 - CARGO BODY (DUMP, STAKE, AND PLATFORM)										
0049	X20														
0050	X20				CHASSIS, TRAILER: MODEL M200A1	97403	13214E1257	1			*	*	*		
0051	X20				GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS										
0052	X20				2202 - ACCESSORY ITEMS										
0053	X20														
0054	X20			6145-189-6695	CABLE ASSEMBLY, POWER	97403	13214E1275	1	*	*	*	*	*		
0055	X20			7040-222-3088	LEAD, GROUND			1	*	*	*	*	*		
0056	X20			7240-177-6154	CAN, GASOLINE, MILITARY: 5 GAL	97403	13211E7541	2	*	*	*	*	*	9-2 2	
0057	X20			2910-066-1235	SPOUT, CAN, FLEXIBLE	96906	MILS1235	1	*	*	*	*	*		
0058	X20				ADAPTER, ASSEMBLY, FUEL DRUM	97403	13211E7543	1	*	*	*	*	*		
0059	X20				PIPE	97403	13211E7544	1	*	*	*	*	*		
0060	X20				WASHER, BRASS	97403	13211E7545	2	*	*	*	*	*		
0061	X20				SCREW, SHOULDER	97403	13211E7545	2	*	*	*	*	*		
0062	X20				RING, SEALING	97403	13211E7546	1	*	*	*	*	*		

LINE NO.	SOURCE CODES			FEDERAL STOCK NUMBER	DESCRIPTION	UNIT OF ISSUE	QTY INCORPORATED IN UNIT	GUIDE QTY(S) PER MAJ EQUIPS						ILLUST	
	MATERIAL	SOURCE	MAINT RECOVERABILITY					15 DAYS MAINTENANCE			DEPT MAINT	FIGURE NO.	ITEM NO.		
								ORGANIZATION	DS	GS					
														1-5	6-10
					CODE	PART NO.									
0054	X20				WASHER, RUBBER	97403	13211E7547	1	*	*	*	*	*	*	
0055	X20				HEAD	97403	13211E7548	1	*	*	*	*	*	*	
0056	X20				WASHER, STEEL	97403	13200E6861	1	*	*	*	*	*	*	
0057	X20				CLAMP	97403	13200E6363	1	*	*	*	*	*	*	
0058	O			5310-209-1239	WASHER, LOCK	96906	MS35355-60	1	*	*	*	*	*	*	
0059	X20				PIPE, EXTENSION	97403	13211E7542	1	*	*	*	*	*	*	
0060	O			4730-278-3357	ADAPTER, STRAIGHT: HOSE			1	*	*	*	*	*	*	
0061					2210 - DATA PLATES AND INSTRUCTION HOLDERS										
0062	X20				NAMEPLATE: ACCESSORY BOX	14850	D900-468X	1	*	*	*	*	*	*	
0063	X20				NAMEPLATE: FIRE EXTINGUISHER	14850	D9-284-3	2	*	*	*	*	*	*	
0064	X20				NAMEPLATE: GROUND ROD	14850	D9-28A2	1	*	*	*	*	*	*	
0065	X20				NAMEPLATE: GROUND ROD	14850	D9-11A	1	*	*	*	*	*	*	
0066	X20				PLATE, IDENTIFICATION: POWER UNIT	97403	13212E3599	1	*	*	*	*	*	*	
0067	X20				NAMEPLATE: SLEDGE HAMMER	14850	D9-28A1	1	*	*	*	*	*	*	
0068	X20				NAMEPLATE, IDENTIFICATION: DISTRIBUTION BOX	97403	13214E1284	1	*	*	*	*	*	*	
0069	X20				NAMEPLATE: WIRING DIAGRAM	97403	13214E1283	1	*	*	*	*	*	*	
0070	X20			5305-058-2088	SCREW, TAPPING, THREAD FORMING: NAMEPLATE MTG	96906	MS24622-3	2	*	*	*	*	*	*	
0071	X20				SCREW, TAPPING: PAN HEAD, NAMEPLATE MTG, No. 4-24, 1/4 IN. LG	96906	MS24622-8	8	*	*	*	*	*	*	
0072	X20				SCREW, TAPPING: PAN HEAD, NAMEPLATE MTG, No. 4, 5/16 IN. LG	96906	MS24646-9	14	*	*	*	*	*	*	
0073					GROUP 40 - ELECTRIC MOTORS AND GENERATORS										
0074					4000 - MAJOR ASSEMBLAGE										
0075	X2FR			6115-823-2217	GENERATOR SET, DIESEL ENGINE TRAILER MOUNTED	97403	13214E1255	1			*	*	*	*	9-2 5
0076	X2F			5306-180-0094	BOLT, MACHINE: AIRCRAFT, 5/8-18, 1 1/16 IN. LG. GENERATOR MTG	88044	AN10-14A	4			*	*	*	*	
0077	X2F			5310-269-4040	NUT, SELF-LOCKING, HEXAGON: GENERATOR MOUNTING	96906	MS51922-49	4			*	*	*	*	
0078	X2F				WASHER, BEVELED: GENERATOR MTG	97403	13206E4482-3	4			*	*	*	*	
0079	F			5310-823-8803	WASHER, FLAT: GENERATOR MTG	96906	MS27183-21	4			*	*	*	*	
0080					4019 - RADIO INTERFERENCE SUPPRESSION										
0081	M O				WIRE, ELECTRICAL: GENERATOR TO GROUND STUD	81349	QQW-343	1							
0082	P O			6145-857-6903	MANUFACTURE FROM: WIRE, ELECTRICAL (LENGTH AS REQUIRED)			FT	SEE	GRP 9501					
0083					GROUP 42 - ELECTRICAL EQUIPMENT										
0084					4201 - TRANSFORMER, POWER LINE OR DISTRIBUTION										
0085	X20				DISTRIBUTION BOX ASSEMBLY	97403	13214E1276-1	1	*	*	*	*	*	*	
0086	X20				BOX: DISTRIBUTION	97403	13214E1277	1	*	*	*	*	*	*	
0087	X20				TERMINAL BOARD: DISTRIBUTION	97403	13214E1278	1	*	*	*	*	*	*	
0088	X20			5305-068-0502	SCREW, CAP, HEXAGON HEAD: TERMINAL BOARD MTG	96906	MS90725-6	6	*	*	*	*	*	*	
0089	X20			5310-809-4058	WASHER, FLAT: TERMINAL BOARD MTG	96906	MS27183-10	4	*	*	*	*	*	*	
0090	X20			5310-088-1251	NUT, SELF-LOCKING, HEXAGON: TERMINAL BOARD MTG	96906	MS51922-1	6	*	*	*	*	*	*	
0091	X20				STUD, SHOULDER: DISTRIBUTION BOX MTG	97403	13214E1279-3	4	*	*	*	*	*	*	
0092	X20			5310-900-6323	WASHER, FLAT: DISTRIBUTION BOX MTG	96906	MS45901-7	20	*	*	*	*	*	*	
0093	X20			5310-576-0548	WASHER, LOCK: DISTRIBUTION BOX MTG	96906	MS35337-103	12	*	*	*	*	*	*	
0094	X20			5310-685-2632	NUT, PLAIN, HEXAGON: DISTRIBUTION BOX MOUNTING	96906	MS35691-612	16	*	*	*	*	*	*	
0095	X20				PANEL	97403	13214E1280	1	*	*	*	*	*	*	
0096	X20				SCREW, MACHINE: PAN HEAD, PANEL MTG	96906	MS35206-278	8	*	*	*	*	*	*	
0097	X20				NAMEPLATE: DISTRIBUTION BOX	97403	13214E1284	1	SEE	GRP 2210					
0098	X20				CABLE ASSEMBLY: DISTRIBUTION BOX	97403	13214E1282-1	1	*	*	*	*	*	*	
0099	X20				CABLE ASSEMBLY: DISTRIBUTION BOX	97403	13214E1282-2	1	*	*	*	*	*	*	
0100	X20				SCREW, MACHINE: PAN HEAD, No. 10-32 5/8 IN. LG	96906	MS35207-264	8	*	*	*	*	*	*	
0101	X20			5310-809-8546	WASHER, FLAT	96906	MS27183-8	8	*	*	*	*	*	*	
0102	X20			5310-754-2004	WASHER, LOCK	96906	MS35337-102	8	*	*	*	*	*	*	
0103	X20			5310-012-0614	NUT, PLAIN, HEXAGON	96906	MS35650-102	8	*	*	*	*	*	*	
0104	X20				NAMEPLATE: WIRING DIAGRAM	97403	13214E1283	1	SEE	GRP 2210					
0105	X20				CONNECTOR AND LOCKNUT	97403	13212E3582-3	1	*	*	*	*	*	*	
0106	X20				COVER, ELECTRICAL CONNECTOR	96906	MS17349368	2	*	*	*	*	*	*	

LINE NO.	SOURCE CODES			FEDERAL STOCK NUMBER	DESCRIPTION	UNIT OF ISSUE	QTY INCORPORATED IN UNIT	GUIDE QTY(S) PER MAJ EQUIPS						ILLUST		
	MATERIAL SOURCE	MAINT	RECOVERABILITY					15 DAYS MAINTENANCE			DEPOT MAINT			FIGURE NO.	ITEM NO.	
								ORGANIZATION	DS	GS						
																1-5
MANUFACTURER'S		CODE	PART NO.													
0107				GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS												
0108				7603 - FIRE EXTINGUISHERS												
0109	P10	4210-555-8837		EXTINGUISHER, FIRE, MONOBROMOTRIFLUOROMETHANE	96906 MILE52031		1	*	*	*	*	*	*			
0110	X20	6115-606-9938		BRACKET, FIRE EXTINGUISHER (USED WITH FIRE EXTINGUISHER STOCK No. 4210-555-8837)	14850 D443C		1	*	*	*	*	*	*			9-2
0111	X20	5305-068-0502		SCREW, CAP, HEXAGON HEAD: EXTINGUISHER MTG, 1/4-20, 3/4 IN. LG	96906 MS90725-6		4	*	*	*	*	*	*			
0112	0	5310-809-4058		WASHER, FLAT: EXTINGUISHER MTG	96906 MS27183-10		8	*	*	*	*	*	*			
0113	0	5310-088-1251		NUT, SELF-LOCKING, HEXAGON: EXTINGUISHER	96906 MS51922-1		8	*	*	*	*	*	*			
0114	0	4210-202-7858		EXTINGUISHER, FIRE, CARBON DIOXIDE	96906 MILE468		1	*	*	*	*	*	*			
0115	X20	6115-606-9338		BRACKET, FIRE EXTINGUISHER (USED WITH FIRE EXTINGUISHER STOCK No. 4210-202-7858)			1	*	*	*	*	*	*			
0116				GROUP 95 - GENERAL USE STANDARDIZED PARTS												
0117				9501 - BULK MATERIAL												
0118	P 0	8305-267-3009		WEBBING, NYLON	06716 1403	FT		*	*	*	*	*	*			
0119	P 0	6145-857-6903		WIRE, ELECTRICAL		FT		*	*	*	*	*	*			

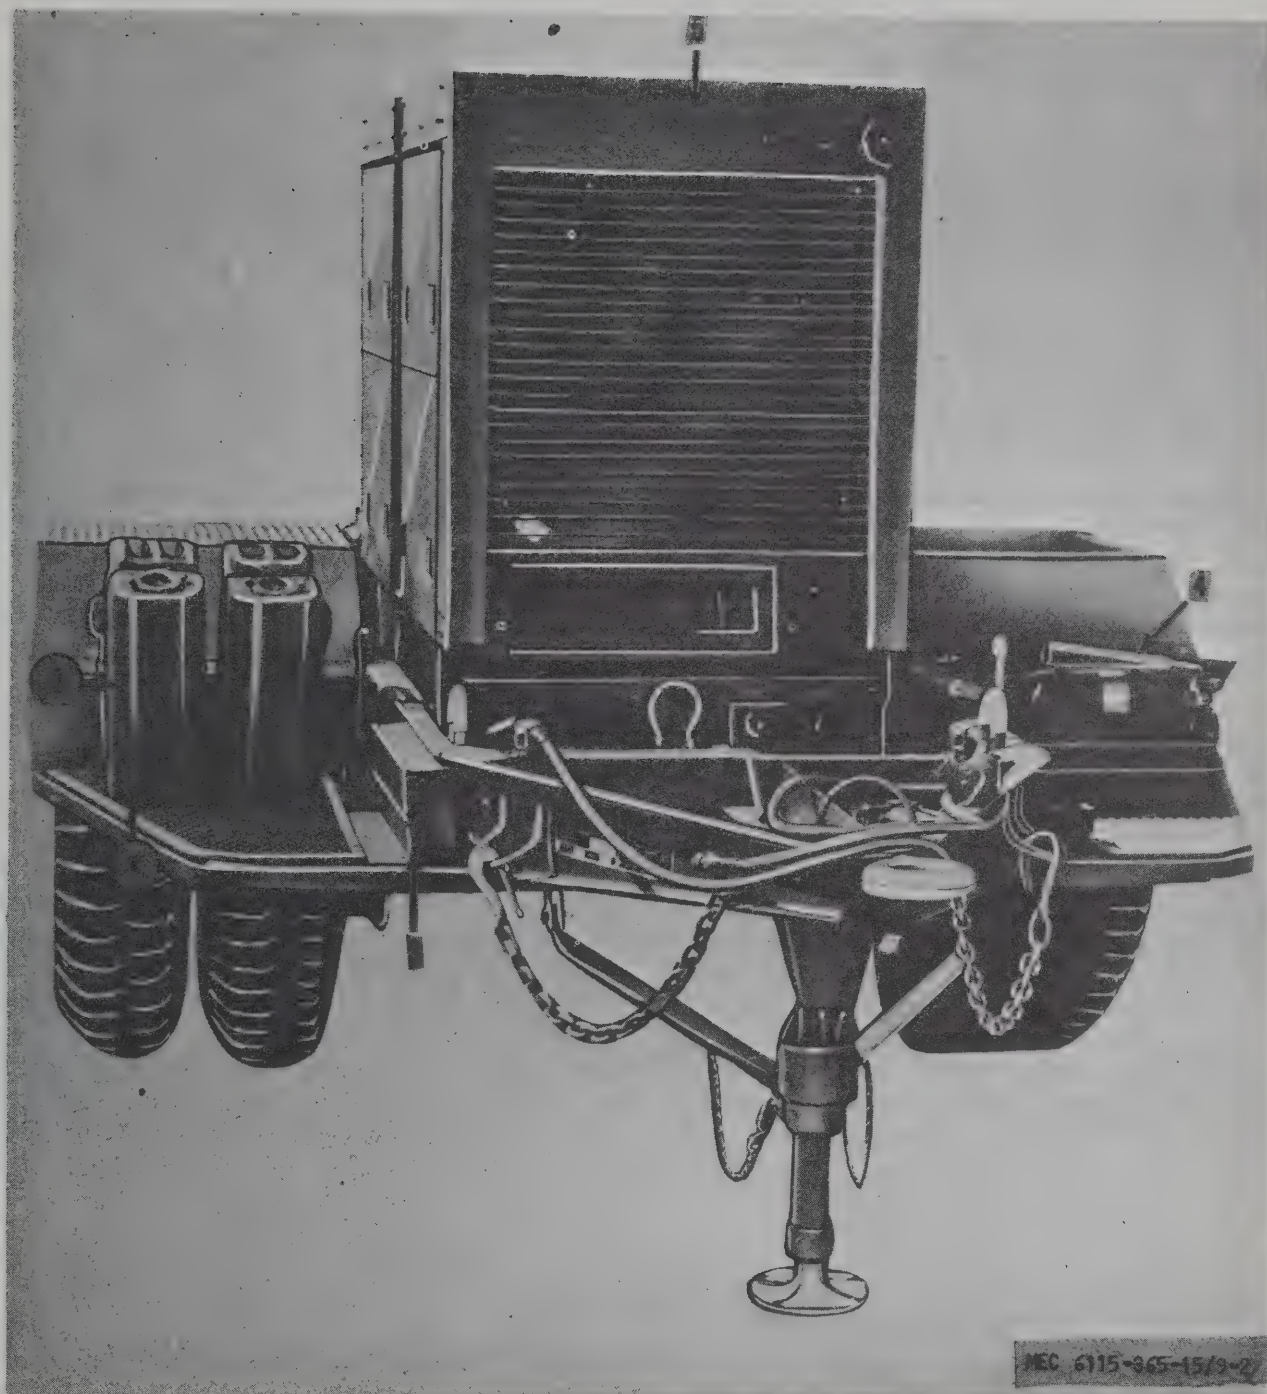

- 1 Bracket
- 2 Box
- 3 Can

- 4 Extinguisher
- 5 Generator

Figure 9-2. Accessories.

CHAPTER 10

GENERATOR SET PU-495/G

Section I. DESCRIPTION AND DATA

10-1. Description

a. General. A 100-kw, 3-phase, 4-wire, 120/208—240/416-volt, 60-cycle, generator reconnectable for 83.3-kw, 50-cycle operation, powered by and directly coupled to a 6-cylinder, 2- or 4-cycle, liquid-cooled diesel engine, with a governed speed of 1800 rpm at 60 cycle and 1500 rpm at 50 cycle; mounted on a M-353 trailer comprise the Generator Set PU-495/G.

b. Function. The PU-495/G Generator Set is a mobile power source which supplies 50- to 60-cycle, 100-kw power with less than 1 percent voltage and frequency regulation.

c. Generator. For units equipped with consolidated Diesel model 4180 generator sets and/or General Electric Company model 58J4445Y2Y10 generators, further information is available in applicable technical manual, as shown on nameplate or in DA Pam 310-4. For further information and description about Consolidated Diesel model 4115 generator sets and/or General Electric Company model 4115-0022 generators refer to applicable technical manuals, as shown on nameplate or in DA Pam 310-4. Applicable technical manuals, as

shown on generator set nameplates or in DA Pam 310-4, contain additional information about Detroit Diesel Generator Sets models 6910 and 6910A and Delco-Remy model 1-4676 generators.

d. Engines. For detailed description and further engine information refer to applicable technical manuals, as shown on nameplate or in DA Pam 310-4, for Detroit Diesel models 6910, 6910A series 6-71 engines, Continental Motors engine model SD802, spec 6001, and Continental Motors model SD802 engine.

e. Trailer. For description and further information about the M-353 trailer, refer to applicable technical manual, as shown on trailer nameplate or in DA Pam 310-4.

f. Lubrication. Lubricate Detroit Diesel generator sets, models 6910 and 6910A, as directed by applicable lubrication order, as shown in DA Pam 310-4. Applicable lubrication orders, as shown in DA Pam 310-4, contain lubricating instructions for Consolidated Diesel models 4115 and 4180 generator sets. Lubricate the M-353 trailer as outlined in applicable lubrication order, as shown in DA Pam 310-4.

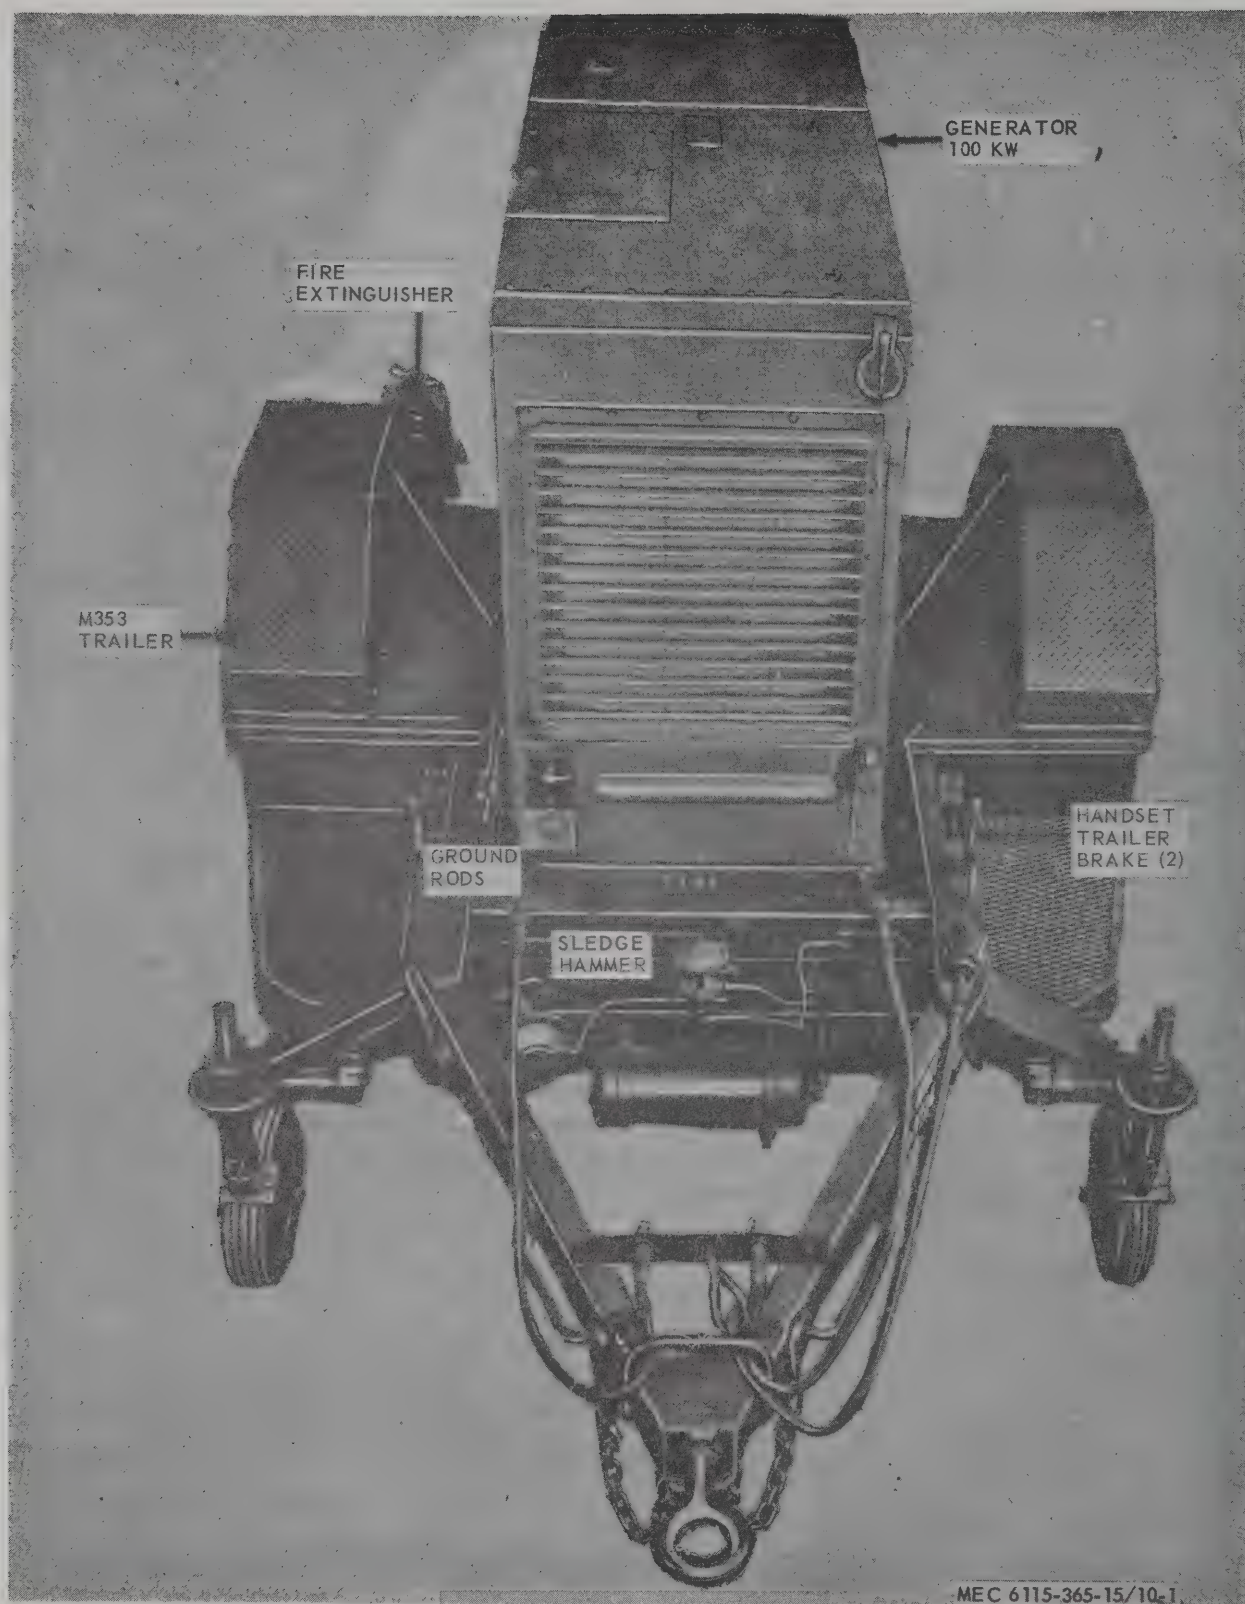


Figure 10-1. Generator Set PU-495/G.

Section II. REPAIR PARTS LIST

LINE NO.	SOURCE CODES			FEDERAL STOCK NUMBER	DESCRIPTION	UNIT OF ISSUE	QTY INCORPORATED IN UNIT	GUIDE QTY(S) PER MAJ EQUIPS						ILLUST	
	MATERIAL SOURCE	BAINT	RECOVERABILITY					15 DAYS MAINTENANCE			DEPOT MAINT	FIGURE NO.	ITEM NO.		
								ORGANIZATION	DS	GS					
			MANUFACTURER'S												
			CODE	PART NO.											
					1-5	6-10	100 EQUIPMENTS								
0001					SECTION II - REPAIR PARTS LIST										
0002					GROUP 15 - FRAME, TOWING ATTACHMENTS, AND DRAWBARS										
0003					1501 - FRAME ASSEMBLY										
0004	X20				BRACKET, MOUNTING, GROUND ROD	97403	13214E1288	1	*	*	*	*	*	*	
0005	X20				BRACKET	14850	A116-726	1	*	*	*	*	*	*	
0006	X20				HOLDER	14850	D116-125Y	1	*	*	*	*	*	*	
0007	X20				SCREW, CAP, HEXAGON HEAD: GROUND ROD MTG	96906	MS90725-33	2	*	*	*	*	*	*	
0008	O			5310-081-4219	WASHER, FLAT: GROUND ROD MTG	96906	MS27183-12	2	*	*	*	*	*	*	
0009	O			5310-984-3806	NUT, SELF-LOCKING, HEXAGON: GROUND ROD MOUNTING	96906	MS51922-9	2	*	*	*	*	*	*	
0010	X20				BRACKET, DOUBLE ANGLE, SLEDGE HAMMER	97403	13214E1214	1	*	*	*	*	*	*	
0011	X20				BRACKET	14850	A116-740Y	1	*	*	*	*	*	*	
0012	X20				HOLDER	14850	D116-741X	1	*	*	*	*	*	*	
0013	X20			5340-914-2578	CLIP, SPRING TENSION: SLEDGE HAMMER BRACKET	97403	13214E1213-1	1	*	*	*	*	*	*	
0014	O			5310-088-1251	NUT, SELF-LOCKING, HEXAGON: SLEDGE HAMMER BRACKET MTG	96906	MS51922-1	3	*	*	*	*	*	*	
0015	O			5305-068-0502	SCREW, CAP, HEXAGON HEAD: SLEDGE HAMMER BRACKET MTG	96906	MS90725-6	3	*	*	*	*	*	*	
0016	O			5310-809-4858	WASHER, FLAT: SLEDGE HAMMER BRACKET MTG	96906	MS27183-10	3	*	*	*	*	*	*	
0017	X20			5307-722-9437	STUD, CONTINUOUS THREAD: GROUND WIRE	97430	13214E1223	1	*	*	*	*	*	*	
0018	O			5310-720-8530	NUT, PLAIN, HEXAGON: GROUND STUD	96906	MS35691-611	3	*	*	*	*	*	*	
0019	O			5310-543-4717	NUT, PLAIN, WING: GROUND STUD	96906	MS35425-28	1	*	*	*	*	*	*	
0020	O			5310-900-6323	WASHER, FLAT: GROUND STUD	96906	MS45901-7	4	*	*	*	*	*	*	
0021	X20				WASHER, LOCK, FLAT, EXTERNAL TOOTH: GROUND STUD, BRONZE 3/8 IN. ID	96906	MS35335-91	1	*	*	*	*	*	*	
0022	X20			5975-878-3791	ROD, GROUND			1	*	*	*	*	*	*	
0023					GROUP 18 - BODY, CAB, HOOD AND HULL										
0024					1808 - STOWAGE RACKS, BOXES, STRAPS, CARRYING CASES, CABLE REELS, HOSE REELS, ETC.										
0025	X20			6115-705-4604	BOX, ACCESSORY, STOWAGE	97403	13214E1273	1	*	*	*	*	*	*	
0026	O			5310-984-3806	NUT, SELF-LOCKING, HEXAGON: ACCESSORY BOX MTG	96906	MS51922-9	2	*	*	*	*	*	*	
0027	O			5306-225-8499	BOLT, MACHINE: ACCESSORY BOX MTG	96906	MS90725-34	2	*	*	*	*	*	*	
0028	O			5310-081-4219	WASHER, FLAT: ACCESSORY BOX MTG	96906	MS27183-12	2	*	*	*	*	*	*	
0029					1810 - CARGO BODY (DUMP, STAKE, AND PLATFORM)										
0030	X2FR			2330-542-2831	CHASSIS, TRAILER	97403	13214E1314	1			*	*	*		
0031					GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS										
0032					2202 - ACCESSORY ITEMS										
0033	X20			7240-177-6159	SPOUT, CAN, FLEXIBLE	96906	MILS1235	1	*	*	*	*	*	*	
0034	X20			2910-066-1235	ADAPTER ASSEMBLY, FUEL DRUM	97403	13211E7541	1	*	*	*	*	*	*	
0035					2210 - DATA PLATES AND INSTRUCTION HOLDERS										
0036	X2F			9905-577-4219	PLATE, DATA: CORPS OF ENGINEERS, TYPE A	97403	13212E1399	1			*	*	*		
0037	F			5310-058-2950	WASHER, LOCK: DATA PLATE MTG	96906	MS35337-77	4			*	*	*		
0038	F			5305-058-2088	SCREW, TAPPING, THREAD FORMING: DATA PLATE MTG			4			*	*	*		
0039					GROUP 40 - ELECTRIC MOTORS AND GENERATORS										
0040					4000 - MAJOR ASSEMBLAGE										
0041	X2FR			6115-752-1588	GENERATOR SET, DIESEL ENGINE: 100 KW			1			*	*	*		
0042	F			5306-180-0094	BOLT, MACHINE: GENERATOR MTG	88044	AN10-14A	4			*	*	*		
0043	F			5310-269-4044	NUT, SELF-LOCKING, HEXAGON: GENERATOR MOUNTING	96906	MS51922-49	4			*	*	*		
0044	X2F				WASHER, BEVELED: GENERATOR MTG	97403	13206E4482-3	4			*	*	*		
0045	F			5310-823-8803	WASHER, FLAT: GENERATOR MTG	96906	MS27183-21	4			*	*	*		
0046					4019 - RADIO INTERFERENCE SUPPRESSION										
0047	M O				WIRE, ELECTRICAL: GENERATOR TO GROUND STUD	81349	QQW343	1							
0048	P O			6145-857-6903	MANUFACTURE FROM: WIRE, ELECTRICAL (LENGTH AS REQUIRED)			FT			SEE GRP 9501				

LINE NO.	SOURCE CODES			FEDERAL STOCK NUMBER	DESCRIPTION	UNIT OF ISSUE	QTY INCORPORATED IN UNIT	GUIDE QTY(S) PER MAJ EQUIPS						ILLUST		
	MATERIEL	SOURCE	MAINT					RECOVERABILITY	15 DAYS MAINTENANCE				DEPOT MAINT	FIGURE NO.	ITEM NO.	
									ORGANIZATION		DS	GS				
									1-5	6-10						100 EQUIPMENTS
MANUFACTURER'S		CODE	PART NO.													
0049					GROUP 76 = FIRE FIGHTING EQUIPMENT COMPONENTS											
0050					7603 = FIRE EXTINGUISHERS											
0051	P O	4210-270-4512			EXTINGUISHER, FIRE		1	*	*	*	*	*	*			
0052	X20	4210-268-9729			BRACKET, FIRE EXTINGUISHER	97403 13214E1235	1	*	*	*	*	*	*			
0053	0	5306-225-8497			SCREW, CAP, HEXAGON HEAD; BRACKET MTO	96906 MS90725-32	1	*	*	*	*	*	*			
0054	0	5310-081-4219			WASHER, FLAT; BRACKET MTO	96906 MS27183-12	1	*	*	*	*	*	*			
0055	0	5310-984-3806			NUT, SELF-LOCKING, HEXAGON; BRACKET MTO	96906 MS51922-9	1	*	*	*	*	*	*			
0056					GROUP 95 = GENERAL USE STANDARDIZED PARTS											
0057					9501 = BULK MATERIAL											
0058	P O	6145-857-6903			WIRE, ELECTRICAL	FT		*	*	*	*	*	*			

CHAPTER 11

GENERATOR SETS PU-332/G AND PU-332A/G

Section I. DESCRIPTION AND DATA

11-1. Description

a. General. A 10-kw, 60-cycle, ac generator directly coupled to a 4-cylinder, 20-hp, water or air-cooled gasoline engine, mounted on a 2-wheeled, box type steel body, $\frac{3}{4}$ -ton capacity, model M101 trailer, comprise the general purpose Generator Sets PU-332/G and PU-332A/G.

b. Difference in Models. The PU-332A/G unit has a Military Standard, model SF-10-MD, air-cooled, 10-kw, 60-cycle, 120/208-volt, 3-wire generator powered by a Military Standard gasoline engine model 4A0482. The PU-332/G unit does not have a Military Standard generator and engine.

c. Generator. For description and further generator information refer to applicable technical manual, as shown on nameplates or in DA Pam 310-4, for Military Standard model SF-10-MD and Bogue Electric Company model 5660.

d. Power Units. For description and further information for sets equipped with PE-95 power units

refer to applicable technical manuals, as shown on generator set nameplates or in DA Pam 310-4.

e. Engines. Applicable technical manuals, as shown on nameplates or in DA Pam 310-4, contain descriptive and additional information about sets furnished with model 4A084-11 Military Standard engines. For additional information about sets equipped with Willys Overland model CJ-3a engines refer to applicable technical manual, as shown on nameplate or in DA Pam 310-4.

f. Trailer. For further trailer information refer to applicable technical manual, as shown on trailer nameplate or in DA Pam 310-4.

g. Lubrication. Lubricate the trailer as outlined in applicable lubrication order, as shown in DA Pam 310-4. Applicable lubrication order, as shown in DA Pam 310-4, contains instructions for lubricating the Military Standard engines model 4A084-11. Lubricate power unit PE-95 as instructed in applicable lubrication order, as shown in DA Pam 310-4.

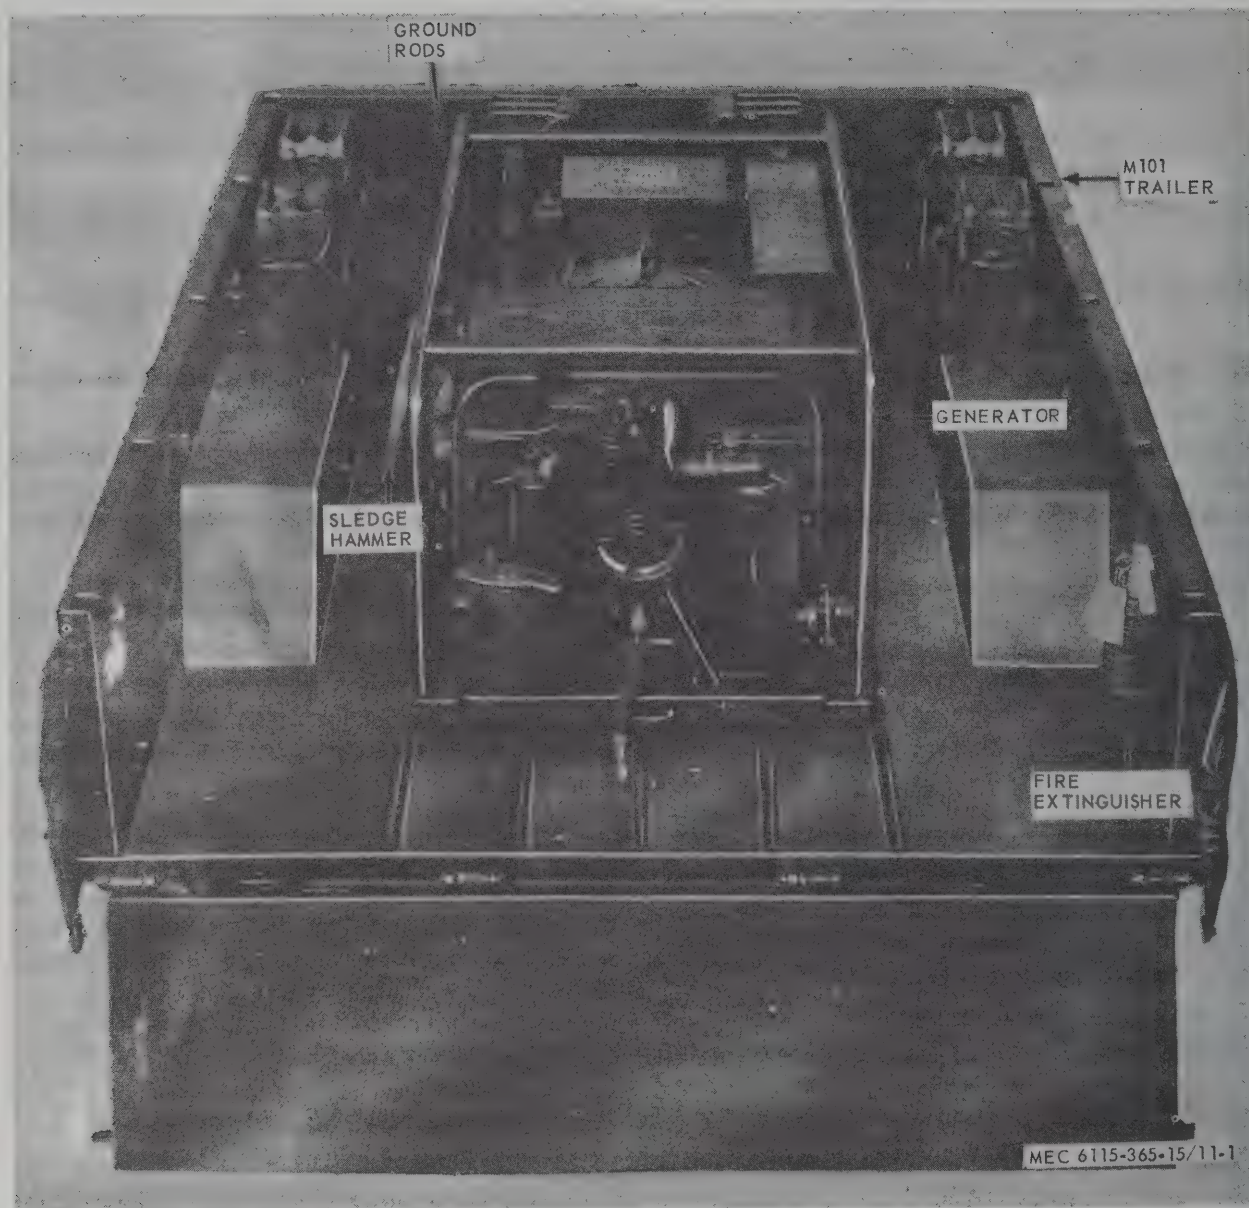



Figure 11-1. Generator Set PU-332A/G.

Section II. REPAIR PARTS LIST

LINE NO.	SOURCE CODES			FEDERAL STOCK NUMBER	DESCRIPTION	UNIT OF ISSUE	QTY INCORPORATED IN UNIT	GUIDE QTY(S) PER MAJ EQUIPS						ILLUST	
	MATERIAL SOURCE	MAINT	RECOVERABILITY					15 DAYS MAINTENANCE			DEPOT MAINT			FIGURE NO.	ITEM NO.
								ORGANIZATION	DS	GS					
					MANUFACTURER'S										
					CODE	PART NO.									
0002					GROUP 01 - ENGINE										
0003					0106 - ENGINE LUBRICATION SYSTEM										
0004	X20			4730-278-3888	REDUCER BUSHING: 3/4-14 NPTF EXTERNAL THREAD X 1/2-14 NPTF INTERNAL THREAD, OIL DRAIN	81343 SAEJ530	1	*	*	*	*	*	*		
0005	X20			4720-913-6422	HOSE, OIL DRAIN	97403 1321E4910	1	*	*	*	*	*	*	11-2	2
0006	0			4730-766-7908	UNION, FLARED TUBE, BULKHEAD: OIL DRAIN	88044 AN832-10	1	*	*	*	*	*	*		
0007	0			5310-059-6372	WASHER, LOCK: OIL DRAIN HOSE UNION	96906 MS35337-52	1	*	*	*	*	*	*		
0008	0			5310-282-7822	NUT, UNION: OIL DRAIN HOSE	88044 AN924-10	1	*	*	*	*	*	*		
0009					GROUP 04 - EXHAUST SYSTEM										
0010					0401 - MUFFLER AND PIPES										
0011	X20			6115-914-0258	HOSE ASSEMBLY, METAL	97403 13212E3620	1	*	*	*	*	*	*		
0012	X20				CLAMP, EXHAUST TUBE SECURING	97403 13213E3622	1	*	*	*	*	*	*		
0013	0			5310-209-5306	WASHER, LOCK	96906 MS35337-24	1	*	*	*	*	*	*		
0014	0			5310-012-0614	NUT, PLAIN, HEXAGON	96906 MS35650-102	1	*	*	*	*	*	*		
0015	0			5305-043-6755	SCREW, MACHINE	96906 MS35226-68	1	*	*	*	*	*	*		
0016	0			5310-550-0777	NUT, PLAIN, HEXAGON: HOOK	96906 MS35690-402	2	*	*	*	*	*	*		
0017					GROUP 15 - FRAME, TOWING ATTACHMENTS, AND DRAWBARS										
0018					1501 - FRAME ASSEMBLY										
0019	X20			2510-706-4504	BRACKET ASSEMBLY, FUEL CAN	97403 13214E1203	6	*	*	*	*	*	*		
0020	X20				HOOK, DRIP RAIL: STRAP	97403 13212E3616	6	*	*	*	*	*	*		
0021	X20				FASTENER	97403 13214E1205	6	*	*	*	*	*	*		
0022	X20				BUCKLE	96906 MS51940-7	12	*	*	*	*	*	*		
0023	M 0				STRAP: TOP	97403 13214E1203-2	6								
					MANUFACTURE FROM:										
0024	P 0			8305-267-3009	WEBBING, NYLON (30 IN. REQUIRED FOR EACH STRAP)	06716 1403	FT	SEE	GRP	9501					
0025	M 0				STRAP: BOTTOM	97403 13214E1203-3	6								
					MANUFACTURE FROM:										
0026	P 0			8305-267-3009	WEBBING, NYLON (18 IN. REQUIRED FOR EACH STRAP)	06716 1403	FT	SEE	GRP	9501					
0027	X20				BRACKET	97403 13214E1204	6	*	*	*	*	*	*		
0028	X20				SCREW, CAP, HEXAGON HEAD: FUEL CAN										
					BRACKET MTG, 3/8-16 X 7/8 IN. LG	96906 MS90725-59	24	*	*	*	*	*	*		
0029	0			5310-809-4061	WASHER, FLAT: FUEL CAN BRACKET MTG	96906 MS27183-15	24	*	*	*	*	*	*		
0030	0			5310-087-4652	NUT, SELF-LOCKING, HEXAGON: FUEL CAN										
					BRACKET MTG	96906 MS51922-17	24	*	*	*	*	*	*		
0031	X20				LOOP, STRAP FASTENER: FUEL CAN	96906 MS51939-2	4	*	*	*	*	*	*		
0032	0			5305-984-6211	SCREW, MACHINE: LOOP MTG	96906 MS35206-264	8	*	*	*	*	*	*		
0033	0			5310-809-8546	WASHER, FLAT: LOOP MTG	96906 MS27183-8	8	*	*	*	*	*	*		
0034	0			5310-167-0662	WASHER, LOCK: LOOP MTG	96906 MS35337-43	8	*	*	*	*	*	*		
0035	0			5310-102-0361	NUT, PLAIN, HEXAGON: LOOP MTG	96906 MS35649-102	8	*	*	*	*	*	*		
0036	0			5310-984-3806	NUT, SELF-LOCKING, HEXAGON: ADAPTER										
					HOLDER MTG	96906 MS51922-9	4	*	*	*	*	*	*		
0037	X20			6115-016-2362	HOLDER: FUEL DRUM ADAPTER EXTENSION	97403 1321E4889-1	4	*	*	*	*	*	*		
0038	0			5305-889-3000	SCREW, MACHINE: EXTENSION HOLDER MTG	96906 MS35206-230	8	*	*	*	*	*	*		
0039	0			5310-082-1404	WASHER, FLAT: EXTENSION HOLDER MTG	96906 MS27183-6	8	*	*	*	*	*	*		
0040	0			5310-013-1181	WASHER, LOCK: EXTENSION HOLDER MTG	96906 MS35337-22	8	*	*	*	*	*	*		
0041	0			5310-062-0912	NUT, PLAIN, HEXAGON: EXTENSION HOLDER										
					MOUNTING	96906 MS35649-64	8	*	*	*	*	*	*		
0042	X20			7240-920-5327	HOLDER, SPOUT	97403 1321E3553-1	2	*	*	*	*	*	*		
0043	0			5306-225-8497	BOLT, MACHINE: ADAPTER HOLDER MTG, 5/16-18 X 3/4 IN. LG										
					WASHER, FLAT: ADAPTER HOLDER MTG	96906 MS90725-32	4	*	*	*	*	*	*		
0044	0			5310-081-4219	BRACKET, DOUBLE ANGLE	97403 13214E1214	1	*	*	*	*	*	*		
0045	X20				BRACKET	97403 13214E1215	1	*	*	*	*	*	*	11-2	3
0046	X20				NUT, PLAIN, WING	96906 MS35425-39	2	*	*	*	*	*	*		
0047	0			5310-012-6177	PLATE, HOLD DOWN	97403 13214E1216	1	*	*	*	*	*	*		
0048	X20				WASHER, FLAT	96906 MS27183-10	2	*	*	*	*	*	*		
0049	0			5310-012-0392	WASHER, LOCK	96906 MS35337-82	2	*	*	*	*	*	*		
0050	0			5310-043-5862	CLIP, SPRING TENSION: SLEDGE HAMMER										
0051	X20			5340-914-2578	HANDLE	97403 13214E1213-1	1	*	*	*	*	*	*		
0052	0			5305-068-0502	SCREW, CAP, HEXAGON HEAD: SLEDGE HAMMER										
					BRACKET AND SPRING CLIP MTG	96906 MS90725-6	3	*	*	*	*	*	*		
0053	0			5310-809-4058	WASHER, FLAT: SLEDGE HAMMER BRACKET, SPRING CLIP AND GROUND ROD CLAMP MTG	96906 MS27183-10	10	*	*	*	*	*	*		

LINE NO.	SOURCE CODES			FEDERAL STOCK NUMBER	DESCRIPTION	UNIT OF ISSUE	QTY IN UNIT	GUIDE QTY(S) PER MAJ EQUIPS					ILLUSTR	
	MATERIAL	SOURCE	MAINT					15 DAYS MAINTENANCE			DEPOT MAINT	FIGURE NO.	ITEM NO.	
								ORGANIZATION	DS	GS				
						MANUFACTURER'S		100 EQUIPMENTS						
						CODE	PART NO.	1-5	6-10	100 EQUIPMENTS				
0054			0	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: SLEDGE HAMMER BRACKET, SPRING CLIP AND GROUND ROD CLAMP MTG		96906 MS51922-1 97403 13212E3617	7 2	*	*	*	*	*	*
0055	X20				STRAP, RETAINING		96906 MS35190-289	2	*	*	*	*	*	*
0056	0			5305-958-5246	SCREW, MACHINE: GROUND ROD CLAMP MTG		96906 MS21919F2	2	*	*	*	*	*	*
0057	0			5340-526-2559	CLAMP, CUSHIONED: GROUND WIRE		96906 MS35206-264	2	*	*	*	*	*	*
0058	0			5305-984-6211	SCREW, MACHINE: GROUND WIRE CLAMP MTG		96906 MS27183-8	2	*	*	*	*	*	*
0059	0			5310-809-8546	WASHER, FLAT: GROUND WIRE CLAMP MTG		96906 MS35337-43	2	*	*	*	*	*	*
0060	0			5310-167-0662	WASHER, LOCK: GROUND WIRE CLAMP MTG									
0061	0			5310-012-0361	NUT, PLAIN, HEXAGON: GROUND WIRE CLAMP MOUNTING		96906 MS35649-102 97403 13214E1223	2 1	*	*	*	*	*	*
0062	X20			5307-722-9437	STUD, CONTINUOUS THREAD: GROUND									
0063	X20				WASHER, LOCK: BRONZE EXTERNAL TOOTH, 3/8 IN., GROUND STUD		96906 MS35335-91	2	*	*	*	*	*	*
0064	0			5310-720-8531	NUT, PLAIN, HEXAGON: BRASS, GROUND STUD TO TRAILER		96906 MS35691-611	2	*	*	*	*	*	*
0065	X20			5310-900-6323	WASHER, FLAT: BRASS, GROUND STUD, .390 ID		96906 MS45901-7	2	*	*	*	*	*	*
0066	0			5310-720-8528	NUT, PLAIN, HEXAGON: BRASS, GROUND STUD		96906 MS35690-611	2	*	*	*	*	*	*
0067	0			5310-543-4717	NUT, PLAIN, WING: BRASS, GROUND STUD		96906 MS35425-28	1	*	*	*	*	*	*
0068					1507 - LANDING GEAR, LEVELING JACKS (MECHANICAL OR HYDRAULIC)									
0069	X20			2590-318-6691	LEG ASSEMBLY, TRAILER PROP		97403 13214E1206	1	*	*	*	*	*	*
0070	X20				BRACKET		97403 13214E1207	1	*	*	*	*	*	*
0071	X20				LEG ASSEMBLY, UPPER		97403 13214E1208	1	*	*	*	*	*	*
0072	X20				CHAIN: PIN RETAINING		97403 13214E1208-1	1	*	*	*	*	*	*
0073	X20				PIN		97403 13214E1208-1	1	*	*	*	*	*	*
0074	X20				LEG, BASE		97403 13214E1212	1	*	*	*	*	*	*
0075	X20				SHAFT		97403 13214E1209	1	*	*	*	*	*	*
0076	0			4730-172-0049	FITTING, LUBRICATION		96906 MS15006-1	1	*	*	*	*	*	*
0077	X20				SCREW		97403 13214E1210	1	*	*	*	*	*	*
0078	X20				NUT		97403 13214E1211	1	*	*	*	*	*	*
0079	X20				RIVET, SOLID, UNIVERSAL HEAD: 1/4 IN. DIA, 2 IN. LG		96906 MS20613-8P32	1	*	*	*	*	*	*
0080	X20				PIN, COTTER: 1/8 IN. DIA, 3/4 IN. LG		96906 MS24665-351	1	*	*	*	*	*	*
0081	0			5305-269-3213	SCREW, CAP, HEXAGON HEAD: LEG ASSEMBLY TO TRAILER, 3/8-16 X 1 1/4 IN. LG		96906 MS90725-62	3	*	*	*	*	*	*
0082	0			5310-809-4061	WASHER, FLAT: LEG ASSEMBLY TO TRAILER		96906 MS27183-15	6	*	*	*	*	*	*
0083	0			5310-087-4652	NUT, SELF-LOCKING, HEXAGON: LEG ASSEMBLY TO TRAILER		96906 MS51922-17	3	*	*	*	*	*	*
0084					GROUP 18 - BODY, CAB, HOOD AND HULL									
0085					1801 - BODY, CAB, HOOD, HULL ASSEMBLIES									
0086	X2F			2330-898-6779	TRAILER: M101A1		97403 13214E1225-1	1		*	*	*	*	*
0087					GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS									
0088					2202 - ACCESSORY ITEMS									
0089	X20			2910-066-1235	ADAPTER ASSEMBLY, FUEL TANK		97403 13211E7541	2	*	*	*	*	*	*
0090	X20				PIPE		97403 13211E7543	2	*	*	*	*	*	*
0091	X20				WASHER, BRASS		97403 13211E7544	2	*	*	*	*	*	*
0092	X20				SCREW, SHOULDER		97403 13211E7545	2	*	*	*	*	*	*
0093	X20				RING, SEALING		97403 13211E7546	2	*	*	*	*	*	*
0094	X20				WASHER, RUBBER		97403 13211E7547	2	*	*	*	*	*	*
0095	X20				HEAD		97403 13211E7548	2	*	*	*	*	*	*
0096	X20				WASHER, STEEL		97403 13200E6361	2	*	*	*	*	*	*
0097	X20				CLAMP		97403 13200E6363	2	*	*	*	*	*	*
0098	0			5310-209-1239	WASHER, LOCK: SHOULDER SCREW		96906 MS35335-60	2	*	*	*	*	*	*
0099	X20				PIPE, EXTENSION		97403 13211E7542	2	*	*	*	*	*	*
0100	0			4730-278-3357	ADAPTER, STRAIGHT: HOSE			2	*	*	*	*	*	*
0101	X20			7240-222-3088	CAN, GASOLINE: MILITARY, 5 GAL			6	*	*	*	*	*	*
0102					2210 - DATA PLATES AND INSTRUCTION HOLDERS									
0103	X2F			9905-577-4219	PLATE, DATA: CORPS OF ENGINEER, TYPE A		97403 13212E3599	1		*	*	*	*	*
0104	F			5310-058-2950	WASHER, LOCK: DATA PLATE MTG		96906 MS35337-77	2		*	*	*	*	*
0105	F			5305-058-2088	SCREW, TAPPING, THREAD FORMING: DATA PLATE MTG, No. 2-32 X 1 1/4 IN. LG		96906 MS24622-3	2		*	*	*	*	*

LINE NO.	SOURCE CODES		FEDERAL STOCK NUMBER	DESCRIPTION	UNIT OF ISSUE	QTY INCORPORATED IN UNIT	GUIDE QTY(S) PER MAJ EQUIPS					ILLUST	
	MATERIAL SOURCE	MAINT RECOVERABILITY					15 DAYS MAINTENANCE			DEPOT MAINT	FIGURE NO.	ITEM NO.	
							ORGANIZATION	DS	GS				
		MANUFACTURER'S											
		CODE	PART NO.										
		1-5	6-10	100 EQUIPMENTS									
0106				GROUP 40 - ELECTRIC MOTORS AND GENERATORS									
0107				4000 - MAJOR ASSEMBLAGE									
0108	X2FR		6115-075-1641	GENERATOR SET, GASOLINE ENGINE DRIVEN:									
0109	F		5305-724-5910	10 KW MIL-G-52280		1		*	*	*	11-2	5	
0110	F		5310-823-8803	SCREW, CAP, HEXAGON HEAD: GENERATOR									
0111	X2F			FRAME TO TRAILER, 5/8-11 X									
0112	X2F		5310-269-4040	1 1/2 IN. LG		4		*	*	*			
0113				WASHER, FLAT: GENERATOR FRAME TO									
0114	M O			TRAILER, .656 IN.		8		*	*	*			
0115	P O		6145-299-6188	SPACER, SHIM		4		*	*	*			
0116				NUT, SELF-LOCKING, HEXAGON: GENERATOR									
0117				FRAME TO TRAILER, 5/8-11		4		*	*	*			
0118				4019 - RADIO INTERFERENCE SUPPRESSION									
0119				WIRE, ELECTRICAL: GENERATOR TO		1							
0120				GROUND STUD									
0121				MANUFACTURE FROM:									
0122				WIRE (LENGTH AS REQUIRED)	FT		SEE GRP 9501						
0123				GROUP 76 - FIRE FIGHTING EQUIPMENT									
0124				COMPONENTS									
0125				7603 - FIRE EXTINGUISHERS									
0126	P10		4210-555-8873	EXTINGUISHER, FIRE		1	*	*	*	*	11-2	4	
0127	O		5305-068-0502	SCREW, CAP, HEXAGON HEAD: EXTINGUISHER									
0128				MTG, 1/4-20 X 3/4 IN. LG		4	*	*	*	*			
0129	O		5310-809-4058	WASHER, FLAT: EXTINGUISHER MTG		8	*	*	*	*			
0130	O		5310-088-1251	NUT, SELF-LOCKING, HEXAGON: EXTINGUISHER									
0131				MOUNTING		4	*	*	*	*			
0132				GROUP 95 - GENERAL USE STANDARDIZED									
0133				PARTS									
0134				9501 - BULK MATERIAL									
0135	P O		8305-267-3009	WEBBING, NYLON	FT		*	*	*	*			
0136	P O		6145-299-6188	WIRE, ELECTRICAL	FT		*	*	*	*			

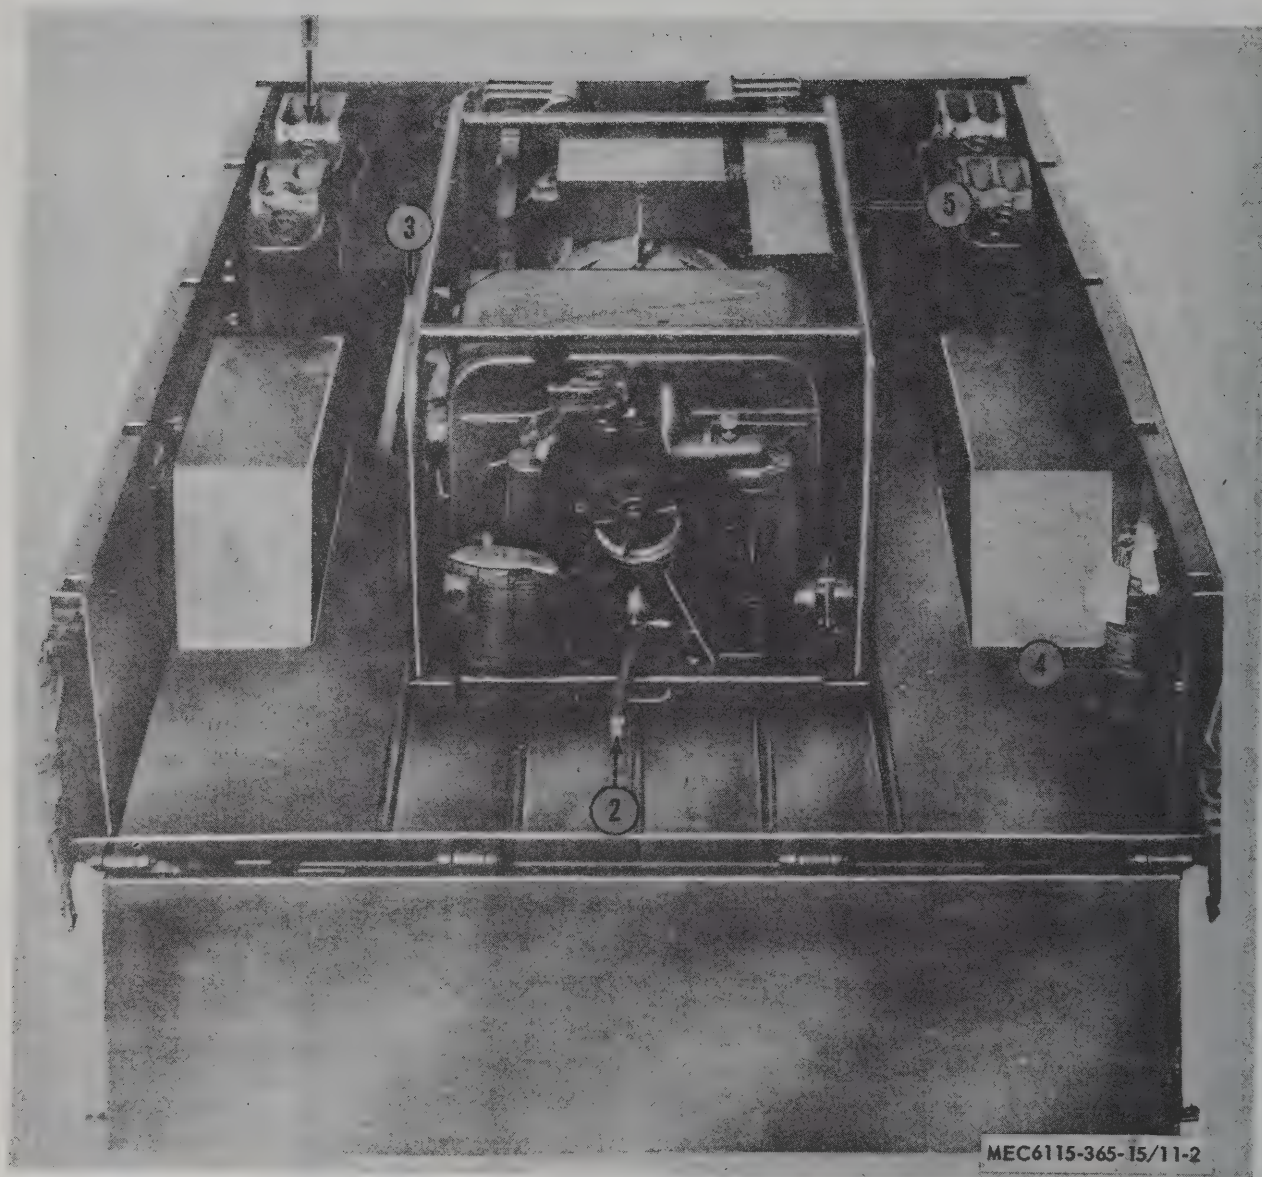

- 1 Can
- 2 Hose
- 3 Bracket

- 4 Extinguisher
- 5 Generator

Figure 11-2. Accessories.

CHAPTER 12
GENERATOR SETS PU-564A/G, FSN 6115-738-6341
AND PU-564B/G, FSN 6115-179-2789

Section I. DESCRIPTION AND DATA

12-1. Description

a. General. The trailer mounted generator sets, PU-564A/G and PU-564B/G, consist of a 10 KW, DOD Model MEP-018A generator set mounted on a modified 1-1/2-ton, 2-wheel cargo trailer, Model M105A1 or M105A2 (PU564A/G), or a Model 103A3 (PU564B/G).

b. Generator. The generator is powered by a directly-coupled 4-cylinder, air-cooled, 20-hp, Military Standard Model 4A084 gasoline engine. For description and gen-

erator operation and maintenance, refer to TM 5-6115-275-15.

c. Engines. For description and engine maintenance information, refer to TM 5-2805-259-14.

d. Trailers. For description and maintenance of the trailers, refer to TM 9-2330-213-14.

e. Lubrication. For lubrication of the engine refer to LO 5-2805-259-12. The trailer lubrication information is contained in LO 9-2330-213-12.


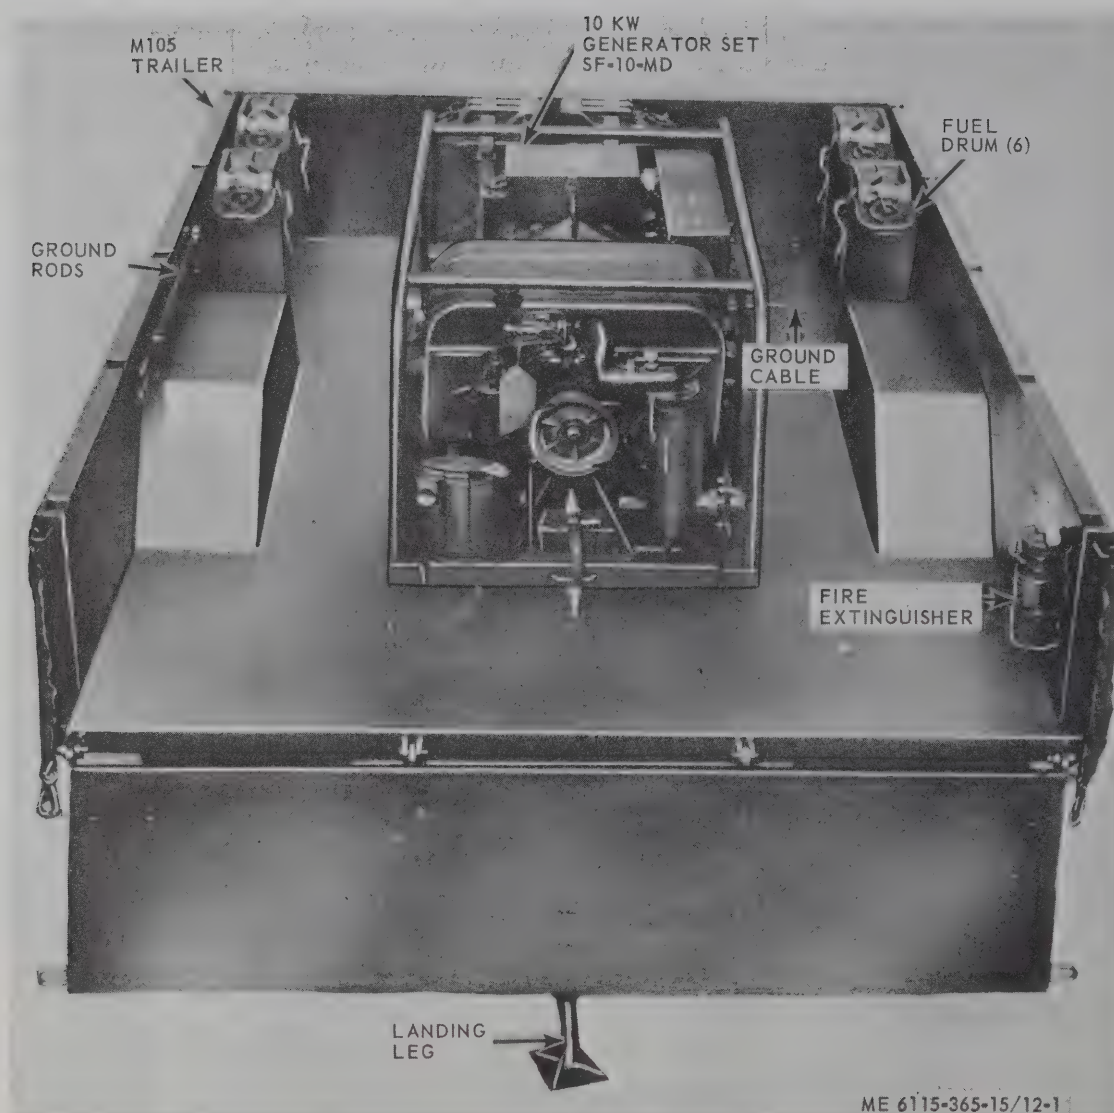


Figure 12-1. Generator set, PU-564A/G.

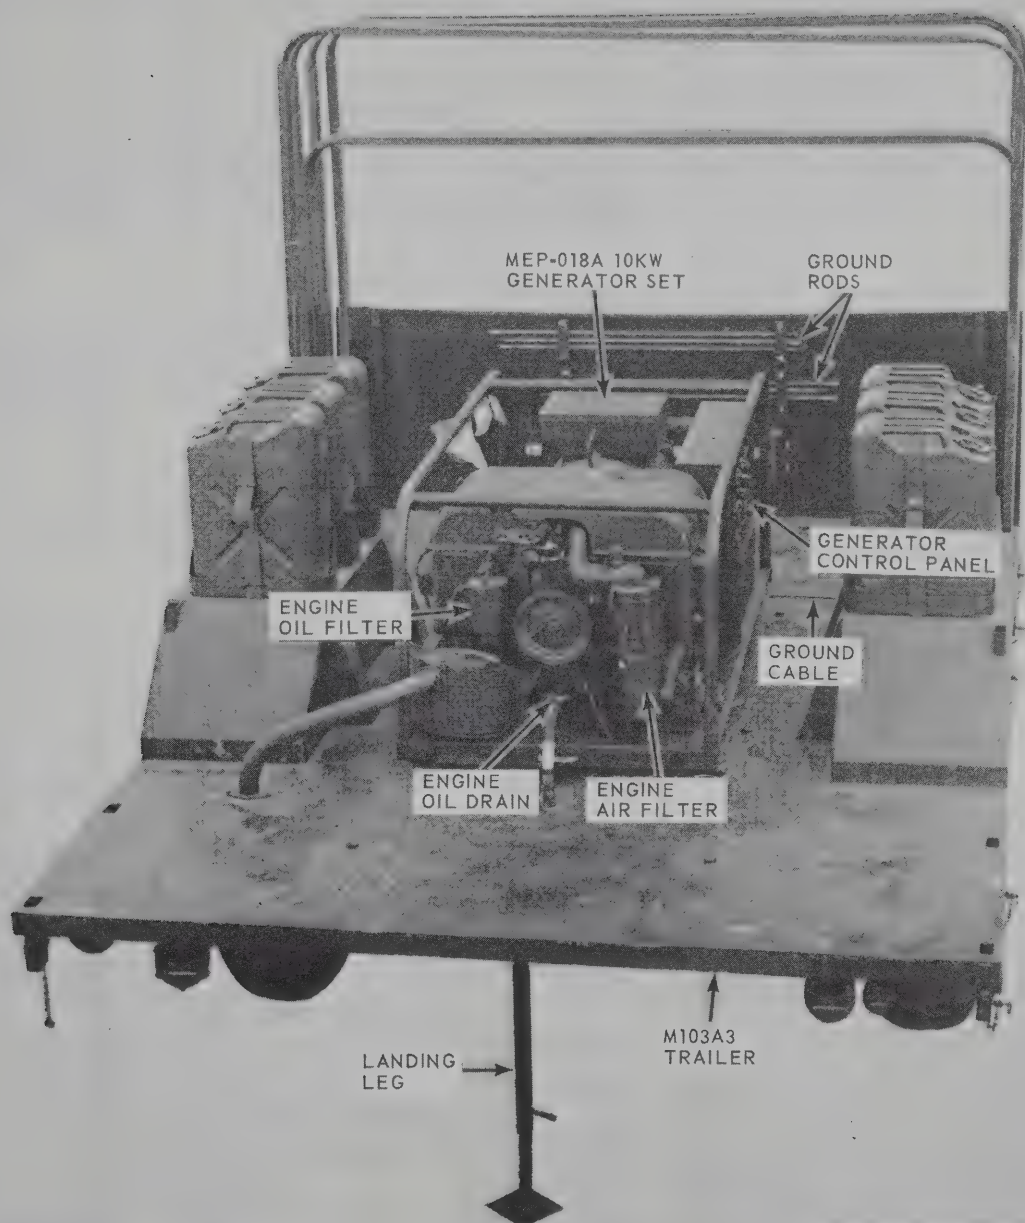

ME 6115-365-15/12-1.1 C3

Figure 12-1.1. Generator set, PU564B/G.


Section II. REPAIR PARTS LIST

TM 5-6115-365-15

LINE NO.	SOURCE CODES			FEDERAL STOCK NUMBER	DESCRIPTION	UNIT OF ISSUE	QTY INCORPORATED IN UNIT	GUIDE QTY(S) PER MAJ EQUIPS						ILLUST		
	MATERIAL SOURCE	MAINT	RECOVERABILITY					15 DAYS MAINTENANCE					DEPOT MAINT	FIGURE NO.	ITEM NO.	
								ORGANIZATION								
								DS	GS	100 EQUIPMENTS						
1-5	6-10															
0002				GROUP 01 - ENGINE												
0003				0106 - ENGINE LUBRICATION SYSTEM												
0004	X20	4730-278-3888	BUSHING, PIPE: OIL DRAIN	81343	SAEJ530		1	*	*	*	*	*	*			
0005	X20	4720-913-6422	HOSE, ASSEMBLY, RUBBER	97403	13211E4918		1	*	*	*	*	*	*			12-2 5
0006	0	4730-277-6440	NIPPLE, TUBE: OIL DRAIN	88044	AN832-10		1	*	*	*	*	*	*			
0007	0	5310-059-6372	WASHER, LOCK: OIL DRAIN HOSE UNION	96906	MS35337-52		1	*	*	*	*	*	*			
0008	0	5310-282-7822	NUT, PLAIN, HEXAGON: OIL DRAIN HOSE	88044	MS24400-10		1	*	*	*	*	*	*			
0009			GROUP 04 - EXHAUST SYSTEM													
0010			0401 - MUFFLER AND PIPES													
0011	X20	6115-914-0258	HOSE ASSEMBLY, METAL	97403	13212E3620		1	*	*	*	*	*	*			
0012	X20		CLAMP, EXHAUST TUBE SECURING	97403	13212E3622		1	*	*	*	*	*	*			
0013	0	5310-209-5306	WASHER, LOCK	96906	MS35337-24		1	*	*	*	*	*	*			
0014	0	5310-012-0614	NUT, PLAIN, HEXAGON	96906	MS35650-102		1	*	*	*	*	*	*			
0015	0	5305-043-6755	SCREW, MACHINE	96906	MS35226-68		1	*	*	*	*	*	*			
0016	0	5310-550-0777	NUT, PLAIN	96906	MS35690-402		1	*	*	*	*	*	*			
0017			GROUP 05 - COOLING SYSTEM													
0018			0501 - RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER													
0019	X20	2510-706-4504	BRACKET, LIQUID CONTAINER	97403	13214E1203		6	*	*	*	*	*	*			
0020	X20		HOOK, DRIP RAIL: STRAP	97403	13212E3616		6	*	*	*	*	*	*			
0021	X20		FASTENER	97403	13214E1205		6	*	*	*	*	*	*			
0022	X20		BUCKLE	96906	MS51940-7		12	*	*	*	*	*	*			
0023	M 0		STRAP: TOP	97403	13214E1203-2		6									
0024	P 0	8305-267-3009	MANUFACTURE FROM: WEBBING, NYLON (30 IN. REQUIRED FOR EACH STRAP)	06716	1403	FT		SEE GRP 9501								
0025	M 0		STRAP: BOTTOM	97403	13214E1203-3		6									
0026	P 0	3805-267-3009	MANUFACTURE FROM: WEBBING, NYLON (18 IN. REQUIRED FOR EACH STRAP)	06716	1403	FT		SEE GRP 9501								
0027	X20		BRACKET	97403	13214E1204		6	*	*	*	*	*	*			
0028	0	5305-269-3210	SCREW, CAP, HEXAGON HEAD: FUEL CAN	96906	MS90725-59		24	*	*	*	*	*	*			
0029	0	5310-809-4061	BRACKET MTG 3/8-16 X 7/8 IN. LG	96906	MS27183-15		24	*	*	*	*	*	*			
0030	0	5310-087-4652	WASHER, FLAT: FUEL CAN BRACKET MTG	96906	MS27183-15		24	*	*	*	*	*	*			
0031	X20		NUT, SELF LOCKING, HEXAGON: FUEL CAN	96906	MS51922-17		24	*	*	*	*	*	*			
0032	0	5305-984-6211	BRACKET MTG	96906	MS51939-2		4	*	*	*	*	*	*			
0033	0	5310-809-8546	LOOP, STRAP FASTENER: FUEL CAN	96906	MS35206-264		8	*	*	*	*	*	*			
0034	0	5310-167-0662	SCREW, MACHINE: LOOP MTG	96906	MS27183-8		8	*	*	*	*	*	*			
0035	0	5310-102-0361	WASHER, FLAT: LOOP MTG	96906	MS35337-43		8	*	*	*	*	*	*			
0036	X20	6115-016-2362	NUT, PLAIN, HEXAGON: LOOP MTG	96906	MS35649-102		8	*	*	*	*	*	*			
0037	0	5305-889-3000	HOLDER, COMPONENT: FUEL DRUM ADAPTER, EXTENSION	97403	13211E4889-1		4	*	*	*	*	*	*			
0038	0	5310-082-1404	SCREW, MACHINE: EXTENSION HOLDER MTG	96906	MS35206-230		8	*	*	*	*	*	*			
0039	0	5310-596-7674	WASHER, FLAT: EXTENSION HOLDER MTG	96906	MS27183-6		8	*	*	*	*	*	*			
0040	0	5310-062-0912	WASHER, LOCK: EXTENSION HOLDER MTG	96906	MS35337-22		8	*	*	*	*	*	*			
0041	X20	7240-920-5327	NUT, PLAIN, HEXAGON: EXTENSION HOLDER MOUNTING	96906	MS35649-64		8	*	*	*	*	*	*			
0042	0	5306-225-8497	HOLDER, SPOUT: FUEL DRUM ADAPTER	97403	13212E3553-1		2	*	*	*	*	*	*			
0043	0	5310-081-4219	BOLT, MACHINE: ADAPTER HOLDER MTG, 5/16-18 X 3/4 IN. LG	96906	MS90725-32		4	*	*	*	*	*	*			
0044	0	5310-984-3806	WASHER, FLAT: ADAPTER HOLDER MTG	96906	MS27183-12		8	*	*	*	*	*	*			
0045	X20		NUT, SELF-LOCKING, HEXAGON: ADAPTER HOLDER MTG	96906	MS51922-9		4	*	*	*	*	*	*			
0046	X20		BRACKET ASSEMBLY, SLEDGE HAMMER	97403	13214E1214		1	*	*	*	*	*	*			
0047	0	5310-012-6177	BRACKET	97403	13214E1215		1	*	*	*	*	*	*			
0048	X20		NUT, PLAIN, WING	96906	MS35425-39		2	*	*	*	*	*	*			
0049	0	5310-012-0392	PLATE, HOLD DOWN	97403	13214E1216		1	*	*	*	*	*	*			
0050	0	5310-043-5862	WASHER, FLAT	96906	MS27183-10		2	*	*	*	*	*	*			
0051	X20	5340-914-2578	WASHER, LOCK	96906	MS35337-82		2	*	*	*	*	*	*			
0052	0	5305-068-0502	CLIP, SPRING TENSION: SLEDGE HAMMER HANDLE	97403	13214E1213-1		1	*	*	*	*	*	*			
			SCREW, CAP, HEXAGON HEAD: SLEDGE HAMMER BRACKET AND SPRING CLIP MTG	96906	MS90725-6		3	*	*	*	*	*	*			

LINE NO.	SOURCE CODES			FEDERAL STOCK NUMBER	DESCRIPTION	MANUFACTURER'S	UNIT OF ISSUE	QTY INCORPORATED IN UNIT	GUIDE QTY(S) PER MAJ EQUIPS					ILLUST	
	MATERIAL	SOURCE	RECOVERABILITY						15 DAYS MAINTENANCE			DEPT MAINT	PICTURE NO.	ITEM NO.	
									ORGANIZATION						
									DS	BS					
			1-5	6-10	100 EQUIPMENTS										
0053		0		5310-809-4058	WASHER, FLAT: SLEDGE HAMMER BRACKET, SPRING CLIP AND GROUND ROD CLAMP MTG	96906 MS27183-10		10	*	*	*	*	*		
0054		0		5310-088-1251	NUT, SELF-LOCKING HEXAGON: SLEDGE HAMMER BRACKET, SPRING CLIP AND GROUND ROD CLAMP MTG	96906 MS51922-1		7	*	*	*	*	*		
0055	X20			5305-958-5246	CLAMP, GROUND ROD	97403 13212E3617		2	*	*	*	*	*	12-2 2	
0056		0		5305-958-5246	SCREW, MACHINE: GROUND ROD CLAMP MTG	96906 MS35190-289		4	*	*	*	*	*		
0057	X20			5340-526-2559	CLAMP, CUSHIONED: GROUND WIRE	96906 MS21919F2		3	*	*	*	*	*		
0058		0		5305-984-6211	SCREW, MACHINE: GROUND WIRE CLAMP MTG	96906 MS35206-264		3	*	*	*	*	*		
0059		0		5310-809-8546	WASHER, FLAT: GROUND WIRE CLAMP MTG	96906 MS27183-8		6	*	*	*	*	*		
0060		0		5310-167-0662	WASHER, LOCK: GROUND WIRE CLAMP MTG	96906 MS35337-43		3	*	*	*	*	*		
0061		0		5310-012-0361	NUT, PLAIN, HEXAGON: GROUND WIRE CLAMP MOUNTING	96906 MS35649-102		3	*	*	*	*	*		
0062	X20			5307-722-9437	STUD CONTINUOUS THREAD: GROUND	97403 13214E1223		1	*	*	*	*	*		
0063	X20				WASHER, LOCK: BRONZE, EXTERNAL TOOTH, 3/8 IN., GROUND STUD	96906 MS35335-91		2	*	*	*	*	*		
0064		0		5310-835-7478	NUT, PLAIN, HEXAGON: BRASS, GROUND STUD TO TRAILER	96906 MS35691-611		2	*	*	*	*	*		
0065		0		5310-900-6323	WASHER, FLAT: BRASS, GROUND STUD 390 ID	96906 MS45901-7		2	*	*	*	*	*		
0066		0		5310-720-8528	NUT, PLAIN, HEXAGON: BRASS, GROUND STUD	96906 MS35690-611		1	*	*	*	*	*		
0067		0		5310-543-4717	NUT, PLAIN, WING: BRASS, GROUND STUD	96906 MS35425-8		1	*	*	*	*	*		
0068					1507 - LANDING GEAR, LEVELING JACKS (MECHANICAL OR HYDRAULIC)										
0069	X20			2590-318-6691	LEG ASSEMBLY, TRAILER PROP	97403 13214E1206		1	*	*	*	*	*		
0070	X20				BRACKET	97403 13214E1207		1	*	*	*	*	*		
0071	X20				LEG ASSEMBLY, UPPER	97403 13214E1208		1	*	*	*	*	*		
0072	X20				CHAIN: PIN RETAINING	97403 13214E1208-6		1	*	*	*	*	*		
0073	X20				PIN	97403 13214E1208-5		1	*	*	*	*	*		
0074	X20				LEG, BASE	97403 13214E1212		1	*	*	*	*	*		
0075	X20				SHAFT	97403 13214E1209		1	*	*	*	*	*		
0076		0		4730-172-0049	FITTING, LUBRICATION	96906 MS15006-1		1	*	*	*	*	*		
0077	X20				SCREW	97403 13214E1210		1	*	*	*	*	*		
0078	X20				NUT	97403 13214E1211		1	*	*	*	*	*		
0079	X20				RIVET, SOLID, UNIVERSAL HEAD: 1/4 IN DIA	96906 MS20613-8P32		1	*	*	*	*	*		
0080	X20				PIN, COTTER: 1/8 IN DIA, 3/4 IN LG	96906 MS24665-351		1	*	*	*	*	*		
0081	X20			5305-269-3213	SCREW, CAP, HEXAGON HEAD: LEG ASSEMBLY TO TRAILER, 3/8-16 X 1 1/4 IN LG	96906 MS90725-62		3	*	*	*	*	*		
0082		0		5310-809-4061	WASHER, FLAT: LEG ASSEMBLY TO TRAILER	96906 MS27183-15		6	*	*	*	*	*		
0083		0		5310-087-4652	NUT, SELF-LOCKING HEXAGON: LEG ASSEMBLY TO TRAILER	96906 MS51922-17		3	*	*	*	*	*		
0084					GROUP 18 - BODY, CAB, HOOD AND HULL										
0085					1810 - CARGO BODY (DUMP, STAKE, AND PLATFORM)										
0086	X2F			2330-141-8050	TRAILER: M 105 MODIFIED	97403 13214E1221-2		1	*	*	*	*	*		
0087					GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS										
0088					2202 - ACCESSORY ITEMS										
0089	X20			2910-066-1235	ADAPTER ASSEMBLY, FUEL DRUM	97403 13211E7541		2	*	*	*	*	*		
0090	X20				WASHER, BRASS	97403 13211E7544		2	*	*	*	*	*		
0091	X20				SCREW, SHOULDER	97403 13211E7545		4	*	*	*	*	*		
0092	X20				RING, SEALING	97403 13211E7546		2	*	*	*	*	*		
0093	X20				WASHER, RUBBER	97403 13211E7547		2	*	*	*	*	*		
0094	X20				HEAD	97403 13211E7548		2	*	*	*	*	*		
0095	X20				WASHER, STEEL	97403 13200E6361		2	*	*	*	*	*		
0096	X20				CLAMP	97403 13200E6363		2	*	*	*	*	*		
0097		0		5310-209-1239	WASHER, LOCK: SHOULDER SCREW	96906 MS35335-60		4	*	*	*	*	*		
0098	X20				PIPE	97403 13211E7543		2	*	*	*	*	*		
0099	X20				PIPE, EXTENSION	97403 13211E7542		2	*	*	*	*	*		
0100		0		4730-278-3357	ADAPTER, STRAIGHT: HOSE			2	*	*	*	*	*		
0101	X20			7240-222-3088	CAN, GASOLINE: MILITARY, 5 GAL			6	*	*	*	*	*	12-2 1	
0102					GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS										
0103					2210 - DATA PLATES AND INSTRUCTION HOLDERS										
0104	X2F			9905-577-4219	PLATE, DATA: CORPS OF ENGINEERS, TYPE A	97403 13212E3599		1	*	*	*	*	*		
0105	F			5310-058-2950	WASHER, LOCK: DATA PLATE MTG	96906 MS35337-77		4	*	*	*	*	*		

LINE NO.	SOURCE CODES			FEDERAL STOCK NUMBER	DESCRIPTION	UNIT OF ISSUE	QTY INCORPORATED IN UNIT	GUIDE QTY(S) PER MAJ EQUIPS						ILLUST	
	MATERIAL	SOURCE	RECOVERABILITY					15 DAYS MAINTENANCE					DEPOT MAINT	FIGURE NO.	ITEM NO.
								ORGANIZATION			DS	GS			
								1-5	6-10	100 EQUIPMENTS					
			CODE	PART NO.											
0106	F			5305-058-2088	SCREW, TAPPING, THREAD FORMING; DATA PLATE MTG, No. 2-32 X 1/4. IN. LG		4			*	*	*			
0107					GROUP 40 - ELECTRIC MOTORS AND GENERATORS										
0108					4000 - MAJOR ASSEMBLAGE										
0109	X2FR			6115-889-1447	GENERATOR, GASOLINE ENGINE DRIVEN; 10 KW		1			*	*	*			
0110	X2F			5305-724-5910	SCREW, CAP, HEXAGON HEAD; GENERATOR FRAME TO TRAILER 5/8-11 X 1 1/2										
					IN. LG	96906 MS90725-162	4			*	*	*			
0111	X2F			5310-823-8803	WASHER, FLAT; GENERATOR FRAME TO TRAILER		8			*	*	*			
					.656 IN.	96906 MS27183-21	4			*	*	*			
0112	X2F				SPACER, SHIM	97403 13214E1222-3				*	*	*			
0113					4019 - RADIO INTERFERENCE SUPPRESSION										
0114	M O				WIRE, GROUND; GENERATOR TO GROUND STUD		1								
					MANUFACTURE FROM										
0115	P O			6145-299-6188	WIRE ELECTRICAL (LENGTH AS REQUIRED)	FT			SEE GRP 9501						
0116					GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS										
0117					7603 - FIRE EXTINGUISHERS										
0118	P10			4210-555-8873	EXTINGUISHER, FIRE		1	*	*	*	*	*	*	12-2	
0119	X20			5305-068-0502	SCREW, CAP, HEXAGON HEAD; EXTINGUISHER		4	*	*	*	*	*	*		
					MTG, 1/4-20 X 3/4 IN. LG	96906 MS90725-6	8	*	*	*	*	*	*		
0120	O			5310-809-4058	WASHER, FLAT; EXTINGUISHER MTG	96906 MS27183-10		*	*	*	*	*	*		
0121	O			5310-088-1251	NUT, SELF-LOCKING, HEXAGON; EXTINGUISHER MOUNTING	96906 MS51922-1	4	*	*	*	*	*	*		
0122					GROUP 95 - GENERAL USE STANDARDIZED PARTS										
0123					9501 - BULK MATERIAL										
0124	P O			8305-267-3009	WEBBING, NYLON	06716 1403	FT	*	*	*	*	*	*		
0125	P O			6145-299-6188	WIRE, ELECTRICAL		FT	*	*	*	*	*	*		

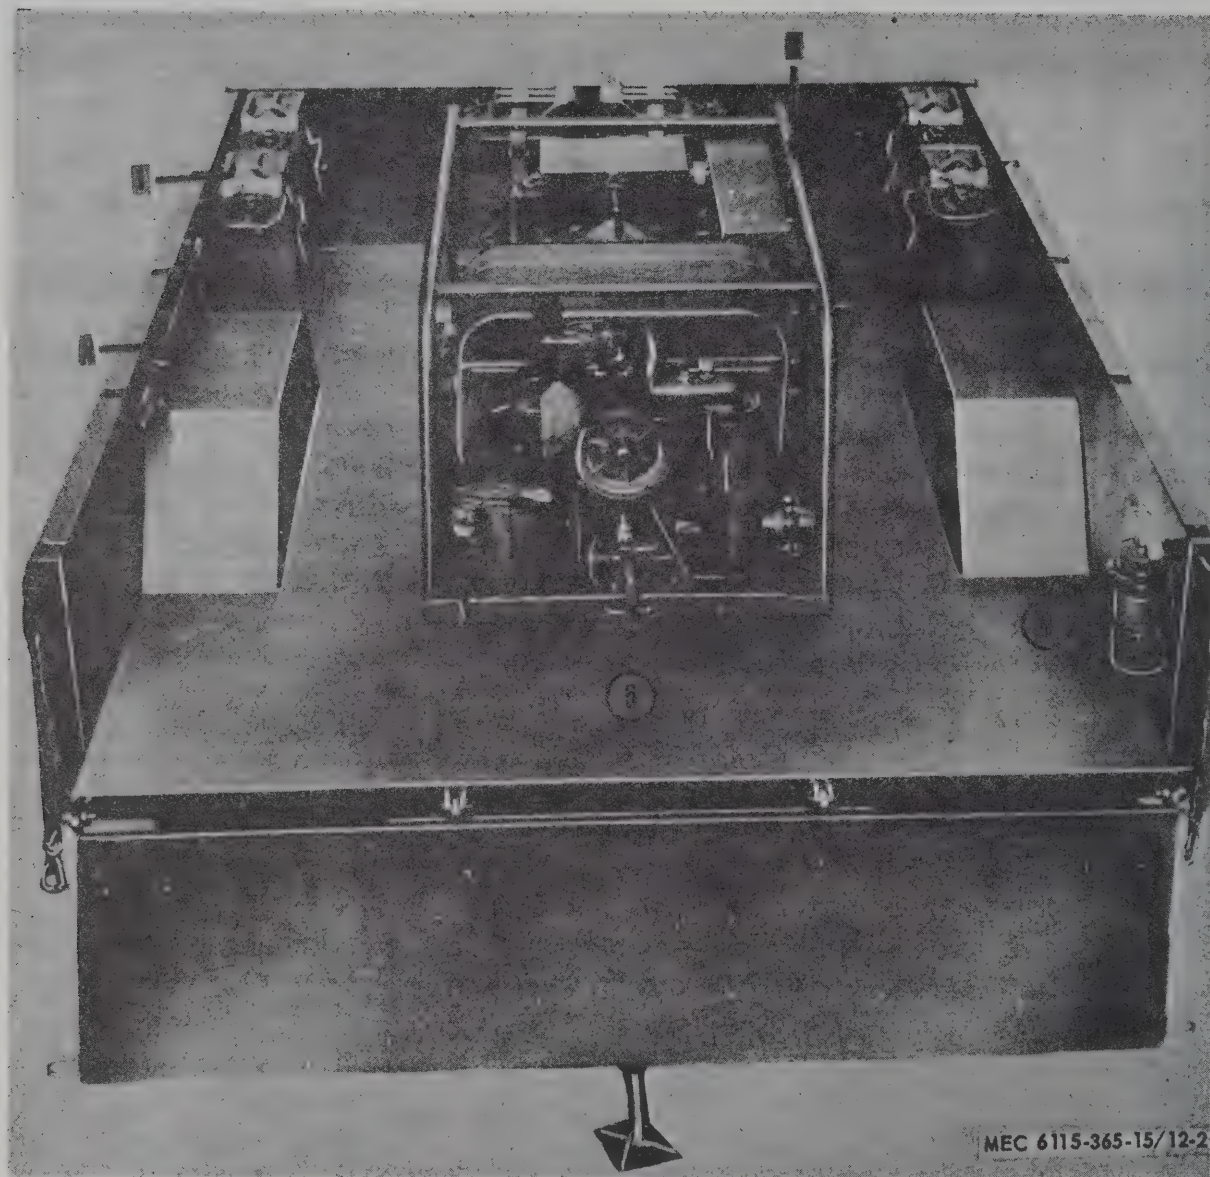

- 1 Can
- 2 Clamp
- 3 Generator

- 4 Extinguisher
- 5 Hose

Figure 12-2. Accessories.

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(a) FIG. NO.	(b) ITEM NO.
		PART II - PU-564B/G								
00001		REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE								
00003		GROUP. 06 - ELECTRICAL SYSTEM								
00004		0608 - MISCELLANEOUS TRAILER WIRING								
M O 00005		CABLE ASSEMBLY 13216E7479-2 (97403) MANUFACTURE FROM:		EA	2					
P O 00006		CABLE, SPECIAL, PURPOSE MILC13486-7 (81349)		EA	3	*	*	*	*	
P O 00007	5935-462-6603	CONNECTOR, PLUG, ELECTRIC: PIN CONTACT MS27142-2 (96906)		EA	3	*	*	*	*	
P O 00008	5935-167-7775	CONNECTOR, PLUG, ELECTRIC: SOCKET CONTACT MS27144-1 (96906)		EA	3	*	*	*	*	
M O 00009		LEAD, ELECTRICAL: 36 IN. LG 13214E7476 (97403) MANUFACTURE FROM:		EA	1					
P O 00010	6145-542-6834	CABLE, SPECIAL, PURPOSE (AS REQUIRED) MILC13486-1 (81349)		FT		*	*	*	*	
P O 00011	5935-462-6603	CONNECTOR, PLUG, ELECTRIC: PIN CONTACT MS27142-2 (96906)				*	*	*	*	
P O 00012	5935-167-7775	CONNECTOR, PLUG, ELECTRIC: SOCKET CONTACT MS27144-1 (96906)		EA	1	*	*	*	*	
P O 00013	5975-074-2072	STRAP, CABLE, ADJUSTABLE MS17821-1-9 (96906)		EA	1	*	*	*	*	
00017		GROUP 18 - BODY								
00018		1810 - CARGO BODY								
O 00020	5306-297-8904	BOLT, HEXAGON HEAD: 5/8-11 X 6 1/2 IN. LG FFB575TYPE3 (81349)		EA	2	*	*	*	*	12-4 11
O 00021	5305-269-3211	CAPSCREW, HEXAGON HEAD: 3/8-16 X 1 IN. LG MS90725-60 (96906)		EA	16	*	*	*	*	12-4 40
O 00022	5305-721-8010	CAPSCREW, HEXAGON HEAD: 1/4-20 X 2 IN. LG MS35307-314 (96906)		EA	2	*	*	*	*	12-3 12
O 00023	5305-724-5911	CAPSCREW, HEXAGON HEAD: 5/8-11 X 1 3/4 IN. LG MS90725-163 (96906)		EA	6	*	*	*	*	12-4 21
O 00024	5310-087-4652	NUT, SELF-LOCKING: 3/8-16 THD SIZE MS51922-17 (96906)		EA	16	*	*	*	*	12-4 43
O 00025	5310-080-8495	NUT, PLAIN, WING: 1/4-20 UNC 23 MS35425-39 (96906)		EA	2	*	*	*	*	12-3 9

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
0 00026	5310-269-4040	NUT, SELF-LOCKING, HEXAGON: 5/8-11 UNC MS51922-49 (96906)	EA	8	*	*	*	*		
X2 0 00027		SHIELD 13216E7433 (97403)	EA	1					12-3	13
0 00030	5310-080-6004	WASHER, FLAT: 3/8 IN. BSC SIZE MS27183-14 (96906)	EA	16	*	*	*	*	12-4	41
0 00031	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	4	*	*	*	*	12-3	11
0 00032	5310-823-8803	WASHER, FLAT: 5/8 IN. BSC SIZE MS27183-21 (96906)	EA	16	*	*	*	*		
0 00033	5310-637-9541	WASHER, LOCK: 3/8 IN. SIZE MS35338-46 (96906)	EA	4	*	*	*	*	12-4	42
0 00034	5310-933-8121	WASHER, LOCK: 1/4 IN. SIZE MS35338-139 (96906)	EA	2	*	*	*	*	12-3	10
00035		GROUP 22 - BODY CHASSIS ACCESSORY ITEMS								
00036		2201 - CANVAS ITEMS								
P OR 00037	6115-459-5946	TARPAULIN 13216F7434 (97403)	EA	1	*	*	*	2	12-3	24
X2 0 00038	5340-057-6956	BUCKLE, SPRING ACTION MS51929-2 (96906)	EA	12	*	*	*	*	12-3	23
X2 0 00039		CHAPE ASSEMBLY 13214E1392 (97403)	EA	12					12-3	21
X2 0 00040	5340-078-7029	CLIP, STRAP END MS51926-3 (96906)	EA	24					12-3	22
X2 0 00041	8305-170-4959	CLOTH, COTTON DUCK: 48 IN. W (AS REQUIRED) CCCC428TYPE1CLASS1 (81349)	YD							
X2 0 00042		GROMMET, METALLIC MILG15491TYPE1CLASS1 (81349)	EA	27						
X2 0 00043		RING, DEE, MEDIUM MS51925-8 (96906)	EA	14					12-3	20
X2 0 00044		ROPE, SISAL: 3/8 IN. DIA X 30 IN. LG TR605 (81349)	EA	27						
X2 0 00045	5340-275-5983	SNAP, HOOK, FIXED LOOP: W/SPRING CLSR MILS11699 (81349)	EA	25					12-3	19
X2 0 00046		WEBBING, TEXTILE, COTTON: SINGLE THK, 3/4 IN. (AS REQUIRED) MILW530TYPE2CLASS4 (81349)	FT							
X2 0 00047	8305-260-1747	WEBBING, TEXTILE, COTTON: DOUBLE THK, 1 IN. (AS REQUIRED) MILW530TYPE2CLASS4 (81349)	FT							
00048		2202 - ACCESSORY ITEMS								
X2 0 00049	2540-926-1003	BOW, TRAILER, TARPAULIN: 55.75 IN. H 13212E3597-2 (97403)	EA	2					12-3	25
X2 0 00050	2540-924-8478	BOW, TRAILER, TARPAULIN: 68 IN. H 13212E3597-1 (97403)	EA	4					12-3	18

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
		REF NUMBER & MFR CODE								
P 0 00051	2590-473-6331	BRACKET ASSEMBLY: LIQUID CONTAINER, 5 GALLON MS53052-1 (96906)	EA	6	*	*	*	*	12-4	13
X2 0 00052	5340-999-6277	BRACKET ASSEMBLY: SLEDGE HAMMER 13214E1214 (97403)	EA	1					12-3	4
P 0 00053	7240-222-3088	CAN, GASOLINE: MILITARY, 5 GALLON MILC1283B (81349)	EA	6	*	*	*	*	12-4	12
O 00054	5305-068-0500	CAPSCREW, HEXAGON HEAD: 1/4-20 X 1/2 IN. LG MS90725-3 (96906)	EA	4	*	*	*	*	12-3	32
O 00055	5305-068-0500	CAPSCREW, HEXAGON HEAD: 1/4-20 X 1/2 IN. LG MS90725-3 (96906)	EA	8	*	*	*	*	12-3	28
O 00056	5305-225-3839	CAPSCREW, HEXAGON HEAD: EXTINGUISHER BRACKET MTG, 1/4-20 X 1 IN. LG MS90725-8 (96906)	EA	4	*	*	*	*	12-4	8
O 00057	5305-269-3213	CAPSCREW, HEXAGON HEAD: 3/8-16 X 1 1/4 IN. LG MS90725-62 (96906)	EA	24	*	*	*	*	12-4	14
O 00058	5305-225-3839	CAPSCREW, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)	EA	2	*	*	*	*	12-3	3
O 00059	5305-225-3839	CAPSCREW, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)	EA	1	*	*	*	*	12-3	7
X2 0 00060	2590-932-7298	CLAMP, GROUND ROD 13212E3617-1 (97403)	EA	4					12-3	17
X2 0 00061	5340-914-2578	CLIP, SPRING, SLEDGE HAMMER 13214E1213-1 (97403)	EA	1					12-3	8
O 00062	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 THD SIZE MS51922-1 (96906)	EA	4	*	*	*	*	12-3	30
O 00063	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 THD SIZE MS51922-1 (96906)	EA	8	*	*	*	*	12-3	14
O 00064	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 THD SIZE MS51922-1 (96906)	EA	4	*	*	*	*	12-4	10
O 00065	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16 THD SIZE MS51922-17 (96906)	EA	24	*	*	*	*	12-4	16
O 00066	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 THD SIZE MS51922-1 (96906)	EA	8	*	*	*	*	12-3	26
O 00067	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 THD SIZE MS51922-1 (96906)	EA	2	*	*	*	*	12-3	3
O 00068	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)	EA	1	*	*	*	*	12-3	5
X2 0 00069	9905-202-3639	REFLECTOR, AMBER, CLEARANCE INDICATOR MS35387-2 (96906)	EA	2					12-3	33
X2 0 00070	9905-205-2795	REFLECTOR, RED, CLEARANCE INDICATOR MS35387-1 (96906)	EA	4					12-3	29
O 00071	5305-958-5247	SCREW, MACHINE: FLAT HEAD, 1/4-20 X 1 IN. LG MS31190-291 (96906)	EA	8	*	*	*	*	12-3	16
O 00072	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	4	*	*	*	*	12-3	31
O 00073	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	8	*	*	*	*	12-3	27
O 00074	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	4	*	*	*	*	12-4	9

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
						(a)	(b)	(c)	(d)	(a)	(b)
						1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
0 00075	5310-809-4061	WASHER, FLAT: 3/8 IN. BSC SIZE MS27183-15 (96906)		EA	24	*	*	*	*	12-4	15
0 00076	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	8	*	*	*	*	12-3	15
0 00077	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	2	*	*	*	*	12-3	2
0 00078	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	1	*	*	*	*	12-3	6
00079		2210 - DATA PLATES									
X2 0 00080		PLATE, IDENTIFICATION: GROUND 13205E4918 (97403)		EA	1					12-4	7
X2 0 00081		PLATE, IDENTIFICATION: PU564B/G 13205E4916-33 (97403)		EA	1					12-4	1
00082		GROUP 29 - GENERATOR									
00083		2901 - GENERATOR ASSEMBLY									
0 00084	5305-727-3804	CAPSCREW, HEXAGON HEAD: 5/8-11 X 2 1/4 IN. LG MS90725-165 (96906)		EA	4	*	*	*	*	12-4	25
0 00089	5310-269-4040	NUT, SELF-LOCKING, HEXAGON: 5/8-11 THD SIZE MS51922-49 (96906)		EA	4	*	*	*	*	12-4	27
0 00087	5310-951-7209	WASHER, FLAT: 5/8 IN. BSC SIZE MS27183-22 (96906)		EA	4	*	*	*	*	12-4	26
00088		2941 - ENGINE EXHAUST									
0 00089	5305-225-3839	CAPSCREW, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)		EA	2	*	*	*	*	12-4	18
0 00090	5340-917-6400	CLAMP ASSEMBLY: 1 7/8 IN. MAXIMUM OD 13212E3592-4 (97403)		EA	1	*	*	*	*	12-4	22
0 00091	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)		EA	2	*	*	*	*	12-4	20
P 0 00092	6115-934-7878	TUBE, EXHAUST 13214E1389 (97403)		EA	1	*	*	*	*	12-4	17
0 00093	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS51922-10 (96906)		EA	2	*	*	*	*	12-4	19
00094		GROUP 42 - ELECTRICAL EQUIPMENT 4216 - MISCELLANEOUS WIRING AND FITTINGS									
X2 0 00095	5340-778-2738	CLAMP, LOOP MS21333-2 (96906)		EA	3					12-4	3
X2 0 00096	5310-584-7995	NUT, PLAIN, HEXAGON HEAD: STYLE 1, 3/8-16 THD SIZE MS16203-27 (96906)		EA	1					12-4	34
0 00097	5310-918-6921	NUT, PLAIN, HEXAGON: JAM, 3/8-16 THD SIZE MS16203-39 (96906)		EA	2	*	*	*	*	12-4	32
0 00098	5310-543-4717	NUT, PLAIN, WING: BRASS, 3/8-16 THD SIZE MS35425-28 (96906)		EA	1	*	*	*	*	12-4	30
0 00099	5310-877-5797	NUT, SELF-LOCKING: 10-32 THD SIZE MS21044N3 (96906)		EA	3	*	*	*	*	12-4	6

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
0 00100	5305-993-1848	SCREW, MACHINE: PAN HEAD, 10-32 X 3/4 IN. LG MS35207-265 (96906)	EA	3	*	*	*	*	12-4	4
0 00101	5307-722-9437	STUD, GROUNDING: 3/8-16 X 2 1/2 IN. LG 13214E1223 (97403)	EA	1	*	*	*	*	12-4	29
0 00102	5940-688-6010	TERMINAL, LUG: TYPE 1, CLASS 1, NO. 6 WIRE, 3/8 IN. MS20659-110 (96906)	EA	1	*	*	*	*	12-4	28
0 00103	5310-014-5850	WASHER: NO. 10 BSC SIZE MS27183-42 (96906)	EA	3	*	*	*	*	12-4	5
0 00104	5310-187-2413	WASHER, FLAT: ELECTRIC, BRASS 3/8 IN. AN961-616T (88044)	EA	4	*	*	*	*	12-4	31
0 00105	5310-913-9776	WASHER, LOCK: EXTERNAL TOOTH, 3/8 IN. MS35335-91 (96906)	EA	2	*	*	*	*	12-4	33
M 0 00106		WIRE, ELECTRICAL: GENERATOR TO STUD, 60 IN. LG QQW343TYPERBCCLASS1 (81348) MANUFACTURE FROM:	EA	1					12-4	2
0 00107	6145-395-8799	WIRE, ELECTRICAL: NO. 6 AWG, UNISULATED (AS REQUIRED) QQW343TYPERBCCLASS1 (81348)	FT		*	*	*	*		


(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 30-DAY DS MAINT ALLOWANCE	(7) 30-DAY GS MAINT ALLOWANCE	(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
									(a)	(b)
					(a)	(b)	(c)	(a)	(b)	(c)
					1-20	21-50	51-100	1-20	21-50	51-100
00002		PART 111 - PU-564B/G								
00003		REPAIR PARTS FOR DS, GS AND DEPOT MAINTENANCE								
00004		GROUP 06 - ELECTRICAL SYSTEM								
00004		0608 - MISCELLANEOUS WIRING								
M O 00005		CABLE ASSEMBLY 13216E7479-2 (97403) MANUFACTURE FROM:		EA	2					
P O 00006		CABLE, SPECIAL, PURPOSE MILC13486-7 (81349)		EA	3	*	*	*	*	*
P O 00007	5935-462-6603	CONNECTOR, PLUG, ELECTRIC: PIN CONTACT MS27142-2 (96906)		EA	3	*	*	*	*	*
P O 00008	5935-167-7775	CONNECTOR, PLUG, ELECTRIC: SOCKET CONTACT MS27144-1 (96906)		EA	3	*	*	*	*	*
M O 00009		LEAD, ELECTRICAL: 36 IN. LG 13214E7476 (97403) MANUFACTURE FROM:		EA	1					
P O 00010	6145-542-6834	CABLE, SPECIAL, PURPOSE (AS REQUIRED) MILC13486-1 (81349)		FT		*	*	*	*	*
P O 00011	5935-462-6603	CONNECTOR, PLUG, ELECTRIC: PIN CONTACT MS27142-2 (96906)		EA	1	*	*	*	*	*
P O 00012	5935-167-7775	CONNECTOR, PLUG, ELECTRIC: SOCKET CONTACT MS27144-1 (96906)		EA	1	*	*	*	*	*
P O 00013	5975-074-2072	STRAP, CABLE, ADJUSTABLE MS17821-1-9 (96906)		EA	1	*	*	*	*	*
00014		GROUP 15 - FRAME								
00015		1501 - FRAME ASSEMBLY								
X2D R		CHASSIS, TRAILER 13216E7431 (97403)		EA	1					
00017		GROUP 18 - BODY								
00018		1810 - CARGO BODY								
X2D 00019		BODY, TRAILER 13216E7432 (97403)		EA	1					
O 00020		BOLT, HEXAGON HEAD: 5/8-11 X 6 1/2 IN. LG FFB575TYPE3 (81349)		EA	2	*	*	*	*	*
O 00021	5305-269-3211	CAPSCREW, HEXAGON HEAD: 3/8-16 X 1 IN. LG MS90725-60 (96906)		EA	16	*	*	*	*	*
O 00022	5305-721-8010	CAPSCREW, HEXAGON HEAD: 1/4-20 X 2 IN. LG MS35307-314 (96906)		EA	2	*	*	*	*	*
O 00023	5305-724-5911	CAPSCREW, HEXAGON HEAD: 5/8-11 X 1 3/4 IN. LG MS90725-163 (96906)		EA	6	*	*	*	*	*
P 00024	5310-087-4652	NUT, SELF-LOCKING: 3/8-16 THD SIZE MS51922-17 (96906)		EA	16	*	*	*	*	*

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
						1-20	21-50	51-100	1-20	21-50	51-100				
0 00025	5310-080-8495	NUT, PLAIN, WING: 1/4-20 UNC 23 MS35425-39 (96906)		EA	2	*	*	*	*	*	*	*	*	12-3	9
0 00026	5310-269-4040	NUT, SELF-LOCKING, HEXAGON: 5/8-11 UNC MS51922-49 (96906)		EA	8	*	*	*	*	*	*	*	*		
X20 00027		SHIELD 13216E7433 (97403)		EA	1									12-3	13
X2F 00028		SHIM, BODY TO CHASSIS (AS REQUIRED) 13212E3590 (97403)		EA										12-4	44
X2D R 00029	2330-141-8052	TRAILER ASSEMBLY: 1 1/2 TON, M103A3 13216E7430 (97403)		EA	1										
0 00030	5310-080-6004	WASHER, FLAT: 3/8 IN. BSC SIZE MS27183-14 (96906)		EA	16	*	*	*	*	*	*	*	*	12-4	41
0 00031	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	4	*	*	*	*	*	*	*	*	12-3	11
0 00032	5310-823-8803	WASHER, FLAT: 5/8 IN. BSC SIZE MS27183-21 (96906)		EA	16	*	*	*	*	*	*	*	*		
0 00033	5310-637-9541	WASHER, LOCK: 3/8 IN. SIZE MS35338-46 (96906)		EA	4	*	*	*	*	*	*	*	*	12-4	42
0 00034	5310-933-8121	WASHER, LOCK: 1/4 IN. SIZE MS35338-139 (96906)		EA	2	*	*	*	*	*	*	*	*	12-3	10
00035		GROUP 22 - BODY CHASSIS ACCESSORY ITEMS													
00036		2201 - CANVAS ITEMS													
P O R 00037	6115-459-5946	TARPAULIN 13216E7434 (97403)		EA	1	*	*	2	*	*	2	10	10	12-3	24
X20 00038	5340-057-6956	BUCKLE, SPRING ACTION MS51929-2 (96906)		EA	12									12-3	23
X20 00039		CHAPE ASSEMBLY 13214E1392 (97403)		EA	12									12-3	21
X20 00040	5340-078-7029	CLIP, STRAP END MS51926-3 (96906)		EA	24									12-3	22
X20 00041	8305-170-4959	CLOTH, COTTON DUCK: 48 IN. W CCCC428TYPE1CLASS1 (81349) (AS REQUIRED)		YD											
X20 00042		GROMMET, METALLIC MILG15491TYPE1CLASS1 (81349)		EA	27										
X20 00043		RING, DEE, MEDIUM MS51925-8 (96906)		EA	14									12-3	20
X20 00044		ROPE, SISAL: 3/8 IN. DIA X 30 IN. LG TR605 (81349)		EA	27										
X20 00045	5340-275-5983	SNAP, HOOK, FIXED LOOP: W/SPRING CLSR MILS11699 (81349)		EA	25									12-3	19
X20 00046		WEBBING, TEXTILE, COTTON: SINGLE THK, 3/4 IN. MILW530TYPE2CLASS4 (81349) (AS REQUIRED)		FT											
X20 00047	8305-260-1747	WEBBING, TEXTILE, COTTON: DOUBLE THK, 1 IN. MILW530TYPE2CLASS4 (81349) (AS REQUIRED)		FT											

(1) MFR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
00048		2202 - ACCESSORY ITEMS												
X20 00049	2540-926-1003	BOW, TRAILER, TARPAULIN: 55.75 IN. H 13212E3597-2 (97403)	EA	2									12-3	25
X20 00050	2540-924-8478	BOW, TRAILER, TARPAULIN: 68 IN. H 13212E3597-1 (97403)	EA	4									12-3	18
P O 00051	2590-473-6331	BRACKET ASSEMBLY: LIQUID CONTAINER, 5 GALLON MS53052-1 (96906)	EA	6	*	*	*	*	*	*	*	*	12-4	13
X20 00052	5340-999-6277	BRACKET ASSEMBLY: SLEDGE HAMMER 13214E1214 (97403)	EA	1									12-3	4
P O 00053	7240-222-3088	CAN, GASOLINE: MILITARY, 5 GALLON MILC1283B (81349)	EA	6	*	*	*	*	*	*	*	*	12-4	12
O 00054	5305-068-0500	CAPSCREW, HEXAGON HEAD: 1/4-20 X 1/2 IN. LG MS90725-3 (96906)	EA	4	*	*	*	*	*	*	*	*	12-3	32
O 00055	5305-068-0500	CAPSCREW, HEXAGON HEAD: 1/4-20 X 1/2 IN. LG MS90725-3 (96906)	EA	8	*	*	*	*	*	*	*	*	12-3	28
O 00056	5305-225-3839	CAPSCREW, HEXAGON HEAD: EXTINGUISHER BRACKET MTG, 1/4-20 X 1 IN. LG MS90725-8 (96906)	EA	4	*	*	*	*	*	*	*	*	12-4	8
O 00057	5305-269-3213	CAPSCREW, HEXAGON HEAD: 3/8-16 X 1 1/4 IN. LG MS90725-62 (96906)	EA	24	*	*	*	*	*	*	*	*	12-4	14
O 00058	5305-225-3839	CAPSCREW, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)	EA	2	*	*	*	*	*	*	*	*	12-3	3
O 00059	5305-225-3839	CAPSCREW, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)	EA	1	*	*	*	*	*	*	*	*	12-3	7
X20 00060	2590-932-7298	CLAMP, GROUND ROD 13212E3617-1 (97403)	EA	4									12-3	17
X20 00061	5340-914-2578	CLIP, SPRING, SLEDGE HAMMER 13214E1213-1 (97403)	EA	1									12-3	8
O 00062	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 THD SIZE MS51922-1 (96906)	EA	4	*	*	*	*	*	*	*	*	12-3	30
O 00063	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 THD SIZE MS51922-1 (96906)	EA	8	*	*	*	*	*	*	*	*	12-3	14
O 00064	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 THD SIZE MS51922-1 (96906)	EA	4	*	*	*	*	*	*	*	*	12-4	10
O 00065	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16 THD SIZE MS51922-17 (96906)	EA	24	*	*	*	*	*	*	*	*	12-4	16
O 00066	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 THD SIZE MS51922-1 (96906)	EA	8	*	*	*	*	*	*	*	*	12-3	26
O 00067	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 THD SIZE MS51922-1 (96906)	EA	2	*	*	*	*	*	*	*	*	12-3	3
O 00068	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)	EA	1	*	*	*	*	*	*	*	*	12-3	5
X20 00069	9905-202-3639	REFLECTOR, AMBER, CLEARANCE INDICATOR MS35387-2 (96906)	EA	2									12-3	33
X20 00070	9905-205-2795	REFLECTOR, RED, CLEARANCE INDICATOR MS35387-1 (96906)	EA	4									12-3	29

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
0 00071	5305-958-5247	SCREW, MACHINE: FLAT HEAD, 1/4-20 X 1 IN. LG MS31190-291 (96906)	EA	8	*	*	*	*	*	*	*	*	12-3	16
0 00072	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	4	*	*	*	*	*	*	*	*	12-3	31
0 00073	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	8	*	*	*	*	*	*	*	*	12-3	27
0 00074	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	4	*	*	*	*	*	*	*	*	12-4	9
0 00075	5310-809-4061	WASHER, FLAT: 3/8 IN. BSC SIZE MS27183-15 (96906)	EA	24	*	*	*	*	*	*	*	*	12-4	15
0 00076	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	8	*	*	*	*	*	*	*	*	12-3	15
0 00077	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	2	*	*	*	*	*	*	*	*	12-3	2
0 00078	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	1	*	*	*	*	*	*	*	*	12-3	6
00079		2210 - DATA PLATES												
X20 00080		PLATE, IDENTIFICATION: GROUND 13205E4918 (97403)	EA	1									12-4	7
X20 00081		PLATE, IDENTIFICATION: PU-564B/G 13205E4916-33 (97403)	EA	1									12-4	1
00082		GROUP 29 - GENERATOR												
00083		2901 - GENERATOR ASSEMBLY												
0 00084	5305-727-3804	CAPSCREW, HEXAGON HEAD: 5/8-11 X 2 1/4 IN. LG MS90725-165 (96906)	EA	4	*	*	*	*	*	*	*	*	12-4	25
X2F R 00085	6115-889-1447	GENERATOR SET: MEP-018A, 10KW, 60HZ MILG52280 (81349)	EA	1									12-4	24
0 00086	5310-269-4040	NUT, SELF-LOCKING, HEXAGON: 5/8-11 THD SIZE MS51922-49 (96906)	EA	4	*	*	*	*	*	*	*	*	12-4	27
0 00087	5310-951-7209	WASHER, FLAT: 5/8 IN. BSC SIZE MS27183-22 (96906)	EA	4	*	*	*	*	*	*	*	*	12-4	26
00088		2941 - ENGINE EXHAUST												
0 00089	5305-225-3839	CAPSCREW, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)	EA	2	*	*	*	*	*	*	*	*	12-4	18
0 00090	5340-917-6400	CLAMP ASSEMBLY: 1 7/8 IN. MAXIMUM OD 13212E3592-4 (97403)	EA	1	*	*	*	*	*	*	*	*	12-4	22
0 00091	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)	EA	2	*	*	*	*	*	*	*	*	12-4	20
P O 00092	6115-934-7878	TUBE, EXHAUST 13214E1389 (97403)	EA	1	*	*	*	*	*	*	*	*	12-4	17
0 00093	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS51922-10 (96906)	EA	2	*	*	*	*	*	*	*	*	12-4	19
00094		GROUP 42- ELECTRICAL EQUIPMENT 4216 - MISCELLANEOUS WIRING AND FITTINGS												
X20 00095	5340-778-2738	CLAMP, LOOP MS21333-2 (96906)	EA	3									12-4	3

(1)	(2)	(3)	(4)	(5)	(6)			(7)			(8)	(9)	(10)		
SMR CODE	FEDERAL STOCK NUMBER	DESCRIPTION	USABLE ON CODE	UNIT OF MEAS	QTY INC IN UNIT	30-DAY DS MAINT ALLOWANCE			30-DAY GS MAINT ALLOWANCE			1-YR ALW PER 100 EQUIP CNTGY	DEPOT MAINT ALW PER 100 EQUIP	ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
		REF NUMBER & MFR CODE				1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X20 00096	5310-584-7995	NUT, PLAIN, HEXAGON HEAD: STYLE 1, 3/8-16 THD SIZE MS16203-27 (96906)		EA	1									12-4	34
O 00097	5310-918-6921	NUT, PLAIN, HEXAGON: JAM, 3/8-16 THD SIZE MS16203-39 (96906)		EA	2	*	*	*	*	*	*	*	*	12-4	32
O 00098	5310-543-4717	NUT, PLAIN, WING: BRASS, 3/8-16 THD SIZE MS35425-28 (96906)		EA	1	*	*	*	*	*	*	*	*	12-4	30
O 00099	5310-877-5797	NUT, SELF-LOCKING: 10-32 THD SIZE MS21044N3 (96906)		EA	3	*	*	*	*	*	*	*	*	12-4	6
O 00100	5305-993-1848	SCREW, MACHINE: PAN HEAD, 10-32 X 3/4 IN. LG MS35207-265 (96906)		EA	3	*	*	*	*	*	*	*	*	12-4	4
O 00101	5307-722-9437	STUD, GROUNDING: 3/8-16 X 2 1/2 IN. LG 13214E1223 (97403)		EA	1	*	*	*	*	*	*	*	*	12-4	29
O 00102	5940-688-6010	TERMINAL, LUG: TYPE 1, CLASS 1, NO. 6 WIRE, 3/8 IN. MS20659-110 (96906)		EA	1	*	*	*	*	*	*	*	*	12-4	28
O 00103	5310-014-5850	WASHER: NO. 10 BSC SIZE MS27183-42 (96906)		EA	3	*	*	*	*	*	*	*	*	12-4	5
O 00104	5310-187-2413	WASHER, FLAT: ELECTRIC, BRASS, 3/8 IN. AN961-616T (88044)		EA	4	*	*	*	*	*	*	*	*	12-4	31
O 00105	5310-913-9776	WASHER, LOCK: EXTERNAL TOOTH, 3/8 IN. MS35335-91 (96906)		EA	2	*	*	*	*	*	*	*	*	12-4	33
M O 00106		WIRE, ELECTRICAL: GENERATOR TO STUD, 60 IN. LG QQW343TYPERBCLASS1 (81348) MANUFACTURE FROM:		EA	1									12-4	2
O 00107	6145-395-8799	WIRE, ELECTRICAL: NO. 6 AWG, UNISULATED QQW343TYPERBCLASS1 (81348) (AS REQUIRED)		FT		*	*	*	*	*	*	*	*		

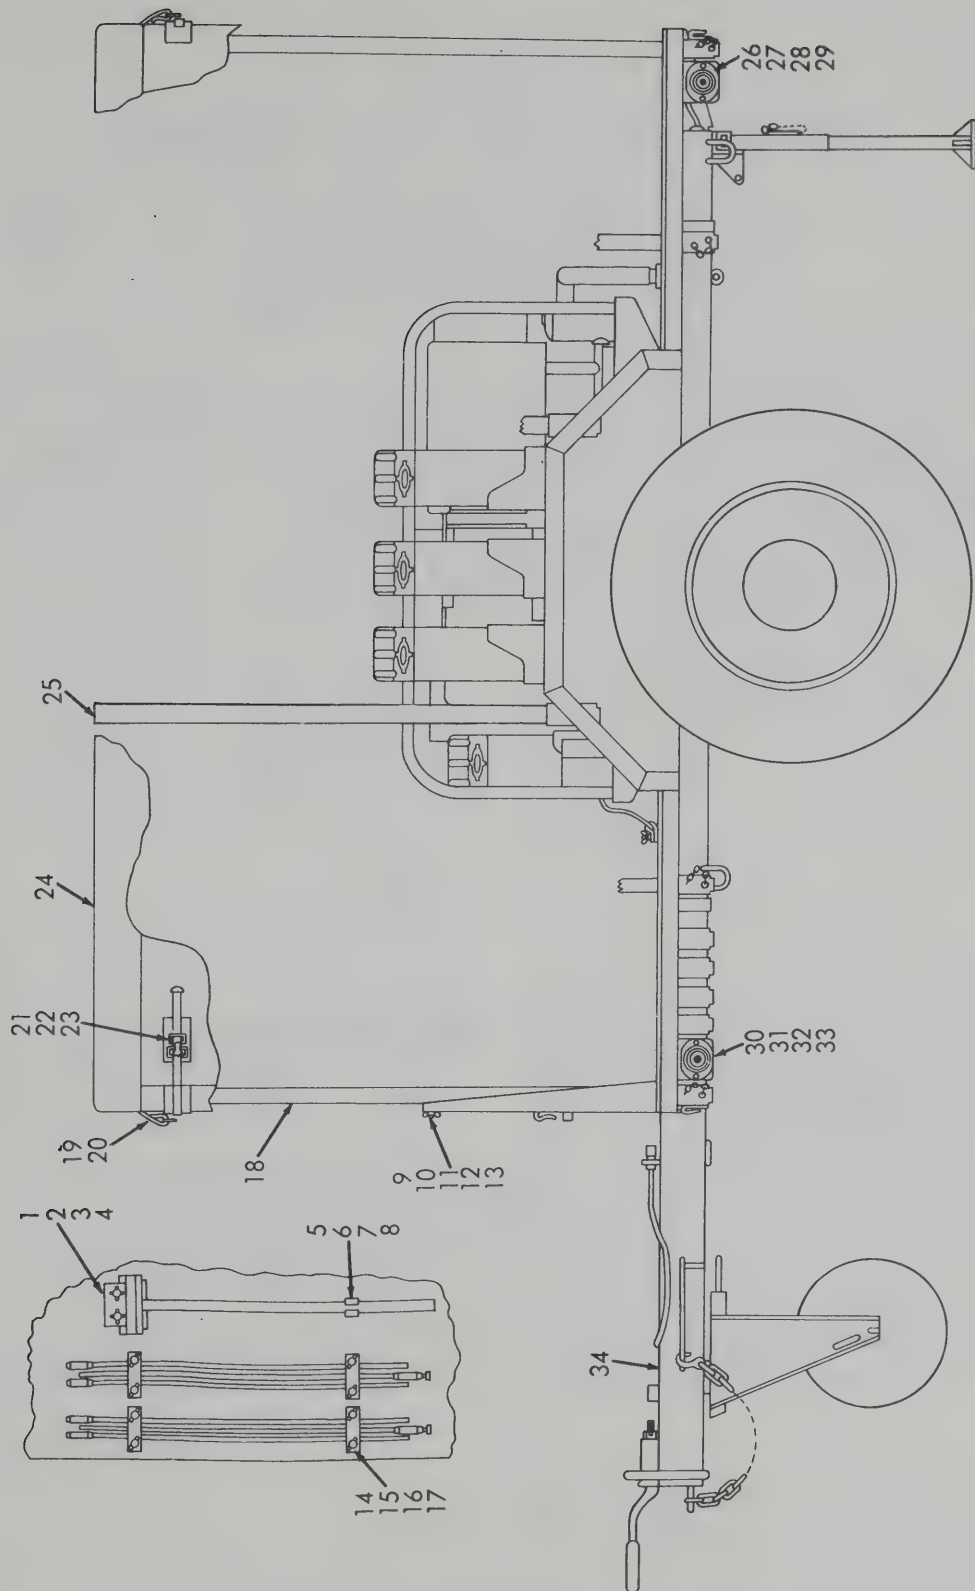

ME 6115-365-15/12-3 C3

Figure 12-3. PU-564B/G.

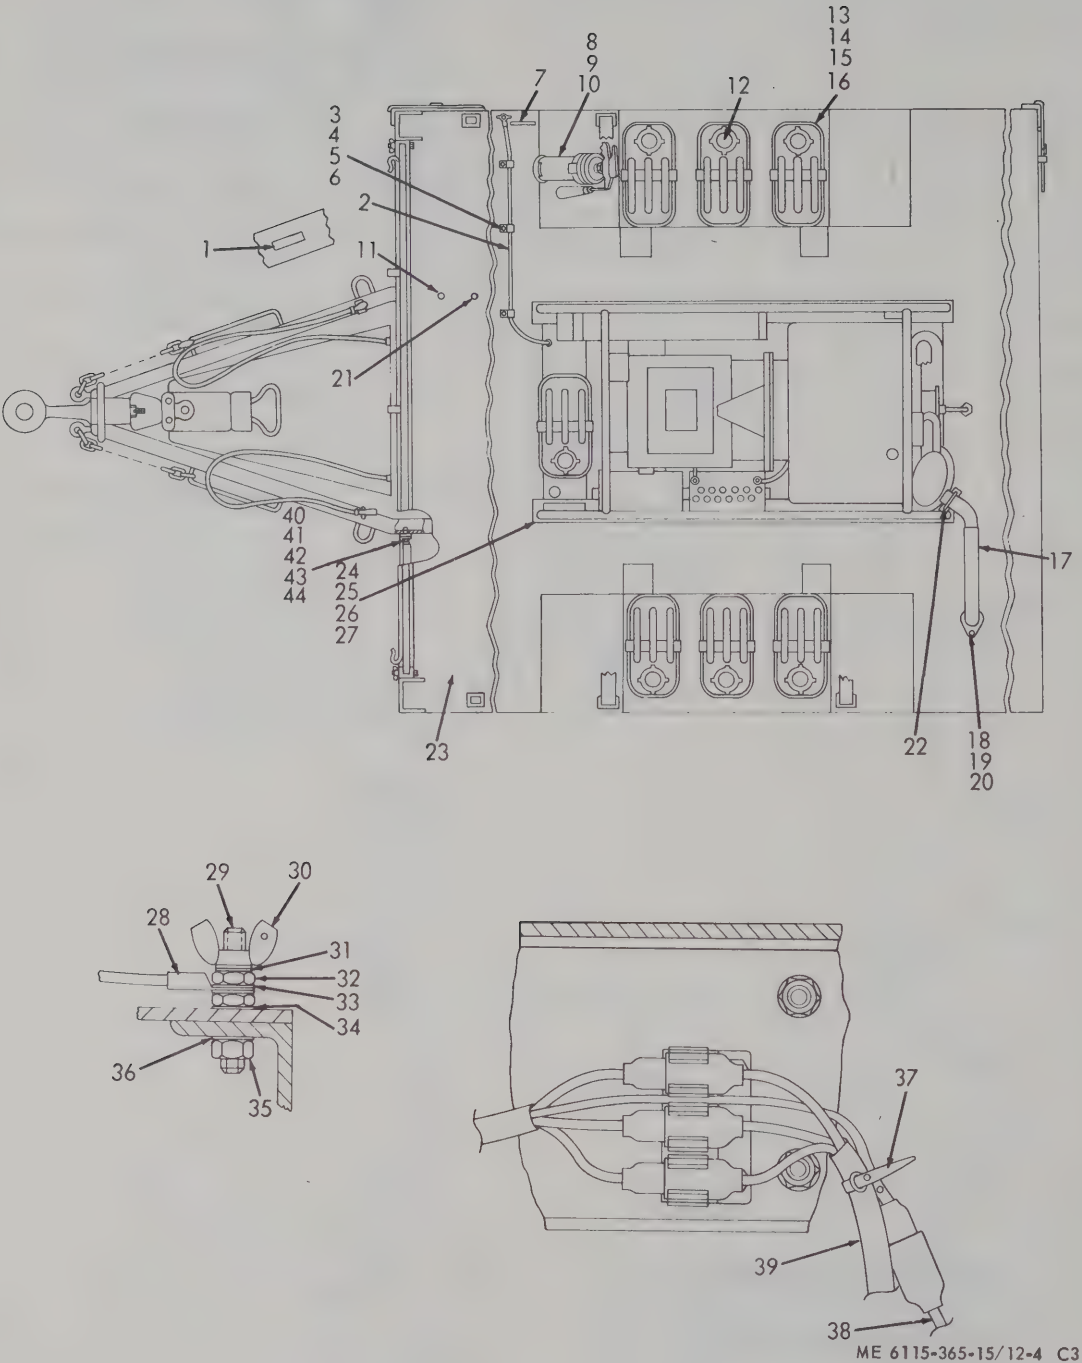


Figure 12-4. PU-564B/G accessories.

CHAPTER 13

GENERATOR SETS PU-253/U AND PU-253A/U

Section I. DESCRIPTION AND DATA

13-1. Description

a. General. The PU-253/U and PU-253A/U Generator Sets consist of either two PU-107/U or PU-107A/U gasoline Engine Generator sets (one in use, one standby), mounted on a 2-wheeled, box type, steel body, 1½-ton capacity, model M-105A1 or M-105E3 trailer.

Note. There is no switch gear assembly to transfer the load from the operating generator set to the standby generator set. The load is connected directly to the generator output terminals. For location of output terminals refer to applicable technical manuals (PU-107A/U generators) and (PU-107/U generators).

b. Interchangeability. The gasoline engine Generator Sets PU-107/U and PU-107A/U are interchangeable, and can be mounted as a mixed pair.

c. Function. The PU-253/U and PU-253A/U Generator Sets are a source of power for the Electronic Search Control AN/GSS-1 and for various types of electronic and communication equipment.

d. PU-107/U. For description and further information about PU-107/U, Generator Sets, refer to applicable technical manual, as shown on generator set nameplates or in DA Pam 310-4.

e. PU-107A/U. For description and further information about units equipped with PU-107A/U Generator Sets, refer to applicable technical manual, as shown on generator set nameplates or in DA Pam 310-4.



f. Generator. For description and further information about the O'Keefe and Merritt, permanent

magnet type, 28 pole, 120/208-volt, one- or three-phase, 400-cycle generator, Signal Corp stock number 3H2441-4, refer to applicable technical manual, as shown on nameplates or in DA Pam 310-4. Applicable technical manuals, as shown on nameplates or in DA Pam 310-4, will provide description and additional information on the John R. Hollingsworth Corporation model APG-H-11636 Generator.

g. Engine. Applicable technical manuals will provide description and maintenance instructions for Continental Motors Corporation model FS-162 gasoline engine. Applicable technical manuals, as shown on nameplate or in DA Pam 310-4, will contain description and maintenance instructions for Willys-Overland model 807532 gasoline engine.

h. Trailer. For further trailer information, refer to applicable technical manuals, as shown on trailer nameplate or in DA Pam 310-4.

i. Lubrication. Lubricate the trailer in accordance with instructions given in applicable lubrication order, as shown in DA Pam 310-4. Applicable lubrication order, as shown in DA Pam 310-4, contains instructions for lubricating the PU-107A/U Generator Set. Lubricate Willys-Overland gasoline engine model 807532 per applicable lubrication order, as shown in DA Pam 310-4. Lubricate Continental model FS-162 gasoline engine as instructed by applicable lubrication order, as shown in DA Pam 310-4. Applicable technical manual, as shown in DA Pam 310-4, contains instructions for lubricating the PU-107/U Generator Set.

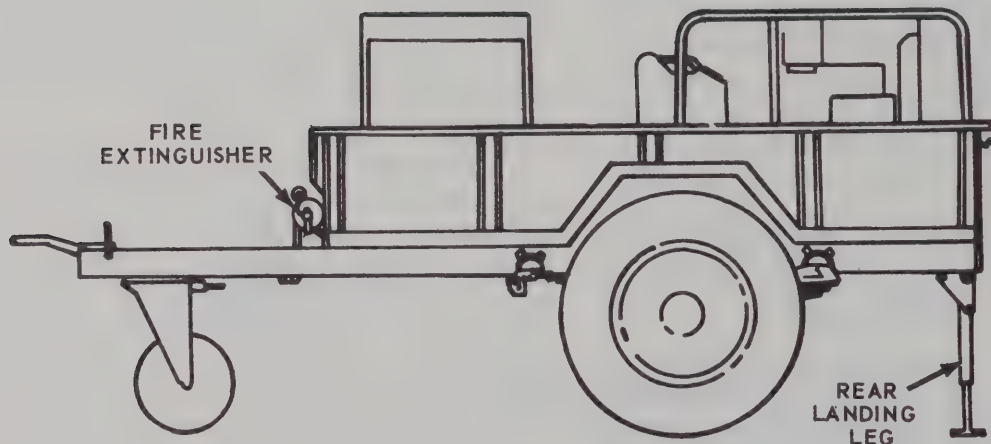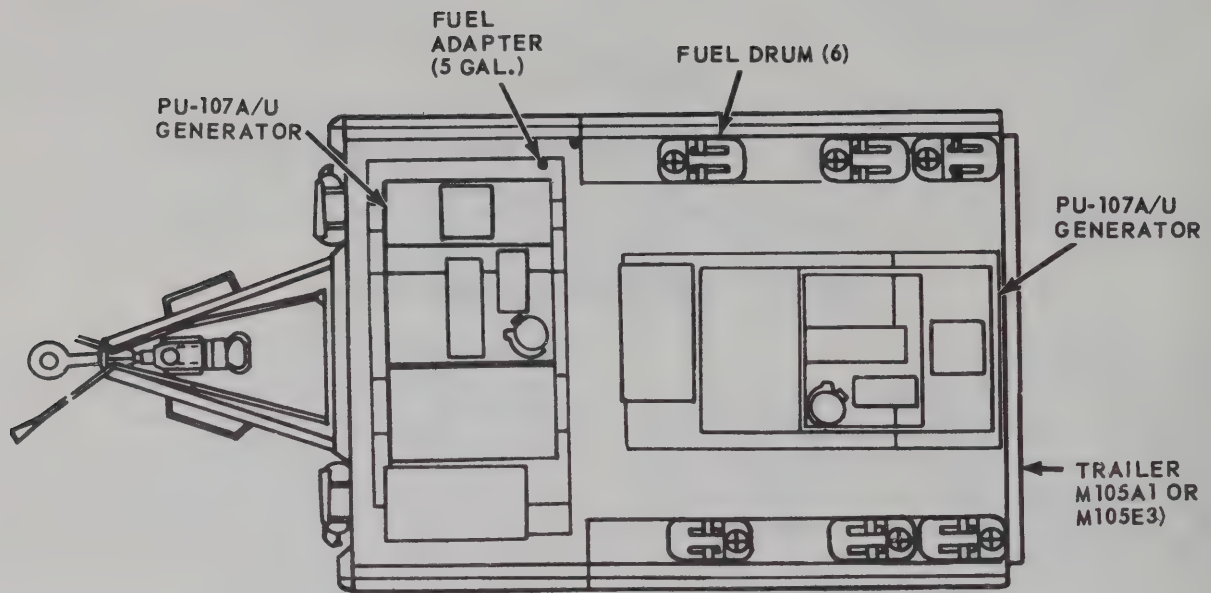

MEC 6115-365-15/13-1

Figure 13-1. Generator Set PU-253A/U.

Section II. REPAIR PARTS LIST

TM 5-6115-365-15

LINE NO.	SOURCE CODES			FEDERAL STOCK NUMBER	DESCRIPTION	UNIT OF ISSUE	QTY INCORPORATED IN UNIT	GUIDE QTY(S) PER MAJ EQUIPS					ILLUSTR	
	MATERIAL SOURCE	REPAIR	RECOVERABILITY					15 DAYS MAINTENANCE			DEPT MAINT	FIGURE NO.	ITEM NO.	
								ORGANIZATION	DS	GS				
														1-5
0002				GROUP 01 - ENGINE										
0003				0106 - ENGINE LUBRICATION SYSTEM										
0004	O	4730-277-6440		NIPPLE, TUBE, BULKHEAD	88044	AN832-10	2	*	*	*	*	*	*	
0005	X20	4720-913-6422		HOSE ASSEMBLY, RUBBER: OIL DRAIN	97403	13211E4918	2	*	*	*	*	*	*	
0006	O	5310-282-7822		NUT, UNION: OIL DRAIN HOSE	88044	AN924-10	2	*	*	*	*	*	*	
0007	O	5310-059-6372		WASHER, LOCK: OIL DRAIN HOSE	96906	MS35337-52	2	*	*	*	*	*	*	
0008				GROUP 04 - EXHAUST SYSTEM										
0009				0401 - MUFFLER AND PIPES										
0010	X20	6115-914-0256		HOSE ASSEMBLY, METAL: EXHAUST PIPE	97403	13214E1233-2	2	*	*	*	*	*	*	
0011	X20	4730-914-4678		ADAPTER, STRAIGHT, PIPE TO TUBE: EXHAUST PIPE	97403	13214E1234	2	*	*	*	*	*	*	
0012	X20			ELBOW, PIPE, STREET: EXHAUST PIPE, 90 DEG. 1 1/4 PIPE SIZE	96906	MS39230-7	2	*	*	*	*	*	*	
0013				GROUP 06 - ELECTRICAL SYSTEM (ENGINE AND VEHICULAR, ETC.)										
0014				0612 - BATTERIES, STORAGE (WET OR DRY)										
0015	X20	6140-914-5677		BOX, BATTERY	97403	13214E1242	2	*	*	*	*	*	*	
0016	X20			BASE, BATTERY BOX	97403	13214E1243	1	*	*	*	*	*	*	
0017	X20			TRAY, BATTERY	97403	13214E1244	1	*	*	*	*	*	*	
0018	X20			RETAINER, BATTERY BOX	97403	13214E1245	2	*	*	*	*	*	*	
0019	X20			RETAINER, BATTERY BOX	97403	13214E1246	1	*	*	*	*	*	*	
0020	X20			RETAINER, BATTERY	97403	13214E1247	1	*	*	*	*	*	*	
0021	X20			COVER, BATTERY BOX	97403	13214E1248	1	*	*	*	*	*	*	
0022	X20			THUMBSCREW: BATTERY BOX HOLDDOWN	97403	13214E1249	4	*	*	*	*	*	*	
0023	X20			LATCH SET: BATTERY BOX	97403	13214E1251-12SS	2	*	*	*	*	*	*	
0024	X20	5305-071-2235		SCREW, CAP, HEXAGON HEAD: BATTERY BOX MTG, 1/4-20 X 2-1/2 IN. LG	96906	MS90725-16	8	*	*	*	*	*	*	
0025	O	5310-809-4058		WASHER, FLAT: BATTERY BOX MTG	96906	MS27183-10	16	*	*	*	*	*	*	
0026	O	5310-088-1251		NUT, SELF-LOCKING, HEXAGON: BATTERY BOX MOUNTING	96906	MS51922-1	8	*	*	*	*	*	*	
0027				GROUP 15 - FRAME, TOWING ATTACHMENTS, AND DRAWBARS										
0028				1501 - FRAME ASSEMBLY										
0029	X20	2510-706-4504		BRACKET, LIQUID CONTAINER, FUEL CAN	97403	13214E1203	6	*	*	*	*	*	*	
0030	X20			HOOK, DRIP RAIL: STRAP	97403	13212E3616	6	*	*	*	*	*	*	
0031	X20			FASTENER	97403	13214E1205	6	*	*	*	*	*	*	
0032	X20			BUCKLE	96906	MS51940-7	12	*	*	*	*	*	*	
0033	M O			STRAP, TOP	97403	13214E1203-2	6							
0034	P O	8305-267-3009		MANUFACTURE FROM: WEBBING, NYLON (30 IN. REQUIRED FOR EACH STRAP)	06716	1403	FT	SEE	GRP	9501				
0035	M O			STRAP, BOTTOM	97403	13214E1203-3	6							
0036	P O	8305-267-3009		MANUFACTURE FROM: WEBBING, NYLON (18 IN. REQUIRED FOR EACH STRAP)	06716	1403	FT	SEE	GRP	9501				
0037	X20			BRACKET	97403	13214E1204	6	*	*	*	*	*	*	
0038	X20	5305-269-3210		SCREW, CAP, HEXAGON HEAD: FUEL CAN BRACKET MTG	96906	MS90725-59	24	*	*	*	*	*	*	
0039	O	5310-809-4061		WASHER, FLAT: FUEL CAN BRACKET MTG	96906	MS27183-15	24	*	*	*	*	*	*	
0040	O	5310-087-4652		NUT, SELF-LOCKING, HEXAGON: FUEL CAN BRACKET MTG	96906	MS51922-17	24	*	*	*	*	*	*	
0041	X20			LOOP, STRAP FASTENER: FUEL CAN	96906	MS51939-2	2	*	*	*	*	*	*	
0042	O	5305-984-6211		SCREW, MACHINE: LOOP MTG	96906	MS35206-264	4	*	*	*	*	*	*	
0043	O	5310-809-8546		WASHER, FLAT: LOOP MTG	96906	MS27183-8	4	*	*	*	*	*	*	
0044	O	5310-167-0662		WASHER, LOCK: LOOP MTG	96906	MS35337-43	4	*	*	*	*	*	*	
0045	O	5310-102-0361		NUT, PLAIN, HEXAGON: LOOP MTG	96906	MS35649-102	4	*	*	*	*	*	*	
0046	X20	6115-016-2362		HOLDER COMPONENT: FUEL DRUM ADAPTER EXTENSION	97403	13211E4889-1	4	*	*	*	*	*	*	
0047	O	5305-889-3000		SCREW, MACHINE: EXTENSION HOLDER MTG	96906	MS35206-230	8	*	*	*	*	*	*	
0048	O	5310-082-1404		WASHER FLAT: EXTENSION HOLDER MTG	96906	MS27183-6	8	*	*	*	*	*	*	
0049	O	5310-596-7674		WASHER, LOCK: EXTENSION HOLDER MTG	96906	MS35337-22	8	*	*	*	*	*	*	
0050	O	5310-062-0912		NUT, PLAIN, HEXAGON: EXTENSION HOLDER MOUNTING	96906	MS35649-64	8	*	*	*	*	*	*	
0051	X20	7240-920-5327		HOLDER, SPOUT: FUEL DRUM ADAPTER	97403	13212E3553-1	2	*	*	*	*	*	*	

LINE NO.	SOURCE CODES			FEDERAL STOCK NUMBER	DESCRIPTION	UNIT OF ISSUE	QTY INCORPORATED IN UNIT	GUIDE QTY(S) PER MAJ EQUIPS						ILLUST		
	MATERIAL	SOURCE	RECOVERABILITY					15 DAYS MAINTENANCE			DEPT MAINT	FIGURE NO.	ITEM NO.			
								ORGANIZATION	DS	GS						
MANUFACTURER'S																
CODE					PART NO.											
								1-5	6-10	100 EQUIPMENTS						
0052	X20			5306-225-8497	BOLT, MACHINE: ADAPTER HOLDER MTO 5/16-18 x 3/4 IN. LG	96906	MS90725-32	4	*	*	*	*	*	*		
0053	0			5310-081-4219	WASHER, FLAT: ADAPTER HOLDER MTO	96906	MS27183-12	8	*	*	*	*	*	*		
0054	0			5310-984-3806	NUT, SELF-LOCKING, HEXAGON: ADAPTER HOLDER MTO	96906	MS51922-9	4	*	*	*	*	*	*		
0055	X20				BRACKET ASSEMBLY, SLEDGE HAMMER	97403	13214E1214	1	*	*	*	*	*	*		
0056	X20				BRACKET	97403	13214E1215	1	*	*	*	*	*	*		
0057	0			5310-080-8495	NUT, PLAIN, WING	96906	MS35425-39	2	*	*	*	*	*	*		
0058	X20				PLATE, HOLDDOWN	97403	13214E1216	1	*	*	*	*	*	*		
0059	0			5310-809-4058	WASHER, FLAT	96906	MS27183-10	2	*	*	*	*	*	*		
0060	0			5310-043-5862	WASHER, LOCK	96906	MS35337-82	2	*	*	*	*	*	*		
0061	X20			5340-914-2578	CLIP, SPRING TENSION: SLEDGE HAMMER HANDLE	97403	13214E1213-1	1	*	*	*	*	*	*		
0062	X20			5305-068-0502	SCREW, CAP, HEXAGON HEAD: SLEDGE HAMMER AND CLIP MTO	96906	MS90725-6	3	*	*	*	*	*	*		
0063	0			5310-809-4058	WASHER, FLAT: SLEDGE HAMMER AND CLIP MTO	96906	MS27183-10	10	*	*	*	*	*	*		
0064	0			5310-088-1251	NUT, SELF-LOCKING, HEXAGON: SLEDGE HAMMER CLIP MTO, AND GROUND ROD CLAMP BRACKET	96906	MS51922-1	7	*	*	*	*	*	*		
0065	X20			5975-878-3791	ROD, GROUND		TYPE11STYLE2	1	*	*	*	*	*	*		
0066	X20				CLAMP, GROUND ROD	97403	13212E3617	2	*	*	*	*	*	*		
0067	0			5305-958-5246	SCREW, MACHINE: GROUND ROD CLAMP MTO	96906	MS35190-289	4	*	*	*	*	*	*		
0068	X20			5340-526-2559	CLAMP, LOOP: GROUND WIRE	96906	MS21919F2	2	*	*	*	*	*	*		
0069	0			5305-984-6211	SCREW, MACHINE: GROUND WIRE CLAMP MTO	96906	MS35206-264	2	*	*	*	*	*	*		
0070	0			5310-809-8546	WASHER, FLAT: GROUND WIRE CLAMP MTO	96906	MS27183-8	4	*	*	*	*	*	*		
0071	0			5310-167-0662	WASHER, LOCK: GROUND WIRE CLAMP MTO	96906	MS35337-43	4	*	*	*	*	*	*		
0072	0			5310-012-0361	NUT, PLAIN, HEXAGON: GROUND WIRE CLAMP MOUNTING	96906	MS35649-102	2	*	*	*	*	*	*		
0073	X20			5307-722-9437	STUD, CONTINUOUS THREAD: GROUND	97403	13214E1223	1	*	*	*	*	*	*		
0074	X20				WASHER, LOCK: BRONZE, EXTERNAL TOOTH, 3/8 IN. GROUND STUD	96906	MS35335-91	2	*	*	*	*	*	*		
0075	0			5310-835-7478	NUT, PLAIN, HEXAGON: BRASS, GROUND STUD TO TRAILER	96906	MS35691-611	2	*	*	*	*	*	*		
0076	X20			5310-900-6323	WASHER, FLAT: BRASS, GROUND STUD	96906	MS45901-7	2	*	*	*	*	*	*		
0077	0			5310-720-8528	NUT, PLAIN, HEXAGON: BRASS, GROUND STUD	96906	MS35690-611	1	*	*	*	*	*	*		
0078	0			5310-543-4717	NUT, PLAIN, WING: BRASS, GROUND STUD	96906	MS35425-8	1	*	*	*	*	*	*		
0079					1507 - LANDING GEAR, LEVELING JACKS (MECHANICAL OR HYDRAULIC)											
0080	X20			2590-318-6691	LEG TRAILER PROP	97403	13214E1206	1	*	*	*	*	*	*		
0081	X20				BRACKET	97403	13214E1207	1	*	*	*	*	*	*		
0082	X20				LEG ASSEMBLY, UPPER	97403	13214E1208	1	*	*	*	*	*	*		
0083	X20				CHAIN: PIN RETAINING	97403	132114E1208-6	1	*	*	*	*	*	*		
0084	X20				PIN	97403	13214E1208-5	1	*	*	*	*	*	*		
0085	X20				LEG, BASE	97403	13214E1212	1	*	*	*	*	*	*		
0086	X20				SHAFT	97403	13214E1209	1	*	*	*	*	*	*		
0087	0			4730-172-0049	FITTING, LUBRICATION	96906	MS15006-1	1	*	*	*	*	*	*		
0088	X20				SCREW	97403	13214E1210	1	*	*	*	*	*	*		
0089	X20				NUT	97403	13214E1211	1	*	*	*	*	*	*		
0090	X20				RIVET, SOLID, UNIVERSAL HEAD: 1/4 IN. DIA	96906	MS20613-8P32	1	*	*	*	*	*	*		
0091	X20				PIN, COTTER: 1/8 IN. DIA, 3/4 IN. LG	96906	MS24665-351	1	*	*	*	*	*	*		
0092	X20			5305-269-3213	SCREW, CAP, HEXAGON HEAD: LEG ASSEMBLY TO TRAILER, 3/8-16 x 1 1/4 IN. LG	96906	MS90725-62	3	*	*	*	*	*	*		
0093	0			5310-809-4061	WASHER, FLAT: LEG ASSEMBLY TO TRAILER	96906	MS27183-15	6	*	*	*	*	*	*		
0094	0			5310-087-4652	NUT, SELF-LOCKING, HEXAGON: LEG ASSEMBLY TO TRAILER	96906	MS51922-17	3	*	*	*	*	*	*		
0095					GROUP 18 - BODY, CAB, HOOD AND HULL											
0096					1810 - CARGO BODY (DUMP, STAKE, AND PLATFORM)											
0097	X2F			2330-141-8050	TRAILER: (MI05)	97403	13214E1241	1	*	*	*	*	*	*		
0098					GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS											
0099					2202 - ACCESSORY ITEMS											
0100	X20			7240-222-3088	CAN, GASOLINE: MILITARY, 5 GAL	MILC1283		2	*	*	*	*	*	*		
0101	X20			7240-177-6154	SPOUT, CAN, FLEXIBLE: FUEL CAN			2	*	*	*	*	*	*		
0102	X20			2910-066-1235	ADAPTER, ASSEMBLY FUEL TANK		13211E7541	2	*	*	*	*	*	*		
0103	X20				PIPE	97403	13211E7542	2	*	*	*	*	*	*		
0104	X20				WASHER, BRASS	97403	13211E7544	2	*	*	*	*	*	*		
0105	X20				SCREW, SHOULDER	97403	13211E7545	4	*	*	*	*	*	*		
0106	X20				RING, SEALING	97403	13211E7546	2	*	*	*	*	*	*		
0107	X20				WASHER, RUBBER	97403	13211E7547	2	*	*	*	*	*	*		
0108	X20				HEAD	97403	13211E7548	2	*	*	*	*	*	*		

LINE NO.	SOURCE CODES			FEDERAL STOCK NUMBER	DESCRIPTION	MANUFACTURER'S	UNIT OF ISSUE	QTY INCORPORATED IN UNIT	GUIDE QTY(S) PER MAJ EQUIP'S					ILLUST	
	MATERIAL	SOURCE	MAINT RECOVERABILITY						15 DAYS MAINTENANCE			DEPT MAINT	FIGURE NO.	ITEM NO.	
									ORGANIZATION	DS	GS				
									1-5	6-10	100 EQUIPMENTS				
0109	X20				WASHER, STEEL	97403 13200E6361		2	*	*	*	*	*		
0110	X20				CLAMP	97403 13200E6363		2	*	*	*	*	*		
0111	O			5310-209-1239	WASHER, LOCK: SHOULDER SCREW	96906 MS35335-60		4	*	*	*	*	*		
0112	X20				PIPE, EXTENSION	97403 13211E7542		2	*	*	*	*	*		
0113	X20			4730-914-4678	ADAPTER, STRAIGHT, PIPE TO HOSE	13214E1234		2	*	*	*	*	*		
0114					2210 - DATA PLATES AND INSTRUCTION HOLDERS										
0115	X20				NAMEPLATE: ACCESSORY BOX	14850 D900-468X		1	*	*	*	*	*		
0116	X20				NAMEPLATE: FIRE EXTINGUISHER	14850 D9-284-3		1	*	*	*	*	*		
0117	X20				NAMEPLATE: GENERATOR SET	97403 13212E3599		1	*	*	*	*	*		
0118	X20				WASHER, LOCK	96906 MS35337-77		4	*	*	*	*	*		
0119	X20			5305-058-2088	SCREW, TAPPING, THREAD FORMING	96906 MS24622-3		4	*	*	*	*	*		
0120	X20				NAMEPLATE: GROUND ROD	14850 D9-28A2		1	*	*	*	*	*		
0121	X20				NAMEPLATE: GROUND TERMINAL	14850 D9-11A		1	*	*	*	*	*		
0122	X20				NAMEPLATE: SLEDGE HAMMER	14850 D9-28A1		1	*	*	*	*	*		
0123	X20				SCREW, DRIVE: No. 2 NAMEPLATE MTO	14850 A1-1613F46		14	*	*	*	*	*		
0124	X20				PLATE, IDENTIFICATION	97403 13212E3599		1	*	*	*	*	*		
0125					GROUP 40 - ELECTRIC MOTORS AND GENERATORS										
0126					4000 - MAJOR ASSEMBLAGE										
0127	X2FR			6115-548-1377	GENERATOR SET, GASOLINE ENGINE	02032 APGH11636		2			*	*	*		
0128	X2F			5305-724-5910	SCREW, CAP, HEXAGON HEAD: GENERATOR MTO	96906 MS90725-162		8			*	*	*		
0129	X F			5310-823-8803	WASHER, FLAT: GENERATOR MTO	96906 MS27183-21		16			*	*	*		
0130	X2F				SHIM: GENERATOR MTO	97403 13214E1222-3		8			*	*	*		
0131	X2F			5310-269-4040	NUT, SELF-LOCKING, HEXAGON: GENERATOR MOUNTING	96906 MS51922-49		8			*	*	*		
0132					4019 - RADIO INTERFERENCE SUPPRESSION										
0133	M O				WIRE, ELECTRICAL (UNINSULATED): GENERATOR TO GROUND STUD			1							
0134	P O			6145-299-4456	MANUFACTURE FROM: WIRE, ELECTRICAL (LENGTH AS REQUIRED)	96906 QQM343	FT		SEE GRP 9501						
0135					GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS										
0136					7603 - FIRE EXTINGUISHERS										
0137	P10			4210-555-8837	EXTINGUISHER, FIRE: MONOBROMOTRIFLOUROMETHANE			1	*	*	*	*	*		
0138	X20				BRACKET, FIRE EXTINGUISHER	14850 D443C		1	*	*	*	*	*		
0139	X20			5305-068-0502	SCREW, CAP, HEXAGON HEAD: EXTINGUISHER MTO, 1/4-20 X 3/4 IN. LG	96906 MS90725-6		4	*	*	*	*	*		
0140	O			5310-809-4058	WASHER, FLAT: EXTINGUISHER MTO	96906 MS27183-10		8	*	*	*	*	*		
0141	O			5310-088-1251	NUT, SELF-LOCKING, HEXAGON: EXTINGUISHER MOUNTING	96906 MS51922-1		4	*	*	*	*	*		
0142	P10			4210-270-4512	EXTINGUISHER, FIRE			1	*	*	*	*	*		
0143	X20			6115-606-9338	BRACKET, FIRE EXTINGUISHER			1	*	*	*	*	*		
0144					GROUP 95 - GENERAL USE STANDARDIZED PARTS										
0145					9501 - BULK MATERIAL										
0146	P O			8305-267-3009	WEBBING, NYLON	06716 1403	FT		*	*	*	*	*		
0147	P O			6145-857-6903	WIRE, ELECTRICAL		FT		*	*	*	*	*		

CHAPTER 14

GENERATOR SETS PU-375/G AND PU-375A/G

Section I. DESCRIPTION AND DATA

14-1. Description

a. General. The PU-375/G and PU-375A/G Generator Sets consist of either a PU-107/U or PU-107A/U gasoline engine generator set, mounted on a two-wheel, box type steel body, $\frac{3}{4}$ -ton capacity, cargo trailer, type M101.

b. Function. The PU-375/G and PU-375A/G Generator Sets provide mobile facilities for AC and DC power for Radio Set AN/TPS-1D.

c. PU-107/U. For description and further information on PU-107/U Generator Sets, refer to applicable technical manual, as shown on generator set nameplate or in DA Pam 310-4.

d. PU-107A/U. For description and further information about units equipped with PU-107A/U Generator Sets, refer to applicable technical manual, as shown on generator set nameplate or in DA Pam 310-4, and DA supply manual ENG 7, 8 and 9.


e. Generator. For description and further information about the O'Keefe and Merritt, permanent magnet type, 28-pole, 120/208-volt, one- or three-phase, 400-cycle generator, Signal Corp, stock number 3H2441-4, refer to TM 11-919. Applicable technical manuals, as shown on nameplate or in DA Pam 310-4, will provide description and addi-

tional information on the John R. Hollingsworth Corporation model APG-H-11636 Generator.

f. Engine. Applicable technical manuals, as shown on nameplates or in DA Pam 310-4, provide description and maintenance instructions for Continental Motors Corporation model FS-162 gasoline engine. Applicable technical manuals, as shown on nameplate or in DA Pam 310-4, contain description and maintenance instructions for Willys-Overland model 807532 gasoline engine.

g. Trailer. For further trailer information, refer to applicable technical manual, as shown on trailer nameplate or in DA Pam 310-4.

h. Lubrication. Lubricate the trailer in accordance with instructions given in applicable technical manual, as shown in DA Pam 310-4. Applicable lubrication orders, as shown in DA Pam 310-4, contains instructions for lubricating the PU-107A/U Generator Set. Lubricate Willys-Overland gasoline model 807532 per LO 5-5235. Lubricate Continental model FS-162 gasoline engine as instructed by applicable lubrication order, as shown in DA Pam 310-4. Applicable technical manual, as shown in DA Pam 310-4, contains instructions for lubricating the PU-107/U Generator Set.

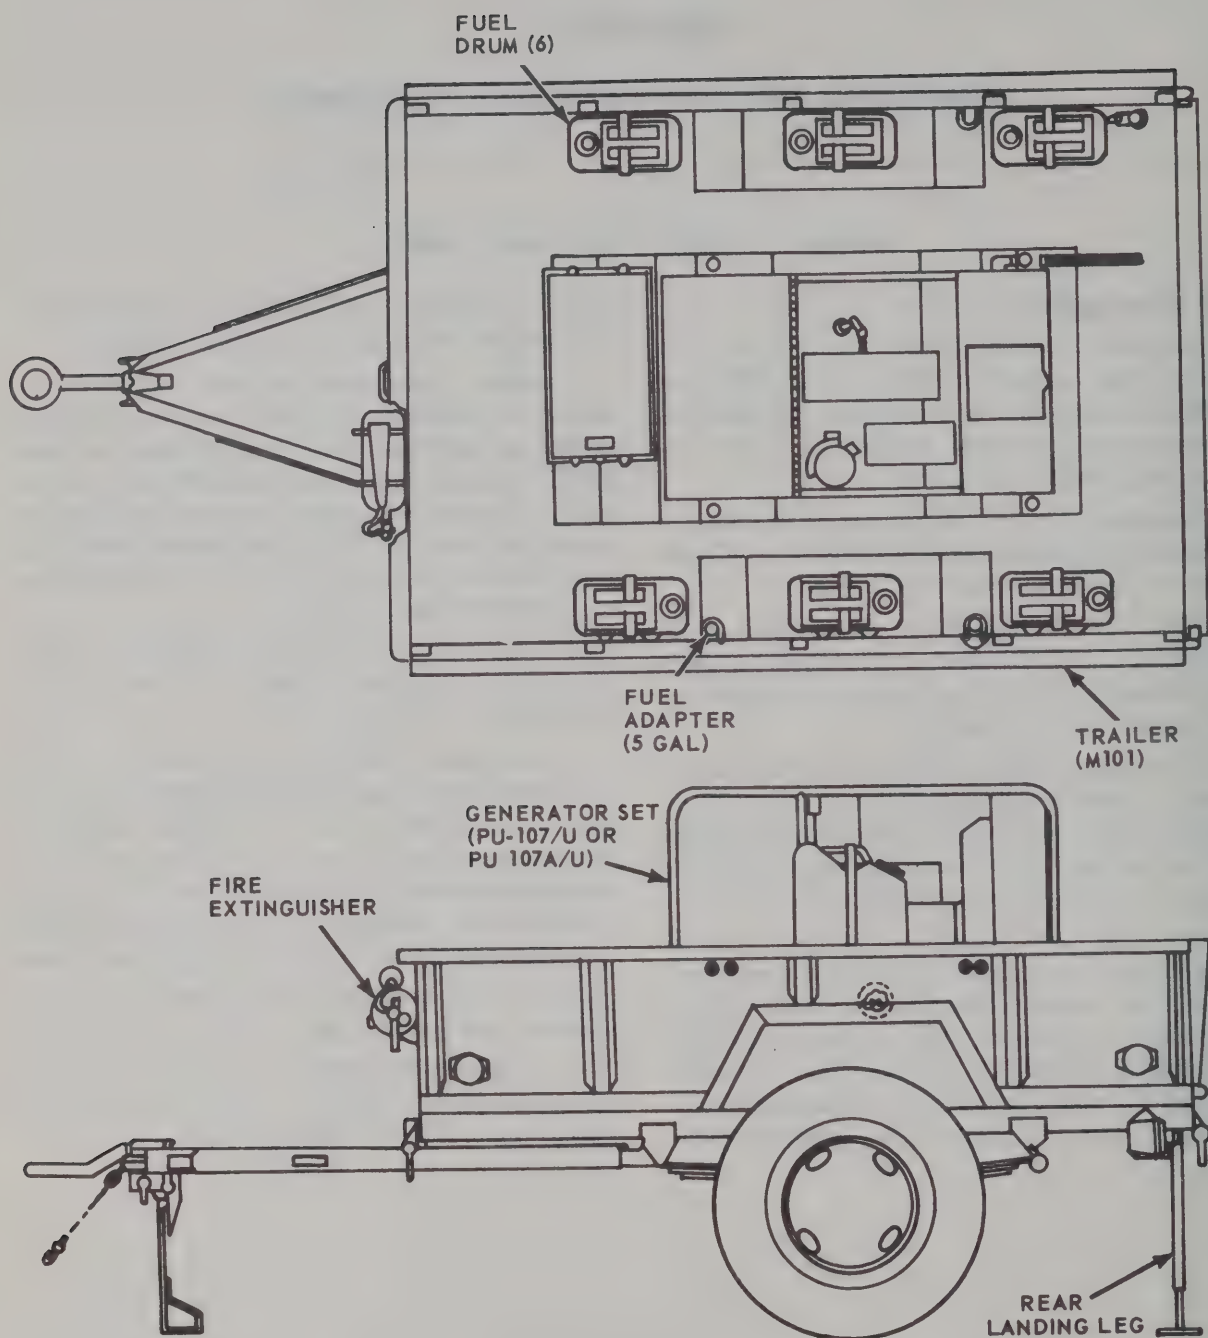

MEC 6115-365-15/14-1

Figure 14-1. Generator Set PU-375A/G.


Section II. REPAIR PARTS LIST
(Parts data will be developed at a later date)

TM 5-6115-365-15

15-3

LINE NO.	SOURCE CODES		FEDERAL STOCK NUMBER	DESCRIPTION	UNIT OF ISSUE	QTY INCORPORATED IN UNIT	GUIDE QTY(S) PER MAJ EQUIPS					ILLUSTR	
	MATERIAL	RECOVERABILITY					15 DAYS MAINTENANCE			DEPT MAINT			
							ORGANIZATION	DS	GS				
											1-5		6-10
				MANUFACTURER'S									
				CODE	PART NO.								
0055				1810 - CARGO BODY (DUMP, STAKE, AND PLATFORM)									
0056	X2FR		2330-331-2307	TRAILER: 2 1/2 TON M200A1		1		*	*	*			
0057				GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS									
0058				2202 - ACCESSORY ITEMS									
0059	X20		6145-189-6695	LEAD, GROUND		1	*	*	*	*	*		
0060	X20		7240-222-3088	CAN, FUEL: 5 GAL		2	*	*	*	*	*		15-2 2
0061	X20		7240-177-6154	NOZZLE, FLEXIBLE: FUEL CAN		1	*	*	*	*	*		
0062	X20		6115-319-3991	ADAPTER, FUEL CAN		1	*	*	*	*	*		
0063	X20			PIPE	97403 13211E7543	1	*	*	*	*	*		
0064	X20			WASHER, BRASS	97403 13211E7544	2	*	*	*	*	*		
0065	X20			SCREW, SHOULDER	97403 13211E7545	2	*	*	*	*	*		
0066	X20			RING, SEALING	97403 13211E7546	1	*	*	*	*	*		
0067	X20			WASHER, RUBBER	97403 13211E7547	1	*	*	*	*	*		
0068	X20			HEAD	97403 13211E7548	1	*	*	*	*	*		
0069	X20			WASHER, STEEL	97403 13200E6361	1	*	*	*	*	*		
0070	X20			CLAMP	97403 13200E6363	1	*	*	*	*	*		
0071	0		5310-209-1239	WASHER, LOCK	96906 M535335-60	1	*	*	*	*	*		
0072	X20			PIPE, EXTENSION	97403 13211E7542	1	*	*	*	*	*		
0073	0		4730-278-3357	ADAPTER, STRAIGHT: HOSE		1	*	*	*	*	*		
0074				2210 - DATA PLATES AND INSTRUCTION HOLDERS									
0075	X20			NAMEPLATE: ACCESSORY BOX	14850 D900-468X	1	*	*	*	*	*		
0076	X20			NAMEPLATE: FIRE EXTINGUISHER	14850 D9-284-3	2	*	*	*	*	*		
0077	X20			NAMEPLATE: GROUND ROD	14850 D9-28A2	1	*	*	*	*	*		
0078	X20			NAMEPLATE: GROUND ROD	14850 D9-11A	1	*	*	*	*	*		
0079	X20			NAMEPLATE, IDENTIFICATION: POWER UNIT	97403 13212E3599	1	*	*	*	*	*		
0080	X20			NAMEPLATE: SLEDGE HAMMER	14850 D9-28A1	1	*	*	*	*	*		
0081	X20			NAMEPLATE, IDENTIFICATION: DISTRIBUTION BOX	97403 13214E1284	1	*	*	*	*	*		
0082	X20			NAMEPLATE: WIRING DIAGRAM	97403 13214E1283	1	*	*	*	*	*		
0083	X20			SCREW, TAPPING: PAN HEAD, NAMEPLATE MTO, No. 2-32 x 1/4 IN. LG	96906 M524622-3	2	*	*	*	*	*		
0084	X20			SCREW, TAPPING: PAN HEAD, NAMEPLATE MTO, No. 4-24, 1/4 IN. LG	96906 M524622-8	8	*	*	*	*	*		
0085	X20			SCREW, TAPPING: PAN HEAD, NAMEPLATE MTO, No. 4, 5/16 IN. LG	96906 M524646-9	14	*	*	*	*	*		
0086				GROUP 40 - ELECTRIC MOTORS AND GENERATORS									
0087				4000 - MAJOR ASSEMBLAGE									
0088	X2FR		6115-970-0006	GENERATOR, DIESEL ENGINE: 45 KW		1		*	*	*	*		15-2 4
0089	X2F		5306-180-0094	BOLT, MACHINE: AIRCRAFT, 5/8-18, 41/64 IN. LG, GENERATOR MTO	88044 AN10-14A	4		*	*	*	*		
0090	X2F			NUT, SELF-LOCKING, HEXAGON: GENERATOR MOUNTING	96906 M551922-53	4		*	*	*	*		
0091	X2F			WASHER, BEVELED: GENERATOR MTO	97403 13206E4482-3	4		*	*	*	*		
0092	F		5310-951-7209	WASHER, FLAT: GENERATOR MTO	96906 M527183-22	4		*	*	*	*		
0093				4019 - RADIO INTERFERENCE SUPPRESSION									
0094	M 0			WIRE, ELECTRICAL: GENERATOR TO GROUND STUD	81349 QMW343	1							
0095	P 0		6145-857-6903	MANUFACTURE FROM: WIRE, ELECTRICAL (LENGTH AS REQUIRED)		FT	SEE ORP 9501						
0096				GROUP 42 - ELECTRICAL EQUIPMENT									
0097				4201 - TRANSFORMER, POWER LINE OR DISTRIBUTION									
0098	X20			DISTRIBUTION BOX	97403 13214E1276	1	*	*	*	*	*		
0099	X20			BOX: DISTRIBUTION	97403 13214E1277	1	*	*	*	*	*		
0100	X20			TERMINAL BOARD: DISTRIBUTION BOX	97403 13214E1278	1	*	*	*	*	*		
0101	X20			SCREW, CAP, HEXAGON HEAD: TERMINAL BOARD MTO	96906 M590725-9	6	*	*	*	*	*		
0102	0		5310-809-1058	WASHER, FLAT: TERMINAL BOARD MTO	96906 M527183-10	4	*	*	*	*	*		
0103	0		5310-088-1251	NUT, SELF-LOCKING, HEXAGON: TERMINAL BOARD MTO	96906 M551922-1	6	*	*	*	*	*		
0104	X20			STUD, SHOULDER: DISTRIBUTION BOX MTO	97403 13214E1279-3	4	*	*	*	*	*		
0105	X20			WASHER, FLAT: DISTRIBUTION BOX MTO	96906 M545901-7	20	*	*	*	*	*		

LINE NO.	SOURCE CODES		FEDERAL STOCK NUMBER	DESCRIPTION	MANUFACTURER'S	UNIT OF ISSUE	QTY INCORPORATED IN UNIT	GUIDE QTY(S) PER MAJ EQUIPS					ILLUST	
	MATERIAL SOURCE	MAINT RECOVERABILITY						15 DAYS MAINTENANCE			DEPT MAINT	FIGURE NO.	ITEM NO.	
								ORGANIZATION	DS	GS				
								1-5	6-10	100 EQUIPMENTS				
0106	0		5310-576-0548	WASHER, LOCK: DISTRIBUTION BOX MTO	96906 MS35337-103		12	*	*	*	*	*		
0107	0		5310-685-2632	NUT, PLAIN, HEXAGON: DISTRIBUTION BOX MOUNTING	96906 MS35691-612		16	*	*	*	*	*		
0108	X20			PANEL	97403 13214E1280		1	*	*	*	*	*		
0109	0		5305-988-1722	SCREW, MACHINE: PAN HEAD, PANEL MTO	96906 MS35206-278		8	*	*	*	*	*		
0110	X20			NAMEPLATE: DISTRIBUTION BOX	97403 13214E1284		1	SEE GRP 2210	*	*	*	*		
0111	X20			CABLE ASSEMBLY: DISTRIBUTION BOX	97403 13214E1282-1		1	*	*	*	*	*		
0112	X20			CABLE ASSEMBLY: DISTRIBUTION BOX	97403 13214E1282-2		1	*	*	*	*	*		
0113	X20			SCREW, MACHINE: PAN HEAD, No. 10-32, 5/8 IN. LG	96906 MS35207-264		8	*	*	*	*	*		
0114	X20		5310-809-8546	WASHER, FLAT	96906 MS27183-8		8	*	*	*	*	*		
0115	X20		5310-167-0662	WASHER, LOCK	96906 MS35337-43		8	*	*	*	*	*		
0116	0		5310-012-0614	NUT, PLAIN, HEXAGON	96906 MS35650-102		8	*	*	*	*	*		
0117	X20			NAMEPLATE: WIRING DIAGRAM	97403 13214E1283		1	SEE GRP 2210	*	*	*	*		
0118	X20			CONNECTOR AND LOCKNUT	97403 13212E3582-3		1	*	*	*	*	*		
0119	X20			COVER, ELECTRICAL CONNECTOR	96906 MS17349N368		2	*	*	*	*	*		
0120				GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS										
0121				7603 - FIRE EXTINGUISHERS										
0122	P10		4210-555-8837	EXTINGUISHER, FIRE			1	*	*	*	*	*	15-2 6	
0123	X20		6115-606-9938	BRACKET, FIRE EXTINGUISHER (USED WITH FIRE EXTINGUISHER Stock No. 4210-555-8837)	14850 D443C		1	*	*	*	*	*		
0124	X20		5305-068-0502	SCREW, CAP, HEXAGON HEAD: EXTINGUISHER MTO, 1/4-20, 3/4 IN. LG	96906 MS90725-6		4	*	*	*	*	*		
0125	0		5310-809-4058	WASHER, FLAT: EXTINGUISHER MTO	96906 MS27183-10		8	*	*	*	*	*		
0126	0		5310-088-1251	NUT, SELF-LOCKING, HEXAGON: EXTINGUISHER MOUNTING	96906 MS51922-1		8	*	*	*	*	*		
0127	P10		4210-270-4512	EXTINGUISHER, FIRE			1	*	*	*	*	*		
0128	X20		6115-606-9938	BRACKET, FIRE EXTINGUISHER (USED WITH FIRE EXTINGUISHER Stock No. 4210-270-4512)			1	*	*	*	*	*		
0129				GROUP 95 - GENERAL USE STANDARDIZED PARTS										
0130				9501 - BULK MATERIAL										
0131	P 0		8305-267-3009	WEBBING, NYLON	06716 1403	FT		*	*	*	*	*		
0132	P 0		6145-857-6903	WIRE, ELECTRICAL		FT		*	*	*	*	*		

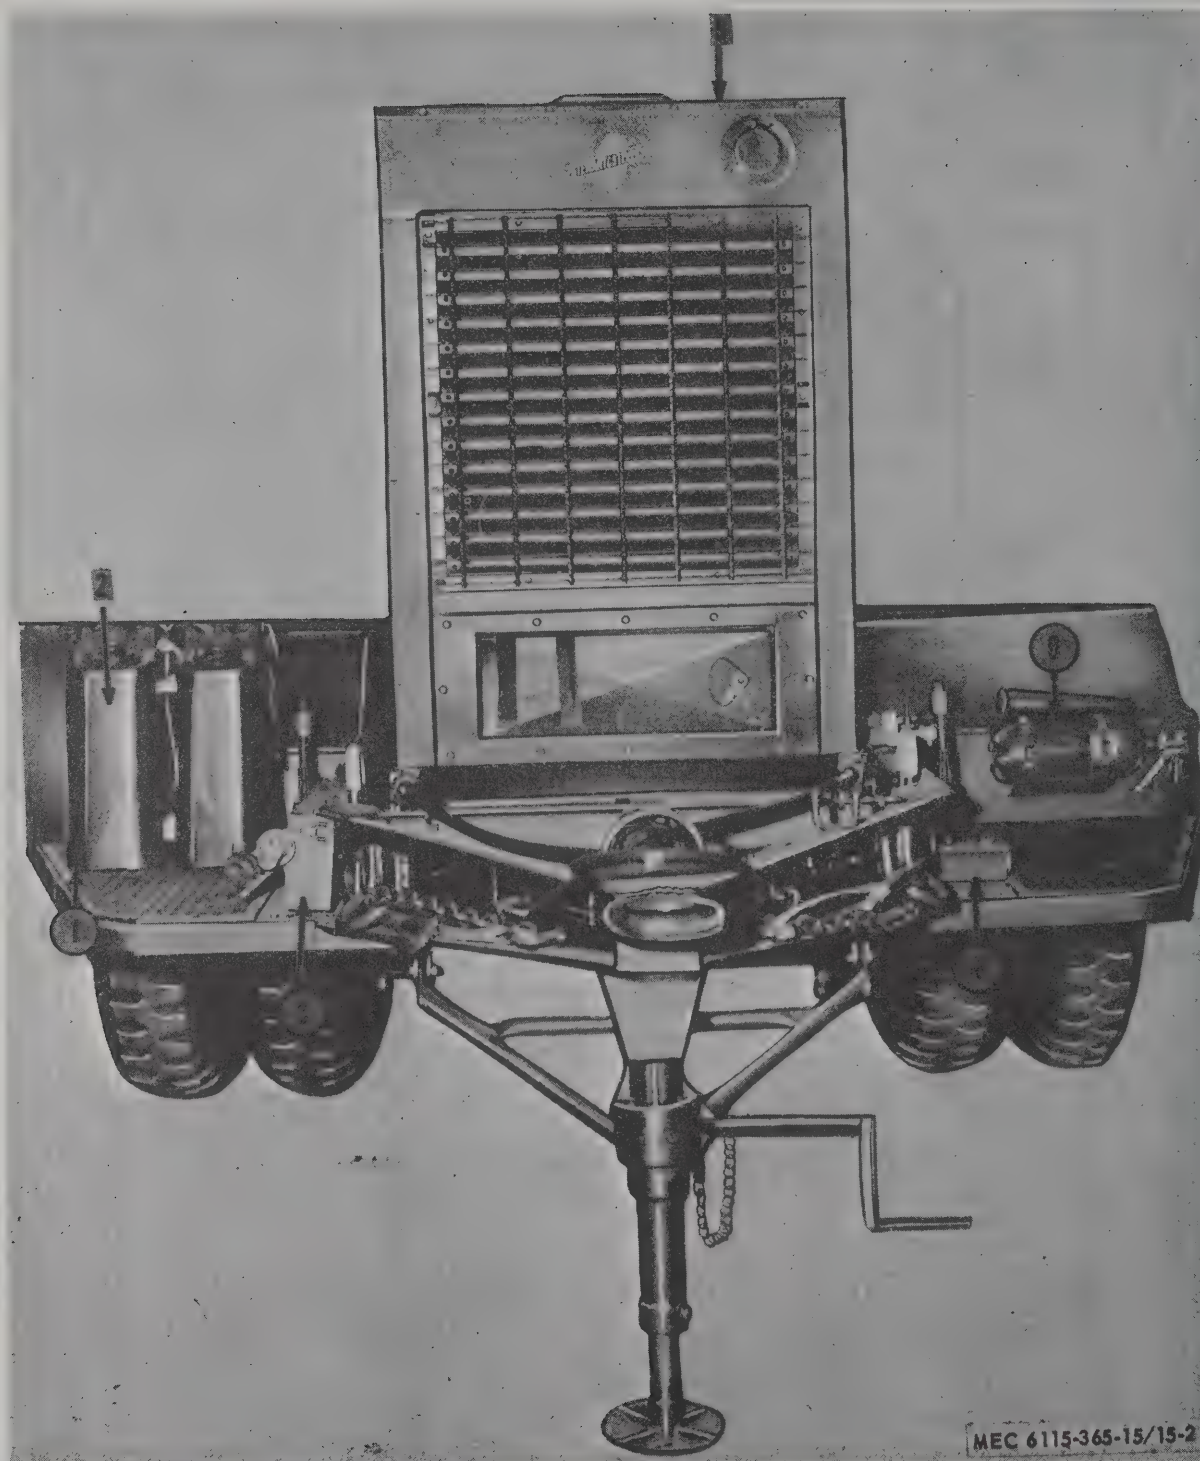

- 1 Bracket
- 2 Can
- 3 Box

- 4 Bracket
- 5 Generator
- 6 Extinguisher

Figure 15-2. Accessories.

CHAPTER 16

GENERATOR SET PU-304C/MPQ-4

Section I. DESCRIPTION AND DATA

16-1. Description

a. General. A 10-kw, model HF-10-MD generator set and auxiliary MPQ-4 radar components, mounted on a 1 1/2-ton trailer, model M103A3, comprise the self-contained mobile unit referred to as Trailer Mounted Generator Set PU-304C/MPQ-4 (See figures 16-1 and 16-2). The generator is powered by a directly coupled 4-cylinder, 20 hp, Military Standard Model 4A084-II engine. The function of the generator set is to supply power to operate MPQ-4 Radar Set (Refer to TM 11-5840-208-10, -20, -30, and -45). PU-304C/MPQ-4 includes the components listed below in Table 16-1.

b. Generator. For description and further generator operation and maintenance information not covered in this chapter, refer to TM 5-6115-450-15.

c. Engine. For description and further engine operation and maintenance information not covered in this chapter, refer to TM 5-2805-259-14.

d. Trailer. For description and trailer maintenance information not covered in this chapter, refer to TM 9-2330-213-14.

e. Lubrication. Refer to LO 5-2805-259-14 and LO 9-2330-213-12 for lubrication information required for PU-304C/MPQ-4.

f. Radar Equipment. For description and radar set information, refer to TM 11-5840-208. The following radar equipment is stowed on the trailer when used as a transporter: (See figure 16-2).

- (1) Electrical equipment shelter
- (2) Shelter blower assemblies (2)
- (3) Accessory cases (2)
- (4) Control indicator stand
- (5) Seat support (2)
- (6) Cables and reels (2)

16-2. Tabulated Data

Table 16-1. Lists the components for PU-304C/MPQ-4
Comments.

Fsn	Qty	Nomenclature
2330-141-8052	1	Trailer: M103A3
	1	Generator: 10-kw, Model HF-10-MD
2590-318-6691	1	Leg prop assembly, trailer
2910-066-1235	4	Adapter assembly, fuel drum
7240-222-3088	6	Can, gasoline: military 5-gallon
4210-555-8873	1	Fire extinguisher
5975-878-3791	2	Ground rod (w/attachments)
5120-251-4489	1	Sledge hammer

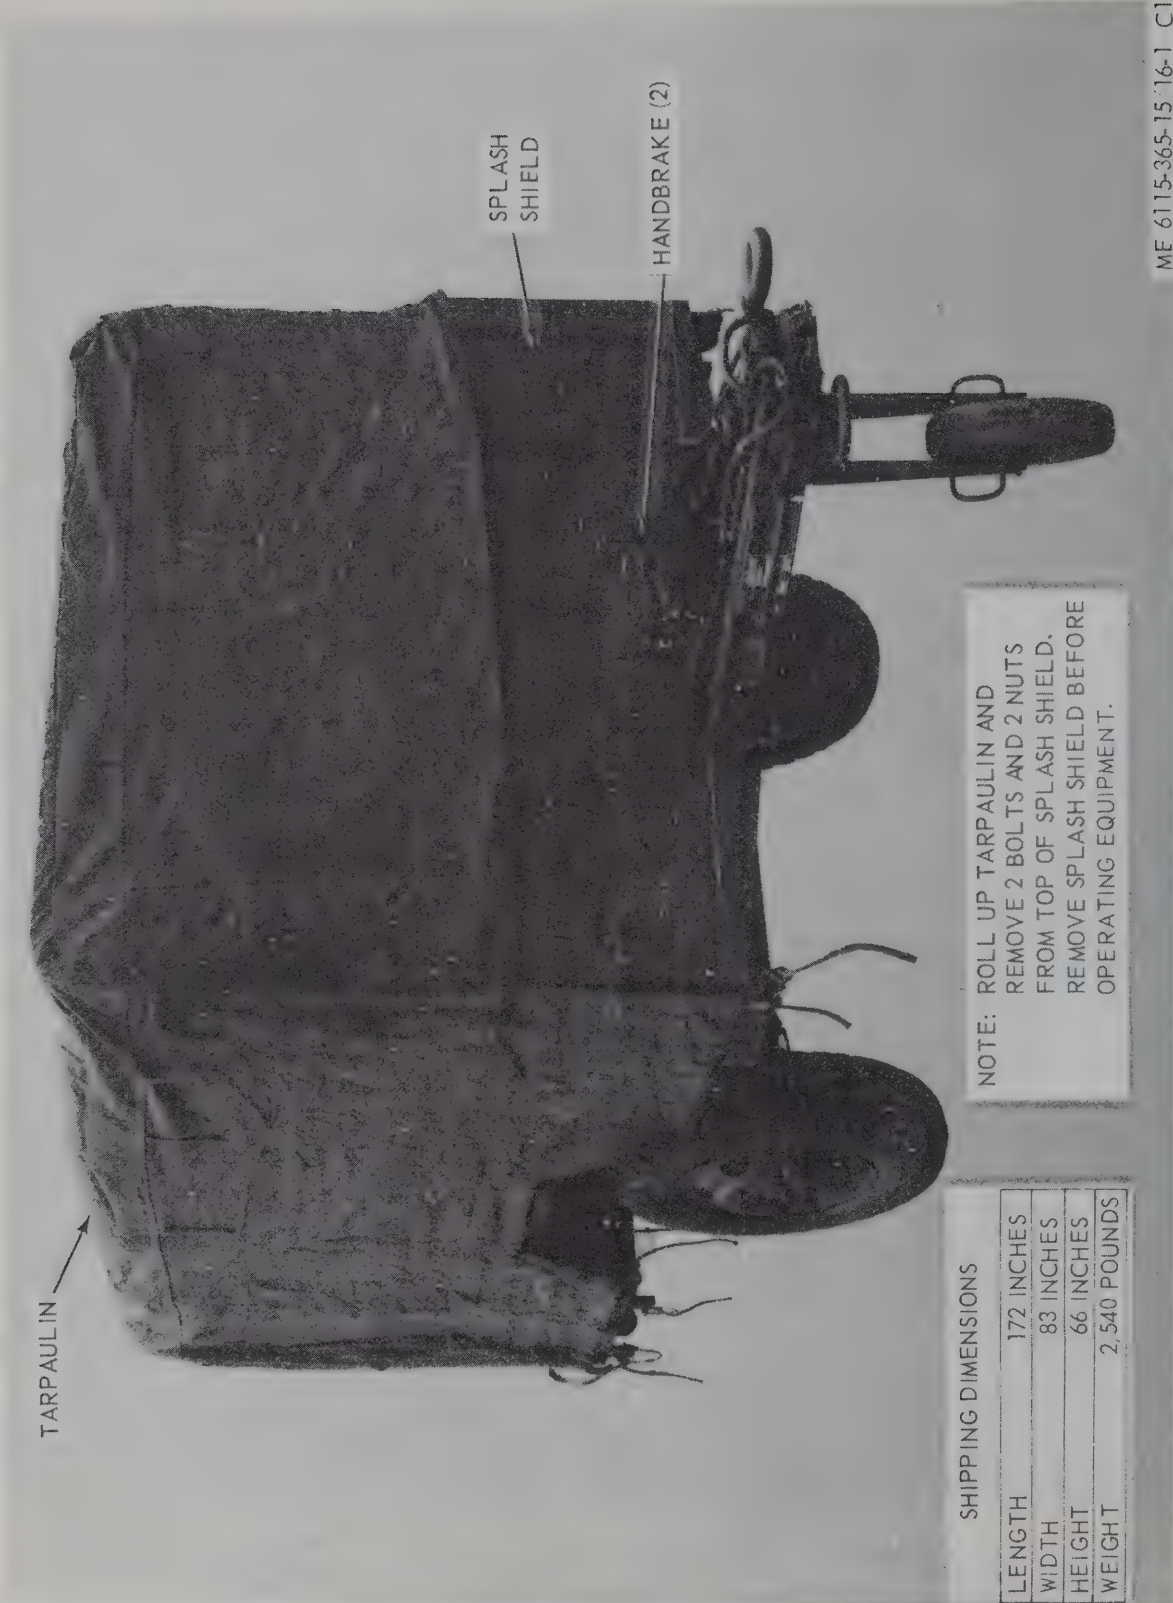


Figure 16-1. PU-904C/MPQ-4, right front, 3/4 view.

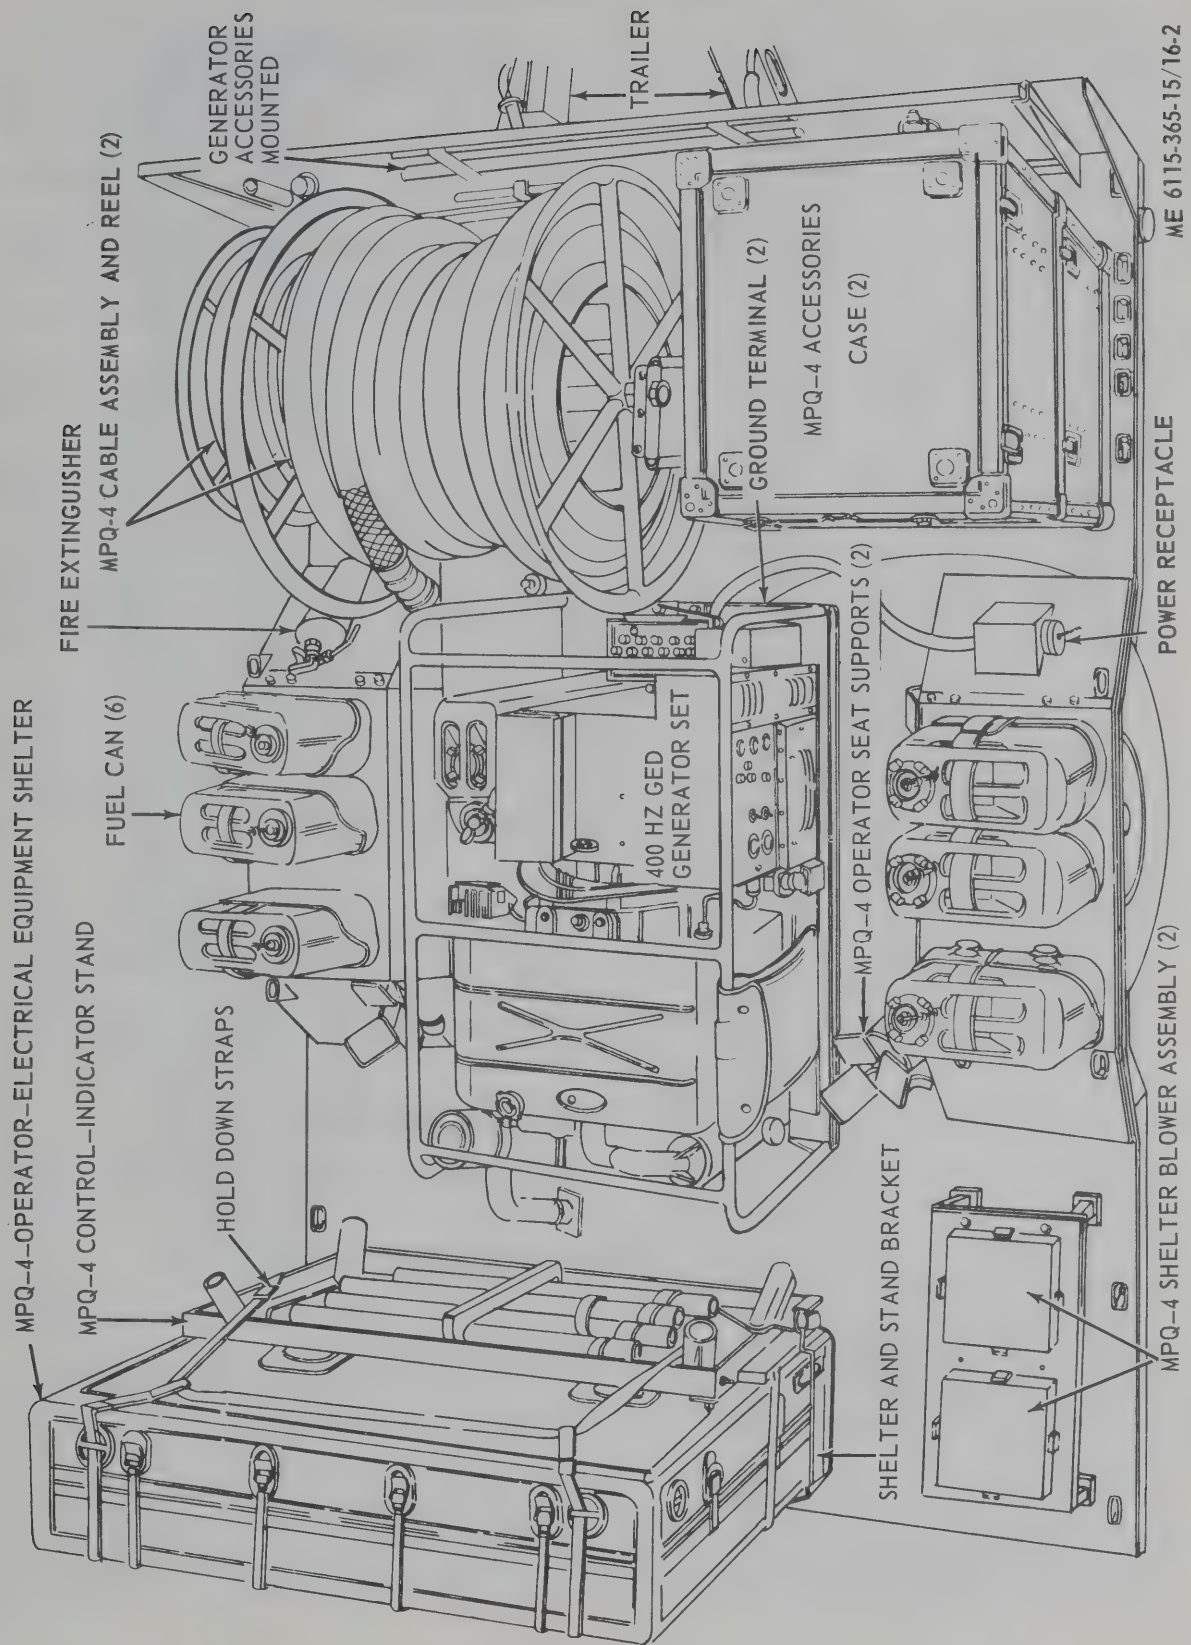


Figure 16-2. PU-804C/MPQ-4 overall view showing radar equipment stowed.

Section II. OPERATING INSTRUCTIONS

16-3. Setting-Up Instructions

a. Leveling.

(1) Locate the trailer on as level a surface as possible in order for the generator sets to operate efficiently.

(2) Set brakes and block wheels securely to prevent any movement. Operate the hand-brake at weekly intervals to assure freedom of linkage.

(3) Pull leg support down and adjust length for firm contact with ground.

Warning: Wheels must be blocked, brakes set, and leg support down in support position before attempting to roll up the tarpaulin and before starting to assemble or set up the equipment for operation.

b. Preparation For Starting.

(1) Roll up tarpaulin, remove splash shield and set it aside as shown in figure 16-3.

(2) Remove all loose auxiliary items and anything else that might restrict the free circulation of air through the trailer and around the generator set. There should be a minimum of 25 inches of air space on all sides of the generator.

Caution: It is of foremost importance that there be free circulation of air around the generator set at all times during operation. Inadequate ventilation is a major cause of damage to the equipment.

(3) Connect the load cable as shown in figure 16-4.

c. Grounding.

Warning: Never operate the generator set until it has been properly grounded. Electrical defects in the load lines or equipment can cause death by electrocution when contact is made with an ungrounded system.

(1) The generator set must be grounded prior to operation. The ground may be any of three methods, depending on the location and terrain:

(a) A ground rod driven to a depth of 8 feet.

(b) An underground metallic water piping system.

(c) A metal plate (4 ft. sq) buried at a depth of 4 feet.

(2) The ground lead must be No. 6 AWG copper wire bolted or clamped to the rod, plate, or piping system.

(3) Connect the other end of the ground lead to the generator set ground terminal stud and connect the generator to the ground terminal stud and connect the generator to the ground terminal stud as shown in figure 16-3.

d. Fuel Hose Connection. Connect the fuel hoses as illustrated in figure 16-5.

Warning: Never operate the generator set in an enclosed area unless the exhaust gases are piped to the outside. Inhalation of exhaust fumes will result in serious illness or death.

16-4. Starting

a. Perform the setting-up and pre-starting procedures (para 16-3).

b. Start the generator set as instructed in TM 5-6115-450-15.

16-5. Stopping

Stop the generator set as instructed in TM 5-6115-450-15.


16-6. Operation

a. Operate the generator set as instructed in TM 5-6115-450-15.

b. Perform the fuel transfer procedure as instructed in figure 16-5.

CAUTION: BE SURE THERE IS A MINIMUM OF 25 INCHES OF AIR SPACE ON ALL SIDES OF THE GENERATOR DURING OPERATION.

KEEP TARP ROLLED UP DURING OPERATION.

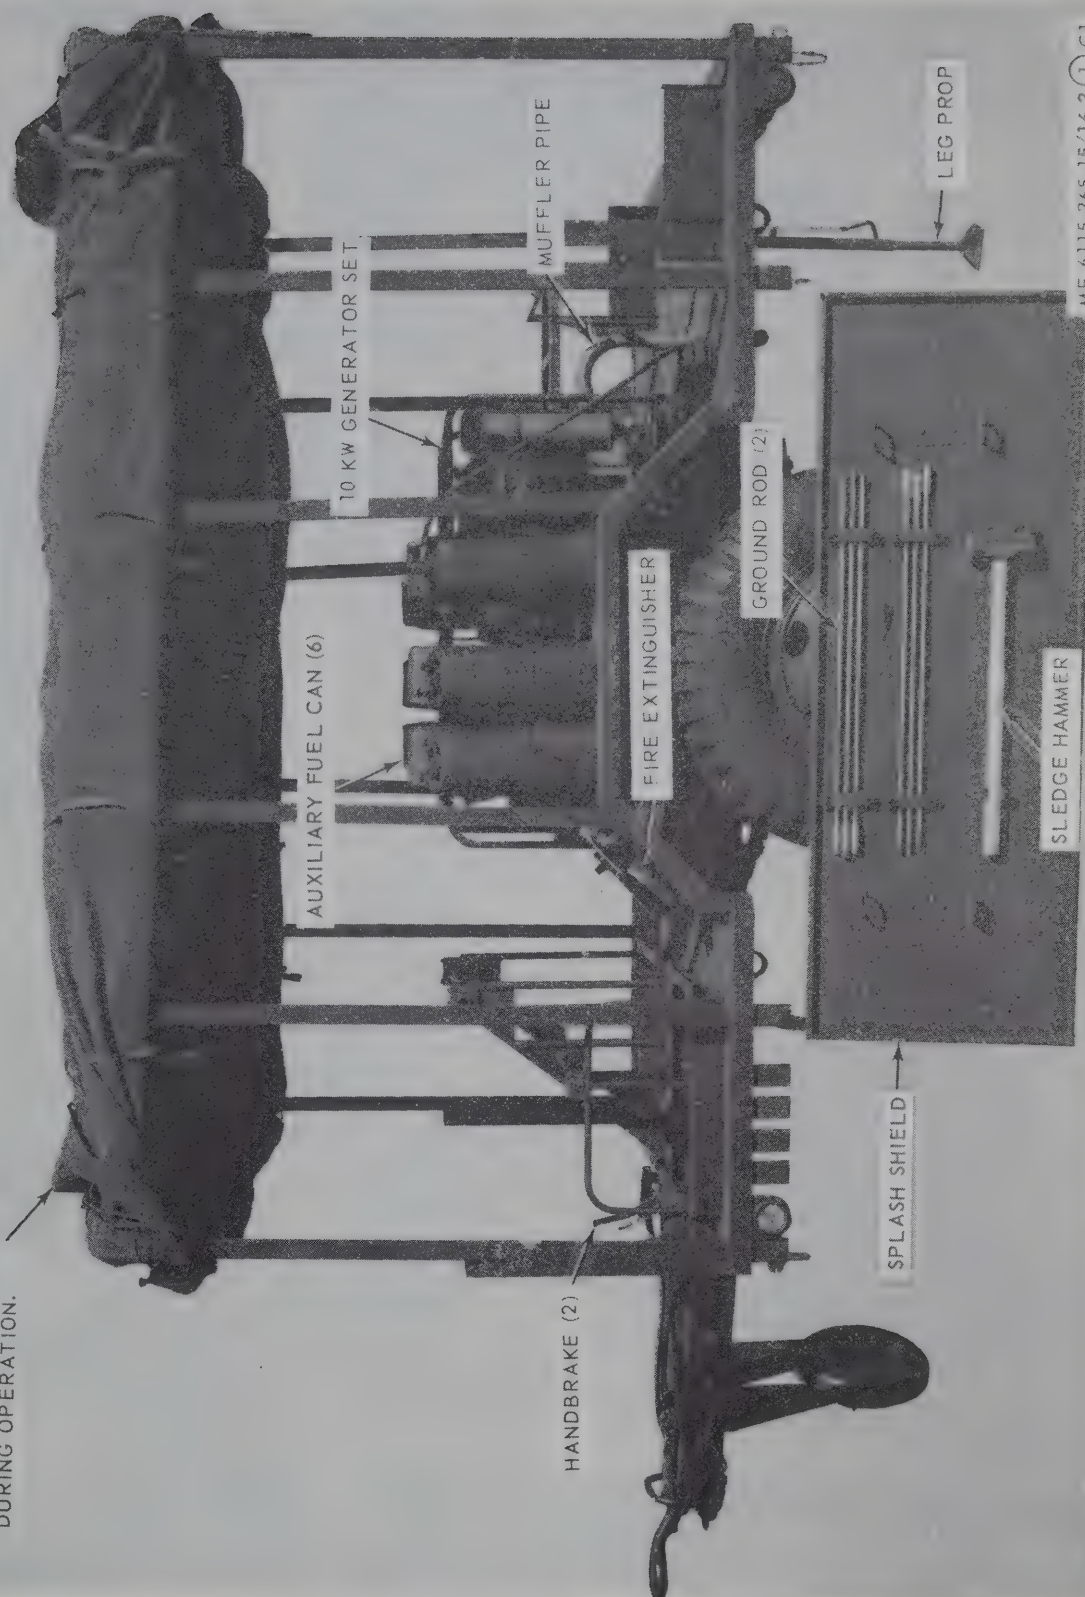

ME 6115-365-15/16-3 ① C1

Figure 16-3. PU-904C/MPQ-4 set up for operation.


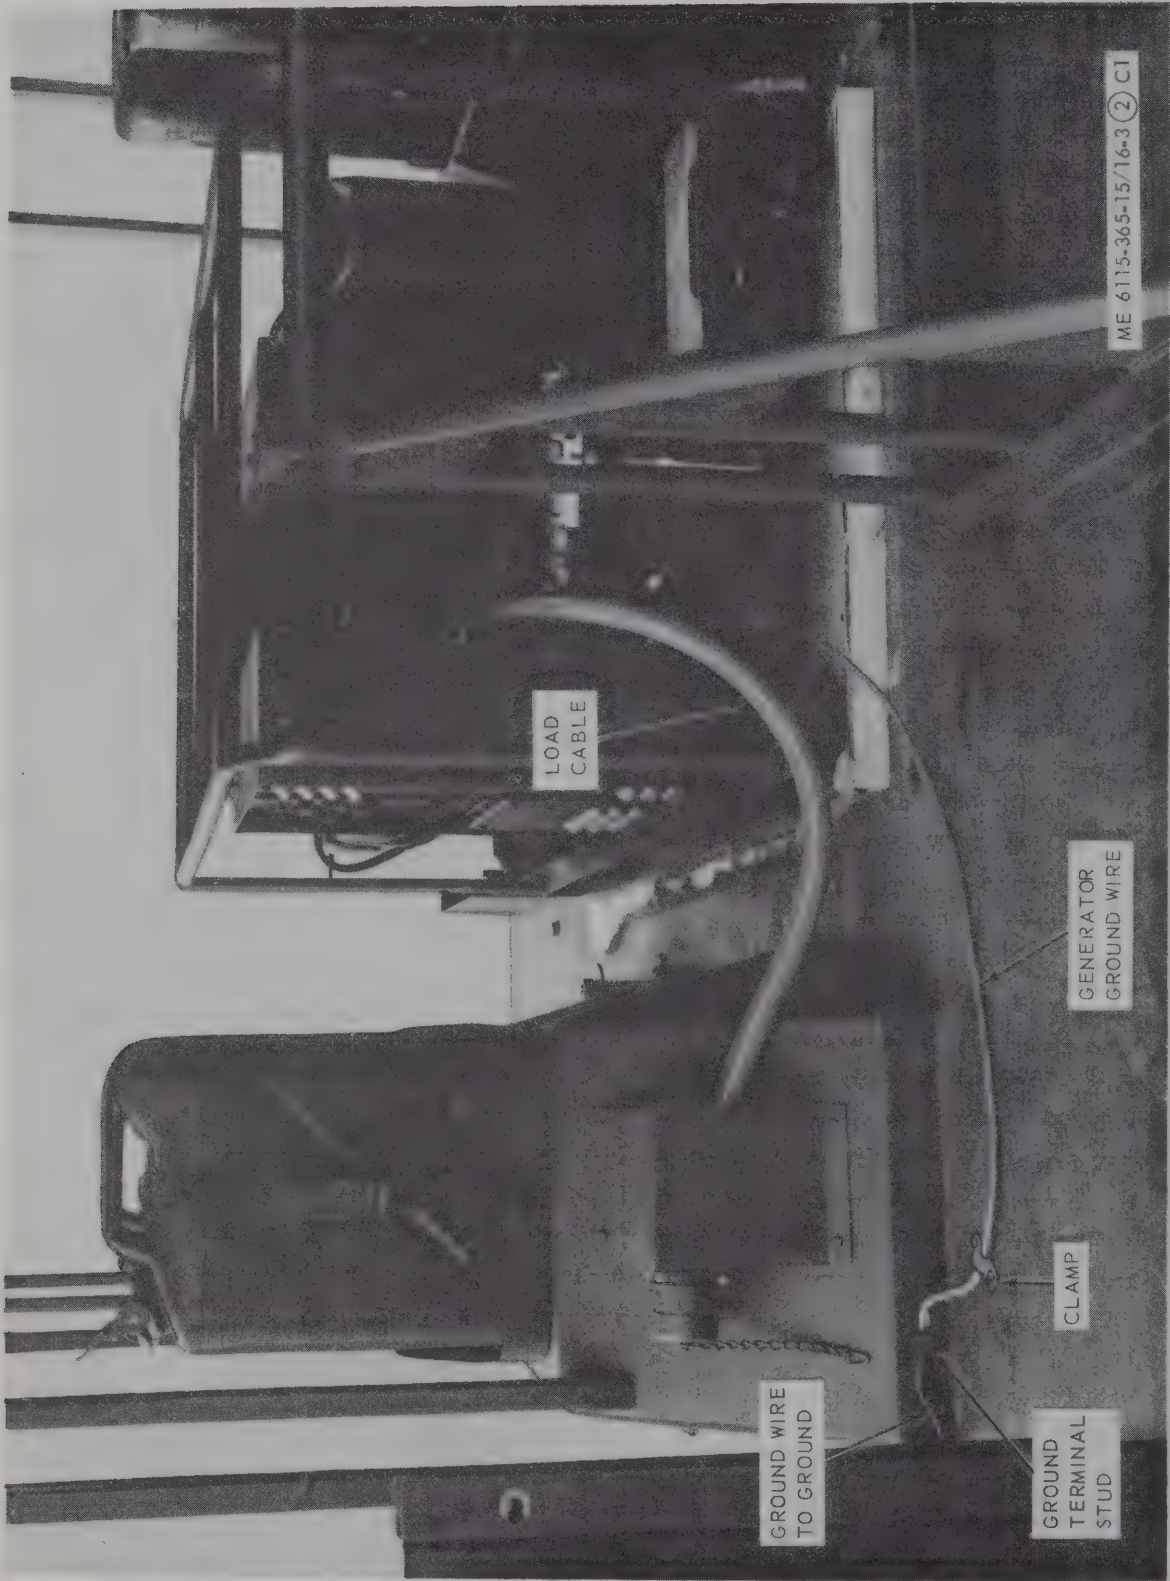


Figure 16-3—Continued.

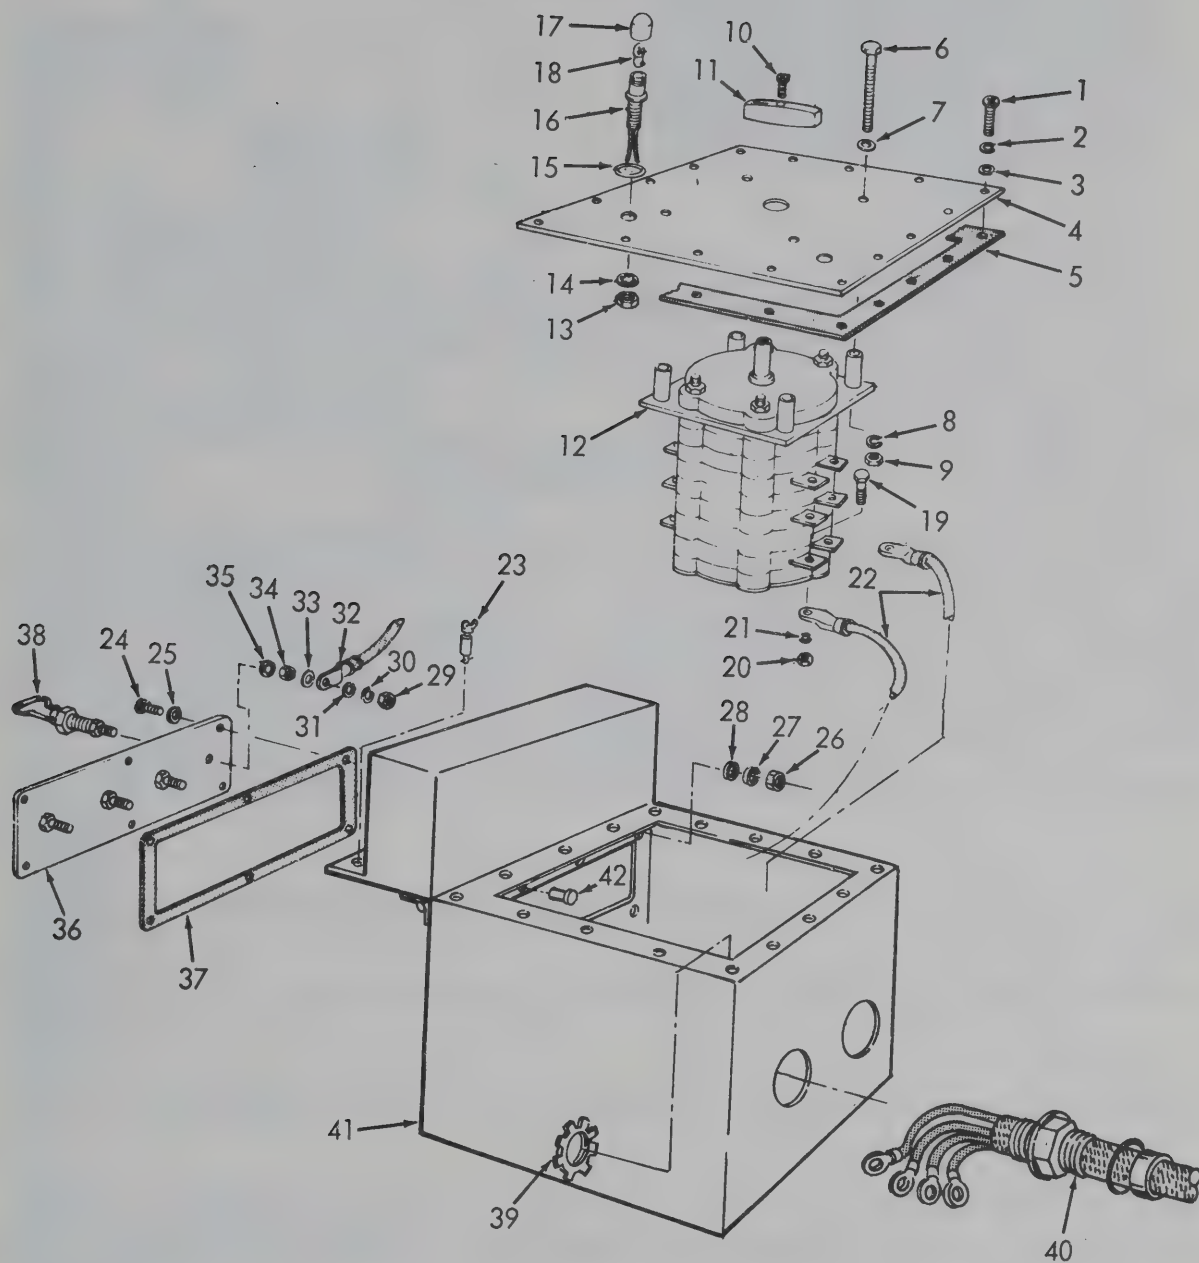

ME 6115-365-15/4-6 C1

Figure 16-4. Load cable connection diagram.

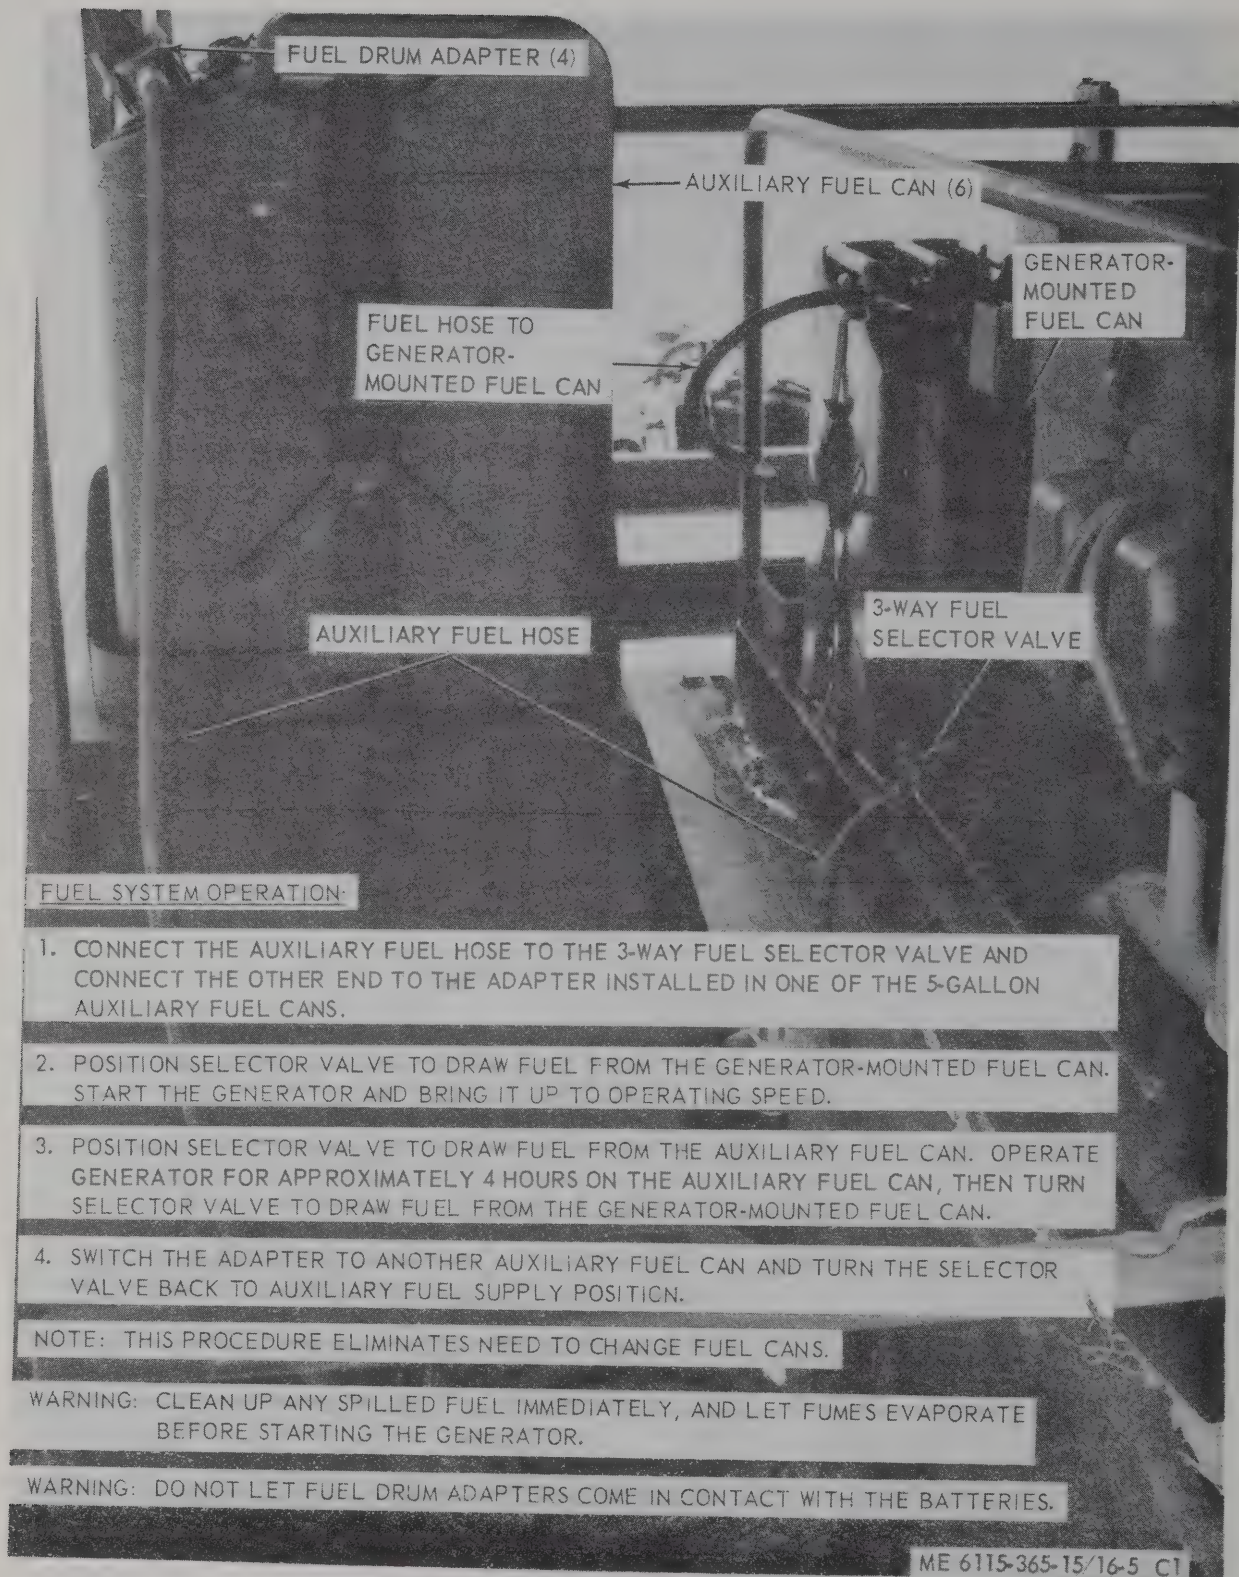


Figure 16-5. Fuel system connection and transfer procedure.

Section III. ORGANIZATIONAL MAINTENANCE INSTRUCTIONS

16-7. Ground Wires and Terminal Stud

a. Removal. Remove the ground wires from the ground terminal stud and generator set as shown in figure 16-3.

b. Installation. Install the ground terminal stud and ground wires as shown in figure 16-3.

16-8. Tarpaulin, Roof Bows, and Leg Prop

a. Removal.

(1) Remove the tarpaulin from the unit.

(2) Pull out the pins that secure the roof bows to the trailer bed and remove the bows.

(3) Remove the hardware that secures the leg prop to the rear underside of the trailer bed and remove the leg prop.

b. Cleaning and Inspection.

(1) Clean tarpaulin and bows with water and detergent. Clean leg prop with approved cleaning solvent. Dry thoroughly.

(2) Inspect tarpaulin for tears, holes, broken or missing ropes and straps, and other defects. Inspect bows and leg prop for cracks, bends, and other defects.

c. Installation.

(1) Mount the leg prop to the underside of the trailer bed and secure with mounting hardware.

(2) Install the roof bows in the trailer bed and secure with pins. Install the tarpaulin and secure in desired position.

16-9. Stowage Racks and Brackets and Straps

a. General. PU-304C/MPQ-4 is equipped with stowage racks and brackets for the Radar Equipment. Location of these brackets is shown in figure 16-3.

b. Removal. Remove the mounting hardware that secures the racks and brackets to the trailer bed and remove racks and brackets.

c. Cleaning, Inspection, and Repair.

(1) Clean with approved cleaning solvent and dry thoroughly.

(2) Inspect for breaks, bends, dents and missing or defective hardware. Inspect straps for wear and other damage.

(3) Straighten minor bends, replace defective straps and missing hardware, and replace a defective bracket that cannot be made serviceable.

d. Installation. Secure the stowage racks and brackets to the trailer bed with mounting hardware.

Section IV. DIRECT AND GENERAL SUPPORT AND DEPOT MAINTENANCE INSTRUCTIONS

16-10. Generator Set

a. Removal. Refer to figure 16-6 as a guide and perform the following steps:

(1) Disconnect fuel lines.

(2) Disconnect electrical leads and load cable.

(3) Disconnect oil drain adapter.

(4) Remove 2 bolts and nuts from muffler pipe and remove pipe from trailer.

(5) Remove the four bolts that secure the generator set to the trailer and remove the generator set.

b. Installation. Use figure 16-6 as a guide and perform the following steps:

(1) Secure the generator set to the trailer bed with 4 bolts.

(2) Secure muffler pipe to trailer bed with 2 bolts and 2 nuts.

(3) Connect the oil drain adapter.

(4) Connect the electrical leads and cable.

(5) Connect fuel lines.

16-11. Tarpaulin, Roof Bows, and Leg Prop

a. Removal. Remove tarpaulin, bows, and leg prop (para 16-8).

b. Repair.

(1) Patch or sew rips and tears in the tarpaulin. Replace damaged or missing straps or ropes. Replace a tarpaulin that is too badly damaged to be repaired.

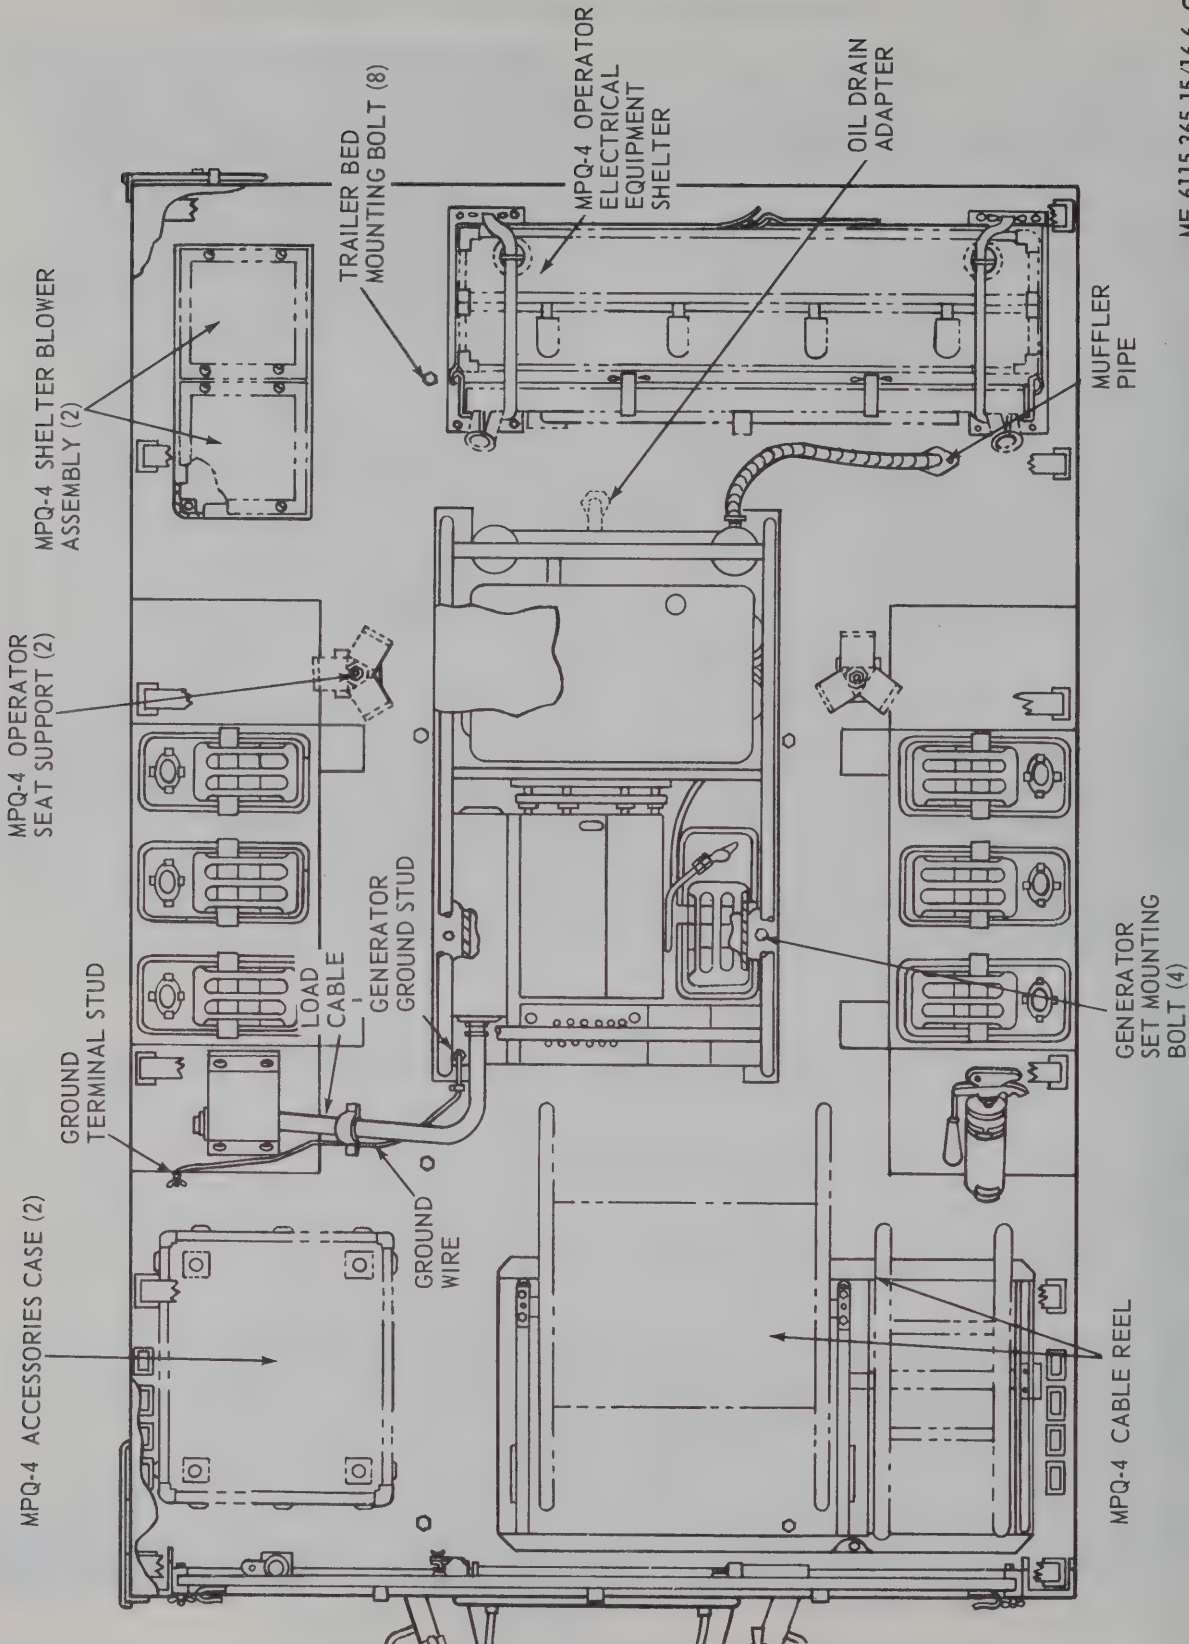


Figure 16-6. PU-301C/MPQ-4 overall component location diagram.

(2) Weld minor cracks or breaks in the bows or leg prop. Straighten bent bows where possible. Replace defective or missing hardware. Replace bows or leg prop that are damaged beyond repair.

c. Installation. Install tarpaulin, roof bows, and leg prop (para 16-8).

16-12. Trailer Bed

a. Removal.

(1) Remove tarpaulin, roof bows, and leg prop (para 16-8).

(2) Remove the generator set (para 16-10).

(3) Loosen straps and remove auxiliary fuel cans from trailer.

(4) Remove 8 bolts from the top surface of the trailer bed and 12 bolts from the underside that secure the gussets to the trailer.

(5) Disconnect the electrical leads from the trailer lights.

(6) Remove the trailer bed from the trailer.

b. Cleaning, Inspection, and Repair.

(1) Clean trailer bed with approved cleaning solvent and dry.

(2) Inspect for broken welds, bends, and dents, and any other damage that prevents proper assembly of the unit.

(3) Weld cracks and breaks, and straighten dents and bends where possible.

(4) Replace a trailer bed that is damaged beyond repair.

c. Installation.

(1) Install the trailer bed on the trailer and secure in position with 12 bolts on the underside and 8 bolts on the top.

(2) Connect wiring to trailer lights.

(3) Install the generator set (para 16-10).

(4) Install auxiliary fuel cans on trailer and secure with straps.

(5) Install leg prop, roof bows, and tarpaulin (para 16-11).

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALLOWANCE				(7) ILLUS- TRATION	
					(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(a) FIG. NO.	(b) ITEM NO.
		REF NUMBER & MFR CODE								
		PART I								
		REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE								
00001		GROUP 01 - ENGINE								
00002		0106 - ENGINE LUBRICATION SYSTEM								
0	5320-282-7822	NUT, UNION: oil drain hose	EA	1	*	*	*	*		
00003	0	UNION, FLARED TUBE: oil drain	EA	1	*	*	*	*		
00004	4730-766-7908	WASHER, LOCK: oil drain hose	EA	1	*	*	*	*		
0	5310-754-2005									
00005		GROUP 15 - FRAME, TOWING ATTACHMENTS AND DRAWBARS								
00006		1501 - FRAME ASSEMBLY								
00007										
X2 0	5340-999-6277	BRACKET ASSEMBLY	EA	1						
00008		13214E1214 (97403)								
X2 0		BRACKET, SHELTER	EA	1						
00009		13216E7442 (97403)								
X2 0		CLAMP: ground round	EA	4						
00010		13212E3617-1 (97403)								
X2 0		CLAMP, PLAIN: support loop	EA	2						
00011		MS21103D3 (96906)								
X2 0	5340-914-2578	CLIP, SPRING	EA	1						
00012		13214E1213-1 (97403)								
X2 0	7240-920-5328	HOLDER, SPOUT	EA	1						
00013		13212E3553-2 (97403)								
X2 0		NUT, HEXAGON, SELF-LOCKING: 10 x 32 screw	EA	2						
00014		MS21044N3 (96906)								
0	5310-225-6993	NUT, SELF-LOCKING, HEXAGON: 1-2 x 13	EA	8	*	*	*	*		
00015	0	NUT, SELF-LOCKING, HEXAGON: 1-4 x 20	EA	2	*	*	*	*		
00016	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1-4 x 20	EA	4	*	*	*	*		
0	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1-4 x 20	EA	4	*	*	*	*		
00017	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1-4 x 20, screw	EA	4	*	*	*	*		
00018	0	NUT, SELF-LOCKING, HEXAGON: 1-4 x 20, screw	EA	4	*	*	*	*		
00019	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1-4 x 20	EA	4	*	*	*	*		
0	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1-4 x 20	EA	1	*	*	*	*		
00020	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1-4 x 20, screw	EA	8	*	*	*	*		
0	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1-4 x 20	EA	2	*	*	*	*		
00021	0	NUT, SELF-LOCKING, HEXAGON: 3-4 x 10, screw	EA	2	*	*	*	*		
00022	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 3-4 x 10, screw	EA	2	*	*	*	*		
X2 0	0	NUT, SELF-LOCKING, HEXAGON: 3-4 x 10, screw	EA	2	*	*	*	*		
00023	5310-984-3806	NUT, SELF-LOCKING, HEXAGON: 5-16 x 18	EA	2	*	*	*	*		
0	5310-984-3806	NUT, SELF-LOCKING, HEXAGON: 5-16 x 18	EA	10	*	*	*	*		
00024	0	RACK, BLOWER, HOUSING	EA	1						
00025	X2 0	13216E7437 (97403)								
00026	X2 0	RACK, CABLE REEL	EA	1						
00027	0	13216E7439 (97403)								
X2 0		SCREW, CAP, HEXAGON HEAD: 1-2 x 13 x 1-1/4	EA	8						
00028		MS90725-111 (96906)								
0	5305-068-0501	SCREW, CAP, HEXAGON HEAD: 1-4 x 20 x 5-8	EA	1	*	*	*	*		
00029	0	SCREW, CAP, HEXAGON HEAD: 1-4 x 20 x 5-8	EA	2	*	*	*	*		
00030	5305-068-0501	SCREW, CAP, HEXAGON HEAD: 1-4 x 20 x 7-8	EA	4						
X2 0		MS90725-7 (96906)								
00031		SCREW, CAP, HEXAGON HEAD: 1-4 x 20 x 7-8	EA	4						
X2 0		MS90725-7 (96906)								
00032										

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS USABLE ON CODE	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00033		SCREW, CAP, HEXAGON HEAD: 1-4 x 20 x 7-8 MS90725-7 (96906)	EA	4						
X2 0 00034		SCREW, CAP, HEXAGON HEAD: 1-4 x 20 x 7-8 MS90725-7 (96906)	EA	4						
0 00035 X2 0 00036	5306-225-8499	SCREW, CAP, HEXAGON: 5-16 x 18 x 1 SCREW, CAP, HEXAGON HEAD: 5-16 x 18 x 3-4 MS90725-32 (96906)	EA EA	10 2	*	*	*	*		
X2 0 00037		SCREW, MACHINE: flat head MS35190-289 (96906)	EA	8						
X2 0 00038		SCREW, MACHINE: pan head MS35207-266 (96906)	EA	2						
X2 0 00039		SETSCREW, HEXAGON: socket, 3-8 x 16 x 1 in. MS51963-107 (96906)	EA	2						
X2 0 00040		STUD: 3-4 x 10, special 13216E7438 (97403)	EA	2						
0 00041	5310-809-5998	WASHER, FLAT: round, 1-2 in. screw	EA	8	*	*	*	*		
0 00042	5310-809-4058	WASHER, FLAT: round, 1-4 in. screw	EA	1	*	*	*	*		
0 00043	5310-809-4058	WASHER, FLAT: round, 1-4 in. screw	EA	4	*	*	*	*		
0 00044	5310-809-4058	WASHER, FLAT: round, 1-4 in. screw	EA	2	*	*	*	*		
0 00045	5310-809-4058	WASHER, FLAT: round, 1-4 x 20 screw	EA	4	*	*	*	*		
0 00046	5310-809-4058	WASHER, FLAT: round, 1-4 x 20 screw	EA	4	*	*	*	*		
0 00047	5310-809-4058	WASHER, FLAT: round, 1-4 x 20 screw	EA	4	*	*	*	*		
0 00048	5310-809-4058	WASHER, FLAT: round, 1-4 in. screw	EA	8	*	*	*	*		
0 00049	5310-809-8546	WASHER, FLAT: round, 10 x 32 screw	EA	2	*	*	*	*		
X2 0 00050		WASHER, FLAT: round, 3/4 in. screw MS27183-23 (96906)	EA	2						
0 00051	5310-081-4219	WASHER, FLAT: round, 5-16 screw	EA	12	*	*	*	*		
00052		GROUP 18 - BODY, CAB, HOOD AND HULL 1810 - CARGO BODY								
X2 0 00054		BOLT, HEXAGON HEAD: 11 x 6-1/2 in. lg FFB575 (97403)	EA	2						
0 00055	5310-269-4040	NUT, SELF-LOCKING, HEXAGON: 5/8 x 11 bolt	EA	8	*	*	*	*		
0 00056	5305-724-5911	SCREW, CAP, HEXAGON HEAD: 5/8 x 11 x 1-3/4	EA	6	*	*	*	*		
0 00057	5310-823-8803	WASHER, FLAT: round, 5/8 in. bolt	EA	8	*	*	*	*		
00058		GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS 2201 - CANVAS ITEMS								
P 0 00060	2540-926-1003	BOW, TRAILER, TARPAULIN: 55.75 in. height 13212E3597-2 (97403)	EA	2	*	*	*	*		
P 0 00061	2540-924-8478	BOW, TRAILER, TARPAULIN: 68 in. height 13212E3597-1 (97403)	EA	4	*	*	*	*		
0 00062	5310-080-8495	NUT, PLAIN, WING: 1-4 x 20 screw	EA	2	*	*	*	*		
0 00063	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3-8 x 16 screw	EA	12	*	*	*	*		
X2 0 00064		SCREW, CAP, HEXAGON HEAD: 1-4 x 20 x 2 in. MS35307-314 (96906)	EA	2						
0 00065	5305-269-3211	SCREW, CAP, HEXAGON HEAD: 3-8 x 16 x 1 in.	EA	16	*	*	*	*		
X2 0 00066		SHIELD 13216E7433 (97403)	EA	1						

16-14

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
0 00097 X2 0 00098	5310-809-4061	WASHER, FLAT: round, 3-8 screw WASHER, LOCK: helical, 1-4 in. MS35338-44 (96906)	EA	24	*	*	*	*		
X2 0 00099		WASHER, LOCK: helical, 1/4 MS35338-44 (96906)	EA	2						
00100		2210 - DATA PLATES	EA	4						
X2 0 00101		PLATE, IDENTIFICATION 13205E4918 (97403)	EA	1						
X2 0 00102		PLATE, IDENTIFICATION 13205E4916-27 (97403)	EA	1						
00103		GROUP 29 - AUXILIARY GENERATOR AND ENGINE AND CONTROLS								
00104		2941 - ENGINE MUFFLER, EXHAUST AND TAIL PIPES								
0 00105 0 00106 0 00107 00108	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1-4 x 20	EA	2	*	*	*	*		
0 00109	5305-225-3839	SCREW, CAP, HEXAGON: 1-4 x 20 x 1	EA	2	*	*	*	*		
0 00107 00108	5310-809-4058	WASHER, FLAT: round, 1-4 x 20, screw GROUP 40 - ELECTRIC MOTORS AND GENERATORS 4000 - GENERATOR ASSEMBLY	EA	2	*	*	*	*		
0 00110 X2 0 00111	5310-269-4040	NUT, SELF-LOCKING, HEXAGON: 5-8 x 11 SCREW, CAP, HEXAGON HEAD: 5-16 x 11 x 1-3/8 MS90725-161 (96906)	EA	4	*	*	*	*		
0 00112 00113	5310-823-8803	WASHER, FLAT: round, 5-8, screw 4019 - RADIO INTERFERENCE SUPPRESSION	EA	4	*	*	*	*		
X2 0 00114		NUT, PLAIN, HEXAGON BREAKERS: 3-8 x 16 FFN836 (81348)	EA	2						
X2 0 00115		NUT, PLAIN, WING BREAKERS: 3-8 x 16 MS35425-28 (96906)	EA	1						
X2 0 00116		STUD: 3/8 x 162-1-2 in. lg 13214E1223 (96906)	EA	1						
X2 0 00117		WASHER, FLAT: round, 3/8 in. screw AN961-616 (88044)	EA	3						
0 00118 00119	5310-913-9776	WASHER, LOCK, FLAT: external tooth, 3-8 GROUP 42 - ELECTRICAL EQUIPMENT	EA	3	*	*	*	*		
00120		4216 - MISCELLANEOUS WIRING AND FITTINGS								
0 00121 0 00122 0 00123 00124	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1-4 x 20 screw	EA	4	*	*	*	*		
0 00122 0 00123 00124	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1-4 x 20	EA	4	*	*	*	*		
0 00123 00124	5310-809-4058	WASHER, FLAT: round, 1-4 x 20 screw GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS 7638 - PORTABLE FIRE FIGHTING EQUIPMENT	EA	4	*	*	*	*		
P C 00126	4210-555-8837	EXTINGUISHER, FIRE: w/bracket MILE52031 (81349)	EA	1	*	*	*	*		
00127		GROUP 95 - GENERAL USE STANDARDIZED PARTS								
00128		9501 - HARDWARE SUPPLIES AND BULK MATERIAL, COMMON								
P O 00129		WEBBING, TEXTILE, NYLON: 1 in. wide MILW4088 (81349)	FT		*	*	*	*		

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 30-DAY DS MAINT ALLOWANCE	(7) 30-DAY GS MAINT ALLOWANCE	(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
									(a)	(b)
					(a)	(b)	(c)	(a)	(b)	(c)
					1-20	21-50	51-100	1-20	21-50	51-100
PART II										
REPAIR PARTS FOR DS, GS, AND DEPOT MAINTENANCE										
GROUP 01 - ENGINE										
00001										
00002		0106 - ENGINE LUBRICATION SYSTEM								
0	5320-282-7822	NUT, UNION: oil drain hose		EA	1	*	*	*	*	*
00003										
0	4730-766-7908	UNION, FLARED TUBE: oil drain		EA	1	*	*	*	*	*
00004										
0	5310-754-2005	WASHER, LOCK: oil drain hose		EA	1	*	*	*	*	*
00005										
00006		GROUP 15 - FRAME, TOWING ATTACHMENTS AND DRAWBARS								
1501 - FRAME ASSEMBLY										
00007										
X2 0	5340-999-6277	BRACKET ASSEMBLY		EA	1					
00008		13214E1214 (97403)								
X2 F		BRACKET: receptacle		EA	1					
00009		13216E7449 (97403)								
X2 0		BRACKET, SHELTER		EA	1					
00010		13216E7442 (97403)								
X2 0		CLAMP: ground round		EA	4					
00011		13212E3617-1 (97403)								
X2 0		CLAMP, PLAIN: support loop		EA	2					
00012		MS21103D3 (96906)								
X2 0	5340-914-2578	CLIP, SPRING		EA	1					
00013		13214E1213-1 (97403)								
X2 0	7240-920-5328	HOLDER, SPOUT		EA	1					
00014		13212E3553-2 (97403)								
X2 0		NUT, HEXAGON, SELF-LOCKING: 10X32 screw		EA	2					
00015		MS21044N3 (96906)								
0	5310-225-6993	NUT, SELF-LOCKING, HEXAGON: 1-2X13		EA	8	*	*	*	*	*
00016										
0	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1-4X20		EA	2	*	*	*	*	*
00017										
0	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1-4X20		EA	4	*	*	*	*	*
00018										
0	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1-4X20, screw		EA	4	*	*	*	*	*
00019										
0	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1-4X20, screw		EA	4	*	*	*	*	*
00020										
0	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1-4X20		EA	4	*	*	*	*	*
00021										
0	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1-4X20, screw		EA	1	*	*	*	*	*
00022										
0	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1-4X20		EA	8	*	*	*	*	*
00023										
X2 0		NUT, SELF-LOCKING, HEXAGON: 3-4X10, screw		EA	2					
00024		MS51922-57 (96906)								
0	5310-984-3806	NUT, SELF-LOCKING, HEXAGON: 5-16X18		EA	2	*	*	*	*	*
00025										
0	5310-984-3806	NUT, SELF-LOCKING, HEXAGON: 5-16X18		EA	10	*	*	*	*	*
00026										
X2 0		RACK, BLOWER, HOUSING		EA	1					
00027		13216E7437 (97403)								
X2 0		RACK, CABLE REEL		EA	1					
00028		13216E7439 (97403)								

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE DN CODE	(5) UNIT OF MEAS	(6) 30-DAY DS MAINT ALLOWANCE	(7) 30-DAY GS MAINT ALLOWANCE	(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
									(a)	(b)
					(a)	(b)	(c)	(a)	(b)	(c)
					1-20	21-50	51-100	1-20	21-50	51-100
X2 0 00029		SCREW, CAP, HEXAGON HEAD: 1-2X13X1-1/4 MS90725-111 (96906)		EA	8					
0 00030	5305-068-0501	SCREW, CAP, HEXAGON HEAD: 1-4X20X5-8		EA	1	*	*	*	*	*
0 00031	5305-068-0501	SCREW, CAP, HEXAGON HEAD: 1-4X20X5-8		EA	2	*	*	*	*	*
X2 0 00032		SCREW, CAP, HEXAGON HEAD: 1-4X20X7-8 MS90725-7 (96906)		EA	4					
X2 0 00033		SCREW, CAP, HEXAGON HEAD: 1-4X20X7-8 MS90725-7 (96906)		EA	4					
X2 0 00034		SCREW, CAP, HEXAGON HEAD: 1-4X20X7-8 MS90725-7 (96906)		EA	4					
X2 0 00035		SCREW, CAP, HEXAGON HEAD: 1-4X20X7-8 MS90725-7 (96906)		EA	4					
0 00036	5306-225-8499	SCREW, CAP, HEXAGON: 5-16X18X1		EA	10	*	*	*	*	*
X2 0 00037		SCREW, CAP, HEXAGON HEAD: 5-16X18X3-4 MS90725-32 (96906)		EA	2					
X2 0 00038		SCREW, MACHINE: flat head MS35190-289 (96906)		EA	8					
X2 0 00039		SCREW, MACHINE: pan head MS35207-266 (96906)		EA	2					
X2 0 00040		SETSCREW, HEXAGON: socket, 3-8X16X1 in. MS51963-107 (96906)		EA	2					
X2 0 00041		STUD: 3-4X10, special 13216E7438 (97403)		EA	2					
0 00042	5310-809-5998	WASHER, FLAT: round, 1-2 in. screw		EA	8	*	*	*	*	*
0 00043	5310-809-4058	WASHER, FLAT: round, 1-4 in. screw		EA	1	*	*	*	*	*
0 00044	5310-809-4058	WASHER, FLAT: round, 1-4 in. screw		EA	4	*	*	*	*	*
0 00045	5310-809-4058	WASHER, FLAT: round, 1-4 in. screw		EA	2	*	*	*	*	*
0 00046	5310-809-4058	WASHER, FLAT: round, 1-4X20 screw		EA	4	*	*	*	*	*
0 00047	5310-809-4058	WASHER, FLAT: round, 1-4X20 screw		EA	4	*	*	*	*	*
0 00048	5310-809-4058	WASHER, FLAT: round, 1-4X20 screw		EA	4	*	*	*	*	*
0 00049	5310-809-4058	WASHER, FLAT: round, 1-4 in. screw		EA	8	*	*	*	*	*
0 00050	5310-809-8546	WASHER, FLAT: round, 10X32 screw		EA	2	*	*	*	*	*
X2 0 00051		WASHER, FLAT: round, 3/4 in. screw MS27183-23 (96906)		EA	2					
0 00052	5310-081-4219	WASHER, FLAT: round, 5-16 screw		EA	12	*	*	*	*	*
00053		GROUP 18 - BODY, CAB, HOOD AND HULL								
00054		1810 - CARGO BODY								
X2 DR 00055		BODY, TRAILER 13216E7432 (97403)		EA	1					
X2 0 00056		BOLT, HEXAGON HEAD: 11X6-1/2 in. lg FFB575 (97403)		EA	2					
0 00057	5310-269-4040	NUT, SELF-LOCKING, HEXAGON: 5/8X11 bolt		EA	8	*	*	*	*	*
0 00058	5305-724-5911	SCREW, CAP, HEXAGON HEAD: 5/8X11X1-3/4		EA	5	*	*	*	*	*
X2 DR 00059	2330-141-8052	TRAILER: M103A3 modified MS530291-1 (96906)		EA	1					
0 00060	5310-823-8803	WASHER, FLAT: round, 5/8 in. bolt		EA	8	*	*	*	*	*

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
00061		GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS												
00062		2201 - CANVAS ITEMS												
P 0 00063	2540-926-1003	BOW, TRAILER, TARPULIN: 55.75 in. height 13212E3597-2 (97403)		EA	2	*	*	*	*	*	*	4	4	
P 0 00064	2540-924-8478	BOW, TRAILER, TARPULIN: 68 in. height 13212E3597-1 (97403)		EA	4	*	*	2	*	*	2	8	8	
0 00065	5310-080-8495	NUT, PLAIN, WING: 1-4X20 screw		EA	2	*	*	*	*	*	*	*	*	
0 00066	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3-8X16 screw		EA	12	*	*	*	*	*	*	*	*	
X2 0 00067		SCREW, CAP, HEXAGON HEAD: 1-4X20X2 in. MS35307-314 (96906)		EA	2									
0 00068	5305-269-3211	SCREW, CAP, HEXAGON HEAD: 3-8X16X1 in.		EA	16	*	*	*	*	*	*	*	*	
X2 0 00069		SHIELD 13216E7433 (97403)		EA	1									
X2 0 00070		SHIM (As required) 13212E3590 (97403)		EA										
P O R 00071		TARPULIN 13216E7434 (97403)		EA	1	*	2	2	*	2	2	13	13	
X2 0 00072		BUCKLE: spring action MS51929-2 (96906)		EA	8									
X2 0 00073		CLIP, END, STRAP MILC496 (81349)		EA	13									
M D 00074		STRAP, WEBBING 13216E7443 (97403) MANUFACTURE FROM:		EA	2									
P D 00075	5340-922-5653	WEBBING, TEXTILE: nylon 1 in. wide MILW4088 (81349)		FT				SEE	GRP	9501				
M D 00076		STRAP, WEBBING: 43 in. lg 13216E7445-1 (97403) MANUFACTURE FROM:		EA	2									
P D 00077	5340-922-5653	WEBBING, TEXTILE: nylon 1 in. wide MILW4088 (81349)		FT				SEE	GRP	9501				
M D 00078		STRAP, WEBBING: 43 in. lg 13216E7444-1 (97403) MANUFACTURE FROM:		EA	1									
P D 00079		WEBBING, TEXTILE: nylon 1 in. wide MILW4088 (81349)		FT				SEE	GRP	9501				
M D 00080		STRAP, WEBBING: 55 in. lg 13216E7445-2 (97403) MANUFACTURE FROM:		EA	1									
P D 00081		WEBBING, TEXTILE: nylon 1 in. wide MILW4088 (81349)		FT				SEE	GRP	9501				
M D 00082		STRAP, WEBBING: 77 in. lg 13216E7444-2 (97403) MANUFACTURE FROM:		EA	2									
P D 00083		WEBBING, TEXTILE: nylon 1 in. wide MILW4088 (81349)		FT				SEE	GRP	9501				
0 00084	5310-809-4058	WASHER, FLAT: round, 1-4X20 screw		EA	4	*	*	*	*	*	*	*	*	
X2 0 00085		WASHER, FLAT: round, 3-8X16 screw MS27183-14 (96906)		EA	16									
0 00086	5310-933-8121	WASHER, LOCK: helical, 1-4X20 screw		EA	2	*	*	*	*	*	*	*	*	
X2 0 00087		WASHER, LOCK: helical, 3-8X16 screw MS35338-46 (96906)		EA	4									

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 30-DAY DS MAINT ALLOWANCE	(7) 30-DAY GS MAINT ALLOWANCE	(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP EQUIP	(10) ILLUS- TRATION	
									(a)	(b)
									FIG. NO.	ITEM NO.
00088		2202 - ACCESSORY ITEMS								
X2 0 00089		AXLE, CABLE REEL 13216E7447 (97403)		EA 1						
P 0 00090	3120-939-6692	BEARING 13214E1294 (97403)		EA 2	*	*	2	*	2	10 10
X2 0 00091	2590-473-6331	BRACKET ASSEMBLY: liquid container MS53052-1 (96906)		EA 6						
X2 0 00092	7240-222-3088	CAN, GASOLINE: Military 5 gal. MILC1283 (81349)		EA 6						
X2 0 00093		CLAMP 13216E7435 (97403)		EA 2						
X2 0 00094		CLAMP 13216E7436 (97403)		EA 1						
P C 00095	5120-203-4656	HAMMER: hand type I class 1 GGGH86 (81348)		EA 1	*	*	2	*	2	10 10
0 00096	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1-4X20 screw		EA 4	*	*	*	*	*	*
0 00097	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1-4X20 screw		EA 8	*	*	*	*	*	*
0 00098	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3-8X16		EA 24	*	*	*	*	*	*
P 0 00099	9905-202-3639	REFLECTOR: amber clearance indicator MS35387-2 (96906)		EA 2	*	*	*	*	6	6
P 0 00100	9905-205-2795	REFLECTOR: red clearance indicator MS35387-1 (96906)		EA 4	*	2	2	*	2	12 12
P C 00101	5975-878-3791	ROD: ground, Type 2, Style 2 MILR11461 (81349)		EA 2	*	*	2	*	2	10 10
X2 0 00102		SCREW, CAP, HEXAGON HEAD: 1-4X20X1-2 lg MS90725-3 (96906)		EA 4						
X2 0 00103		SCREW, CAP, HEXAGON HEAD: 1-4X20X1-1/2 MS90725-12 (96906)		EA 4						
0 00104	5305-071-2241	SCREW, CAP, HEXAGON HEAD: 1-4X20X1-1/4		EA 2	*	*	*	*	*	*
X2 0 00105		SCREW, CAP, HEXAGON HEAD: 1-4X20X1-2 lg MS90725-3 (96906)		EA 8						
0 00106	5305-269-3211	SCREW, CAP, HEXAGON HEAD: 3-8X16X1		EA 24	*	*	*	*	*	*
X2 0 00107	7240-177-6154	SPOUT, CAN: flexible MILS1285 (81349)		EA 1						
0 00108	5310-809-4058	WASHER, FLAT: round, 1-4 in. screw		EA 4	*	*	*	*	*	*
0 00109	5310-809-4058	WASHER, FLAT: round, 1-4X20 screw		EA 8	*	*	*	*	*	*
0 00110	5310-809-4061	WASHER, FLAT: round, 3-8 screw		EA 24	*	*	*	*	*	*
X2 0 00111		WASHER, LOCK: helical, 1-4 in. MS35338-44 (96906)		EA 2						
X2 0 00112		WASHER, LOCK: helical, 1/4 MS35338-44 (96906)		EA 4						
00113		2210 - DATA PLATES								
X2 0 00114		PLATE, IDENTIFICATION 13205E4918 (96906)		EA 1						
X2 0 00115		PLATE, IDENTIFICATION 13205E4916-27 (97403)		EA 1						

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)	FIG. NO.	ITEM NO.		
					1-20	21-50	51-100	1-20	21-50	51-100				
00116		GROUP 29 - AUXILIARY GENERATOR AND ENGINE AND CONTROLS												
00117		2941 - ENGINE MUFFLER, EXHAUST AND TAIL PIPES												
P F 00118	5340-917-6400	CLAMP ASSEMBLY: 1X7-8 max. od 1321ZE3592-4 (97403)	EA	1	*	2	2	*	2	2	12	6		
O 00119	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1-4X20	EA	2	*	*	*	*	*	*	*	*		
O 00120	5305-225-3839	SCREW, CAP, HEXAGON: 1-4X20X1	EA	2	*	*	*	*	*	*	*	*		
P F 00121	6115-934-7878	TUBE EXHAUST 1321AE1389 (97403)	EA	1	*	2	2	*	2	2	12	6		
O 00122	5310-809-4058	WASHER, FLAT: round, 1-4X20, screw	EA	2	*	*	*	*	*	*	*	*		
00123		GROUP 40 - ELECTRIC MOTORS AND GENERATORS												
00124		4000 - GENERATOR ASSEMBLY												
X2 FR 00125	6115-937-1793	GENERATOR SET: HP10MD400Z	EA	1										
O 00126	5310-269-4040	NUT, SELF-LOCKING, HEXAGON: 5-8X11	EA	4	*	*	*	*	*	*	*	*		
X2 O 00127		SCREW, CAP, HEXAGON HEAD: 5-16X11X1-3/8 MS90725-161 (96906)	EA	4										
O 00128	5310-823-8803	WASHER, FLAT: round, 5-8, screw	EA	4	*	*	*	*	*	*	*	*		
00129		4019 - RADIO INTERFERENCE SUPPRESSION												
M F 00130		LEAD, ELECTRICAL: ground QQW343TYPECLASSB (81348) MANUFACTURE FROM:	EA	1										
P F 00131	6145-395-8799	WIRE, ELECTRICAL: No. 6 AWG, Type RB, Class 1 (As required) QQW343TYPECLASSB (81348)	FT					SEE	GRP	9501				
X2 O 00132		NUT, PLAIN, HEXAGON BREAKERS: 3-8X16 FFN836 (81348)	EA	2										
X2 O 00133		NUT, PLAIN, WING BREAKERS: 3-8X16 MS35425-28 (96906)	EA	1										
X2 O 00134		STUD: 3/8X162-1-2 in. lg 1321AE1223 (96906)	EA	1										
X2 F 00135		TERMINAL, LUG: No. 6 AWG, Type 1CL1 MS20659-110 (96906)	EA	1										
X2 O 00136		WASHER, FLAT: round, 3/8 in screw AN961-616 (88044)	EA	3										
O 00137	5310-913-9776	WASHER, LOCK, FLAT: external tooth, 3-8	EA	3	*	*	*	*	*	*	*	*		
00138		GROUP 42 - ELECTRICAL EQUIPMENT												
00139		4216 - MISCELLANEOUS WIRING AND FITTINGS												
X2 F 00140		CABLE ASSEMBLY 13216E7448 (97403)	EA	1										
O 00141	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1-4X20, screw	EA	4	*	*	*	*	*	*	*	*		
O 00142	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1-4X20	EA	4	*	*	*	*	*	*	*	*		
O 00143	5310-809-4058	WASHER, FLAT: round, 1-4X20, screw	EA	4	*	*	*	*	*	*	*	*		

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
						1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
00144		GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS													
00145		7638 - PORTABLE FIRE FIGHTING EQUIPMENT													
P C 00146	4210-555-8837	EXTINGUISHER, FIRE: w/bracket MILE52031 (81349)		EA	1	*	*	2	*	*	2	10	10		
00147		GROUP 95 - GENERAL USE STANDARDIZED PARTS													
00148		9501 - HARDWARE SUPPLIES AND BULK MATERIAL, COMMON													
P O 00149		WEBBING, TEXTILE, NYLON: 1 in. wide MILW4088 (81349)		FT		*	*	*	*	*	*	60	60		
P F 00150		WIRE: No. 6 AWG, Type RB, Class 1 QJW343TYPECLASSB (81348)		EA	1	*	*	*	*	*	*				

CHAPTER 17

GENERATOR SET PU-375B/G

Section I. DESCRIPTION AND DATA

17-1. Description

a. General. The PU-375B/G is a self-contained, mobile, general purpose power supply (fig. 17-1). The set is comprised of a 10-KW, Model HF-10-MD Military Standard generator set mounted on a $\frac{3}{4}$ -ton M-101A1 trailer and includes the components listed in table 17-1. The generator is powered by a directly coupled 4-cylinder 20-hp Military Standard Model 4A084-III engine.

b. Generator. For description and generator operation and maintenance information not covered in this chapter, refer to TM 5-6115-450-15.

c. Engine. For description and engine maintenance and operation information not covered

in this chapter, refer to TM 5-2805-259-14.

d. Trailer. For description and trailer maintenance information not covered in this chapter, refer to TM 9-2330-202-14.

e. Lubrication. Refer to LO 9-2330-202-12 and LO 5-2805-259-14 for lubrication information required for PU-375B/G.

17-2. Tabulated Data

Table 17-1 lists the components for PU-375B/G.

Table 17-1. PU-375B/G Components		
FSN	Qty	Nomenclature
2330-898-6779	1	Trailer: M101A1, $\frac{3}{4}$ -ton
6115-937-1793	1	Generator Set, 10KW, HF-10-MD
2590-420-8929	1	Leg Prop assembly, trailer
4210-555-8837	1	Fire extinguisher
5975-878-3791	2	Ground rod w/attachments
5120-265-7462	1	Sledge hammer



Figure 17-1. PU-375B/C, left front, 3/4 view.

Section II. OPERATING INSTRUCTIONS

17-3. Setting-up Instructions

a. Leveling.

(1) Locate the trailer on as level a surface as possible in order for the generator set to operate efficiently.

(2) Set brakes and block wheels securely to prevent any movement. Operate the hand-brake at weekly intervals to assure freedom of linkage.

(3) Pull leg support down and adjust length for firm contact with ground.

WARNING

Wheels must be blocked, brakes set, and leg support down in support position before attempting to roll up tarpaulin and before starting to assemble or set-up the equipment for operation.

b. Preparation for Starting.

(1) Roll up tarpaulin and remove bows and racks. (fig. 17-2)

(2) Open trailer tailgate and remove all loose auxiliary items and anything else that might block the free circulation of air through the trailer and around the generator set.

CAUTION

It is of foremost importance that there be free circulation of air around the generator set at all times during operation. Inadequate ventilation is a major cause of damage to equipment.

c. Grounding.

WARNING

Never operate the generator set until it has been properly grounded. Electrical defects in the load lines or equipment can cause death by electrocution when contact is made with an ungrounded system.

(1) The generator set must be grounded prior to operation. The ground may be any of three methods, depending on the location and terrain.

(a) A ground rod driven to a depth of 8 feet.

(b) An underground metallic water piping system.

(c) A metal plate (9 sq. ft.) buried at a depth of 4 feet.

(2) The ground lead must be No. 6 AWG copper wire bolted or clamped to the rod, plate, or piping system.

(3) Connect the other end of the ground lead to the generator set ground terminal stud and connect the generator to the ground terminal stud as shown in figure 17-3.

WARNING

Never operate the generator set in an enclosed area unless the exhaust gases are piped to the outside. Inhalation of exhaust fumes will result in serious illness or death.

17-4. Starting

a. Perform setting-up and pre-starting procedures (para 17-3).

b. Start the generator as instructed in TM 5-6115-450-15.

17-5. Stopping

Stop the generator set as instructed in TM 5-6115-450-15.

17-6. Operation

a. Operate the generator set as instructed in TM 5-6115-450-15.

b. Perform the fuel transfer procedure as instructed in figure 17-4.

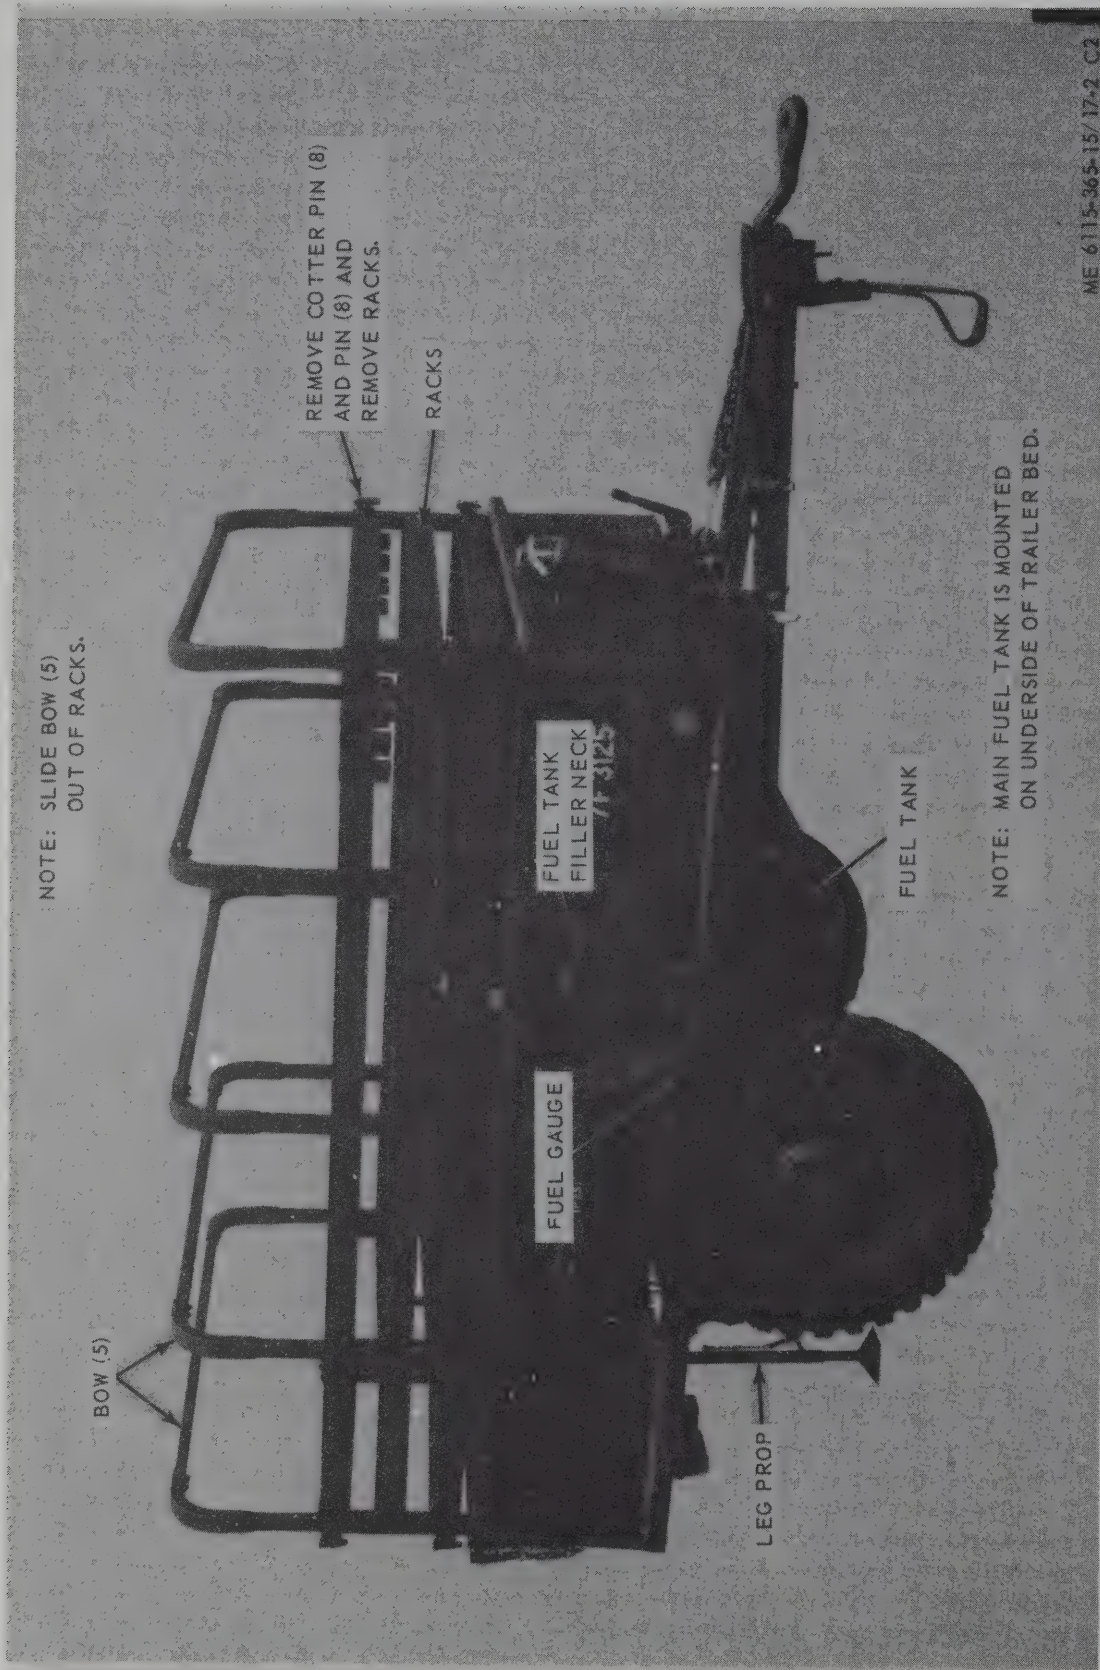


Figure 17-2. Bows and racks, removal and installations.

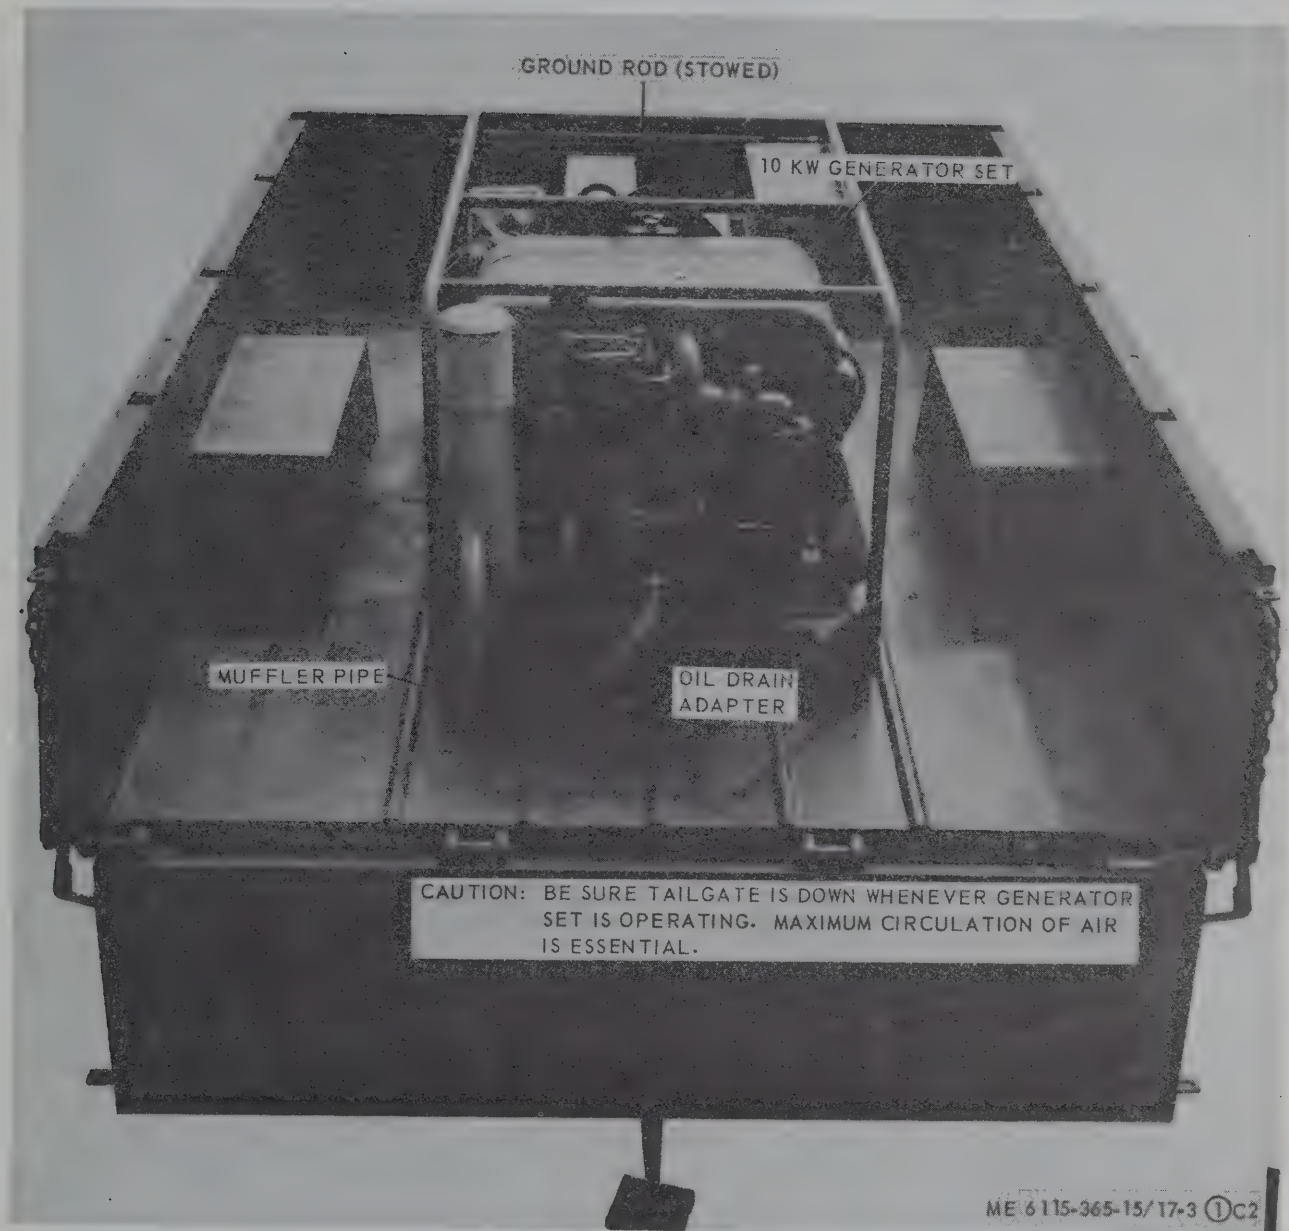


Figure 17-3. PU-375B/G set up for operation (sheet 1 of 2).

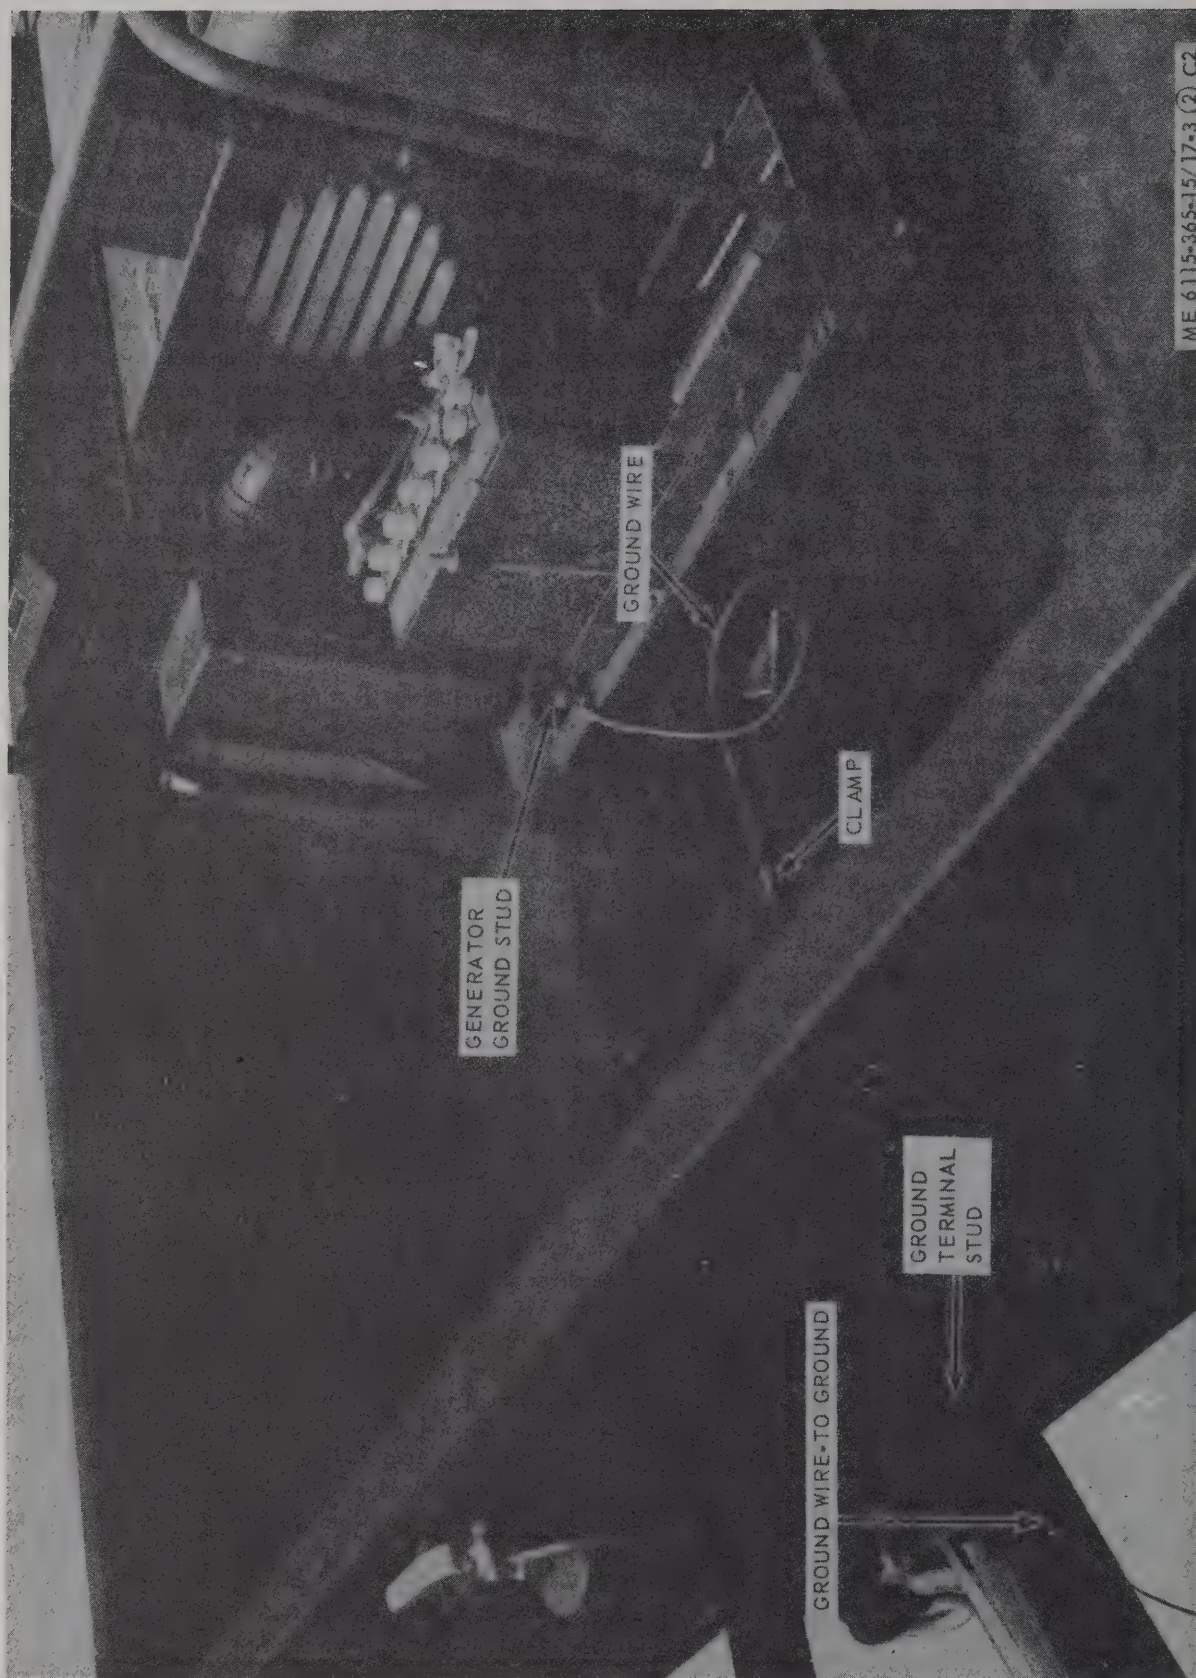


Figure 17-3. PU-375B/C set up for operation (sheet 2 of 2).

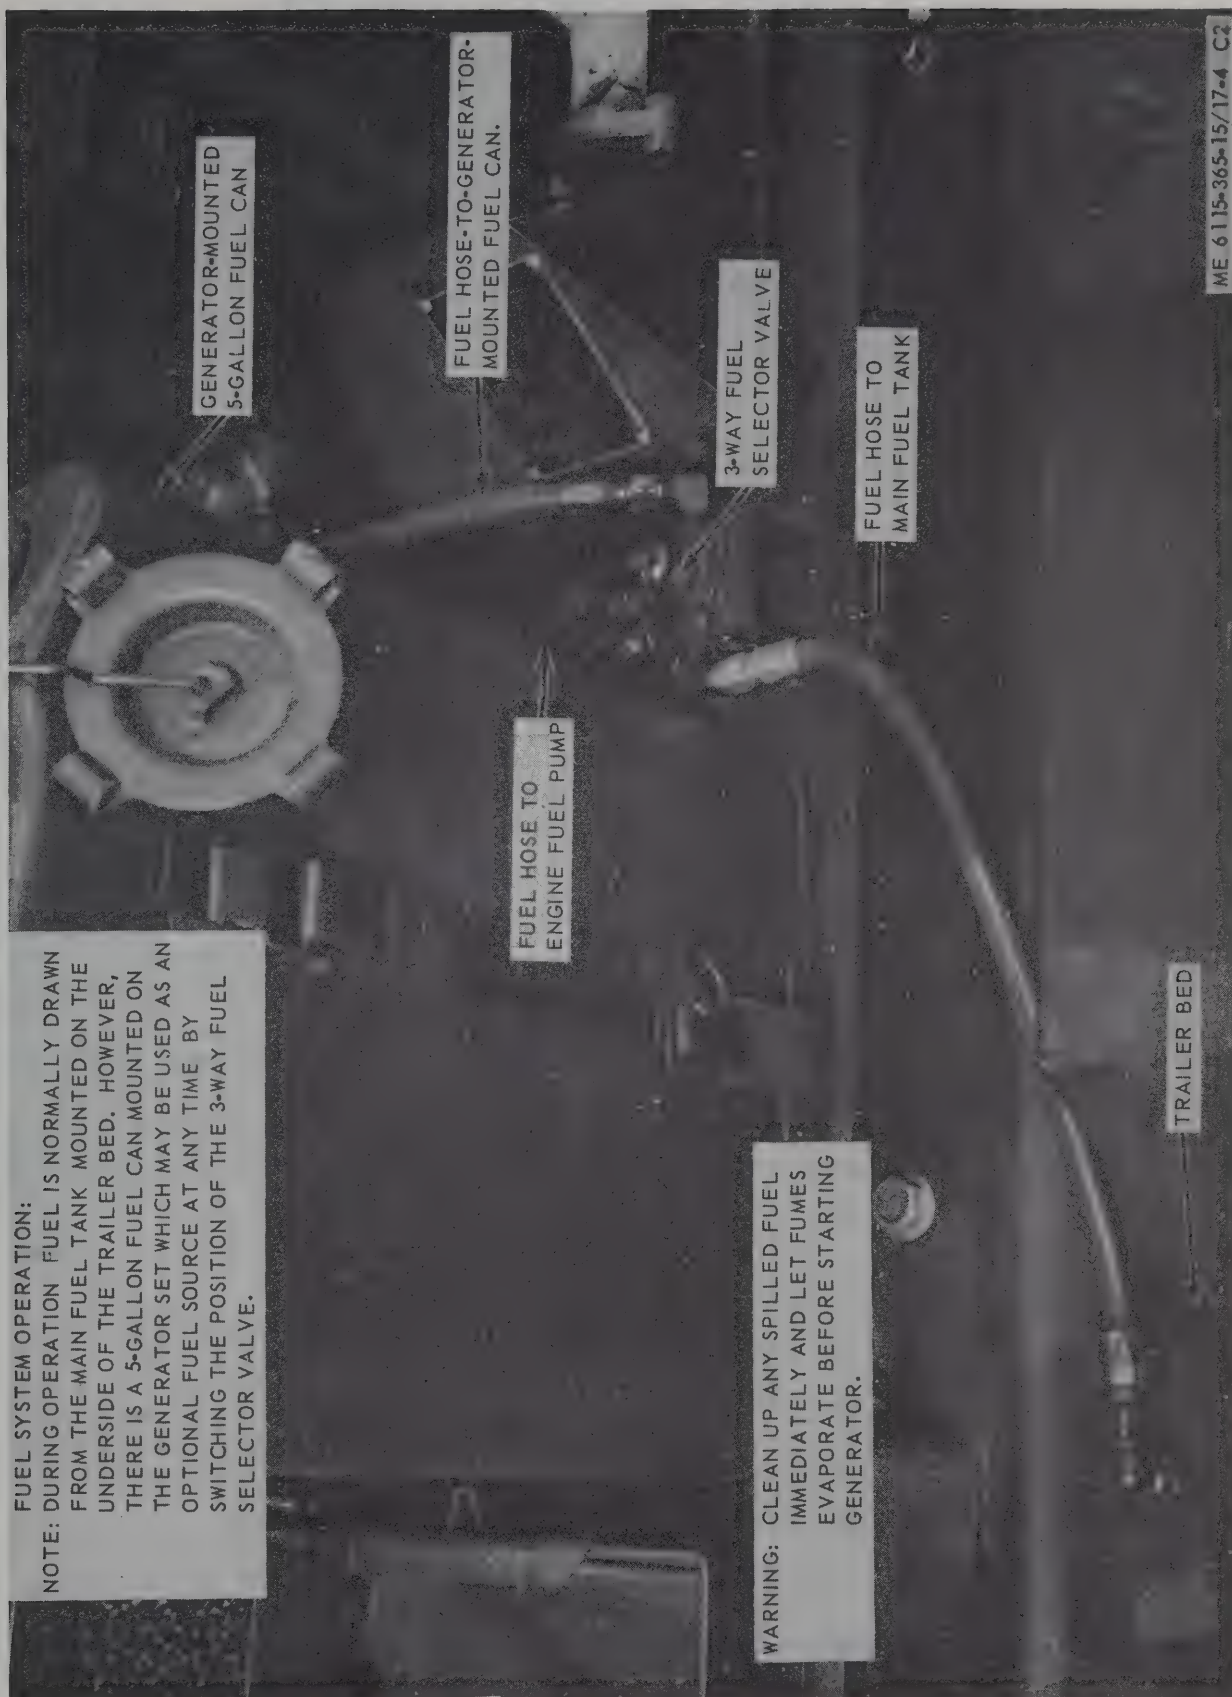


Figure 17-4. Fuel system connection and transfer procedure.

Section III. OPERATOR'S MAINTENANCE INSTRUCTIONS

17-7. General

The PU-375B/G is equipped with an under-slung fuel tank mounted under the trailer. The fuel filler neck contains the fuel strainer which must be serviced by the operator.

17-8. Fuel Tank Cap and Strainer Assembly

a. *Removal.* Remove fuel tank cap and pull out the strainer assembly with the chain.

b. *Cleaning and Inspection.*

(1) Clean metal parts with approved cleaning solvent and dry thoroughly.

(2) Inspect cap and strainer for damage and defects. Inspect strainer screen for holes and gasket for deterioration.

(3) Replace a defective fuel tank cap, gasket, or strainer.

c. *Installation.* Place strainer assembly in filler neck and install cap.

Section IV. ORGANIZATIONAL MAINTENANCE INSTRUCTIONS

17-9. Ground Wires and Terminal Stud

a. *Removal.* Refer to figure 17-3 and disconnect ground wires, remove clamp and ground terminal stud.

b. *Installation.* Refer to figure 17-3 and install ground terminal stud, connect ground wires, and install clamp.

17-10. Tarpaulin, Roof Bows, Racks, and Leg Prop

a. *Removal.*

(1) Remove tarpaulin from unit.

(2) Remove the roof bows and racks as shown in figure 17-2.

(3) Remove the hardware that secures the leg prop to the rear underside of the trailer bed and remove leg prop.

b. *Cleaning and Inspection.*

(1) Clean tarpaulin, bows, and racks with water and detergent. Clean leg prop with approved cleaning solvent. Dry thoroughly.

(2) Inspect tarpaulin for tears, holes, broken or missing ropes and straps, and other defects. Inspect bows, racks, and leg prop for cracks, bends, missing pins, and other defects.

c. *Installation.*

(1) Mount the leg prop to the underside of the trailer bed and secure with mounting hardware.

(2) Install the racks and roof bows as shown in figure 17-2.

(3) Install tarpaulin and secure in desired position.

17-11. Fuel Tank and Gage Assembly

a. *General.* The fuel tank on PU-375B/G is mounted on the underside of the trailer bed, held in place by 2 metal straps that are secured to cross braces welded to the trailer. The fuel gage is mounted on top of the tank.

b. *Removal.*

(1) Drain fuel tank.

(2) Disconnect either end of the ground wire that connects to the fuel gage.

(3) Remove the 2 hose clamps and remove the hose that connects the filler neck to the tank.

(4) Disconnect the breather line from the fuel tank.

(5) Remove the 2 nuts, 2 spacers, and washers that secure the 2 retaining straps to the rear tank brace. When straps are loose at rear, the tank will drop down.

(6) Disconnect fuel line from top of tank and remove tank.

(7) Remove 2 nuts, spacers, and washers that secure retaining straps to the front brace and remove the straps.

(8) Remove the 6 screws and washers that secure the fuel gage to the tank and lift out gage.

c. *Cleaning and Inspection.*

(1) Clean all parts with approved cleaning solvent and flush out any dirt and foreign particles from inside the tank.

(2) Inspect tank for dents, rust, cracks, and other damage. Inspect straps for defects

and damaged or missing hardware. Inspect fuel gage for damage and proper operation.

(3) Replace defective or missing parts as necessary.

d. Installation.

(1) Install the fuel gage in the tank and secure with 6 screws and washers.

(2) Secure the 2 retaining straps to the front brace with the 2 nuts, spacers, and washers.

(3) Place the tank under the trailer and

connect the engine fuel line. Use a jack or other means to lift the tank and hold it in position while the retaining straps are being installed.

(4) Secure the 2 straps to the rear brace with 2 nuts, spacers, and washers.

(5) Connect the breather line to the fuel tank.

(6) Install the hose between the tank and filler neck and secure with the 2 clamps.

(7) Connect the fuel gage ground wire.

(8) Fill fuel tank.

Section V. DIRECT AND GENERAL SUPPORT AND DEPOT MAINTENANCE INSTRUCTIONS

17-12. Generator Set

a. Removal. Refer to figure 17-5 as a guide and perform the following steps:

(1) Disconnect fuel lines.

(2) Disconnect electrical leads and load cable.

(3) Disconnect oil drain adapter.

(4) Remove 2 bolts and nuts that secure muffler pipe to trailer.

(5) Remove the 4 bolts that secure the generator set to the trailer and remove the generator set.

b. Installation. Use figure 17-5 as a guide and perform the following steps:

(1) Secure the generator set to the trailer bed with 4 bolts.

(2) Secure the muffler pipe to trailer bed with 2 bolts and 2 nuts.

(3) Connect the oil drain adapter.

(4) Connect the electrical leads and cable.

(5) Connect fuel lines.

17-13. Tarpaulin, Roof Bows, Racks, and Leg Prop


a. Removal. Remove tarpaulin, bows, racks, and leg prop (para 17-10).

b. Repair.

(1) Patch or sew rips and tears in the tarpaulin. Replace damaged or missing straps or ropes. Replace a tarpaulin that is too badly damaged to be repaired.

(2) Weld minor cracks or breaks in the bows or leg prop. Straighten bent bows where possible. Replace defective or missing pins and hardware. Replace bows, racks, or leg prop that are damaged beyond repair.

c. Installation. Install racks, roof bows, leg prop, and tarpaulin (para 17-10).

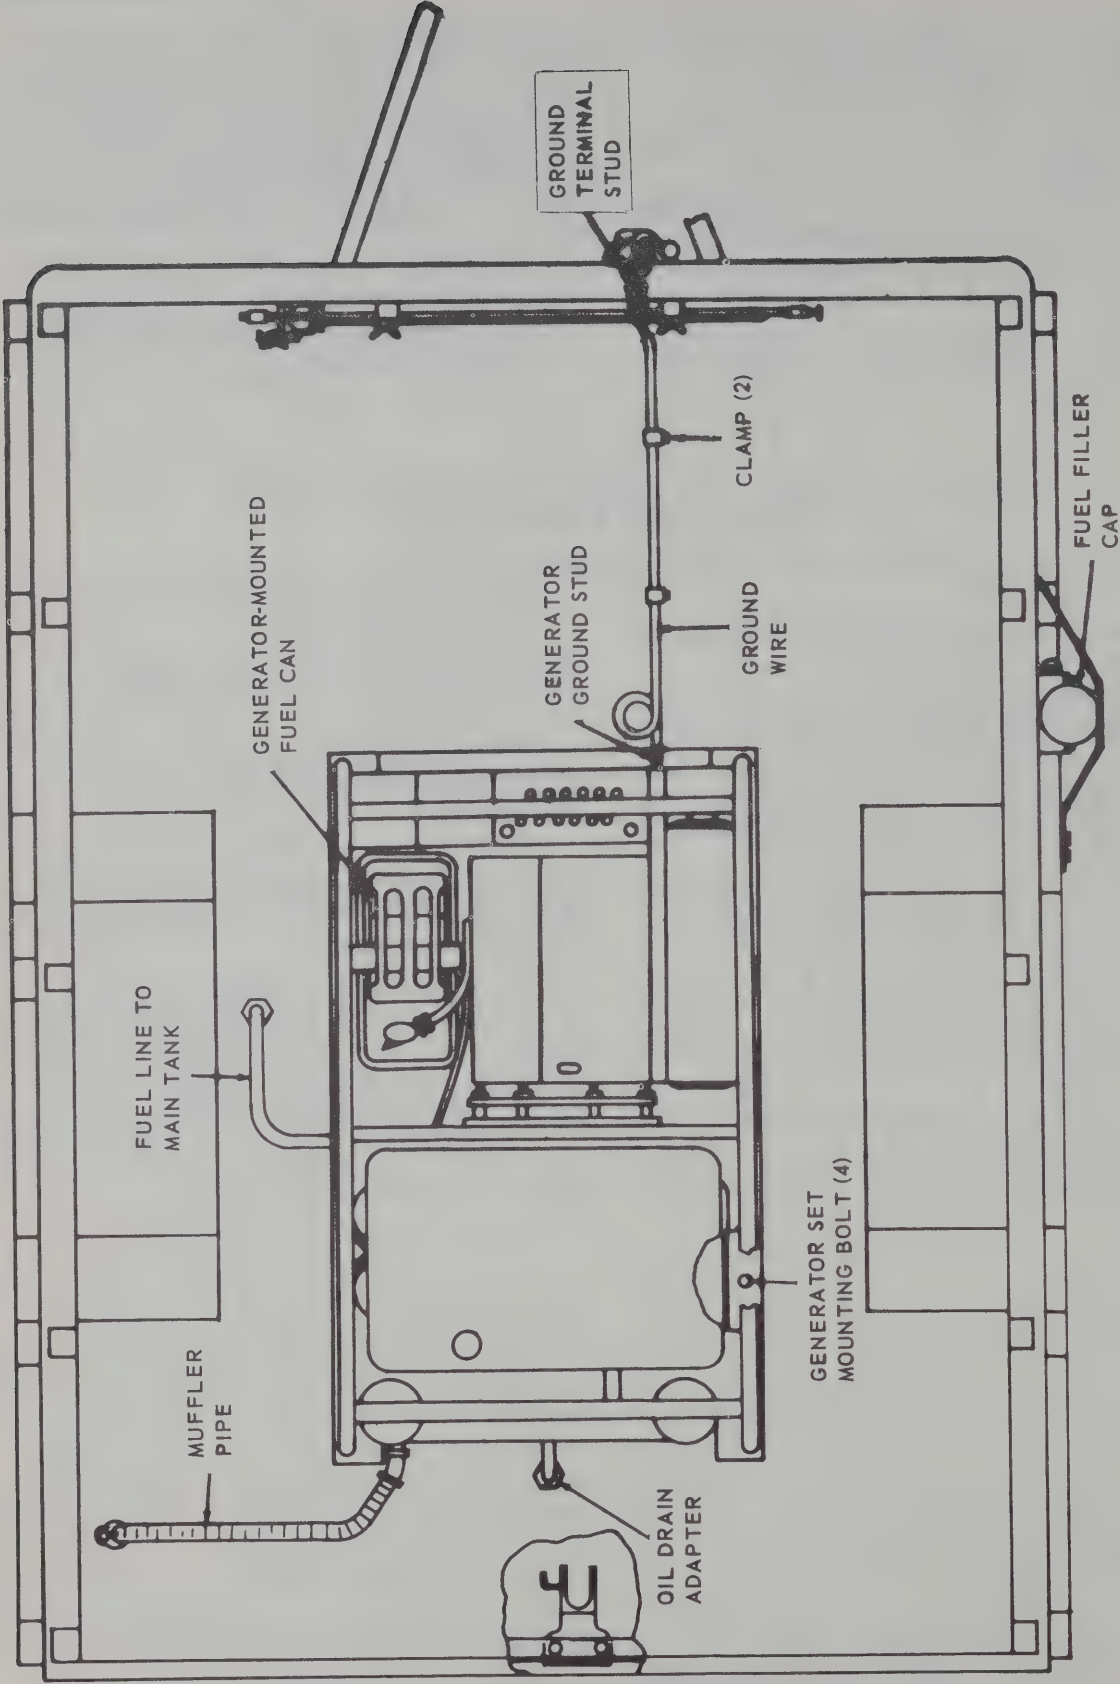

ME 6115-365-15/17-5 C8

Figure 17-5. PU-375B/C overall component location diagram.

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
		PART I								
		REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE								
		GROUP 03 - FUEL SYSTEM								
		0306 - TANKS, LINES, FITTINGS								
00001										
00002										
X2 0 00003		BRACKET, FUEL TANK ASSEMBLY 13205E5080 (97403)		EA	1				17-7	39
P 0 00004	2910-911-0081	CAP, FUEL TANK: tactical vehicle fording MS35645-2 (96906)		EA	1	*	*	*	17-7	3
X2 0 00005		CLAMP, HOSE: 1-13/16-2-3/4, range MS35842-13 (96906)		EA	2				17-8	7
X2 0 00006		CLAMP, HOSE: 7/16-25/32, range MS35842-10 (96906)		EA	2				17-7	27
X2 0 00007		CLAMP, LOOP, CUSHIONED: 3/4, nom, od MS21104D12 (96906)		EA	1				17-7	31
X2 0 00008		CLAMP, LOOP, CUSHIONED: 5/8, nom, od MS21104D10 (96906)		EA	1				17-8	2
X2 0 00009		COCK, DRAIN/HOSE BIB: 1/4-18 MS35783-2 (96906)		EA	1				17-9	13
X2 0 00010		COVER, FUEL TANK 13216E7456 (97403)		EA	1				17-9	9
X2 0 00011		ELBOW: 90 deg, 37 deg, flare, 5/16-1/8 x 1/2-20 SAEJ514 (81343)		EA	1				17-9	8
X2 0 00013		FILLER, FUEL TANK 13205E5081 (97403)		EA	1				17-7	4
P 0 00014	2910-575-0998	FILTER 1501596 (12204)		EA	1	*	*	*	17-9	1
X2 0 00015		FITTING: 37 deg flare, 1/2-20 x 1/2-20 SAEJ514AF1G10C (81343)		EA	1				17-6	6
X2 0 00016		GAGE, LIQUID, LEVEL 13216E7459 (97403)		EA	1				17-9	24
X2 0 00017		GASKET 13216E7460 (97403)		EA	1				17-9	21
X2 0 00018		GASKET, FUEL TANK 13216E7453 (97403)		EA	1				17-9	5
X2 0 00019		GASKET, FUEL TANK 13216E7455 (97403)		EA	1				17-9	10
X2 0 00020	2910-423-2730	GASKET, LEATHER 7348979 (19702)		EA	1				17-9	16
X2 0 00021		GROMMET: 1/16GR-1-5/8GR-D3/4H MS35489-120 (96906)		EA	1				17-7	33
M 0 00022		GROUND WIRE ASSEMBLY: 10 in., 1g 13216E7462 (97403) MANUFACTURE FROM:		EA	1				17-9	17
X2 0 00023		TERMINAL, LUG: No. 16-14 AWG, No. 10 std MS20659-104 (96906)		EA	2					
P 0 00024		WIRE, ELECTRIC: No. 14 AWG MILW76 (81349)		FT		SEE	GRP	9501		
X2 0 00025		GUARD, FUEL GAGE 13205E5083 (97403)		EA	1				17-7	5

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(a) FIG. NO.	(b) ITEM NO.
P 0 00026	4720-580-6659	HOSE ASSEMBLY: detachment fitting, 5/16, od, x 18 MS28741-5-0180 (96906)	EA	1	*	*	*	*	17-6	9
P 0 00027	4720-567-1681	HOSE ASSEMBLY: 5/16, tubing, od, x 48, 1g MS28741-5-0480 (96906)	EA	1	*	*	*	*	17-8	1
P 0 00028		HOSE, FUEL: 2-1d x 2-1/2, od, x 3, 1g SAEJ30CLASS30R2TYPE2 (81343)	EA	1		SEE	GRP	9501	17-8	6
P 0 00029	2910-881-3432	HOSE, RUBBER: 1/2 id, x 3/4 max, od, x 24 MILH13444TYPE11 (81349)	EA	1		SEE	GRP	9501	17-7	32
X2 0 00030		LOCKNUT: 37 deg flare, 1/2-20 SAEJ514FIG10A (81343)	EA	1					17-6	8
X2 0 00031		NUT, INVERTED: 1/2 tube, od, 3/4-18 SAEJ512 (81343)	EA	1					17-9	18
X2 0 00032		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)	EA	4					17-7	8
X2 0 00033		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)	EA	3					17-7	42
X2 0 00034		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)	EA	2					17-7	38
X2 0 00035		NUT, SELF-LOCKING, HEXAGON: No. 10-32 MS21044N3 (96906)	EA	1					17-8	5
X2 0 00036		NUT, SELF-LOCKING, HEXAGON: No. 10-32 MS21044N3 (96906)	EA	1					17-7	28
X2 0 00037		NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)	EA	2					17-7	44
X2 0 00038		NUT, SELF-LOCKING, HEXAGON: 5/16-18 MS51922-9 (96906)	EA	1					17-7	48
X2 0 00039		MOUNT, GAGE 13216E7458 (97403)	EA	1					17-9	20
X2 0 00040		PLATE, CONNECTOR 13216E7454-1 (97403)	EA	1					17-9	2
X2 0 00041		PLATE, FUEL TANK 13205E5133 (97403)	EA	1					17-7	45
X2 0 00042		SCREW, CAP, HEXAGON HEAD: 5/16-18 x 7/8, 1g MS90725-33 (96906)	EA	1					17-7	46
X2 0 00043		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 5/8, 1g MS90725-5 (96906)	EA	4					17-7	6
X2 0 00044		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 1, 1g MS90725-8 (96906)	EA	2					17-7	36
X2 0 00045		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 7/8, 1g MS90725-7 (96906)	EA	3					17-7	40
X2 0 00046		SCREW, MACHINE: No. 10-24 x 3/4, 1g FFS92TYPE111STYLE9C (81348)	EA	10					17-9	7
X2 0 00047		SCREW, MACHINE, PAN HEAD: No. 8-32 x 1/2, 1g MS35206-245 (96906)	EA	5					17-9	11
X2 0 00048		SCREW, MACHINE, PAN HEAD: 10-32 x 5/8, 1g MS35207-264 (96906)	EA	6					17-9	22
X2 0 00049		SCREW, MACHINE, PAN HEAD: 10-32 x 5/8, 1g MS35207-264 (96906)	EA	1					17-7	30
X2 0 00050		SCREW, MACHINE, PAN HEAD: No. 10-32 x 5/8, 1g MS35207-264 (96906)	EA	1					17-8	3
X2 0 00051		STRAP, FUEL TANK 13205E5082 (97403)	EA	1					17-7	35

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
P 0 00052	2910-420-8936	TANK ASSEMBLY, FUEL FILTER 13216E7451-1 (97403)		EA	1	*	*	*	17-7	58
P 0 00053	2910-420-8930	TANK, FUEL 13216E7452 (97403)		EA	1	*	*	*	17-9	14
P 0 00054		TUBING: 1/2 od, x .035 wall, x 3, lg SAEJ526 (81343)		EA	1	SEE	GRP	9501	17-9	19
X2 0 00055		WASHER, FLAT: round, 3/8 screw size MS27183-15 (96906)		EA	2				17-7	43
X2 0 00056		WASHER, FLAT: round, 1/4 BSC, size MS27183-10 (96906)		EA	3				17-7	41
X2 0 00057		WASHER, FLAT: round, No. 10 BSC, size MS27183-8 (96906)		EA	1				17-7	29
X2 0 00058		WASHER, FLAT: round, No. 10 BSC, size MS27183-8 (96906)		EA	1				17-8	4
X2 0 00059		WASHER, FLAT: round, 1/4 BSC, size MS27183-10 (96906)		EA	2				17-7	37
X2 0 00060		WASHER, FLAT: round, 1/4 BSC, size MS27183-10 (96906)		EA	4				17-7	7
X2 0 00061		WASHER, FLAT: round, 5/16 BSC, size MS27183-12 (96906)		EA	1				17-7	47
X2 0 00062		WASHER, FLAT: round, .531 x 1, .062 x .095 MS27183-18 (96906)		EA	1				17-6	7
X2 0 00063		WASHER, LOCK, SPRING, HELICAL: No. 8 nom MS35338-42 (96906)		EA	5				17-9	12
X2 0 00064		WASHER, LOCK, SPRING, HELICAL: No. 10 nom, size MS35338-43 (96906)		EA	6				17-9	23
X2 0 00065		WASHER, LOCK, SPRING, HELICAL: No. 12 nom, size USASB27-1 (80204)		EA	1				17-9	6
00066		GROUP 04 - EXHAUST SYSTEM								
00067		0401 - MUFFLER AND PIPE								
X2 0 00068		CLAMP ASSEMBLY, TUBE EXHAUST 13212E3592-14 (97403)		EA	1				17-6	5
X2 0 00069		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)		EA	2				17-6	4
X2 0 00070		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 1, lg MS90725-8 (96906)		EA	2				17-6	2
P 0 00071	6115-934-7878	TUBE EXHAUST 13214E1389 (97403)		EA	1	*	*	*	17-6	1
X2 0 00072		WASHER, FLAT: round, 1/4 BSC, size MS27183-10 (96906)		EA	4				17-6	3
00073		GROUP 15 - FRAME, TOWING ATTACHMENTS, AND DRAWBARS								
00074		1501 - FRAME ASSEMBLY								
X2 0 00075	5340-999-6277	BRACKET ASSEMBLY 13214E1214 (97403)		EA	1				17-7	13
X2 0 00076		BRACKET, FUEL TANK 13205E4953 (97403)		EA	2				17-7	57
X2 0 00077		BRACKET, FUEL TANK ASSEMBLY 13205E4952 (97403)		EA	2				17-7	53
X2 0 00078	2590-932-7298	CLAMP, GROUND ROD 13212E3617-1 (97403)		EA	4				17-7	17
X2 0 00079		CLAMP, LOOP, CUSHIONED: 3/16, 1d MS2110403 (96906)		EA	3				17-6	11

(1) SHR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
		REF NUMBER & MFR CODE								
X2 0 00080	5340-914-2578	CLIP SPRING 13214E1213-1 (97403)	EA	1					17-7	21
X2 0 00081		NUT, PLAIN, HEXAGON JAM: 3/8-16 non-mag MS16203-39 (96906)	EA	2					17-7	65
X2 0 00082		NUT, PLAIN, HEXAGON, MACHINE, SCREW: 10-24 MS35649-202 (96906)	EA	3					17-6	15
X2 0 00083		NUT, PLAIN, HEXAGON: 3/8-16 non-mag MS16203-27 (96906)	EA	1					17-7	63
X2 0 00084		NUT, PLAIN, WING BRASS: 3/8-16 MS35425-28 (96906)	EA	1					17-7	67
X2 0 00085		NUT, SELF-LOCKING, HEXAGON MS51922-1 (96906)	EA	8					17-7	20
X2 0 00086		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)	EA	1					17-7	23
X2 0 00087		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)	EA	2					17-7	15
X2 0 00088		NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)	EA	3					17-7	62
X2 0 00089		NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)	EA	2					17-7	56
X2 0 00090		NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)	EA	2					17-7	2
X2 0 00091		NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)	EA	2					17-7	51
X2 0 00092		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4, 1g MS90725-6 (96906)	EA	1					17-7	24
X2 0 00093		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4, 1g MS90725-6 (96906)	EA	2					17-7	16
X2 0 00094		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 1-3/4 MS90725-65 (96906)	EA	2					17-7	54
X2 0 00095		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 1-1/4 MS90725-62 (96906)	EA	3					17-7	60
X2 0 00096		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 2-1/4 MS90725-67 (96906)	EA	2					17-7	49
X2 0 00097		SCREW, MACHINE, FLAT HEAD MS35190-290 (96906)	EA	8					17-7	18
X2 0 00098		SCREW, MACHINE, PAN HEAD: 10-24 x 5/8, 1g MS35206-264 (96906)	EA	3					17-6	12
X2 0 00099		STUD, GROUNDING 13214E1223 (97403)	EA	1					17-7	68
X2 0 00100		SHIELD, FUEL TANK 13205E4951 (97403)	EA	1					17-7	59
X2 0 00101		WASHER, FLAT, ELECTRIC, BRASS: 3/8, size AN961-616 (88044)	EA	4					17-7	66
X2 0 00102		WASHER, FLAT: round, 1/4 BSC, size MS27183-10 (96906)	EA	2					17-7	22
X2 0 00103		WASHER, FLAT: round, 1/4 BSC, size MS27183-10 (96906)	EA	4					17-7	14
X2 0 00104		WASHER, FLAT: round, 1/4 BSC, size MS27183-10 (96906)	EA	8					17-7	19
X2 0 00105		WASHER, FLAT: round, No. 10 BSC, size MS27183-8 (96906)	EA	3					17-6	13

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00106		WASHER, FLAT: round, 3/8 BSC, size MS27183-15 (96906)		EA	2				17-7	55
X2 0 00107		WASHER, FLAT: round, 3/8 BSC, size MS27183-15 (96906)		EA	3				17-7	61
X2 0 00108		WASHER, FLAT: round, 3/8 BSC, size MS27183-15 (96906)		EA	2				17-7	50
X2 0 00109		WASHER, FLAT: round, 3/8 BSC, size MS27183-15 (96906)		EA	2				17-7	1
X2 0 00110		WASHER, LOCK: No. 10 MS35338-43 (96906)		EA	3				17-6	14
X2 0 00111		WASHER, LOCK, FLAT: external tooth, 3/8 MS35335-91 (96906)		EA	2				17-7	64
00112		1507 - LANDING GEAR, LEVELING JACKS (MECHANICAL OR HYDRAULIC)								
X2 0 00113	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)		EA	3				17-6	25
X2 0 00114		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 1-1/4 MS90725-62 (96906)		EA	3				17-6	23
P2 0 00115	2590-420-8929	TRAILER LEG PROP ASSEMBLY 13214E1206 (97403)		EA	1	*	*	*	17-6	22
X1 00116		BRACKET, TRAILER LEG, PROP ASSEMBLY 13214E1207 (97403)		EA	1				17-6	22
X2 0 00117		FITTING, LUBRICATION: 1/8-27 NPT MS15006-1 (96906)		EA	1				17-6	22
X1 00118		LEG BASE 13214E1212 (97403)		EA	1				17-6	22
X1 00119		LEG, UPPER 13214E1208 (97403)		EA	1				17-6	22
X1 00120		NUT 13214E1211 (97403)		EA	1				17-6	22
X2 0 00121		PIN, COTTER: 1/8 dia, x 3/4, 1g MS24665-351 (96906)		EA	1				17-6	22
X2 0 00122		RIVET, SOLID, HEAD MS20613-8P32 (96906)		EA	1				17-6	22
X1 00123		SCREW, TRAILER LEG 13214E1210 (97403)		EA	1				17-6	22
X1 00124		SHAFT, TRAILER LEG 13214E1209 (97403)		EA	1				17-6	22
X2 0 00125		WASHER, FLAT: round, 3/8 BSC, size MS27183-15 (96906)		EA	6				17-6	24
00126		GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS								
00127		2202 - ACCESSORY ITEMS								
P C 00128	5975-878-3791	ROD, GROUND: 3 ft, section with attachments MILR11461 (81349)		EA	2	*	*	*	17-7	25
P C 00129	5120-265-7462	HAMMER HAND, DOUBLE FACE: 8 lb GGGH86TYPEXCLASS1 (81348)		EA	1	*	*	*	17-7	26
00130		2210 - DATA PLATES								
X2 0 00131		PLATE, IDENTIFICATION 13205E4916-14(97403)		EA	1				17-6	10
X2 0 00132		PLATE, IDENTIFICATION, GROUND TERMINAL 13205E4918 (97403)		EA	1				17-7	52

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS USABLE ON CODE	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
00133		GROUP 40 - ELECTRIC MOTORS AND GENERATORS								
00134		4000 - GENERATOR ASSEMBLY								
X2 0 00135		NUT, SELF-LOCKING, HEXAGON: 5/8-11 MS51922-49 (96906)	EA	4					17-6	17
X2 0 00136		SCREW, CAP, HEXAGON HEAD: 5/8-11 x 1-1/2 MS90725-162 (96906)	EA	4					17-6	20
X2 0 00137		SPACER 13214E1222-3 (97403)	EA	4					17-6	18
X2 0 0137A		WASHER, FLAT: round, 5/8 BSC, size MS27183-21 (96906)	EA	8					17-6	18
00138		4019 - RADIO INTERFERENCE SUPPRESSION								
M 0 00139		WIRE, ELECTRIC: copper, 6 ft, No. 6 AWG, uninsulated QQW343TYPERBCLASS1 (81348) MANUFACTURE FROM:	FT	1					17-6	16
P 0 00140	6145-395-8799	WIRE, ELECTRIC: copper, No. 6 AWG, uninsulated QQW343TYPERBCLASS1 (81348)	FT			SEE	GRP	9501		
00141		GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS								
00142		7638 - PORTABLE FIRE FIGHTING EQUIPMENT								
P C 00143	4210-555-8837	EXTINGUISHER, FIRE: 2-3/4, with bracket MILE52031 (81349)	EA	1	*	*	*	*	17-7	9
X2 0 00144	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)	EA	4					17-7	11
X2 0 00145	5305-068-0502	SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4, 1g MS90725-6 (96906)	EA	4					17-7	12
X2 0 00146	5310-809-4058	WASHER, FLAT: round, 1/4 BSC, size MS27183-10 (96906)	EA	8					17-7	10
00147		GROUP 95 - GENERAL USE STANDARDIZED PARTS								
00148		9501 - HARDWARE SUPPLIES AND BULK MATERIAL, COMMON								
P 0 00149	2910-881-3432	HOSE, RUBBER: 1/2 in. id, 3/4 in. max od MILH13444TYPE2 (81349)	FT		*	*	*	*		
P 0 00150		HOSE: 2 in. id, 2-1/2 in. od SAEJ30CLASS30R2TYPE2 (81343)	FT		*	*	*	*		
P 0 00151		TUBING: 1/2 od, .035 wall SAEJ526 (81343)	FT		*	*	*	*		
P 0 00152		WIRE, ELECTRICAL: 14 AWG MILW76 (81349)	FT		*	*	*	*		

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 30-DAY DS MAINT ALLOWANCE	(7) 30-DAY GS MAINT ALLOWANCE	(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
									(a)	(b)
					(a)	(b)	(c)	(a)	(b)	(c)
					1-20	21-50	51-100	1-20	21-50	51-100
		PART II								
		REPAIR PARTS FOR DS, GS, AND DEPOT MAINTENANCE								
		GROUP 03 - FUEL SYSTEM								
00001										
00002		0306 - TANKS, LINES, FITTINGS								
X2 0 00003		BRACKET, FUEL TANK ASSEMBLY 13205E5080 (97403)		EA	1					
P 0 00004	2910-911-0081	CAP, FUEL TANK: tactical vehicle fording MS35645-2 (96906)		EA	1	*	*	2	*	*
X2 0 00005		CLAMP, HOSE: 1-13/16-2-3/4, range MS35842-13 (96906)		EA	2					
X2 0 00006		CLAMP, HOSE: 7/16-25/32, range MS35842-10 (96906)		EA	2					
X2 0 00007		CLAMP, LOOP, CUSHIONED: 3/4, nom, od MS21104D12 (96906)		EA	1					
X2 0 00008		CLAMP, LOOP, CUSHIONED: 5/8, nom, od MS21104D10 (96906)		EA	1					
X2 0 00009		COCK, DRAIN/HOSE BIB: 1/4-18 MS35783-2 (96906)		EA	1					
X2 0 00010		COVER, FUEL TANK 13216E7456 (97403)		EA	1					
X2 0 00011		ELBOW: 90 deg, 37 deg, flare, 5/16-1/8 x 1/2-20 SAEJ514 (81343)		EA	1					
X2 00012		EXTENSION, TANK ASSEMBLY 13216E7457 (97403) (WELDMENT)		EA	1					
X2 0 00013		FILLER, FUEL TANK 13205E5081 (97403)		EA	1					
P 0 00014	2910-575-0998	FILTER 1501596 (12204)		EA	1	*	*	2	*	*
X2 0 00015		FITTING: 37 deg flare, 1/2-20 x 1/2-20 SAEJ514AF1G10C (81343)		EA	1					
X2 0 00016		GAGE, LIQUID, LEVEL 13216E7459 (97403)		EA	1					
X2 0 00017		GASKET 13216E7460 (97403)		EA	1					
X2 0 00018		GASKET, FUEL TANK 13216E7453 (97403)		EA	1					
X2 0 00019		GASKET, FUEL TANK 13216E7455 (97403)		EA	1					
X2 0 00020	2910-423-2730	GASKET, LEATHER 7348979 (19702)		EA	1					
X2 0 00021		GROMMET: 1/16GR-1-5/8GR-D3/4H MS35489-120 (96906)		EA	1					
M 0 00022		GROUND WIRE ASSEMBLY: 10 in., 1g 13216E7462 (97403) MANUFACTURE FROM:		EA	1					
X2 0 00023		TERMINAL, LUG: No. 16-14 AWG, No. 10 std MS20659-104 (96906)		EA	2					
P 0 00024		WIRE, ELECTRIC: No. 14 AWG MILW76 (81349)		FT				SEE	GRP	9501

(1)	(2)	(3)	(4)	(5)	(6)			(7)			(8)	(9)	(10)		
SMR CODE	FEDERAL STOCK NUMBER	DESCRIPTION	USABLE ON CODE	UNIT OF MEAS	QTY INC IN UNIT	30-DAY DS MAINT ALLOWANCE			30-DAY GS MAINT ALLOWANCE			1-YR ALW PER 100 EQUIP CNTGY	DEPOT MAINT ALW PER 100 EQUIP	ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
REF NUMBER & MFR CODE						1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 0 00025		GUARD, FUEL GAGE. 13205E5083 (97403)		EA	1									17-7	5
P 0 00026	4720-580-6659	HOSE ASSEMBLY: detachment fitting 5/16, od, x 18 MS28741-5-0180 (96906)		EA	1	*	*	*	*	*	*	5	5	17-6	9
P 0 00027	4720-567-1681	HOSE ASSEMBLY: 5/16, tubing, od, x 48 1g MS28741-5-0480 (96906)		EA	1	*	*	*	*	*	*	5	5	17-8	1
P 0 00028		HOSE, FUEL: 2-1d x 2-1/2, od, x 3, 1g SAEJ30CLASS30(81343)		EA	1			SEE	GRP	9501				17-8	6
P 0 00029	2910-881-3432	HOSE, RUBBER: 1/2 1d, x 3/4 max, od, x 24 MILH13444TYPE II (81349)		EA	1			SEE	GRP	9501				17-7	32
X2 0 00030		LOCKNUT: 37 deg flare, 1/2-20 SAEJ514FIG10A (81343)		EA	1									17-6	8
X2 0 00031		NUT, INVERTED: 1/2 tube, od, 3/4-18 SAEJ512 (81343)		EA	1									17-9	18
X2 0 00032		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)		EA	4									17-7	8
X2 0 00033		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)		EA	3									17-7	42
X2 0 00034		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)		EA	2									17-7	38
X2 0 00035		NUT, SELF-LOCKING, HEXAGON: No. 10-32 MS21044N3 (96906)		EA	1									17-8	5
X2 0 00036		NUT, SELF-LOCKING, HEXAGON: No. 10-32 MS21044N3 (96906)		EA	1									17-7	28
X2 0 00037		NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)		EA	2									17-7	44
X2 0 00038		NUT, SELF-LOCKING, HEXAGON: 5/16-18 MS51922-9 (96906)		EA	1									17-7	48
X2 0 00039		MOUNT, GAGE 13216E7458 (97403)		EA	1									17-9	20
X2 0 00040		PLATE, CONNECTOR 13216E7454-1 (97403)		EA	1									17-9	2
X2 0 00041		PLATE, FUEL TANK 13205E5133 (97403)		EA	1									17-7	45
X2 0 00042		SCREW, CAP, HEXAGON HEAD: 5/16-18 x 7/8, 1g MS90725-33 (96906)		EA	1									17-7	46
X2 0 00043		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 5/8, 1g MS90725-5 (96906)		EA	4									17-7	6
X2 0 00044		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 1, 1g MS90725-8 (96906)		EA	2									17-7	36
X2 0 00045		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 7/8, 1g MS90725-7 (96906)		EA	3									17-7	40
X2 0 00046		SCREW, MACHINE, PAN HEAD: No. 8-32 x 1/2, 1g MS35206-245 (96906)		EA	5									17-9	11
X2 0 00047		SCREW, MACHINE: No. 10-24 x 3/4, 1g FFS92TYPE111STYLE9C (81343)		EA	10									17-9	7

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 0 00048		SCREW, MACHINE, PAN HEAD: 10-32 x 5/8, 1g MS35207-264 (96906)	EA	6									17-9	22
X2 0 00049		SCREW, MACHINE, PAN HEAD: 10-32 x 5/8, 1g MS35207-264 (96906)	EA	1									17-7	30
X2 0 00050		SCREW, MACHINE, PAN HEAD: No. 10-32 x 5/8, 1g MS35207-264 (96906)	EA	1									17-8	3
X2 0 00051		STRAP, FUEL TANK 13205E5082 (97403)	EA	1									17-7	35
P 0 00052	2910-420-8936	TANK ASSEMBLY, FUEL FILTER 13216E7451-1 (97403)	EA	1	*	*	2	*	*	2	10	10	17-7	58
P 0 00053	2910-420-8930	TANK, FUEL 13216E7452 (97403)	EA	1	*	*	2	*	*	2	10	10	17-9	14
P 0 00054		TUBING: 1/2 od, x .035 wall, x 3, 1g SAEJ526 (81343)	EA	1				SEE	GRP	9501			17-9	19
X2 0 00055		WASHER, FLAT: round, 3/8 screw size MS27183-15 (96906)	EA	2									17-7	43
X2 0 00056		WASHER, FLAT: round, 1/4 BSC, size MS27183-10 (96906)	EA	3									17-7	41
X2 0 00057		WASHER, FLAT: round, No. 10 BSC, size MS27183-8 (96906)	EA	1									17-7	29
X2 0 00058		WASHER, FLAT: round, No. 10 BSC, size MS27183-8 (96906)	EA	1									17-8	4
X2 0 00059		WASHER, FLAT: round, 1/4 BSC, size MS27183-10 (96906)	EA	2									17-7	37
X2 0 00060		WASHER, FLAT: round, 1/4 BSC, size MS27183-10 (96906)	EA	4									17-7	7
X2 0 00061		WASHER, FLAT: round, 5/16 BSC, size MS27183-12 (96906)	EA	1									17-7	47
X2 0 00062		WASHER, FLAT: round, .531 x 1, .062 x .095 MS27183-18 (96906)	EA	1									17-6	7
X2 0 00063		WASHER, LOCK, SPRING, HELICAL: No. 8 nom MS35338-42 (96906)	EA	5									17-9	12
X2 0 00064		WASHER, LOCK, SPRING, HELICAL: No. 10 nom, size MS35338-43 (96906)	EA	6									17-9	23
X2 0 00065		WASHER, LOCK, SPRING, HELICAL: No. 12 nom, size USASB27-1 (80204)	EA	10									17-9	6
00066		GROUP 04 - EXHAUST SYSTEM												
00067		0401 - MUFFLER AND PIPE												
X2 0 00068		CLAMP ASSEMBLY, TUBE EXHAUST 13212E3592-14 (97403)	EA	1									17-6	5
X2 0 00069		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)	EA	2									17-6	4
X2 0 00070		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 1, 1g MS90725-8 (96906)	EA	2									17-6	2
P 0 00071	6115-934-7878	TUBE EXHAUST 13214E1389 (97403)	EA	1	*	*	2	*	*	2	10	10	17-6	1
X2 0 00072		WASHER, FLAT: round, 1/4 BSC, size MS27183-10 (96906)	EA	4									17-6	3

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGY	(10) DEPOT MAINT ALW PER 100 EQUIP	(11) ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
						1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
00073		GROUP 15 - FRAME, TOWING ATTACHMENTS, AND DRAWBARS													
00074		1501 - FRAME ASSEMBLY													
X2 0 00075	5340-999-6277	BRACKET ASSEMBLY 13214E1214 (97403)		EA	1									17-7	13
X2 0 00076		BRACKET, FUEL TANK 13205E4953 (97403)		EA	2									17-7	57
X2 0 00077		BRACKET, FUEL TANK ASSEMBLY 13205E4952 (97403)		EA	2									17-7	53
X2 0 00078	2590-932-7298	CLAMP, GROUND ROD 13212E3617-1 (97403)		EA	4									17-7	17
X2 0 00079		CLAMP, LOOP, CUSHIONED: 3/16, id MS2110403 (96906)		EA	3									17-6	11
X2 0 00080	5340-914-2578	CLIP SPRING 13214E1213-1 (97403)		EA	1									17-7	21
X2 0 00081		NUT, PLAIN, HEXAGON JAM: 3/8-16 non-mag MS16203-39 (96906)		EA	2									17-7	65
X2 0 00082		NUT, PLAIN, HEXAGON, MACHINE, SCREW: 10-24 MS35649-202 (96906)		EA	3									17-6	15
X2 0 00083		NUT, PLAIN, HEXAGON: 3/8-16 non-mag MS16203-27 (96906)		EA	1									17-9	63
X2 0 00084		NUT, PLAIN, WING BRASS: 3/8-16 MS35425-28 (96906)		EA	1									17-7	67
X2 0 00085		NUT, SELF-LOCKING, HEXAGON MS51922-1 (96906)		EA	8									17-7	20
X2 0 00086		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)		EA	1									17-7	23
X2 0 00087		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)		EA	2									17-7	15
X2 0 00088		NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)		EA	3									17-7	62
X2 0 00089		NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)		EA	2									17-7	56
X2 0 00090		NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)		EA	2									17-7	2
X2 0 00091		NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)		EA	2									17-7	51
X2 0 00092		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4, 1g MS90725-6 (96906)		EA	1									17-7	24
X2 0 00093		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4, 1g MS90725-6 (96906)		EA	2									17-7	16
X2 0 00094		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 1-3/4 MS90725-65 (96906)		EA	2									17-7	54
X2 0 00095		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 1-1/4 MS90725-62 (96906)		EA	3									17-7	60
X2 0 00096		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 2-1/4 MS90725-67 (96906)		EA	2									17-7	49

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 0 00097		SCREW, MACHINE, FLAT HEAD MS35190-290 (96906)	EA	8									17-7	18
X2 0 00098		SCREW, MACHINE, PAN HEAD: 10-24 x 5/8, 1g MS35206-264 (96906)	EA	3									17-6	12
X2 0 00099		STUD, GROUNDING 13214E1223 (97403)	EA	1									17-7	68
X2 0 00100		SHIELD, FUEL TANK 13205E4951 (97403)	EA	1									17-7	59
X2 0 00101		WASHER, FLAT, ELECTRIC, BRASS: 3/8, size AN961-616 (88044)	EA	4									17-7	66
X2 0 00102		WASHER, FLAT: round, 1/4 BSC, size MS27183-10 (96906)	EA	2									17-7	22
X2 0 00103		WASHER, FLAT: round, 1/4 BSC, size MS27183-10 (96906)	EA	4									17-7	14
X2 0 00104		WASHER, FLAT: round, 1/4 BSC, size MS27183-10 (96906)	EA	8									17-7	19
X2 0 00105		WASHER, FLAT: round, No. 10 BSC, size MS27183-8 (96906)	EA	3									17-6	13
X2 0 00106		WASHER, FLAT: round, 3/8 BSC, size MS27183-15 (96906)	EA	2									17-7	55
X2 0 00107		WASHER, FLAT: round, 3/8 BSC, size MS27183-15 (96906)	EA	3									17-7	61
X2 0 00108		WASHER, FLAT: round, 3/8 BSC, size MS27183-15 (96906)	EA	2									17-7	50
X2 0 00109		WASHER, FLAT: round, 3/8 BSC, size MS27183-15 (96906)	EA	2									17-7	1
X2 0 00110		WASHER, LOCK: No. 10 MS35338-43 (96906)	EA	3									17-6	14
X2 0 00111		WASHER, LOCK, FLAT: external tooth, 3/8 MS35335-91 (96906)	EA	2									17-7	64
00112		1507 - LANDING GEAR, LEVELING JACKS (MECHANICAL OR HYDRAULIC)												
X2 0 00113	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)	EA	3									17-6	25
X2 0 00114		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 1-1/4 MS90725-62 (96906)	EA	3									17-6	23
P2 0 00115	2590-420-8929	TRAILER LEG PROP ASSEMBLY 13214E1206 (97403)	EA	1	*	*	2	*	*	2	10	10	17-6	22
X1 00116		BRACKET TRAILER LEG, PROP ASSEMBLY 13214E1207 (97403)	EA	1									17-6	22
X2 0 00117		FITTING, LUBRICATION: 1/8-27 NPT MS15006-1 (96906)	EA	1									17-6	22
X1 00118		LEG BASE 13214E1212 (97403)	EA	1									17-6	22
X1 00119		LEG, UPPER 13214E1208 (97403)	EA	1									17-6	22
X1 00120		NUT 13214E1211 (97403)	EA	1									17-6	22
X2 0 00121		PIN, COTTER: 1/8 dia, x 3/4 lg MS24665-351 (96906)	EA	1									17-6	22

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
						1-20	21-50	51-100	1-20	21-50	51-100				
X2 O 00122		RIVET, SOLID, HEAD MS20613-8P32 (96906)		EA	1									17-6	22
X1 00123		SCREW, TRAILER LEG 13214EL210 (97403)		EA	1									17-6	22
X1 00124		SHAFT, TRAILER LEG 13214EL209 (97403)		EA	1									17-6	22
X2 O 00125		WASHER, FLAT: round, 3/8 BSC, size MS27183-15 (96906)		EA	6									17-6	24
00126		GROUP 18 - BODY, CAB, HOOD AND HULL													
0126A		1810 - CARGO BODY													
X2 FR 00127	2330-898-6779	TRAILER 13214EL489 (97403)		EA	1									17-6	21
00128		GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS													
00129		2202 - ACCESSORY ITEMS													
P C 00130	5975-878-3791	ROD, GROUND: 3 ft, section with attachments MILR11461 (81349)		EA	2	*	*	2	*	*	2	10	10	17-7	25
P C 00131	5120-265-7462	HAMMER, HAND, DOUBLE FACE: 8 lb GGGH86TYPECLASS1 (81348)		EA	1	*	*	2	*	*	2	10	10	17-7	26
00132		2210 - DATA PLATES													
X2 O 00133		PLATE, IDENTIFICATION: 13205B4916-14 (97403)		EA	1									17-6	10
X2 O 00134		PLATE, IDENTIFICATION, GROUND TERMINAL 13205B4918 (97403)		EA	1									17-7	52
00135		GROUP 40 - ELECTRIC MOTORS AND GENERATORS													
00136		4000 - GENERATOR ASSEMBLY													
X2 FR 00137	6115-937-1793	GENERATOR SET: 10KW-400HZ, skid mtd MILG52280 (81349)		EA	1									17-6	26
X2 O 00138		NUT, SELF-LOCKING, HEXAGON: 5/8-11 MS51922-49 (96906)		EA	4									17-6	17
X2 O 00139		SCREW, CAP, HEXAGON HEAD: 5/8-11 x 1-1/2 MS90725-162 (96906)		EA	4									17-6	20
X2 O 00140		SPACER 13214EL222-3 (97403)		EA	4									17-6	18
X2 O 00141		WASHER, FLAT: round, 5/8 BSC, size MS27183-21 (96906)		EA	8									17-6	19
00142		4019 - RADIO INTERFERENCE SUPPRESSION													
M O 00143		WIRE, ELECTRIC: copper, 6 ft, No. 6 AWG, uninsulated QQW343TYPERCLASS1 (81348) MANUFACTURE FROM:		FT	1									17-6	16
P O 00144	6145-395-8799	WIRE, ELECTRIC: copper, No. 6 AWG, uninsulated QQW343TYPERCLASS1 (81348)		FT					SEE GRP 9501						

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGY	(10) DEPOT MAINT ALW PER 100 EQUIP	(11) ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
						1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
00145		GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS													
00146		7638 - PORTABLE FIRE FIGHTING EQUIPMENT													
P C 00147	4210-555-8837	EXTINGUISHER, FIRE: 2-3/4, with bracket MILE52031 (81349)	EA	1	*	*	2	*	*	2	10	10	17-7	9	
X2 O 00148	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)	EA	4										17-7	11
X2 O 00149	5305-068-0502	SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4, 1g MS90725-6 (96906)	EA	4										17-7	12
X2 O 00150	5310-809-4058	WASHER, FLAT: round, 1/4 BSC, size MS27183-10 (96906)	EA	8										17-7	10
00151		GROUP 95 - GENERAL USE STANDARDIZED PARTS													
00152		9501 - HARDWARE SUPPLIES AND BULK MATERIAL, COMMON													
P O 00153	2910-881-3432	HOSE, RUBBER: 1/2 in. id, 3/4 in. max od MILH13444TYPE2 (81349)	FT		*	*	*	*	*	*	5	5			
P O 00154		HOSE: 2 in. id, 2-1/2 in. od SAEJ30CLASS30R2TYPE2 (81343)	FT		*	*	*	*	*	*	10	10			
P O 00155		TUBING: 1/2 od, .035 wall SAEJ526 (81343)	FT		*	*	*	*	*	*	10	10			
P O 00156		WIRE, ELECTRICAL: 14 AWG MILW76 (81349)	FT		*	*	*	*	*	*	*	*			

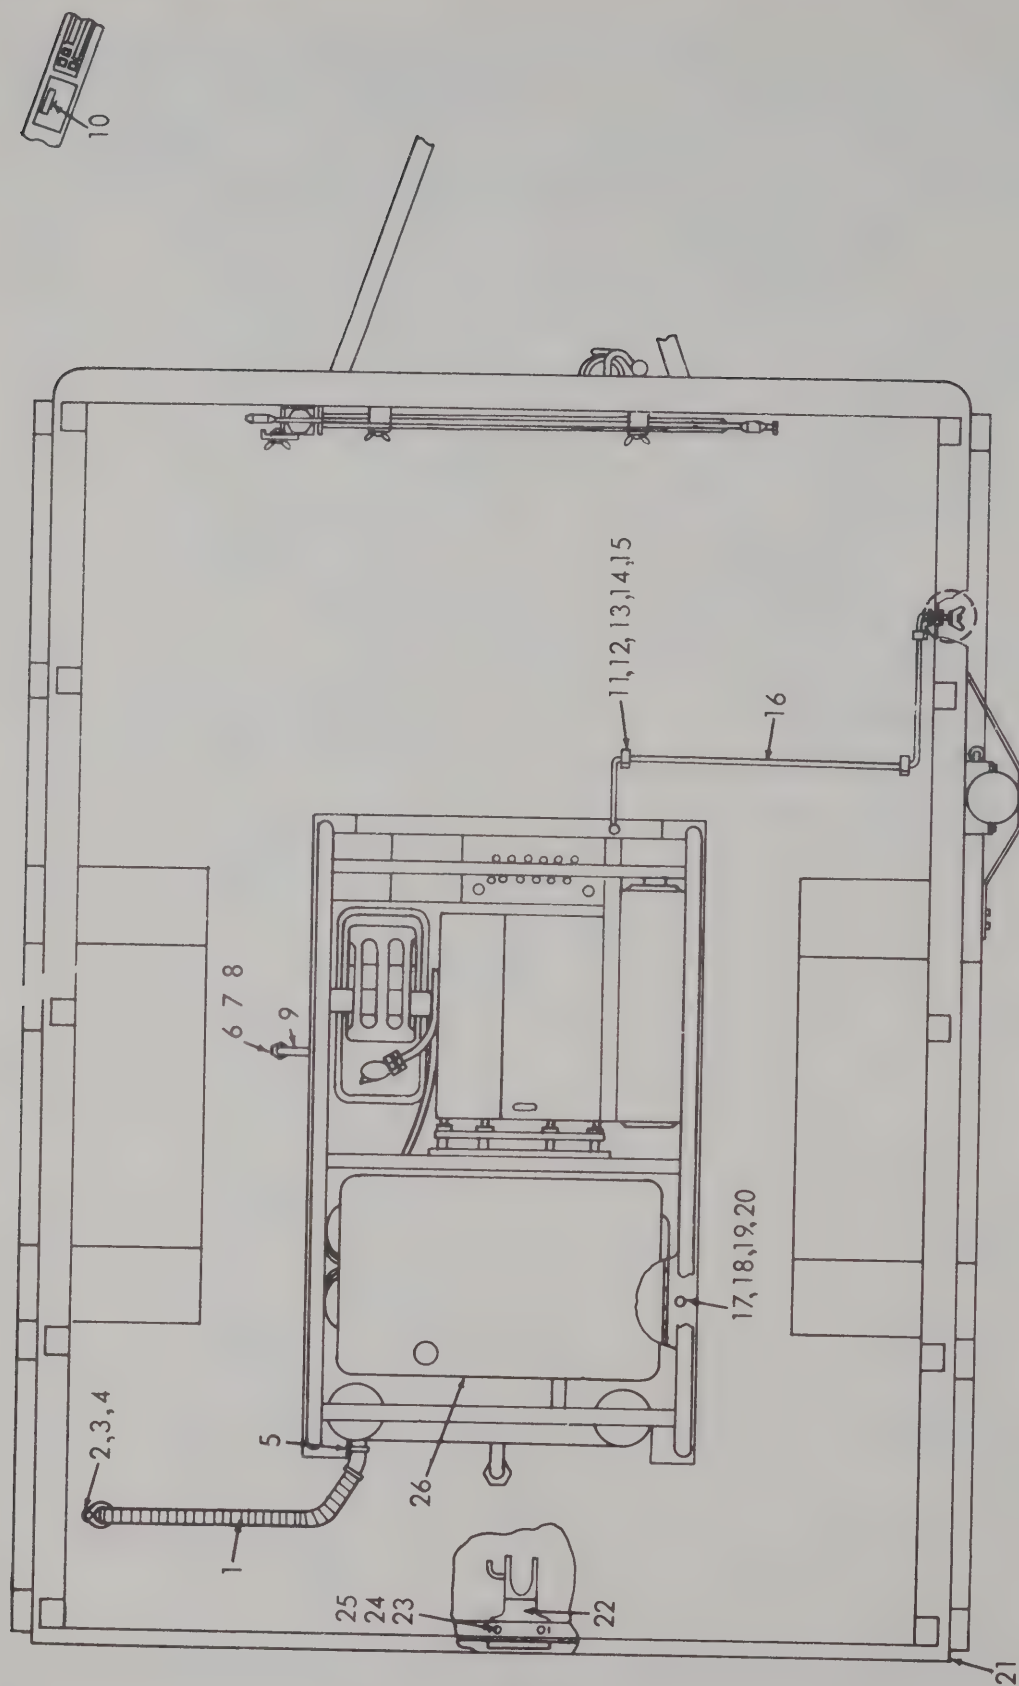


Figure 17-6. Power unit components.

ME 6115-365-15/17-6, C2


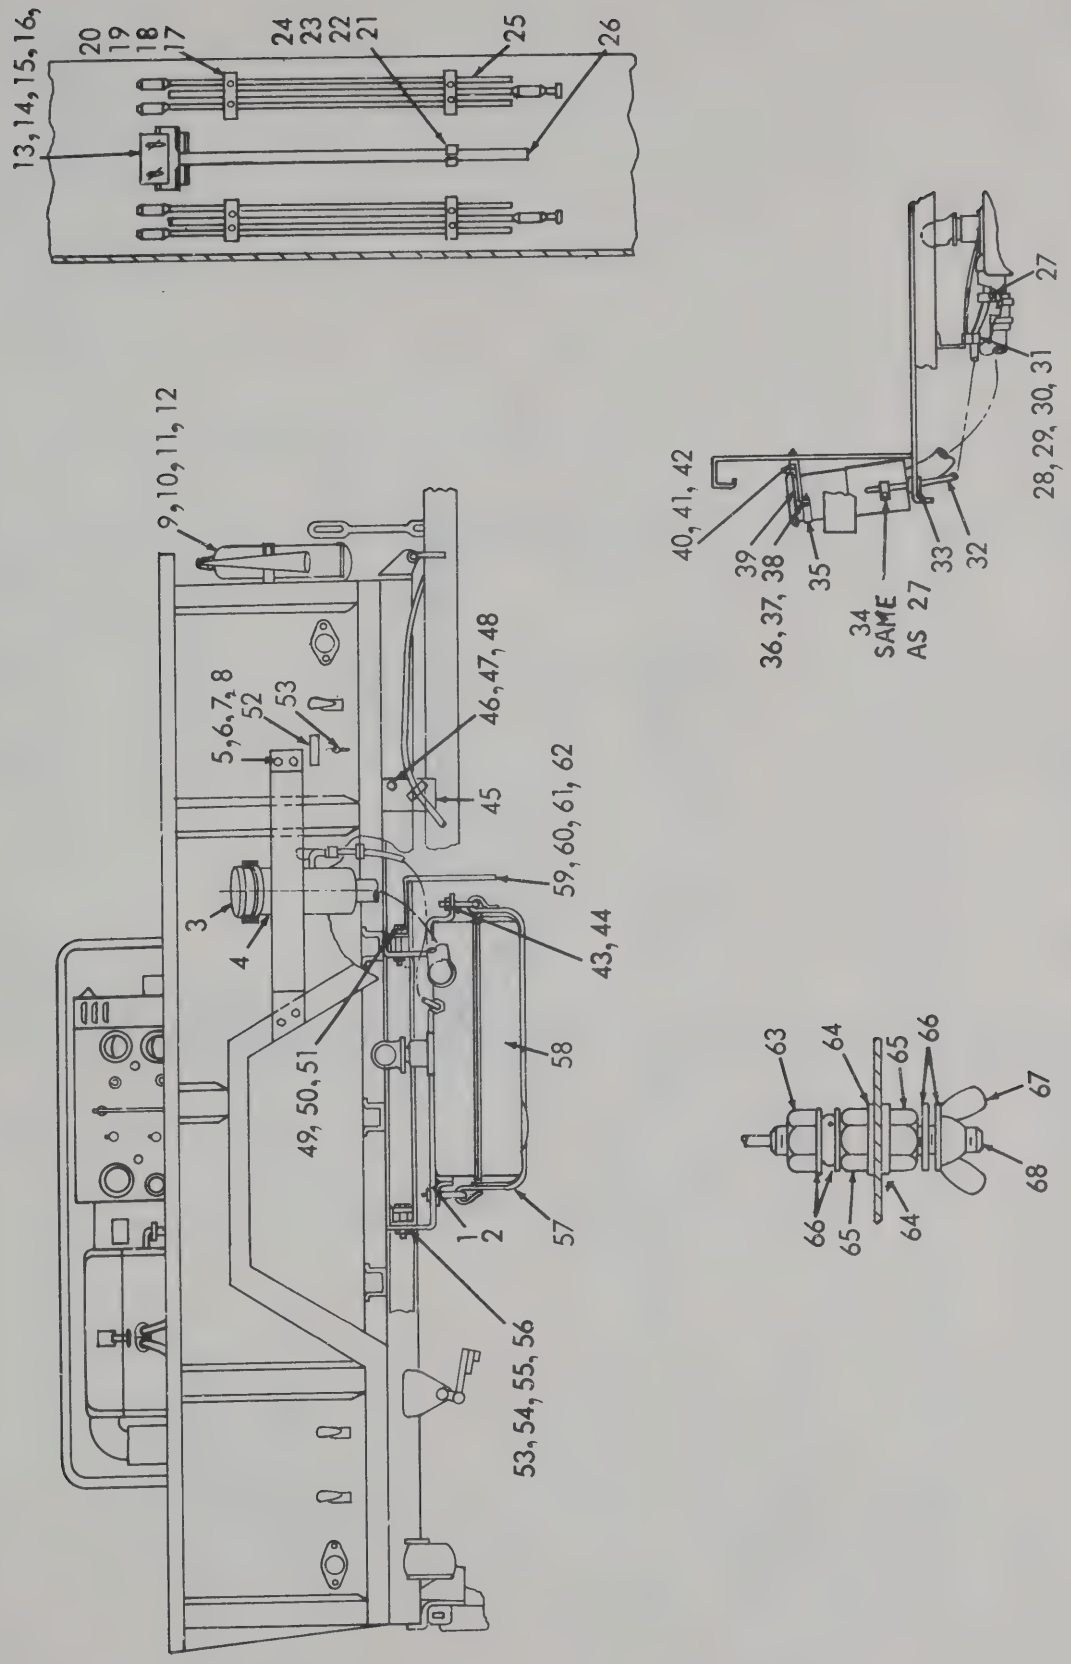


Figure 17-7. Detail components.

ME 6115-365-15/17-7, C2

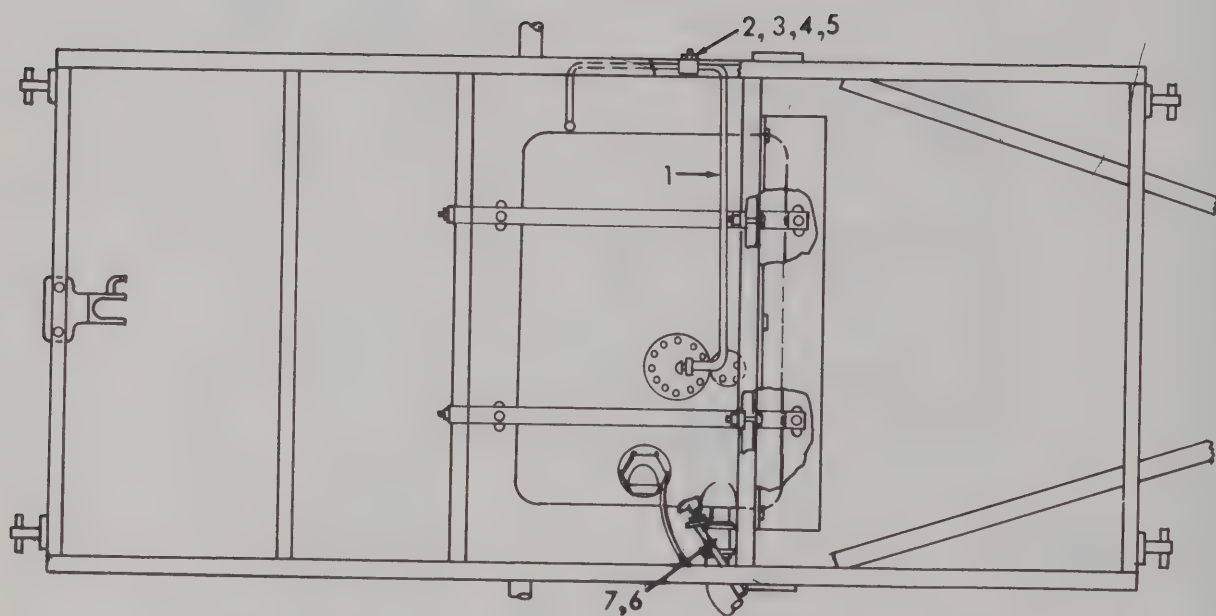

ME 6115-365-15/17-8, C2

Figure 17-8. Fuel tank mounting components.

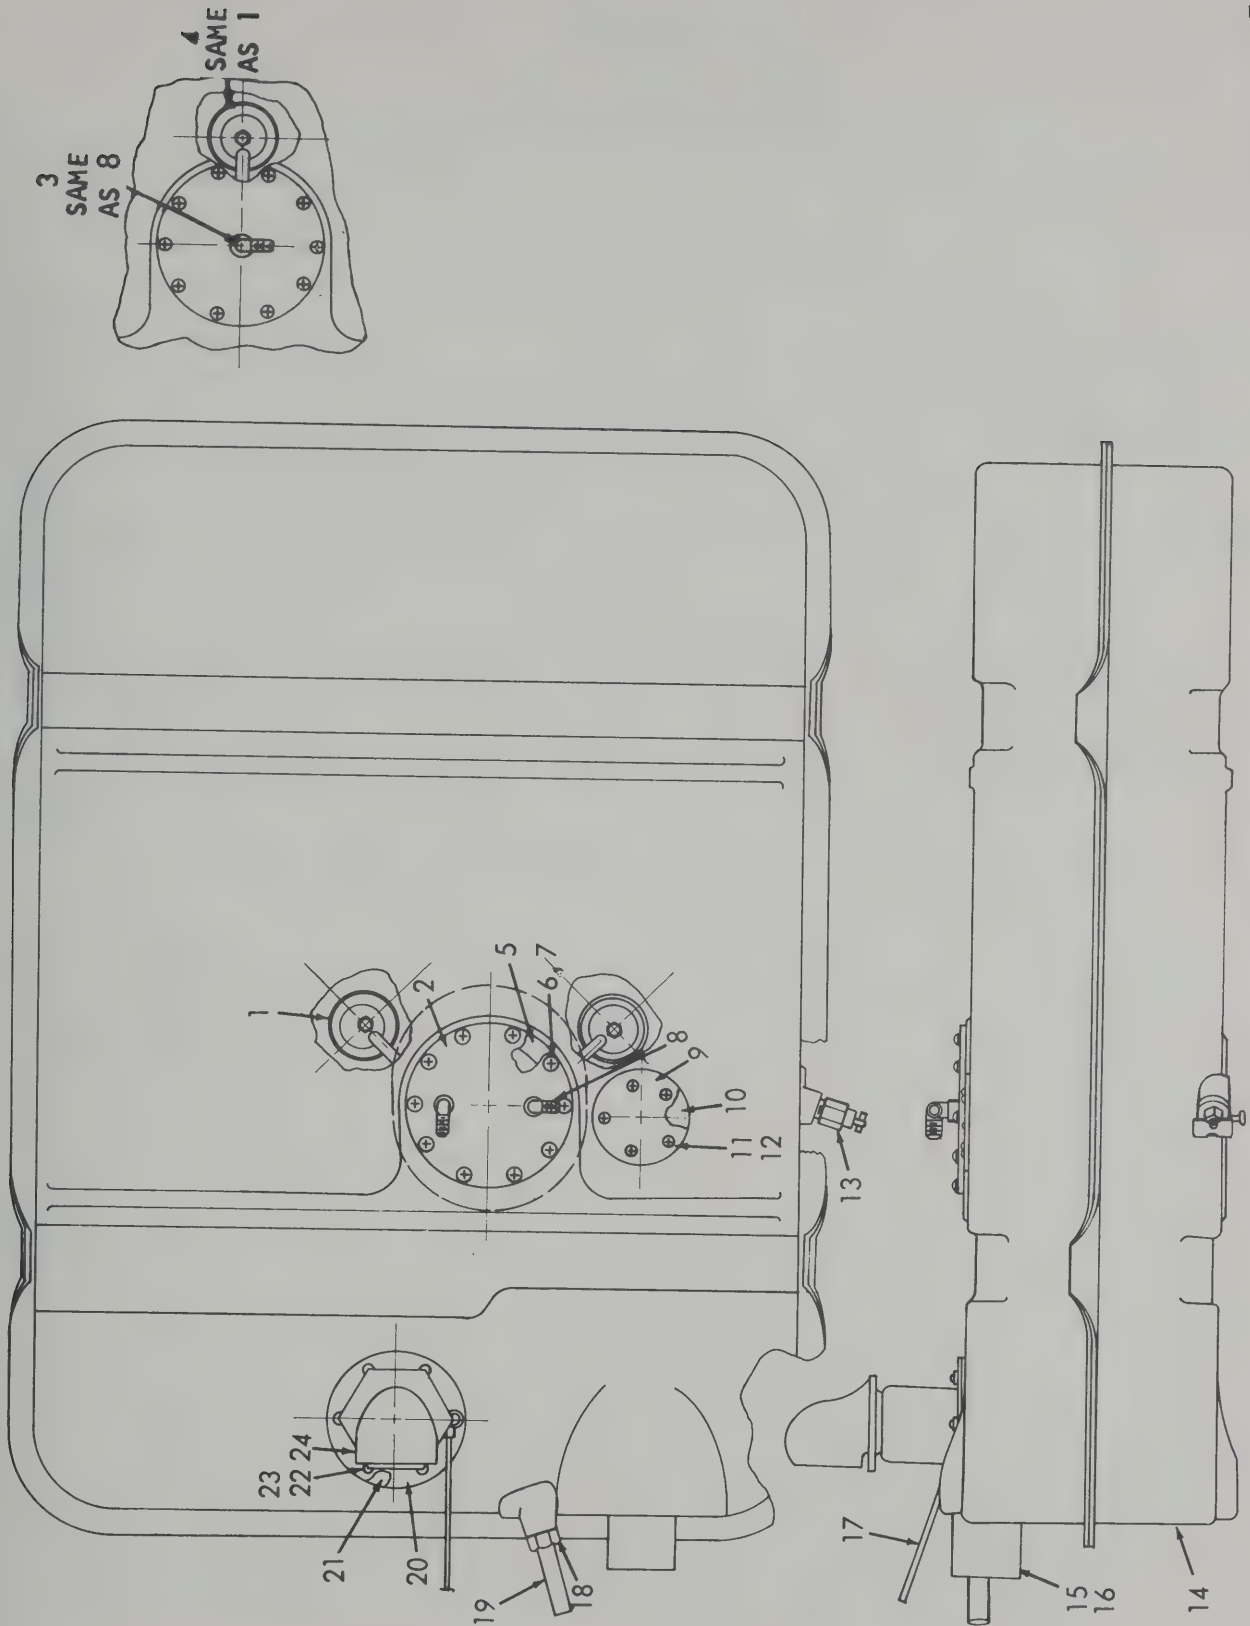


Figure 17-9. Fuel tank components.

ME 6115-365-15/17-9, C2

CHAPTER 18

GENERATOR SET PU-628/G

Section I. DESCRIPTION AND DATA

18-1. Description

a. General. The PU-628/G is a self-contained, mobile, general purpose power supply (fig. 18-1). The set is comprised of two 3 KW Model SF 3.0 MD Military Standard generator sets, mounted on an M101 trailer and includes the components listed in table 18-1. The generators are powered by directly coupled, 4-cylinder, 6-hp, Military Standard Model 4A032-II engines. A power transfer switch is provided for connecting the generator outputs to a common load.

b. Engines. For description and maintenance information pertaining to the engines, refer to TM 5-2805-203-14.

c. Generators. For description and operation

and maintenance information not covered in this chapter, refer to TM 5-6115-271-15.

d. Trailer. For description and trailer maintenance information, refer to TM 9-2330-202-14.

18-2. Tabulated Data

Table 18-1 lists the components for PU-628/G.

Table 18-1. PU-628/G Components

FSN	Qty	Nomenclature
2330-738-9509	1	Trailer: M101
2590-318-6691	1	Leg prop assembly, trailer
6115-017-8237	2	Generator: 3KW, 60 cycle, Model SF-3.0 MD
4210-555-8837	1	Fire extinguisher
5975-878-3791	2	Ground rod (w/attachments)
5120-265-7462	1	Sledge hammer
FSN not assigned	1	Fuel tank assembly

CAUTION: REMOVE TARPAULIN, BOWS AND RACKS BEFORE OPERATION.
BE SURE TAILGATE IS DOWN AND REMOVE ANYTHING
IN THE TRAILER THAT MIGHT OBSTRUCT THE FREE
CIRCULATION OF AIR.

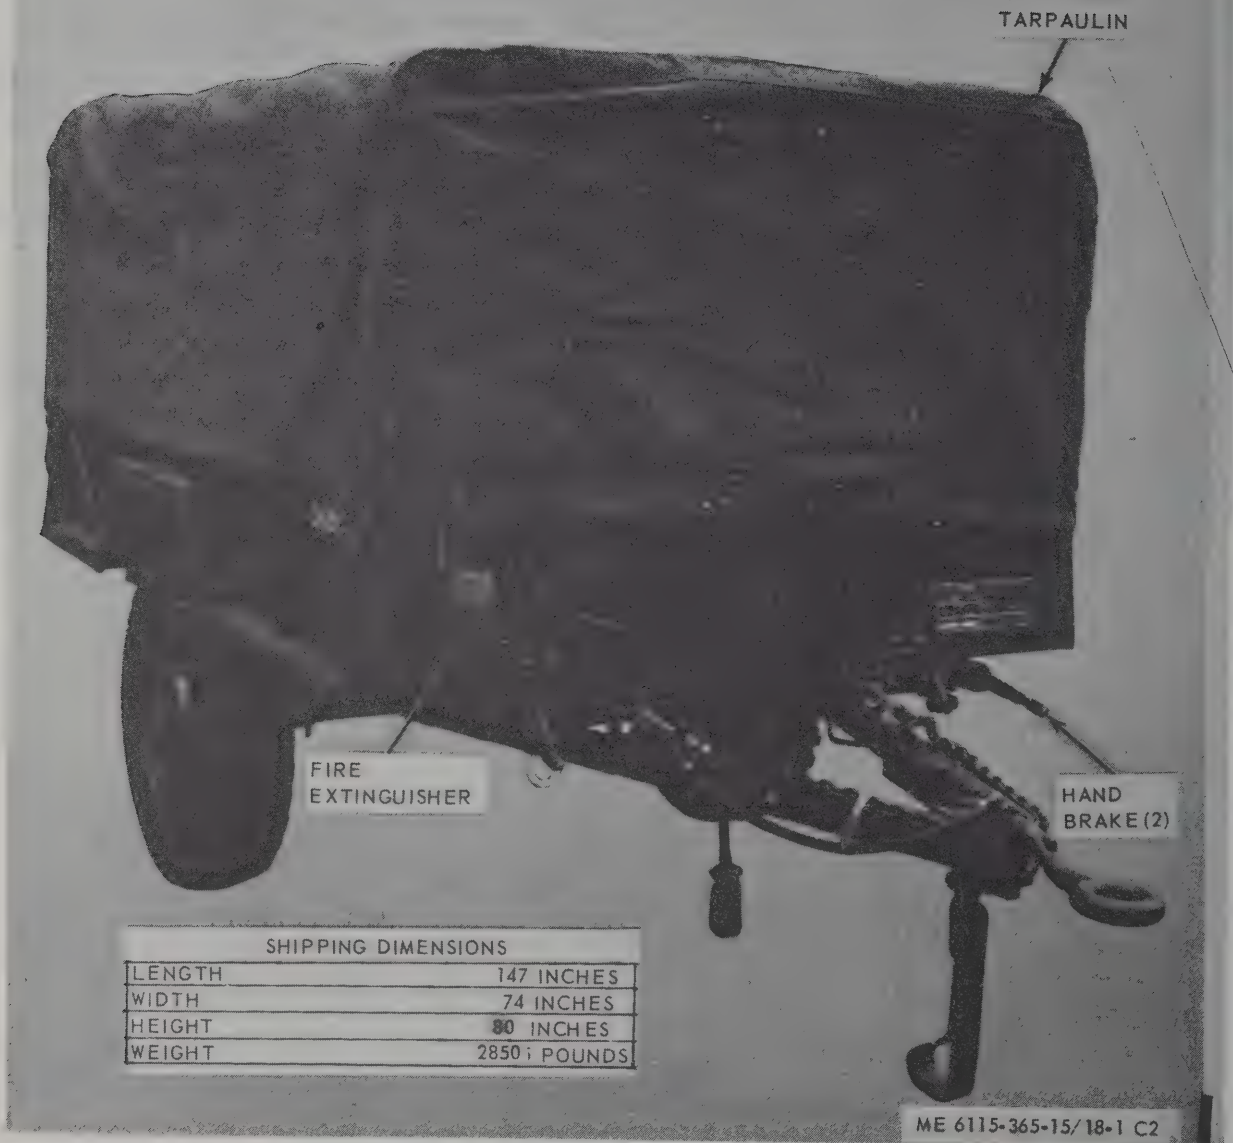


Figure 18-1. PU-628/C, right front, 3/4 view.

Section II. OPERATING INSTRUCTIONS

18-3. Setting-up Instructions

a. Leveling.

(1) Locate the trailer on as level a surface as possible in order for the generator sets to operate efficiently.

(2) Set brakes and block wheels securely to prevent any movement. Operate the hand-brake at weekly intervals to assure freedom of linkage.

(3) Pull leg support down and adjust length for firm contact with ground.

WARNING

Wheels must be blocked, brakes set, and leg support down in support position before attempting to roll up tarpaulin and before starting to assemble or set-up equipment for operation.

b. Preparation for Starting.

(1) Roll up tarpaulin and remove the bows and racks (fig. 18-2).

(2) Open trailer tailgate and remove all loose auxiliary items and anything else that might block the free circulation of air through the trailer and around generator sets.

CAUTION

It is of foremost importance that there be free circulation of air around the generator set at all times during operation. Inadequate ventilation is a major cause of damage to equipment.

NOTE: REMOVAL OF RACKS PRIOR TO OPERATION IS OPTIONAL.

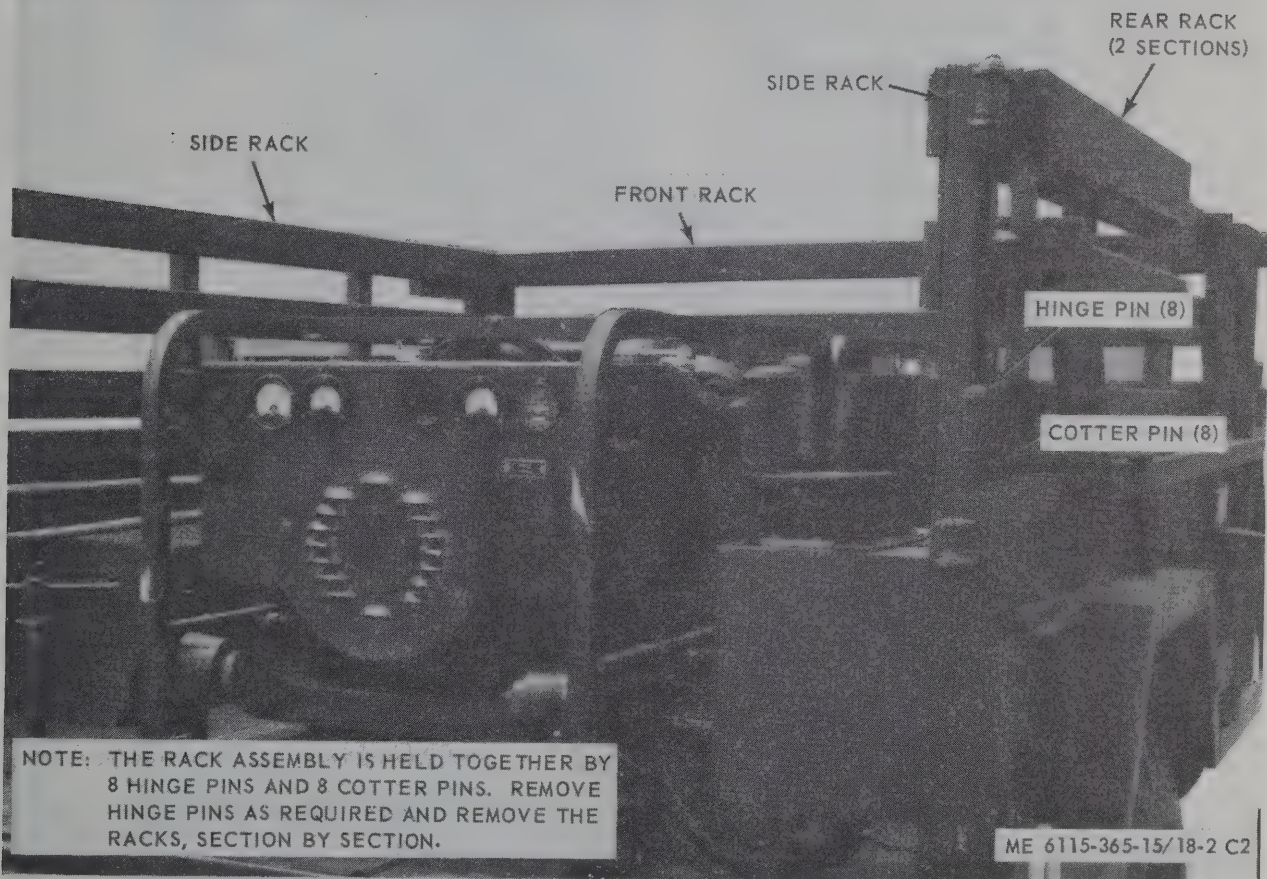


Figure 18-2. Racks, removal and installation.

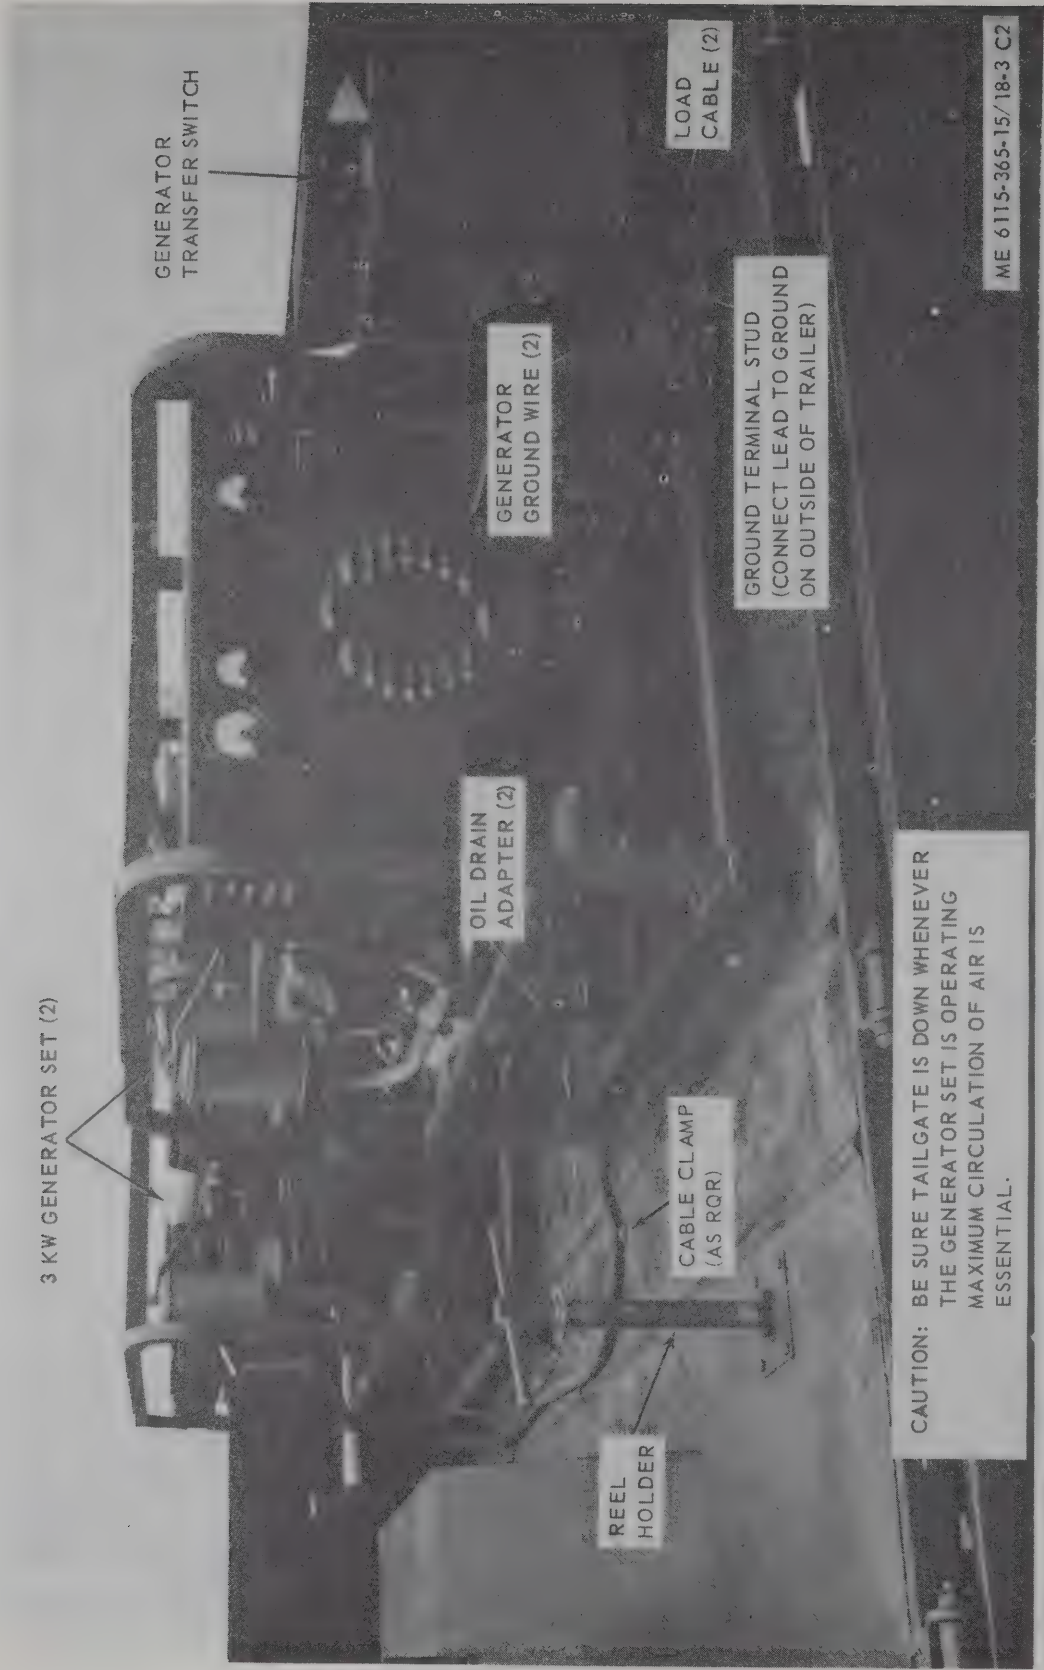


Figure 18-3. PU-628/G set up for operation.

c. Grounding.

WARNING

Never operate the generator set until it has been properly grounded. Electrical defects in the load lines or equipment can cause death by electrocution when contact is made with an underground system.

(1) The generator set must be grounded prior to operation. The ground may be any of three methods, depending on the location and terrain:

(a) A ground rod driven to a depth of 8 feet.

(b) An underground metallic water piping system.

(c) A metal plate (9 sq. ft.) buried at a depth of 4 feet.


(2) The ground lead must be No. 6 AWG copper wire, bolted or clamped to the rod, plate, or piping system.

(3) Connect the other end of the ground lead to the generator set ground terminal stud and connect the generator to the ground terminal stud as shown in figure 18-3.

WARNING

Never operate the generator set in an enclosed area unless the exhaust gases are piped to the outside. Inhalation of exhaust fumes will result in serious illness or death.

(4) Be sure the transfer switch load cables are connected to the generator sets as illustrated in figure 18-4.

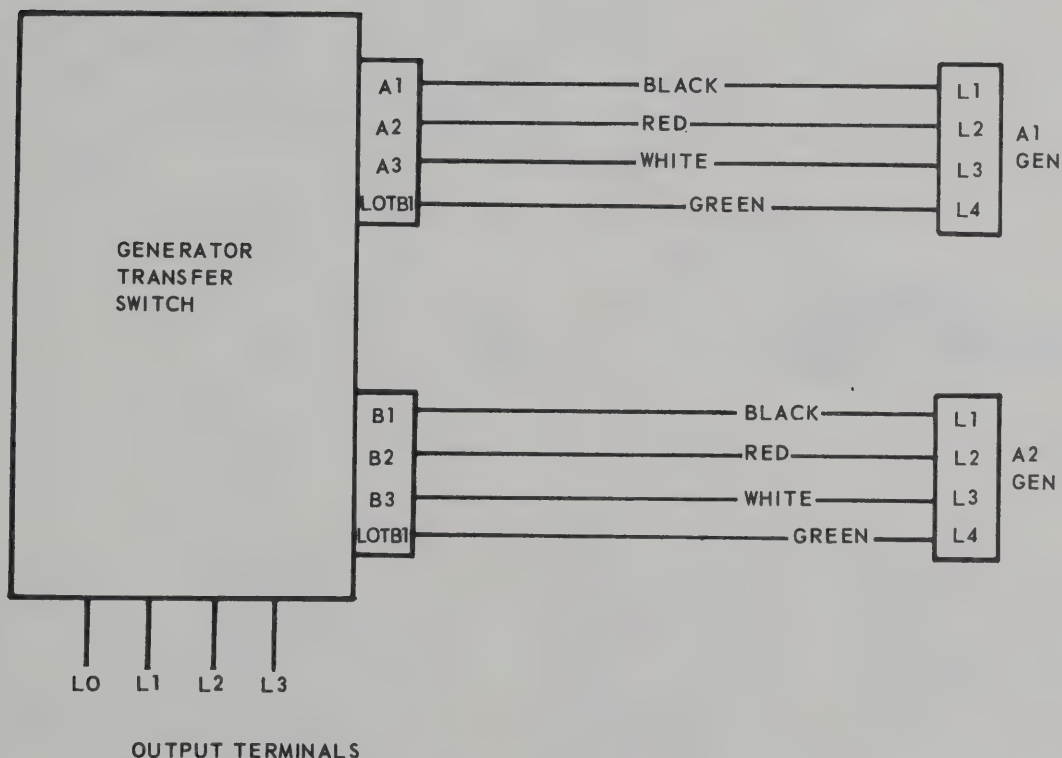

ME 6115-365-15/18-4 C2

Figure 18-4. Interconnection diagram, transfer switch-to-generators.

18-4. Starting

a. Perform the setting-up and pre-starting procedures described in paragraph 18-3.

b. Start the generator set as instructed in TM 5-6115-271-15.

18-5. Stopping

Stop the generator set as instructed in TM 5-6115-271-15.

18-6. Operation

Operate the generator set as instructed in TM 5-6115-271-15.

Section III. OPERATOR'S MAINTENANCE INSTRUCTIONS

18-7. Transfer Switch Indicating Lamps

a. Removal. Remove the indicating lamps as illustrated in figure 18-5.

b. Installation. Install the indicating lamps as illustrated in figure 18-5.

18-8. Fuel Tank Cap and Strainer Assembly

a. Removal. Remove fuel tank cap and pull out the strainer assembly with the chain.


b. Cleaning and Inspection.

(1) Clean metal parts with approved cleaning solvent and dry thoroughly.

(2) Inspect cap and strainer for damage and defects. Inspect strainer screen for holes and gasket for deterioration.

(3) Replace a defective fuel tank cap, gasket, or strainer.

c. Installation. Place strainer assembly in filler neck and install cap.

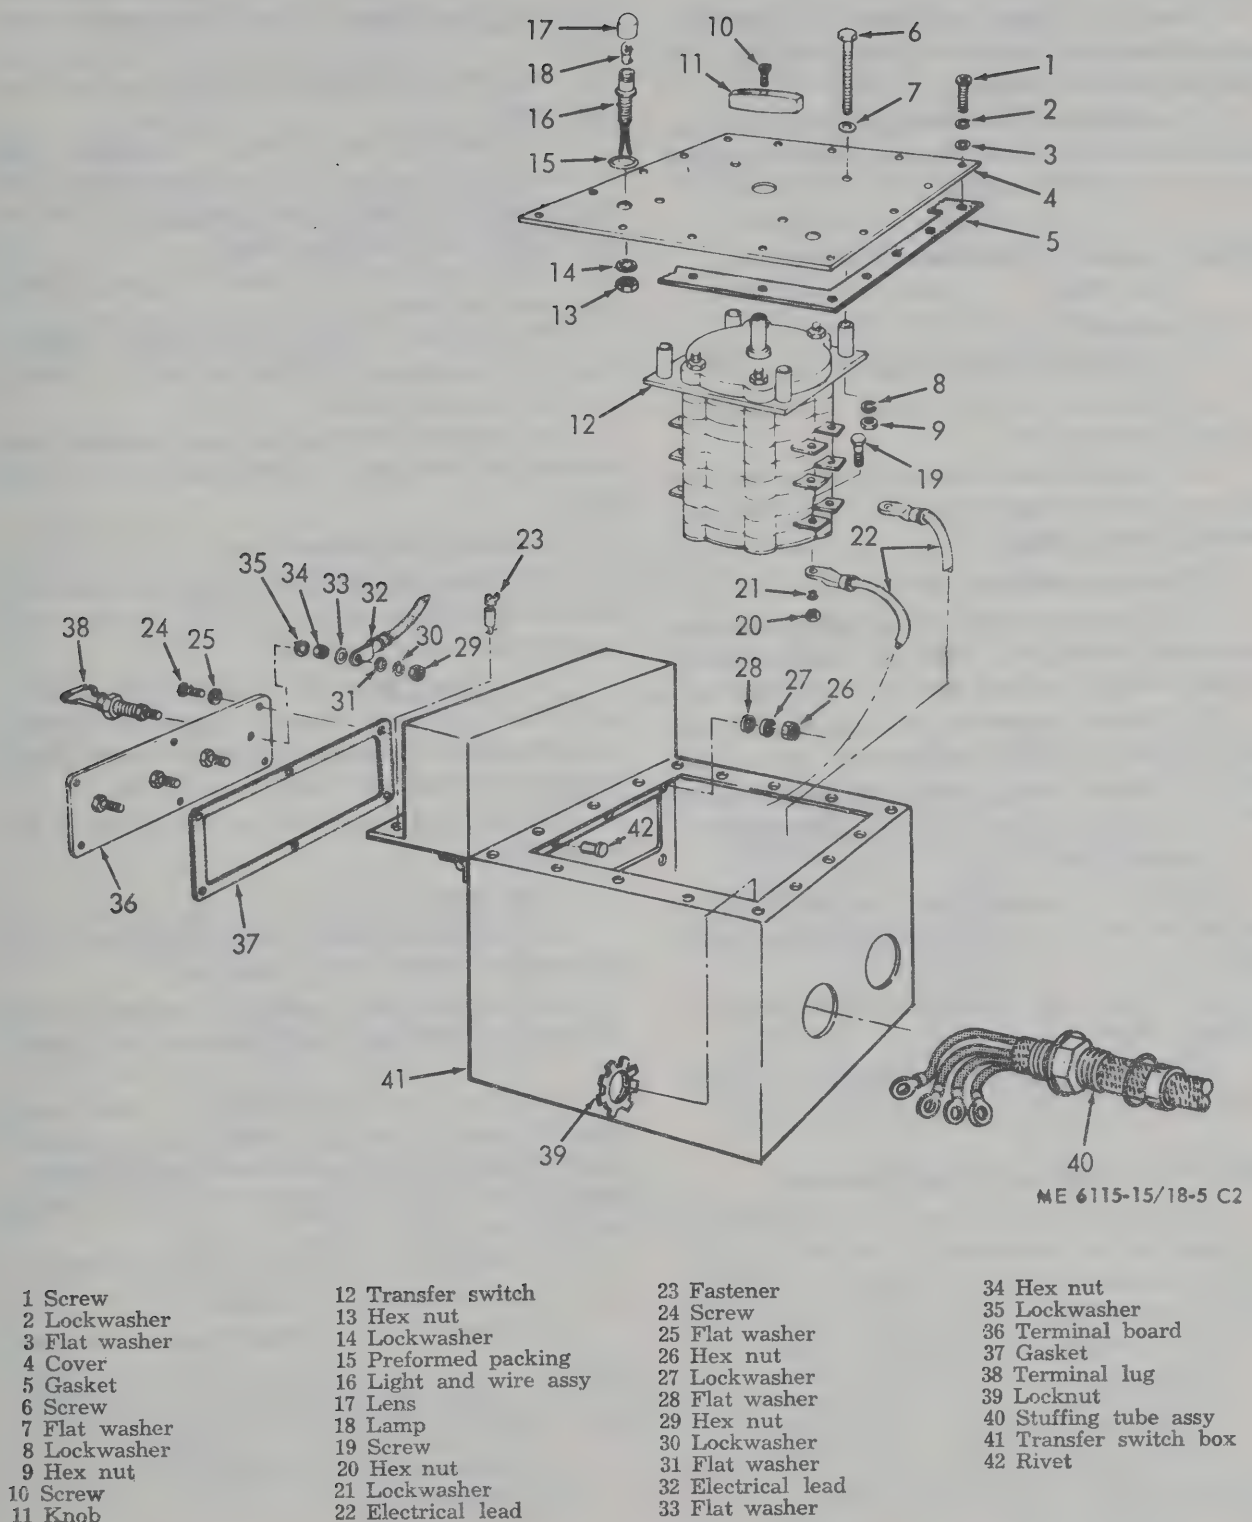

ME 6115-15/18-5 C2

Figure 18-5. Transfer switch, removal, disassembly, reassembly, and installation.

Section IV. ORGANIZATIONAL MAINTENANCE INSTRUCTIONS

18-9. Ground Wires and Terminal Stud

a. *Removal.* Refer to figure 18-3 and disconnect ground wires, remove clamps and ground terminal stud.

b. *Installation.* Refer to figure 18-3 and install the ground terminal stud, connect ground wires, and install clamps.

18-10. Tarpaulin, Roof Bows, Racks, and Leg Prop

a. *Removal.*

(1) Remove tarpaulin from unit.

(2) Remove the roof bows and racks as shown in figure 18-2.

(3) Remove the hardware that secures the leg prop to the underside of the trailer bed and remove the leg prop.

b. *Cleaning and Inspection.*

(1) Clean tarpaulin, bows, and racks with water and detergent. Clean leg prop with approved cleaning solvent and dry thoroughly.

(2) Inspect tarpaulin for tears, holes, broken or missing ropes and straps, and other defects. Inspect bows, racks, and leg prop for cracks, bends, missing pins, and other defects.

c. *Installation.*

(1) Mount the leg prop to the underside of the trailer bed and secure with mounting hardware.

(2) Install the racks and roof bows as shown in figure 18-2.

(3) Install tarpaulin and secure in desired position.

18-11. Fuel Tank and Gage Assembly

a. *General.* The fuel tank on PU-628/G is mounted on the underside of the trailer bed, held in place by 2 metal straps that are secured to cross braces welded to the trailer. The fuel gage is mounted on top of the tank.

b. *Removal.*

(1) Drain fuel tank.

(2) Disconnect either end of the ground wire that connects to the fuel gage.

(3) Remove the 2 hose clamps and remove the hose that connects the filler neck to the tank.

(4) Disconnect the breather line from the fuel tank.

(5) Remove the 2 nuts, 2 spacers, and washers that secure the 2 retaining straps to the rear tank brace. When straps are loose at rear, the tank will drop down.

(6) Disconnect fuel line from top of tank and remove tank.

(7) Remove 2 nuts, spacers, and washers that secure retaining straps to the front brace and remove the straps.

(8) Remove the 6 screws and washers that secure the fuel gage to the tank and lift out gage.

c. *Cleaning and Inspection.*

(1) Clean all parts with approved cleaning solvent and flush out any dirt and foreign particles from inside the tank.

(2) Inspect tank for dents, rust, cracks, and other damage. Inspect straps for defects and damaged or missing hardware. Inspect fuel gage for damage and proper operation.

(3) Replace defective or missing parts as necessary.

d. *Installation.*

(1) Install the fuel gage in the tank and secure with 6 screws and washers.

(2) Secure the 2 retaining straps to the front brace with the 2 nuts, spacers, and washers.

(3) Place the tank under the trailer and connect the engine fuel line. Use a jack or other means to lift the tank and hold it in position while the retaining straps are being installed.

(4) Secure the 2 straps to the rear brace with 2 nuts, spacers, and washers.

(5) Connect the breather line to the fuel tank.

(6) Install the hose between the tank and filler neck and secure with 2 clamps.

(7) Connect the fuel gage ground wire.

(8) Fill fuel tank.

Section V. DIRECT AND GENERAL SUPPORT AND DEPOT MAINTENANCE INSTRUCTIONS

18-12. Generator Sets

a. *Removal.* Refer to figure 18-6 as a guide and perform the following steps:

- (1) Disconnect the fuel lines.
- (2) Disconnect the electrical leads and load cables.
- (3) Disconnect the oil drain adapter.

(4) Remove the 8 bolts that secure the generator sets to the trailer and remove the generator sets.

b. *Installation.* Using figure 18-6 as a guide, perform the following steps:


- (1) Secure the generator sets to the trailer bed with the mounting hardware.
- (2) Connect the oil drain adapter.
- (3) Connect the electrical leads and cables.
- (4) Connect the fuel lines.

18-13. Generator Transfer Switch

a. *Removal and Disassembly.*

(1) Tag and disconnect leads from the output terminals to load.

(2) Remove and disassemble the transfer switch as illustrated in figure 18-5.

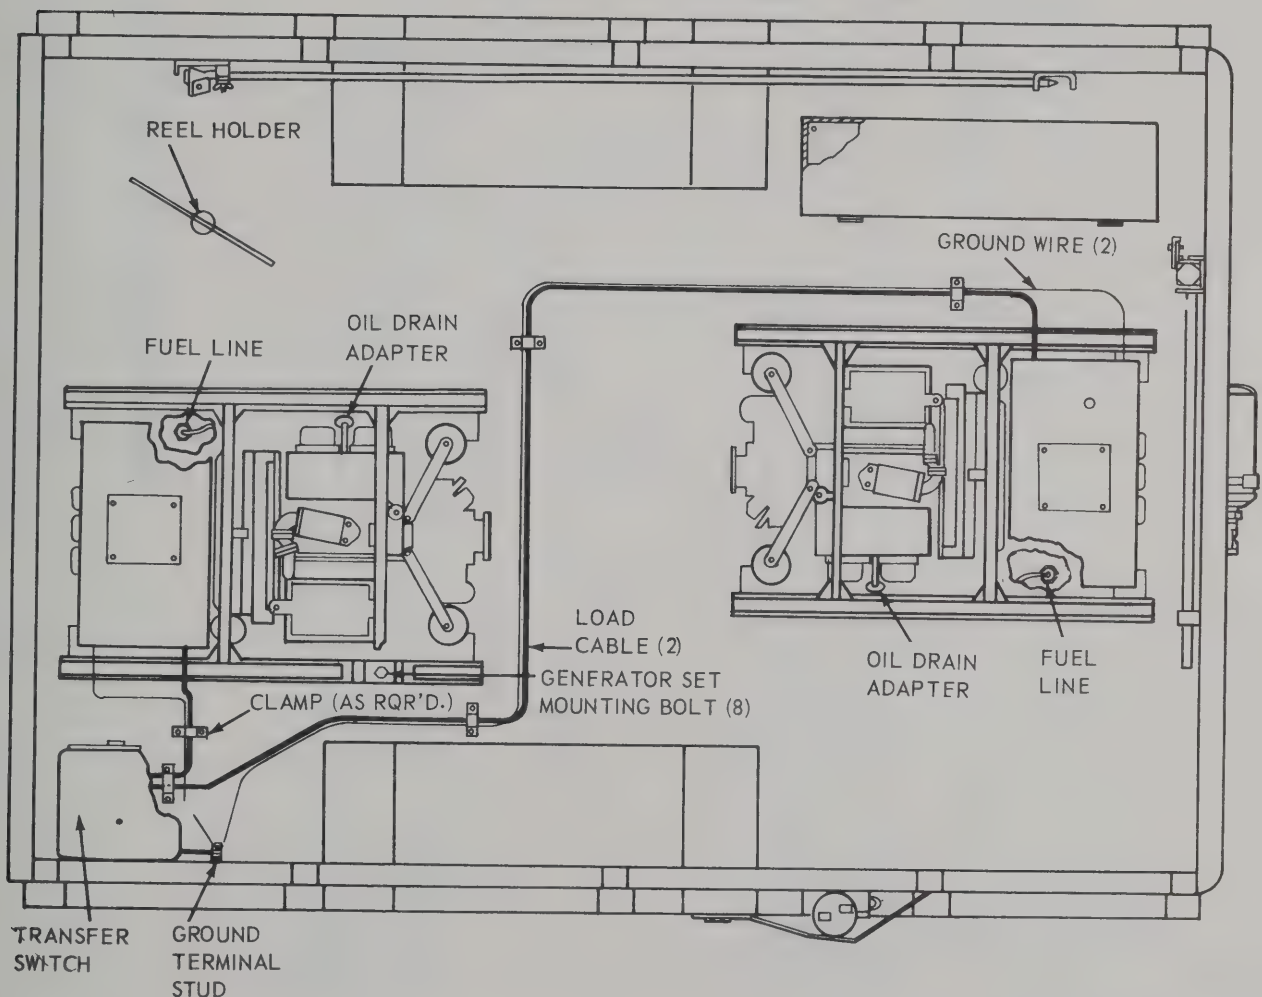

ME 6115-365-15/18-6 C2

Figure 18-6. PU-628/C overall component location diagram.

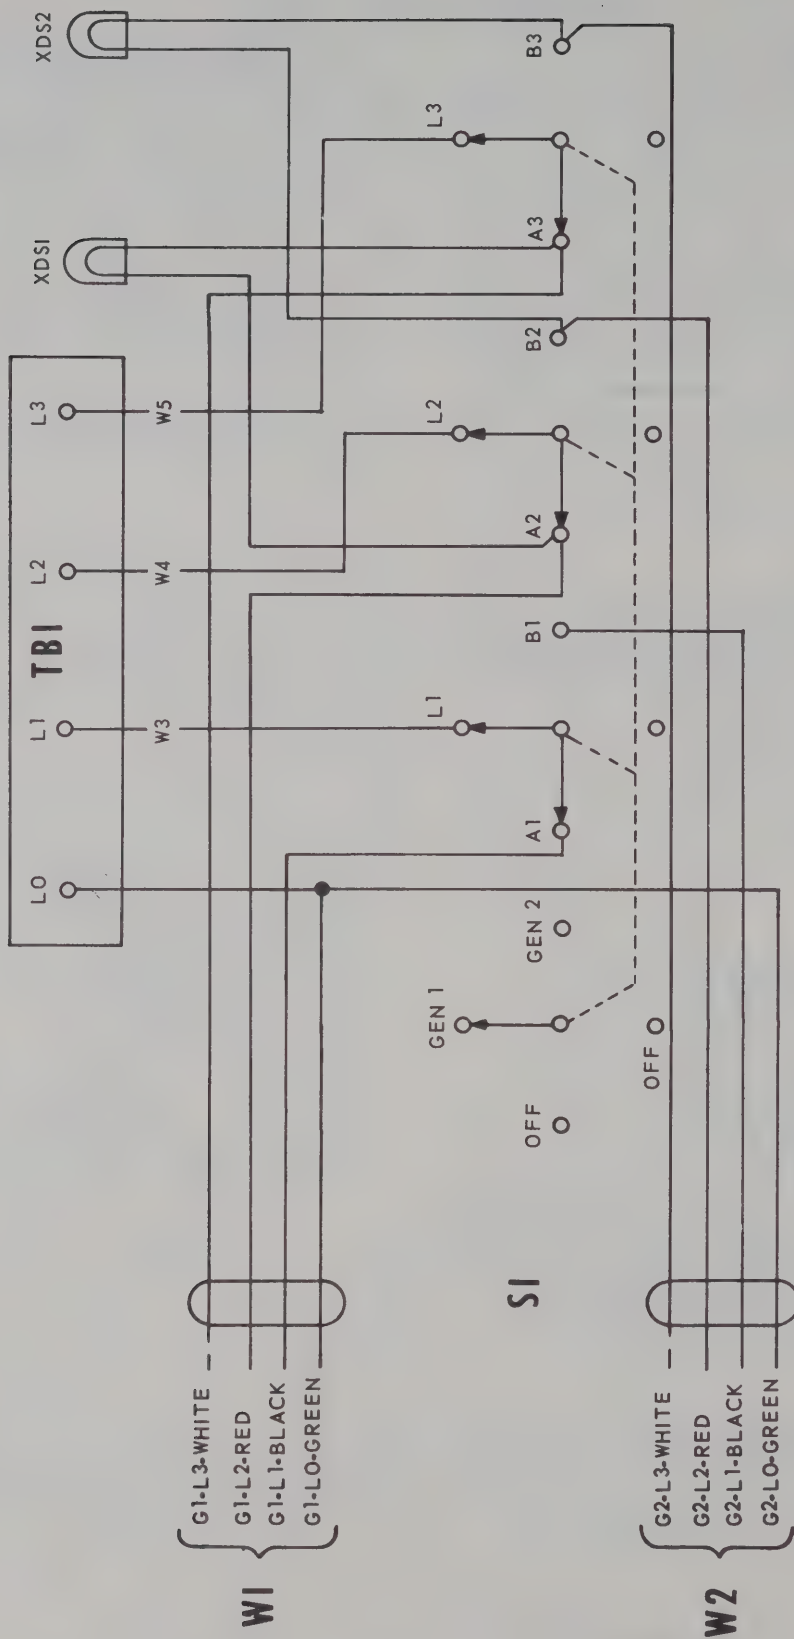


Figure 18-7. Transfer switch wiring diagram.

ME 6115-365-15/18-7 Q1

b. Reassembly and Installation.

(1) Reassemble and install the transfer switch as illustrated in figure 18-5.

(2) Connect load connections (fig. 18-7).

18-14. Tarpaulin, Roof Bows, Racks, and Leg Prop

a. Removal. Remove the tarpaulin, roof bows, racks, and leg prop (para 18-10).

b. Repair.

(1) Patch or sew rips and tears in the tar-

paulin. Replace damaged or missing ropes or straps. Replace a tarpaulin that is too badly damaged to be repaired.

(2) Weld minor cracks or breaks in the bows and leg prop. Straighten bent bows where possible. Replace defective or missing pins and hardware. Replace bows, racks, or leg prop that are damaged beyond repair.

c. Installation. Install racks, roof bows, and leg prop, and install tarpaulin (para 18-10).

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
		PART I								
		REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE								
		GROUP 01 - ENGINE								
		0106 - ENGINE LUBRICATION SYSTEM								
00001										
00002										
0	4730-270-4581	ADAPTER: 1/2-10 x 1/4-18		EA	2	*	*	*	*	
00003										
P 0	4730-908-3194	CLAMP		EA	4	*	*	*	*	
00004		MS35842-11 (96906)								
0	4820-277-1765	COCK, PLUG, SPRING KEY: 1/4-18 x 1/4-18		EA	2	*	*	*	*	
00005										
0	4730-278-6317	COUPLING: 1/4 in.		EA	2	*	*	*	*	
00006										
M 0		HOSE: 1/2-10 x 10 in., 20 in. 1g		EA	2					
00007		SAEJ30CL30RS (81343)								
		MANUFACTURE FROM:								
P 0	4730-684-6032	HOSE (10 in. required for each HOSE ASSEMBLY)		FT	AR		SEE	GRP	9501	
00008										
0	5310-584-5272	LOCKWASHER		EA	2	*	*	*	*	
00009										
0	4730-196-1465	NIPPLE, CLOSE		EA	2	*	*	*	*	
00010										
X2 0		NIPPLE: 1/4 x 1-1/2 in. 1g		EA	2					
00011		WWN351 (81348)								
0	5310-282-7818	NUT		EA	2	*	*	*	*	
00012										
X2 0	5330-684-3430	"O" RING		EA	2					
00013		MS28775-013 (96906)								
0	4730-277-6447	UNION, BULKHEAD		EA	2	*	*	*	*	
00014										
00015		GROUP 03 - FUEL SYSTEM								
00016		0306 - TANKS, LINES, FITTINGS, AND HEADERS								
X2 0		BRACKET, FILLER MOUNTING		EA	1				18-10	8
00017		I3205E5080 (97403)								
P 0	2910-911-0081	CAP, FUEL TANK: tactical vehicle fording		EA	1	*	*	*	*	18-10 12
00018		MS35645-2 (96906)								
X2 0		CLAMP, HOSE: 1-13/16-2-3/4 range		EA	2				18-10	43
00019		MS35842-13 (96906)								
X2 0		CLAMP, HOSE: 7/16-25/32 range		EA	2				18-10	34
00020		MS35842-10 (96906)								
X2 0		CLAMP, LOOP, CUSHIONED: 3/4 od		EA	1				18-10	30
00021		MS21104D12 (96906)								
X2 0		CLAMP, LOOP, CUSHIONED: 5/16 od		EA	2				18-10	42
00022		MS21104D5 (96906)								
X2 0		CLAMP, LOOP, CUSHIONED: 5/16 od		EA	3				18-10	48
00023		MS21104D5 (96906)								
X2 0		FITTING BULK HEAD: 37 degrees, 1/2-20 x 1/2		EA	2				18-9	19
00024		SAEJ514AF1G10C (81343)								
X2 0		FILLER, FUEL TANK		EA	1				18-10	13
00025		I3205E5081 (97403)								
X2 0		GROMMET, RUBBER: 3/4 hole diagram		EA	1				18-10	28
00026		MS35489-120 (96906)								
X2 0		GUARD, FUEL GAGE		EA	1				18-10	14
00027		I3205E5083 (97403)								
P 0	4720-580-6659	HOSE ASSEMBLY: detachment, 5/16 od x 18 1g		EA	2	*	*	*	*	18-9 28
00028		MS28741-5-0180 (96906)								

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
		REF NUMBER & MFR CODE								
P 0 00029		HOSE ASSEMBLY: detachment, 5/16 od x 56 lg MS28741-5-0580 (96906)	EA	1	*	*	*	*	18-10	38
P 0 00030		HOSE ASSEMBLY: detachment, 5/16 tube x 88 lg MS28741-5-0880 (96906)	EA	1	*	*	*	*	18-10	49
M 0 00031		HOSE, FUEL MANUFACTURE FROM:	EA	1					18-10	44
P 0 00032		HOSE (3 in. required) SAEJ30CLASS30R2TYPE2 (81343)	FT			SEE	GRP	9501		
X2 0 00033		HOSE, RUBBER: 1/2 nominal id x 3/4 od x 24 MILH13444 (81348)	EA	1					18-10	29
X2 0 00034		LOCKNUT: 37 deg flare, 1/2-20 UNF-2B SAEJ514AF1610A (81343)	EA	2					18-9	21
X2 0 00035		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)	EA	2					18-10	7
X2 0 00036		NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC-2B MS51922-1 (96906)	EA	3					18-10	11
X2 0 00037		NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC-2B MS51922-1 (96906)	EA	4					18-10	17
X2 0 00038		NUT, SELF-LOCKING, HEXAGON: 3/8-16 UNC-2B MS51922-17 (96906)	EA	2					18-10	3
X2 0 00039		NUT, SELF-LOCKING, HEXAGON: 10-32 UNF-3B MS21044N3 (96906)	EA	1					18-10	33
X2 0 00040		NUT, SELF-LOCKING, HEXAGON: 10-32 UNF-3B MS21044N3 (96906)	EA	2					18-10	39
X2 0 00041		NUT, SELF-LOCKING, HEXAGON: 10-32 UNF-3B MS21044N3 (96906)	EA	3					18-10	45
X2 0 00042		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 1 in. lg MS90725-8 (96906)	EA	2					18-10	5
X2 0 00043		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 5/8 MS90725-5 (96906)	EA	4					18-10	15
X2 0 00044		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 7/8 MS90725-7 (96906)	EA	3					18-10	9
X2 0 00045		SCREW, MACHINE: pan head, 10-32 x 5/8 MS35207-264 (96906)	EA	1					18-10	31
X2 0 00046		SCREW, MACHINE: pan head, 10-32 UNF x 5/8 MS35207-264 (96906)	EA	2					18-10	41
X2 0 00047		SCREW, MACHINE: pan head, 10-32 x 5/8 lg MS35207-264 (96906)	EA	3					18-10	47
X2 0 00048		STRAP, FUEL TANK I3205E5082 (97403)	EA	1					18-10	4
P 0 00049		TANK ASSEMBLY, FUEL: 2 filters I3216E7451-2 (97403)	EA	1	*	*	*	*	18-10	59
X2 0 00050		WASHER, FLAT, ROUND MS27183-15 (96906)	EA	2					18-10	2
X2 0 00051		WASHER, FLAT, ROUND: 1/2 BSC size MS27183-18 (96906)	EA	2					18-10	60
X2 0 00052		WASHER, FLAT, ROUND: 1/4 BSC size MS27183-11 (96906)	EA	3					18-10	10
X2 0 00053		WASHER, FLAT, ROUND: 1/4 BSC size MS27183-11 (96906)	EA	2					18-10	6
X2 0 00054		WASHER, FLAT, ROUND: 1/4 BSC size MS27183-11 (96906)	EA	4					18-10	16

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS USABLE ON CODE	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00055		WASHER, FLAT, ROUND: 10-32 BSC size MS27183-8 (96906)	EA	1					18-10	32
X2 0 00056		WASHER, FLAT, ROUND: 10-32 BSC size MS27183-8 (96906)	EA	2					18-10	40
X2 0 00057		WASHER, FLAT, ROUND: 10-32 BSC size MS27183-8 (96906)	EA	3					18-10	46
00058		GROUP 15 - FRAME, TOWING ATTACHMENT AND DRAWBAR								
00059		1501 - FRAME ASSEMBLY								
X2 0 00060	5340-999-6277	BRACKET ASSEMBLY, SLEDGE HAMMER 1314E1214 (97403)	EA	1					18-9	13
X2 0 00061		BRACKET, FUEL TANK MOUNTING 13205E4953 (97403)	EA	2					18-10	58
X2 0 00063		BRACKET, FUEL TANK MOUNTING 13205154952 (97403)	EA	2					18-10	57
X2 0 00064		BRACKET, GROUND, ROD 13214E1417 (97403)	EA	1					18-9	9
X2 0 00065		BRACKET, GROUND, ROD 13214E1415 (97403)	EA	1					18-9	44
X2 0 00066		CLAMP, CABLE 13212E3572 (97403)	EA	1					18-9	40
X2 0 00067		CLAMP, CABLE 13212E3573 (97403)	EA	4					18-9	49
X2 0 00068		CLAMP, GROUND, ROD 13212E2617-1 (97403)	EA	1					18-9	48
X2 0 00069		CLIP, SPRING, SLEDGE HAMMER 13214E1213-1 (97403)	EA	1					18-9	22
X2 0 00070		HOLDDOWN, REEL 13214E1426-3 (97403)	EA	1					18-9	53
X2 0 00071		NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC-2B MS51922-1 (96906)	EA	4					18-10	19
X2 0 00072		NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC-2B MS51922-1 (96906)	EA	8					18-9	52
X2 0 00073		NUT, SELF-LOCKING, HEXAGON: 1/4 UNC-2B MS51922-1 (96906)	EA	2					18-9	45
X2 0 00074		NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC-2B MS51922-1 (96906)	EA	1					18-9	25
X2 0 00075		NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC-2B MS51922-1 (96906)	EA	2					18-9	12
X2 0 00076		NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC-2B MS51922-1 (96906)	EA	2					18-9	16
X2 0 00077		NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC-2B MS51922-1 (96906)	EA	2					18-9	39
X2 0 00078		NUT, SELF-LOCKING, HEXAGON: 3/8-16 UNC-2B MS51922-17 (96906)	EA	2					18-10	22
X2 0 00079		NUT, SELF-LOCKING, HEXAGON: 3/8-16 UNC-2B MS51922-17 (96906)	EA	2					18-10	22
X2 0 00080		NUT, SELF-LOCKING, HEXAGON: 3/8-16 UNC-2B MS51922-17 (96906)	EA	3					18-10	52
X2 0 00081		NUT, SELF-LOCKING, HEXAGON: 3/8-16 UNC-2B MS51922-17 (96906)	EA	4					18-10	60

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
						(a)	(b)	(c)	(d)	(a)	(b)
						1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00082		NUT, SELF-LOCKING, HEXAGON: 3/8-16 UNC-2B MS51922-17 (96906)		EA	3					18-10	37
X2 0 00083		NUT, SELF-LOCKING, HEXAGON: 5/16-18 UNC-2B MS51922-9 (96906)		EA	1					18-9	66
X2 0 00084		PLATE, CABLE MOUNTING 13205E5133 (97403)		EA	1					18-10	63
X2 0 00085		SCREW, MACHINE: 1/4-20 UNC x 1 lg MS35190-291 (96906)		EA	2					18-9	47
X2 0 00086		SCREW, MACHINE: 1/4-20 x 1 lg MS35190-291 (96906)		EA	2					18-9	10
X2 0 00087		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 1 lg MS90725-8 (96906)		EA	2					18-9	41
X2 0 00088		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 1 lg MS90725-8 (96906)		EA	8					18-9	50
X2 0 00089		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4 MS90725-6 (96906)		EA	2					18-9	14
X2 0 00090		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4 MS90725-6 (96906)		EA	1					18-9	23
X2 0 00091		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 7/8 MS90725-7 (96906)		EA	4					18-10	18
X2 0 00092		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 1-1/4 MS90725-62 (96906)		EA	3					18-10	50
X2 0 00093		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 1-1/4 MS90725-62 (96906)		EA	3					18-10	35
X2 0 00094		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 1-3/4 MS90725-65 (96906)		EA	2					18-10	20
X2 0 00095		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 2-1/4 MS90725-67 (96906)		EA	2					18-10	20
X2 0 00096		SCREW, CAP, HEXAGON HEAD: 5/16-18 x 7/8 MS90725-33 (96906)		EA	1					18-10	64
X2 0 00097		SHIELD 13205E4951 (97403)		EA	1					18-10	62
X2 0 00098		WASHER, FLAT, ROUND: 1/4 BSC size MS27183-11 (96906)		EA	4					18-9	20
X2 0 00099		WASHER, FLAT, ROUND: 1/4 BSC size MS27183-11 (96906)		EA	8					18-9	51
X2 0 00100		WASHER, FLAT, ROUND: 1/4 BSC size MS27183-11 (96906)		EA	2					18-9	46
X2 0 00101		WASHER, FLAT, ROUND: 1/4 BSC size MS27183-11 (96906)		EA	1					18-9	24
X2 0 00102		WASHER, FLAT, ROUND: 1/4 BSC size MS27183-11 (96906)		EA	2					18-9	11
X2 0 00103		WASHER, FLAT, ROUND: 1/4 BSC size MS27183-11 (96906)		EA	2					18-9	15
X2 0 00104		WASHER, FLAT, ROUND: 1/4 BSC size MS27183-11 (96906)		EA	2					18-9	42
X2 0 00105		WASHER, FLAT, ROUND: 3/8 BSC size MS27183-15 (96906)		EA	6					18-10	51
X2 0 00106		WASHER, FLAT, ROUND: 3/8 BSC size MS27183-15 (96906)		EA	4					18-10	61
X2 0 00107		WASHER, FLAT, ROUND: 3/8 BSC size MS27183-15 (96906)		EA	3					18-10	36

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS USABLE ON CODE	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00108		WASHER, FLAT, ROUND: 3/8 BSC size MS27183-15 (96906)	EA	2					18-10	21
X2 0 00109		WASHER, FLAT, ROUND: 3/8 BSC size MS27183-15 (96906)	EA	2					18-10	21
X2 0 00110		WASHER, FLAT, ROUND: 5/16 BSC size MS27183-12 (96906)	EA	1					18-10	65
00111		1507 - LANDING GEAR, LEVELING JACKS								
P 0 00112	2590-420-8929	TRAILER LEG PROP ASSEMBLY 13214E1206 (97403)	EA	1	*	*	*	*	18-10	67
00113		GROUP 22 - BODY, CHASSIS OR HULL, AND ACCESSORY ITEMS								
00114		2202 - ACCESSORY ITEMS								
X2 0 00115		ACCESSORY BOX 13205E4949 (97403)	EA	1					18-9	8
P C 00116	5120-265-7462	HAMMER HAND: double face, 8 lb GGGH86TYPE10CLASS1 (81348)	EA	1	*	*	*	*	18-9	17
X2 0 00117		NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC-2B MS51922-1 (96906)	EA	4					18-9	7
P C 00118	5975-878-3791	ROD, GROUND: 3 ft section w/attachment MILR11461 (81348)	EA	2	*	*	*	*	18-9	54
X2 0 00119		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4 MS90725-6 (96906)	EA	4					18-9	5
X2 0 00120		WASHER, FLAT, ROUND: 1/4 BSC size MS27183-11 (96906)	EA	4					18-9	6
00121		2210 - DATA PLATES								
X2 0 00122		PLATE, IDENTIFICATION 13205E4916-21 (97403)	EA	1					18-9	26
X2 0 00123		PLATE, IDENTIFICATION, GROUND TERMINAL 13205E40918 (97403)	EA	1					18-10	1
00124		GROUP 40 - GENERATORS								
00125		4000 - MOTOR GENERATOR								
X2 0 00126		NUT, SELF-LOCKING, HEXAGON: 1/2-13 UNC-2B MS51922-33 (96906)	EA	8					18-10	26
X2 0 00127		SCREW, CAP, HEXAGON HEAD: 1/2-13 x 1-3/4 lg MS90725-114 (96906)	EA	8					18-10	24
X2 0 00128		WASHER 13205E4956 (97403)	EA	6					18-10	23
X2 0 00129		WASHER, BEVELED 13206E4482-2 (97403)	EA	8					18-10	27
X2 0 00130		WASHER, FLAT, ROUND: 1/2 BSC size MS27183-18 (96906)	EA	8					18-10	25
00131		4019 - RADIO INTERFERENCE SUPPRESSION								
X2 0 00132		NUT, PLAIN, HEXAGON: 3/8-16 UNC-2B MS16203-27 (96906)	EA	1					18-9	38
X2 0 00133		NUT, PLAIN, HEXAGON: 3/8-16 UNC-2B MS16203-27 (96906)	EA	1					18-9	30
X2 0 00134		NUT, PLAIN, HEXAGON: 3/8-16 UNC-2B MS16203-39 (96906)	EA	2					18-9	36
X2 0 00135		NUT, PLAIN, WING: 3/8-16 UNC-2B MS35425-28 (96906)	EA	1					18-9	34

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS USABLE ON CODE	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00136		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 3/4 MS35309-358 (96906)	EA	1					18-9	27
X2 0 00137		STUD, GROUNDING 13213E1223 (97403)	EA	2					18-9	37
X2 0 00138		TERMINAL, LUG MS20659-110 (96906)	EA	3					18-9	32
X2 0 00139		TERMINAL, LUG: No. 6 AWG, 3/8 stud MS20659-110 (96906)	EA	1					18-9	31
X2 0 00140		WASHER, FLAT, ELECTRIC: 3/8 thd size AN961-616 (88044)	EA	4					18-9	35
X2 0 00141		WASHER, FLAT: 3/8 thd size AN961-616 (88044)	EA	1					18-9	29
X2 0 00142		WASHER, LOCK: 3/8 nominal size MS35335-91 (96906)	EA	2					18-9	33
00143		GROUP 42 - ELECTRICAL EQUIPMENT								
00144		4206 - THERMOSTATIC, AUTOMATIC AND MANUAL CONTROL DEVICES								
X2 0 00145		NUT PLATE, REEL HOLDDOWN 13205E4948 (97403)	EA	1					18-9	4
X2 0 00146		NUT, SELF-LOCKING, HEXAGON: 3/8-16 UNC-2B MS51922-17 (96906)	EA	4					18-10	55
X2 0 00147		NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC-2B MS51922-1 (96906)	EA	4					18-9	1
X2 0 00148		PLATE 13212E3569 (97403)	EA	1					18-10	56
X2 0 00149		SCREW, CAP, HEXAGON: 1/4-20 3/4 MS90725-6 (96906)	EA	4					18-9	3
X2 0 00150		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 1-1/4 MS90725-62 (96906)	EA	4					18-10	53
X2 0 00151		WASHER, FLAT, ROUND MS27183-11 (96906)	EA	4					18-9	2
X2 0 00152		WASHER, FLAT, ROUND: 3/8 BSC size MS27183-15 (96906)	EA	4						
00153		GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS								
00154		7638 - PORTABLE FIRE FIGHTING EQUIPMENT								
P C 00155	4210-555-8857	EXTINGUISHER, FIRE: 2-3/4 w/bracket MIL-E52031 (81349)	EA	1	*	*	*	*	18-9	18
00156		GROUP 95 - GENERAL USE STANDARDIZED PARTS								
00157		9501 - BULK MATERIEL								
P O 00158	4730-684-6032	HOSE SAEJ30CLASS30TYPE1	FT		*	*	*	*		
P O 00159		HOSE, FUEL: 2-1/2 od x 3 in. lg SAEJ30CLASS30R2TYPE2 (81343)	EA	1	*	*	*	*		

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
		PART II												
		REPAIR PARTS FOR DS, GS, AND DEPOT MAINTENANCE												
00001		GROUP 01 - ENGINE												
00002		0106 - ENGINE LUBRICATION SYSTEM												
O 00003 P O 00004	4730-270-4581	ADAPTER: 1/2-10 x 1/4-18	EA	2	*	*	*	*	*	*	*	*		
O 00005 O 00006 M O 00007	4730-908-3194	CLAMP MS35842-11 (96906)	EA	4	*	*	2	*	*	2	10	10		
O 00005 O 00006 M O 00007	4820-277-1765	COCK, PLUG, SPRING KEY: 1/4-18 x 1/4-18	EA	2	*	*	*	*	*	*	*	*		
O 00005 O 00006 M O 00007	4730-278-6317	COUPLING: 1/4 in.	EA	2	*	*	*	*	*	*	*	*		
O 00005 O 00006 M O 00007		HOSE: 1/2-10 x 10 in., 20 in lg SAEJ30CL30RS (81343) MANUFACTURE FROM:	EA	2										
P O 00008	4730-684-6032	HOSE (10 in. required for each HOSE ASSEMBLY)	FT	AR				SEE GRP 9501						
O 00009 O 00010 X2 O 00011	5310-584-5272	LOCKWASHER	EA	2	*	*	*	*	*	*	*	*		
O 00009 O 00010 X2 O 00011	4730-196-1465	NIPPLE, CLOSE	EA	2	*	*	*	*	*	*	*	*		
O 00012 X2 O 00013		NIPPLE: 1/4 x 1-1/2 in. lg WWN351 (81348)	EA	2										
O 00012 X2 O 00013	5310-282-7818	NUT	EA	2	*	*	*	*	*	*	*	*		
O 00014 00015	5330-684-3430	"O" RING MS28775-013 (96906)	EA	2										
O 00014 00015	4730-277-6447	UNION, BULKHEAD	EA	2	*	*	*	*	*	*	*	*		
00016		GROUP 03 - FUEL SYSTEM												
00016		0306 - TANKS, LINES, FITTINGS, AND HEADERS												
X2 O 00017		BRACKET, FILLER MOUNTING 13205B5080 (97403)	EA	1									18-10	8
P O 00018	2910-911-0081	CAP, FUEL TANK: tactical vehicle fording MS35645-2 (96906)	EA	1	*	*	2	*	*	2	10	10	18-10	12
X2 O 00019		CLAMP, HOSE: 1-13/16-2-3/4 range MS35842-13 (96906)	EA	2									18-10	43
X2 O 00020		CLAMP, HOSE: 7/16-25/32, range MS35842-10 (96906)	EA	2									18-10	34
X2 O 00021		CLAMP, LOOP, CUSHIONED: 3/4 od MS21104D12 (96906)	EA	1									18-10	30
X2 O 00022		CLAMP, LOOP, CUSHIONED: 5/16 od MS21104D5 (96906)	EA	2									18-10	42
X2 O 00023		CLAMP, LOOP, CUSHIONED: 5/16 od MS21104D5 (96906)	EA	3									18-10	48
X2 O 00024		FITTING, BULK HEAD: 37 degrees, 1/2-20 x 1/2 SAEJ514AFIG10C (81343)	EA	2									18-9	19
X2 O 00025		FILLER, FUEL TANK 13205B5081 (97403)	EA	1									18-10	13
X2 O 00026		GROMMET, RUBBER: 3/4 hole diagram MS35489-120 (96906)	EA	1									18-10	28
X2 O 00027		GUARD, FUEL GAGE 13205B5083 (97403)	EA	1									18-10	14

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUSTRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
						1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
P O 00028	4720-580-6659	HOSE ASSEMBLY: detachment, 5/16 od x 18 lg MS28741-5-0180 (96906)		EA	2	*	*	2	*	*	2	10	10	18-9	28
P O 00029		HOSE ASSEMBLY: detachment, 5/16 od x 56 lg MS28741-5-0580 (96906)		EA	1	*	*	2	*	*	2	10	10	18-10	38
P O 00030		HOSE ASSEMBLY: detachment, 5/16 tube x 88 lg MS28741-5-0880 (96906)		EA	1	*	*	2	*	*	2	10	10	18-10	49
M O 00031		HOSE, FUEL MANUFACTURE FROM:		EA	1									18-10	44
P O 00032		HOSE (3 in. required) SAEJ30CLASS30R2TYPE2 (81343)		FT					SEE GRP 9501						
X2 O 00033		HOSE, RUBBER: 1/2 nominal id x 3/4 od x 24 MILH13444 (81348)		EA	1									18-10	29
X2 O 00034		LOCKNUT: 37 deg flare, 1/2-20 UNF-2B SAEJ514AFTG10A (81343)		EA	2									18-9	21
X2 O 00035		NUT, SELF-LOCKING, HEXAGON: 1/4-20 MS51922-1 (96906)		EA	2									18-10	7
X2 O 00036		NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC-2B MS51922-1 (96906)		EA	3									18-10	11
X2 O 00037		NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC-2B MS51922-1 (96906)		EA	4									18-10	17
X2 O 00038		NUT, SELF-LOCKING, HEXAGON: 3/8-16 UNC-2B MS51922-17 (96906)		EA	2									18-10	3
X2 O 00039		NUT, SELF-LOCKING, HEXAGON: 10-32 UNF-3B MS21044N3 (96906)		EA	1									18-10	33
X2 O 00040		NUT, SELF-LOCKING, HEXAGON: 10-32 UNF-3B MS21044N3 (96906)		EA	2									18-10	39
X2 O 00041		NUT, SELF-LOCKING, HEXAGON: 10-32 UNF-3B MS21044N3 (96906)		EA	3									18-10	45
X2 O 00042		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 1 in. lg MS90725-8 (96906)		EA	2									18-10	5
X2 O 00043		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 5/8 MS90725-5 (96906)		EA	4									18-10	15
X2 O 00044		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 7/8 MS90725-7 (96906)		EA	3									18-10	9
X2 O 00045		SCREW, MACHINE: pan head, 10-32 x 5/8 MS35207-264 (96906)		EA	1									18-10	31
X2 O 00046		SCREW, MACHINE: pan head, 10-32 UNF x 5/8 MS35207-264 (96906)		EA	2									18-10	41
X2 O 00047		SCREW, MACHINE: pan head, 10-32 x 5/8 lg MS35207-264 (96906)		EA	3									18-10	47
X2 O 00048		STRAP, FUEL TANK 13205E5082 (97403)		EA	1									18-10	4
P O 00049		TANK ASSEMBLY, FUEL: 2 filters 13216E7451-2 (97403)		EA	1	*	*	2	*	*	2	10	10	18-10	59
X2 O 00050		WASHER, FLAT, ROUND MS27183-15 (96906)		EA	2									18-10	2
X2 O 00051		WASHER, FLAT, ROUND: 1/2 BSC size MS27183-18 (96906)		EA	2									18-10	60

(1)	(2)	(3)	(4)	(5)	(6)			(7)			(8)	(9)	(10)		
SMR CODE	FEDERAL STOCK NUMBER	DESCRIPTION	USABLE ON CODE	UNIT OF MEAS	QTY INC IN UNIT	30-DAY DS MAINT ALLOWANCE			30-DAY GS MAINT ALLOWANCE			1-YR ALW PER 100 EQUIP CNTGY	DEPOT MAINT ALW PER 100 EQUIP	ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
		REF NUMBER & MFR CODE				1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 0 00052		WASHER, FLAT, ROUND: 1/4 BSC size MS27183-11 (96906)		EA	3									18-10	10
X2 0 00053		WASHER, FLAT, ROUND: 1/4 BSC size MS27183-11 (96906)		EA	2									18-10	6
X2 0 00054		WASHER, FLAT, ROUND: 1/4 BSC size MS27183-11 (96906)		EA	4									18-10	16
X2 0 00055		WASHER, FLAT, ROUND: 10-32 BSC size MS27183-8 (96906)		EA	1									18-10	32
X2 0 00056		WASHER, FLAT, ROUND: 10-32 BSC size MS27183-8 (96906)		EA	2									18-10	40
X2 0 00057		WASHER, FLAT, ROUND: 10/32 BSC size MS27183-8 (96906)		EA	3									18-10	46
00058		GROUP 15 - FRAME, TOWING ATTACHMENT AND DRAWBAR													
00059		1501 - FRAME ASSEMBLY													
X2 0 00060	5340-999-6277	BRACKET ASSEMBLY, SLEDGE HAMMER 1314E1214 (97403)		EA	1									18-9	13
X2 0 00061		BRACKET, FUEL TANK MOUNTING 13205E4953 (97403)		EA	2									18-10	58
X2 0 00063		BRACKET, FUEL TANK MOUNTING 13205154952 (97403)		EA	2									18-10	57
X2 0 00064		BRACKET, GROUND ROD 13214E1417 (97403)		EA	1									18-9	9
X2 0 00065		BRACKET, GROUND ROD 13214E1415 (97403)		EA	1									18-9	44
X2 0 00066		CLAMP, CABLE 13212E3572 (97403)		EA	1									18-9	40
X2 0 00067		CLAMP, CABLE 13212E3573 (97403)		EA	4									18-9	49
X2 0 00068	2590-932-7298	CLAMP, GROUND ROD 13212E3617-1 (97403)		EA	1									18-9	48
X2 0 00069	5340-914-2578	CLIP, SPRING, SLEDGE HAMMER 13214E1213-1 (97403)		EA	1									18-9	22
X2 0 00070		HOLDDOWN, REEL 13214E1426-3 (97403)		EA	1									18-9	53
X2 0 00071		NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC-2B MS51922-1 (96906)		EA	4									18-10	19
X2 0 00072		NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC-2B MS51922-1 (96906)		EA	8									18-9	52
X2 0 00073		NUT, SELF-LOCKING, HEXAGON: 1/4 UNC-2B MS51922-1 (96906)		EA	2									18-9	45
X2 0 00074		NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC-2B MS51922-1 (96906)		EA	1									18-9	25
X2 0 00075		NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC-2B MS51922-1 (96906)		EA	2									18-9	12
X2 0 00076		NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC-2B MS51922-1 (96906)		EA	2									18-9	16
X2 0 00077		NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC-2B MS51922-1 (96906)		EA	2									18-9	39


(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGY	(10) DEPOT MAINT ALW PER 100 EQUIP	(11) ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
						1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 0 00078		NUT, SELF-LOCKING, HEXAGON: 3/8-16 UNC-2B MS51922-17 (96906)		EA	2									18-10	22
X2 0 00079		NUT, SELF-LOCKING, HEXAGON: 3/8-16 UNC-2B MS51922-17 (96906)		EA	2									18-10	22
X2 0 00080		NUT, SELF-LOCKING, HEXAGON: 3/8-16 UNC-2B MS51922-17 (96906)		EA	3									18-10	52
X2 0 00081		NUT, SELF-LOCKING, HEXAGON: 3/8-16 UNC-2B MS51922-17 (96906)		EA	4									18-10	60
X2 0 00082		NUT, SELF-LOCKING, HEXAGON: 3/8-16 UNC-2B MS51922-17 (96906)		EA	3									18-10	37
X2 0 00083		NUT, SELF-LOCKING, HEXAGON: 5/16-18 UNC-2B MS51922-9 (96906)		EA	1									18-10	66
X2 0 00084		PLATE, CABLE MTG. 13205B5133 (97403)		EA	1									18-10	63
Y2 0 00085		SCREW, MACHINE: 1/4-20 UNC x 1 lg MS35190-291 (96906)		EA	2									18-9	47
X2 0 00086		SCREW, MACHINE: 1/4-20 x 1 lg MS35190-291 (96906)		EA	2									18-9	10
X2 0 00087		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 1 lg MS90725-8 (96906)		EA	2									18-9	41
X2 0 00088		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 1 lg MS90725-8 (96906)		EA	8									18-9	50
X2 0 00089		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4 MS90725-6 (96906)		EA	2									18-9	14
X2 0 00090		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4 MS90725-6 (96906)		EA	1									18-9	23
X2 0 00091		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 7/8 MS90725-7 (96906)		EA	4									18-10	18
X2 0 00092		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 1-1/4 MS90725-62 (96906)		EA	3									18-10	50
X2 0 00093		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 1-1/4 MS90725-62 (96906)		EA	3									18-10	35
X2 0 00094		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 1-3/4 MS90725-65 (96906)		EA	2									18-10	20
X2 0 00095		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 2-1/4 MS90725-67 (96906)		EA	2									18-10	20
X2 0 00096		SCREW, CAP, HEXAGON HEAD: 5/16-18 x 7/8 MS90725-33 (96906)		EA	1									18-10	64
X2 0 00097		SHIELD 13205B4951 (97403)		EA	1									18-10	62
X2 0 00098		WASHER, FLAT, ROUND: 1/4 BSC size MS27183-11 (96906)		EA	4									18-9	20
X2 0 00099		WASHER, FLAT, ROUND: 1/4 BSC size MS27183-11 (96906)		EA	8									18-9	51
X2 0 00100		WASHER, FLAT, ROUND: 1/4 BSC size MS27183-11 (96906)		EA	2									18-9	46
X2 0 00101		WASHER, FLAT, ROUND: 1/4 BSC size MS27183-11 (96906)		EA	1									18-9	24
X2 0 00102		WASHER, FLAT, ROUND: 1/4 BSC size MS27183-11 (96906)		EA	2									18-9	11
X2 0 00103		WASHER, FLAT, ROUND: 1/4 BSC size MS27183-11 (96906)		EA	2									18-9	15

(1)	(2)	(3)	(4)	(5)	(6)			(7)			(8)	(9)	(10)		
SMR CODE	FEDERAL STOCK NUMBER	DESCRIPTION REF NUMBER & MFR CODE	USABLE ON CODE	UNIT OF MEAS	QTY INC IN UNIT	30-DAY DS MAINT ALLOWANCE			30-DAY GS MAINT ALLOWANCE			1-YR ALW PER 100 EQUIP CNTGY	DEPOT MAINT ALW PER 100 EQUIP	ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
						1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 0 00104		WASHER, FLAT, ROUND: 1/4 BSC size MS27183-11 (96906)		EA	2									18-9	42
X2 0 00105		WASHER, FLAT, ROUND: 3/8 BSC size MS27183-15 (96906)		EA	6									18-10	51
X2 0 00106		WASHER, FLAT, ROUND: 3/8 BSC size MS27183-15 (96906)		EA	4									18-10	61
X2 0 00107		WASHER, FLAT, ROUND: 3/8 BSC size MS27183-15 (96906)		EA	3									18-10	36
X2 0 00108		WASHER, FLAT, ROUND: 3/8 BSC size MS27183-15 (96906)		EA	2									18-10	21
X2 0 00109		WASHER, FLAT, ROUND: 3/8 BSC size MS27183-15 (96906)		EA	2									18-10	21
X2 0 00110		WASHER, FLAT, ROUND: 5/16 BSC size MS27183-12 (96906)		EA	1									18-10	65
00111		1507 - LANDING GEAR, LEVELING JACKS													
P 0 00112	2590-420-8929	TRAILER LEG, PROP ASSEMBLY 13214E1206 (97403)		EA	1	*	*	2	*	*	2	10	10	18-10	67
00113		GROUP 18 - BODY, CAB, HOOD, AND HULL													
00114		1810 - CARGO BODY													
XP DR 00115	2330-738-9509	TRAILER 13205E4955 (97403)		EA	1									18-9	55
00116		GROUP 22 - BODY, CHASSIS OR HULL, AND ACCESSORY ITEMS													
00117		2202 - ACCESSORY ITEMS													
X2 0 00118		ACCESSORY BOX 13205E4949 (97403)		EA	1									18-9	8
P C 00119	5120-265-7462	HAMMER HAND: double face, 8 lb GGGH86TYPELOCLASS1 (81348)		EA	1	*	*	2	*	*	2	10	10	18-9	17
X2 0 00120		NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC-2B MS51922-1 (96906)		EA	4									18-9	7
P C 00121	5975-878-3791	ROD, GROUND: 3 ft section w/attachment MILRL1461 (81348)		EA	2	*	*	2	*	*	2	10	10	18-9	54
X2 0 00122		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4 MS90725-6 (96906)		EA	4									18-9	5
X2 0 00123		WASHER, FLAT, ROUND: 1/4 BSC size MS27183-11 (96906)		EA	4									18-9	6
00124		2210 - DATA PLATES													
X2 0 00125		PLATE, IDENTIFICATION 13205E4916-21 (97403)		EA	1									18-9	26
X2 0 00126		PLATE, IDENTIFICATION, GROUND TERMINAL 13205E40918 (97403)		EA	1									18-10	1
X2 F 00127		PLATE, INFORMATION WIRING DIAGRAM 13212E1499 (97403)		EA	1										
00128		GROUP 40 - GENERATORS													
00129		4000 - MOTOR GENERATOR													
X2 FR 00130	6115-017-8237	GENERATOR SET: 3 kw, 60 hz md MILG52367TYPE1 (81349)		EA	2									18-9	55
X2 0 00131		NUT, SELF-LOCKING, HEXAGON: 1/2-13 UNC-2B MS51922-33 (96906)		EA	8									18-10	26

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
		REF NUMBER & MFR CODE												
X2 O 00132		SCREW, CAP, HEXAGON HEAD: 1/2-13 x 1-3/4 1g MS90725-114 (96906)	EA	8									18-10	24
X2 O 00133		WASHER 13205B4956 (97403)	EA	6									18-10	23
X2 O 00134		WASHER, BEVELED 13206B4482-2 (97403)	EA	8									18-10	27
X2 O 00135		WASHER, FLAT, ROUND: 1/2 BSC size MS27183-18 (96906)	EA	8									18-10	25
00136		4019 - RADIO INTERFERENCE SUPPRESSION												
X2 O 00137		NUT, PLAIN, HEXAGON: 3/8-16 UNC-2B MS16203-27 (96906)	EA	1									18-9	38
X2 O 00138		NUT, PLAIN, HEXAGON: 3/8-16 UNC-2B MS16203-27 (96906)	EA	1									18-9	30
X2 O 00139		NUT, PLAIN, HEXAGON: 3/8-16 UNC-2B MS16203-39 (96906)	EA	2									18-9	36
X2 O 00140		NUT, PLAIN, WING: 3/8-16 UNC-2B MS35425-28 (96906)	EA	1									18-9	34
X2 O 00141		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 3/4 MS35309-358 (96906)	EA	1									18-9	27
X2 O 00142		STUD, GROUNDING 13213E1223 (97403)	EA	2									18-9	37
X2 O 00143		TERMINAL, LUG MS20659-110 (96906)	EA	3									18-9	32
X2 O 00144		TERMINAL, LUG: No. 6 AWG, 3/8 stud MS20659-110 (96906)	EA	1									18-9	31
X2 O 00145		WASHER, FLAT, ELECTRIC: 3/8 thd size AN961-616 (88044)	EA	4									18-9	35
X2 O 00146		WASHER, FLAT: 3/8 thd size AN961-616 (88044)	EA	1									18-9	29
X2 O 00147		WASHER, LOCK: 3/8 nominal size MS35335-91 (96906)	EA	2									18-9	33
00148		GROUP 42 - ELECTRICAL EQUIPMENT												
00149		4206 - THERMOSTATIC, AUTOMATIC AND MANUAL CONTROL DEVICES												
X2 F 00150		BOX 13205E5077 (97403)	EA	1									18-8	16
X2 F 00151		COVER 13205E5078 (97403)	EA	1									18-8	29
X2 F 00152		DISTRIBUTION BOX 13205E5079-2 (97403)	EA	1									18-9	43
X2 F 00153		CABLE, GENERATOR: No. 1 to distribution box, 2-1/2 ft 13212E3570-2 (97403)	EA	1									18-8	14
X2 F 00154		CABLE, GENERATOR: No. 2 to distribution box, 11 ft 13212E2571-3 (97403)	EA	1									18-8	15
X2 F 00155		GAUZE 13212E3610 (97403)	EA	1									18-8	17
X2 F 00156		LEAD, ELECTRICAL: No. W3 13212E3567-1 (97403)	EA	1									18-8	9
X2 F 00157		LEAD, ELECTRICAL: No. W4 13212E2567-2 (97403)	EA	1									18-8	10


(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 F 00158		LEAD, ELECTRICAL: No. W5 13212E3567-3 (97403)	EA	1									18-8	11
X2 F 00159		LIGHT AND WIRE 13212E3560 (97403)	EA	2									18-8	1
X2 F 00160		NUT, PLAIN, HEXAGON MS35649-202 (96906)	EA	6									18-8	26
X2 F 00161		NUT, PLAIN, HEXAGON: 1/4-20 UNC-2B MS35691-1 (96906)	EA	4									18-8	8
X2 F 00162		NUT, PLAIN, HEXAGON: 1/4-20 UNC-2B FFN836TYPE2 (81348)	EA	8									18-8	23
X2 O 00163		NUT PLATE, REEL HOLDDOWN 13205E4948 (97403)	EA	1									18-9	4
X2 O 00164		NUT, SELF-LOCKING, HEXAGON: 3/8-16 UNC-2B MS51922-17 (96906)	EA	4									18-10	55
X2 O 00165		NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC-2B MS51922-1 (96906)	EA	4									18-9	1
X2 F 00166		PACKING, PREFORMED, "O" RING MS28775-111 (96906)	EA	1									18-8	28
X2 F 00167		PACKING, PREFORMED, "O" RING MS28775-122 (96906)	EA	2									18-8	12
X2 F 00168		PACKING, PREFORMED, "O" RING MS28775-011 (96906)	EA	4									18-8	3
X2 O 00169		PLATE 13212E3569 (97403)	EA	1									18-10	56
X2 O 00170		SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4 MS90725-6 (96906)	EA	4									18-9	3
X2 O 00171		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 1-1/4 MS90725-62 (96906)	EA	4									18-10	53
X2 F 00172		SCREW, MACHINE: pan head, 1/4-20 x 3/4 MS35206-261 (96906)	EA	4									18-8	2
X2 F 00173		SCREW, MACHINE: pan head, 10-24 x 1 lg MS35206-267 (96906)	EA	6									18-8	20
X2 F 00174		SCREW, MACHINE: pan head, 10-32 x 1/2 lg MS35207-263 (96906)	EA	16									18-8	4
X2 F 00175		STUFFING, TUBE 13212E3582-4 (97403)	EA	2									18-8	13
P2 F 00176	5930-878-6722	SWITCH, ROTARY: 30 amp 13205E5022 (97403)	EA	1	*	*	*	*			3	2	18-8	27
X2 F 00177		TERMINAL, BOARD 13212E3606 (97403)	EA	1									18-8	18
X2 F 00178		TERMINAL, LOAD 13208E5820-6 (97403)	EA	4									18-8	19
X2 O 00179		WASHER, FLAT, ROUND MS271893-11 (96906)	EA	4									18-9	2
X2 F 00180		WASHER, FLAT, ROUND: 10-32 BSC size MS27183-8 (96906)	EA	16									18-8	6
X2 F 00181		WASHER, FLAT, ROUND: 10 nominal size MS27183-8 (96906)	EA	12									18-8	21
X2 O 00182		WASHER, FLAT, ROUND: 3/8 BSC size MS27183-15 (96906)	EA	4									18-10	54
X2 F 00183		WASHER, LOCK, FLAT: 1/4 nominal size MS35333-108 (96906)	EA	4									18-8	22

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
						1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 F 00184		WASHER, FLAT, ROUND: 1/4-20 BSC size MS27183-11 (96906)		EA	4									18-8	7
X2 F 00185		WASHER, LOCK: spring helical, 10 nominal size MS35338-43 (96906)		EA	6									18-8	25
X2 F 00186		WASHER, LOCK, SPRING: No. 10 nominal size MS35338-43 (96906)		EA	16									18-8	5
X2 F 00187		WASHER, LOCK: 1/4 nominal size MS35338-101 (96906)		EA	8									18-8	24
00188		GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS													
00189		7638 - PORTABLE FIRE FIGHTING EQUIPMENT													
P C 00190	4210-555-8837	EXTINGUISHER, FIRE: 2-3/4 w/bracket MILE52031 (81349)		EA	1	*	*	2	*	*	2	10	10	18-9	18
00191		GROUP 95 - GENERAL USE STANDARDIZED PARTS													
00192		9501 - BULK MATERIEL													
P O 00193	4730-684-6032	HOSE SAEJ30CLASS30TYPE1		FT		*	*	*	*	*	*	10	10		
P O 00194		HOSE, FUEL: 2-1/2 od x 3 in. lg SAEJ30CLASS30R2TYPE2 (81343)		EA	1	*	*	*	*	*	*	*	*		

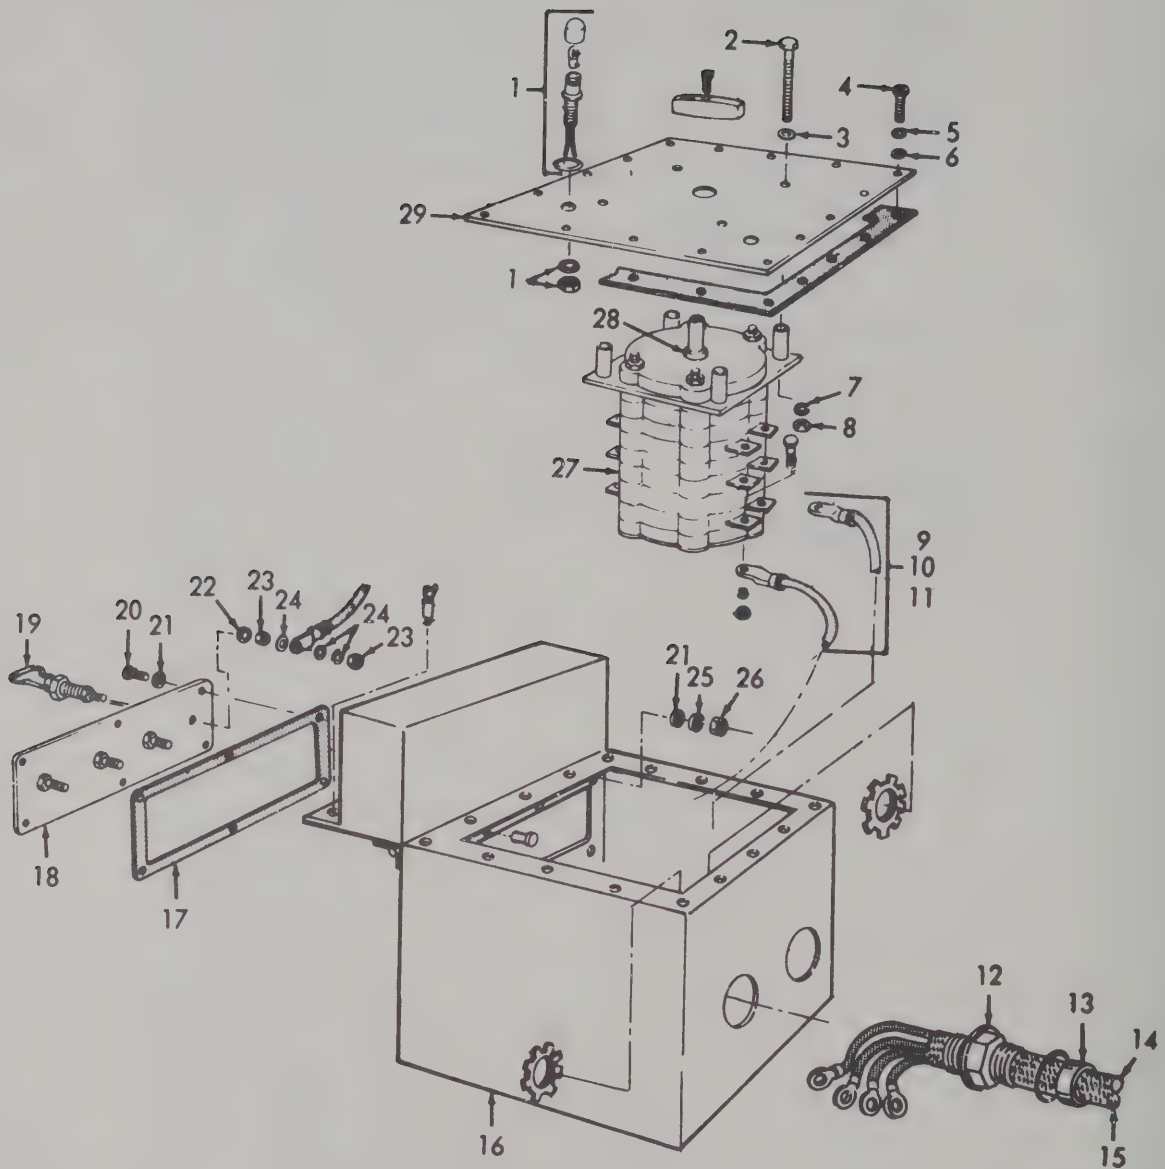



ME 6115-365-15/18-8, C2

Figure 18-8. Generator transfer switch.

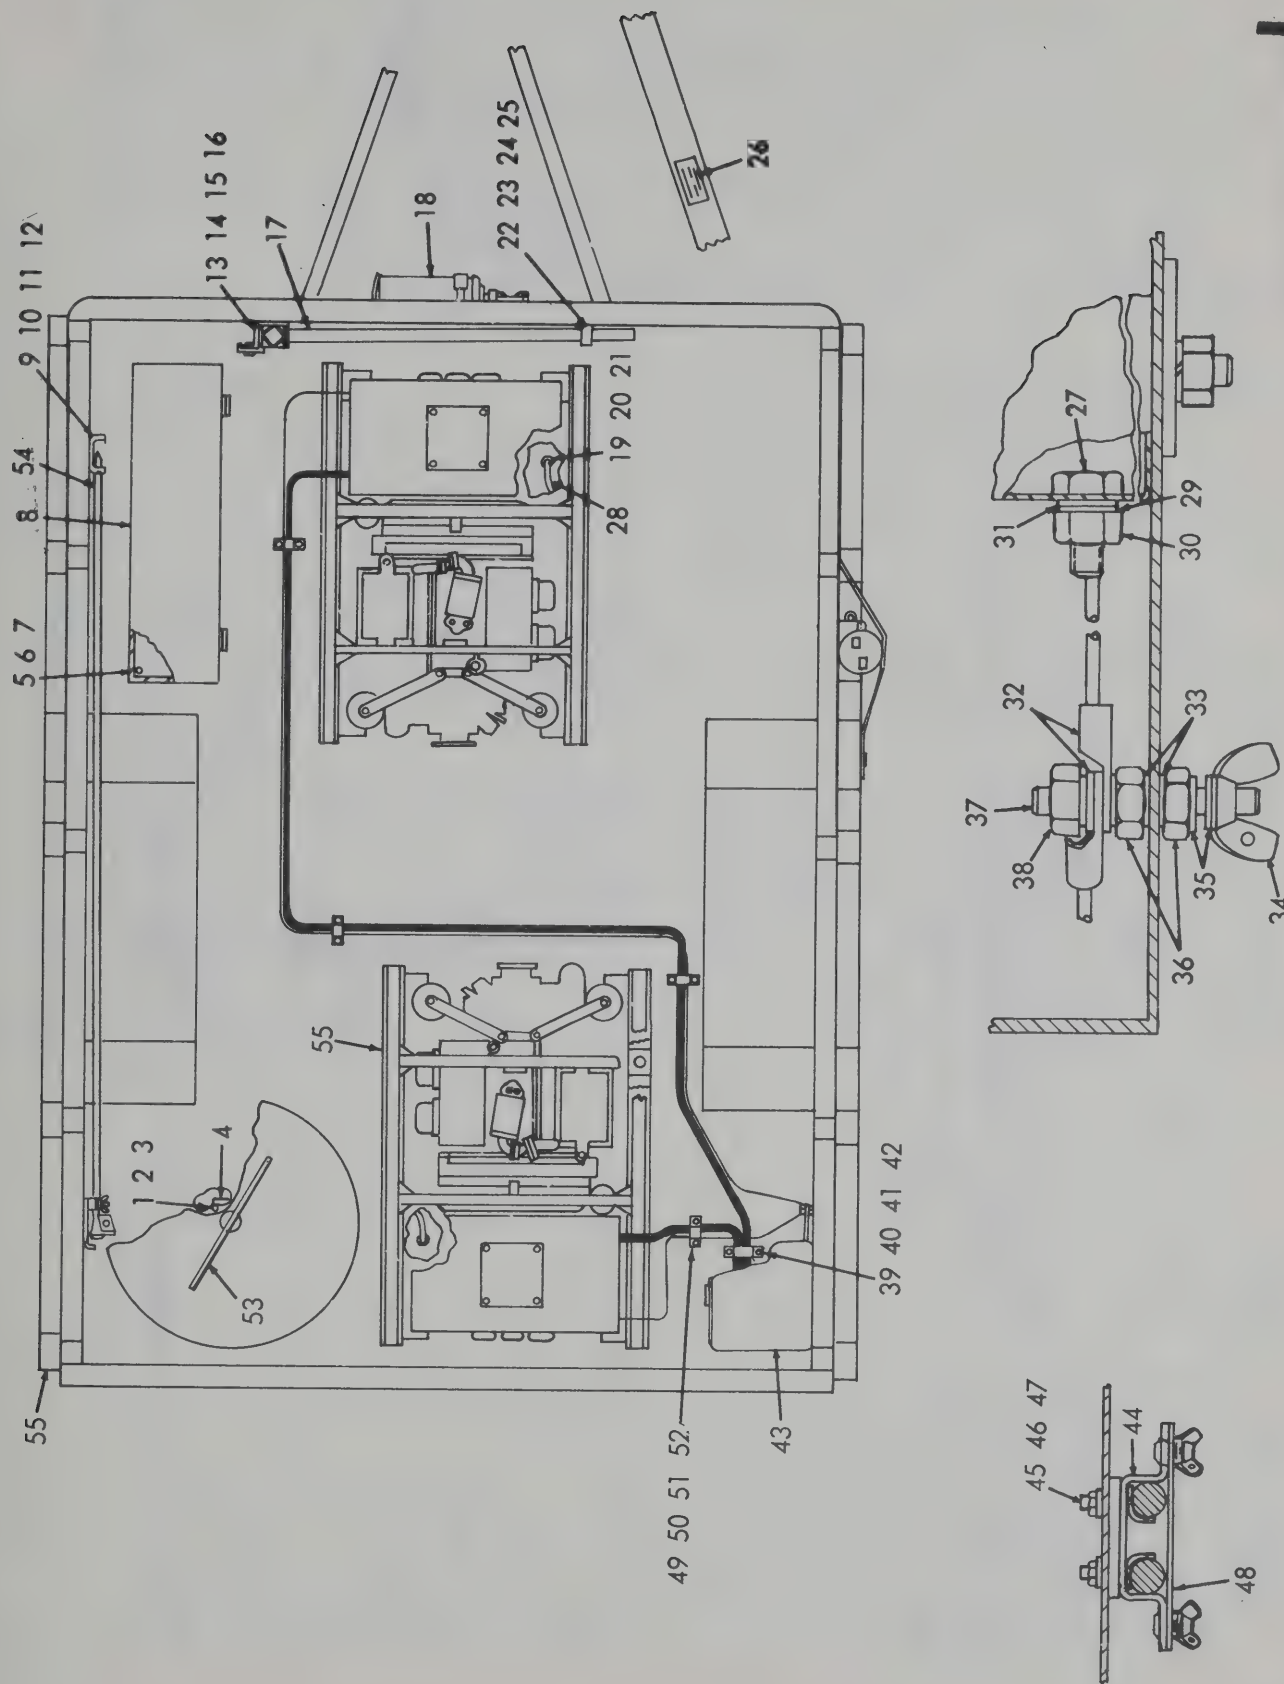

ME 6115-365-15/18-9, C2

Figure 18-9. Power unit components.

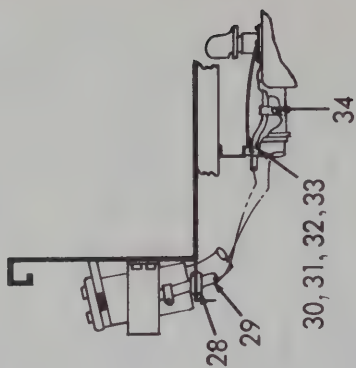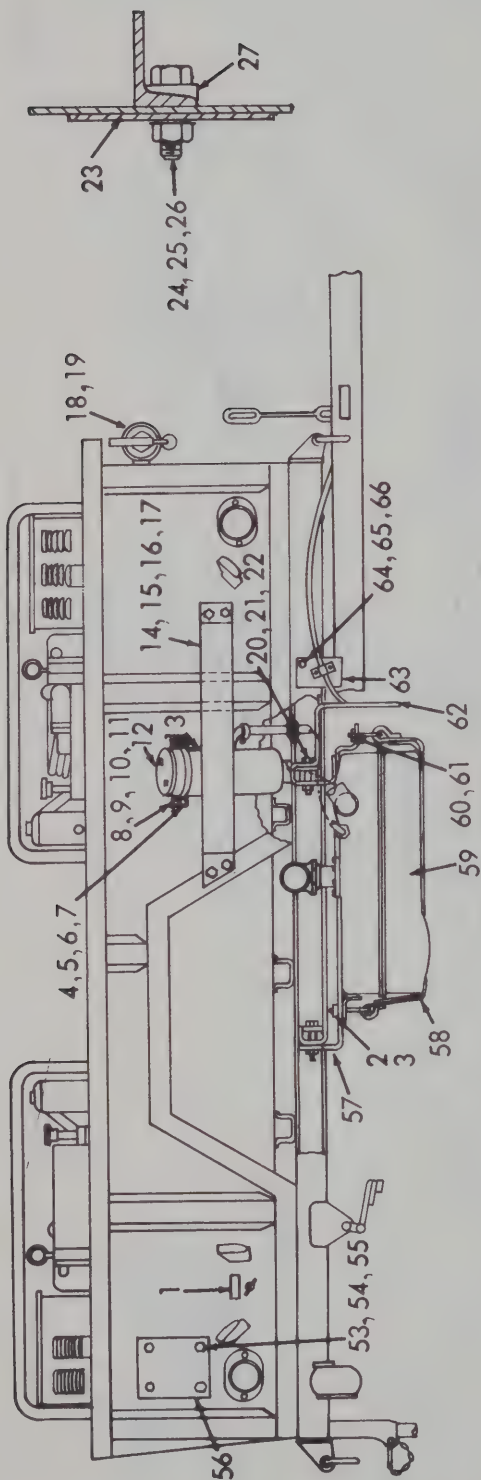

ME 6115-365-15/18-10, C2

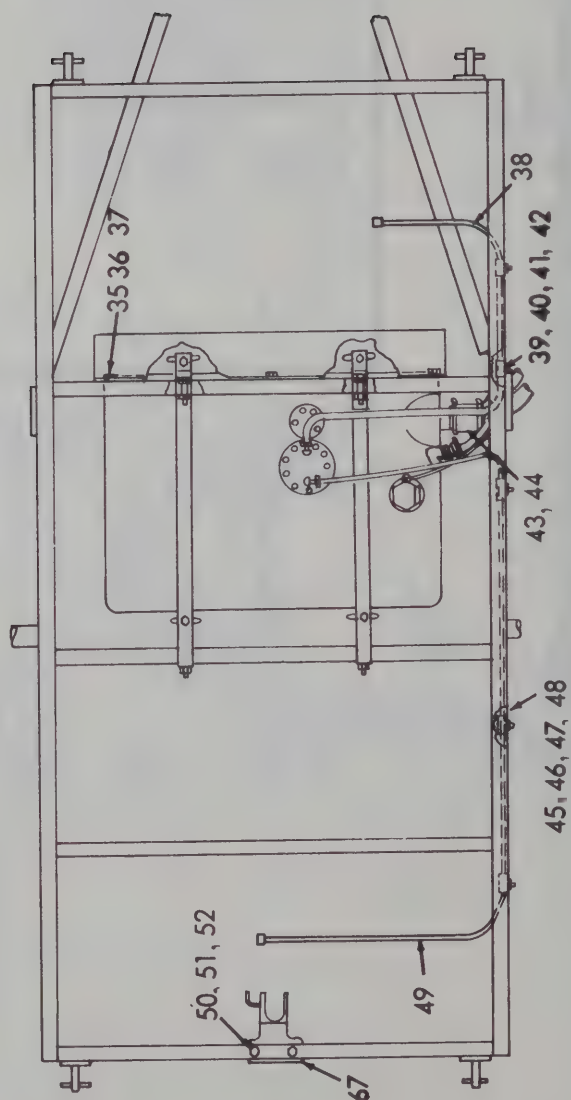


Figure 18-10. Power unit trailer components.

CHAPTER 19

GENERATOR SET PU-629/G

Section I. DESCRIPTION AND DATA

19-1. Description

a. General. The PU-629/G is a self-contained, mobile, general purpose power supply (fig. 19-1). The set is comprised of two 5 KW Model SF 5.0 MD Military Standard generator sets, mounted on an M103A trailer, and includes the components listed in table 19-1. The generators are powered by directly coupled, 2-cylinder, 10 hp, Military Standard Model 2A042-II engines. A power transfer switch is provided for connecting the generator outputs to a common load.

b. Engines. For description and maintenance information pertaining to the engines, refer to TM 5-2805-258-14.

c. Generators. For description, operation, and maintenance information not covered in this chapter, refer to TM 5-6115-332-12.

d. Trailer. For description and trailer maintenance information not covered in this chapter, refer to TM 9-2330-213-14.

e. Lubrication. For engine lubrication instructions, refer to LO 5-2805-258-14. For trailer lubrication information, refer to LO 9-2330-213-12.

19-2. Tabulated Data

Table 19-1 lists the components for PU-629/G.

Table 19-1. PU-629/G Components

<i>FSN</i>	<i>Qty</i>	<i>Nomenclature</i>
2330-141-8052	1	Trailer: M103A
6115-074-8830	2	Generator: 5 KW, Model SF 5.0 MD
2590-741-1037	1	Leg prop assembly, trailer
4210-555-8837	2	Fire extinguisher
5975-878-3791	2	Ground rod (w/attachments)
5120-265-7462	1	Sledge hammer
FSN not assigned	2	Fuel tank assembly

CAUTION: KEEP TARPULIN ROLLED UP, OR REMOVE, DURING OPERATION. BE SURE TO MAINTAIN THE MAXIMUM AMOUNT OF SPACE FOR VENTILATION AROUND THE GENERATOR SETS WHEN OPERATING.

TARPULIN

HANDBRAKE (2)

SHIPPING DIMENSIONS	
LENGTH	175 IN.
WIDTH	83 IN.
HEIGHT	99 IN.
WEIGHT	3480 LBS

ME 6115-365-15/19-1 C1

Figure 19-1. PU-629/G, right front, $\frac{3}{4}$ view.

Section II. OPERATING INSTRUCTIONS

19-3. Setting-up Instructions

a. Leveling.

(1) Locate the trailer on as level a surface as possible in order for the generator to operate efficiently.

(2) Set brakes and block wheels securely to prevent any movement. Operate handbrakes at weekly intervals to assure freedom of linkage.

(3) Pull leg support down and adjust length for firm contact with ground.

WARNING

Wheels must be blocked, brakes set, and leg prop down in support position before attempting to roll up tarpaulin and before starting to set-up or assemble the equipment for operation.

b. Preparation for Starting.


(1) Roll up tarpaulin and remove splash shield as shown in figure 19-3.

(2) Remove all loose auxiliary items and anything else that might block the free circulation of air through the trailer and around the generator sets.

CAUTION

It is of foremost importance that there be free circulation of air around the generator sets at all times during operation. Inadequate ventilation is a major cause of damage to the equipment.

(3) Be sure transfer switch load cables are connected to the generator sets as illustrated in figure 19-2.

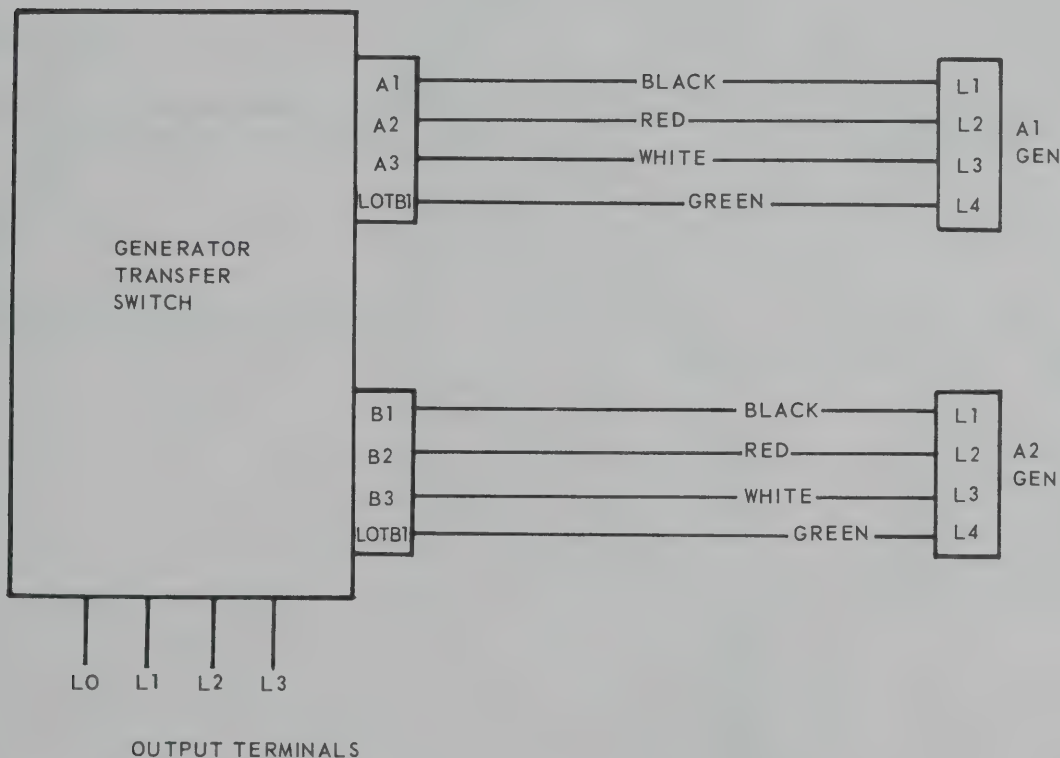

ME 6115-365-15/19-2 C2

Figure 19-2. Interconnection diagram, transfer switch-to-generators.

c. *Grounding.*

WARNING

Never operate the generator set until it has been properly grounded. Electrical defects in the load lines or equipment can cause death by electrocution when contact is made with an ungrounded system.

(1) The generator set must be grounded prior to operation. The ground may be any of three methods, depending on the location and terrain.

(a) A ground rod driven to a depth of 8 feet.

(b) An underground metallic water piping system.

(c) A metal plate (9 sq. ft.) buried at a depth of 4 feet.

(2) The ground lead must be No. 6 AWG copper wire bolted or clamped to the rod, plate, or piping system.

(3) Connect the other end of the ground lead to the generator set ground terminal stud as shown in figure 19-3.

(4) Be sure that both generators are connected to the generator set ground terminal stud, as shown in figure 19-3.

d. *Fuel Hose Connection.* Connect the fuel hoses as illustrated in figure 19-4.

WARNING

Never operate the generator set in an enclosed area unless the exhaust gases are piped to the outside. Inhalation of exhaust fumes will result in serious illness or death.

19-4. Starting

a. Perform the setting-up and pre-starting procedures (para 19-3).

b. Be sure the generator transfer switch is OFF (fig. 19-3).

c. Start the generator set as instructed in TM 5-6115-332-12.

19-5. Stopping

a. Turn the generator transfer switch OFF or in position to select a standby generator (fig. 19-3).

b. Stop the generator as instructed in TM 5-6115-332-12.


19-6. Operation

a. Start the generator (para 19-4) and position the transfer switch to the desired generator.

b. Operate the generator as instructed in TM 5-6115-332-12.

c. Perform the fuel connection and transfer procedure as instructed in figure 19-4.

NOTE: TARPAULIN MAY BE ROLLED UP AND STOWED ON TOP OF ROOF BOWS.

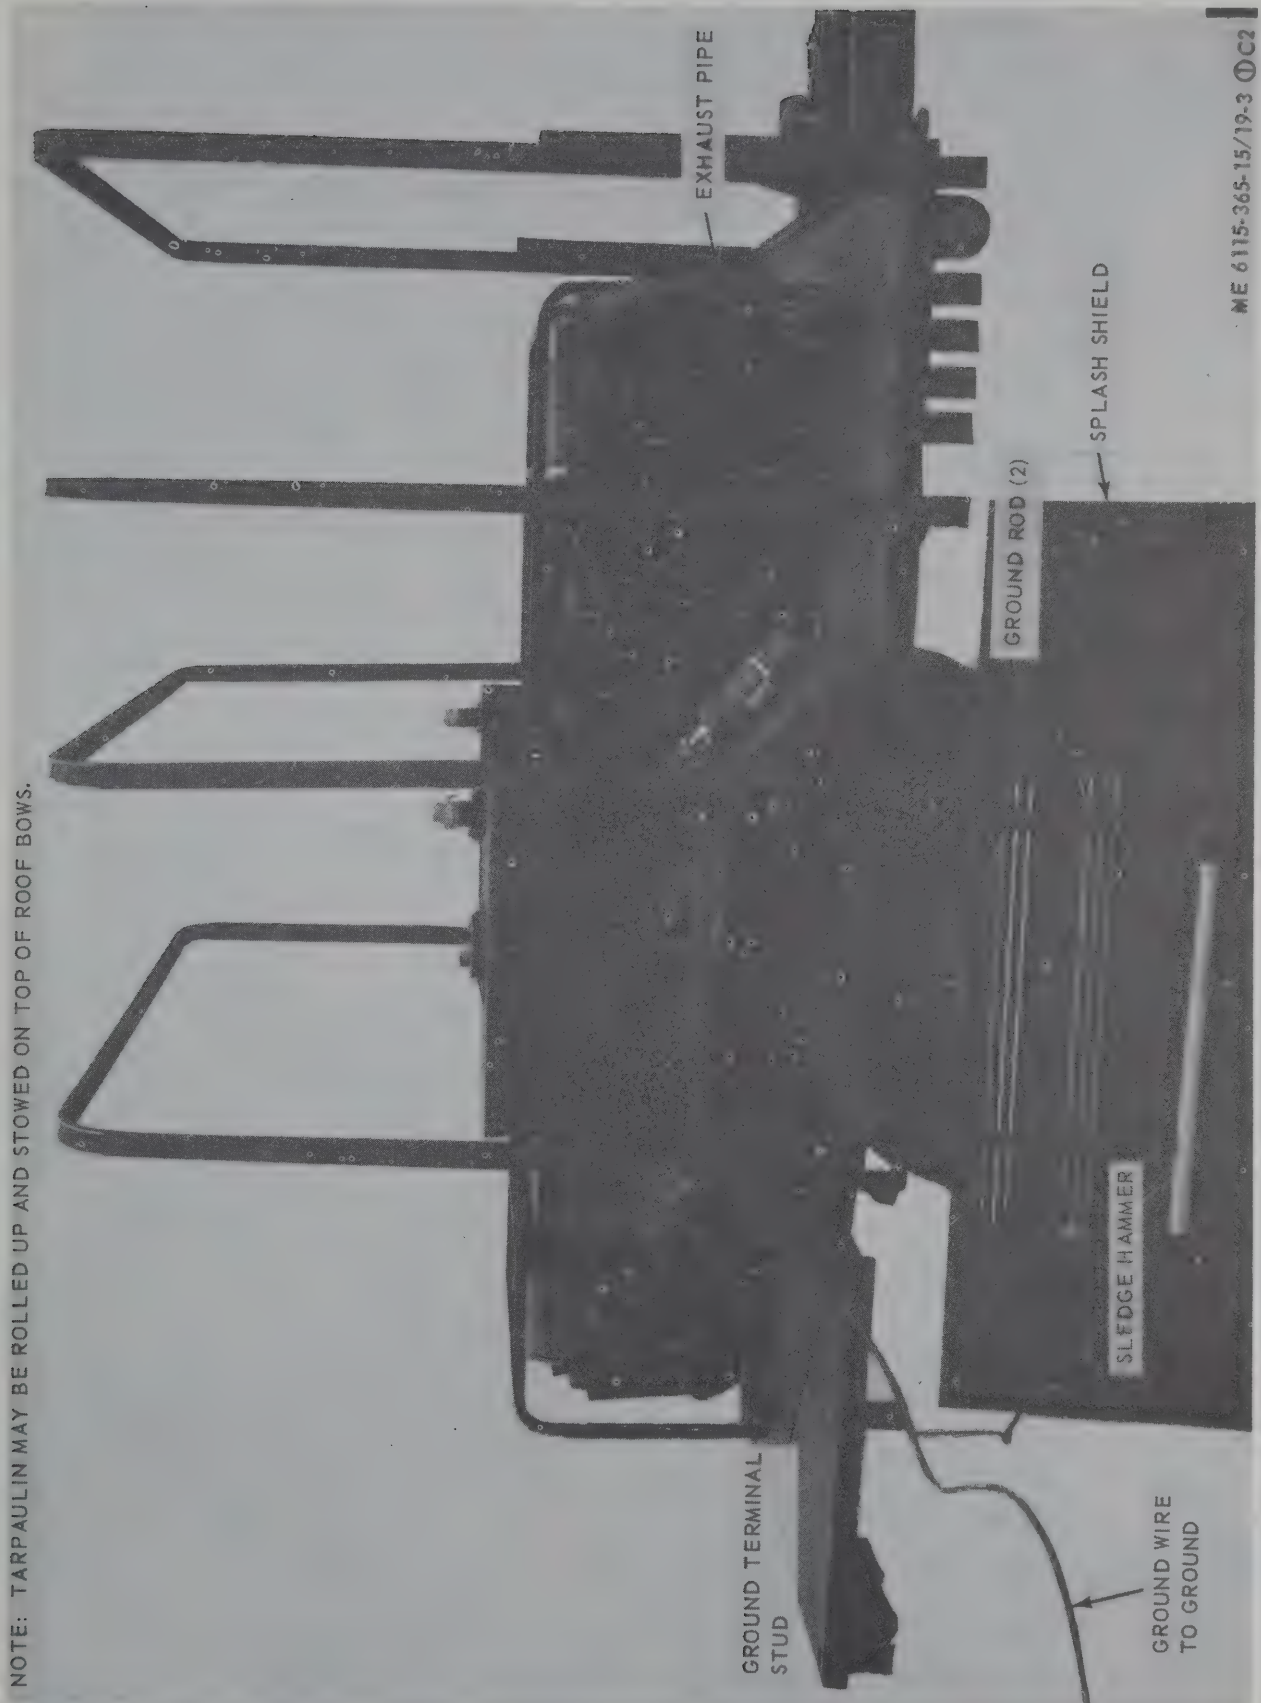

ME 6115-365-15/19-3 ①C2

Figure 19-3. PU-629/G set up for operation (sheet 1 of 2).

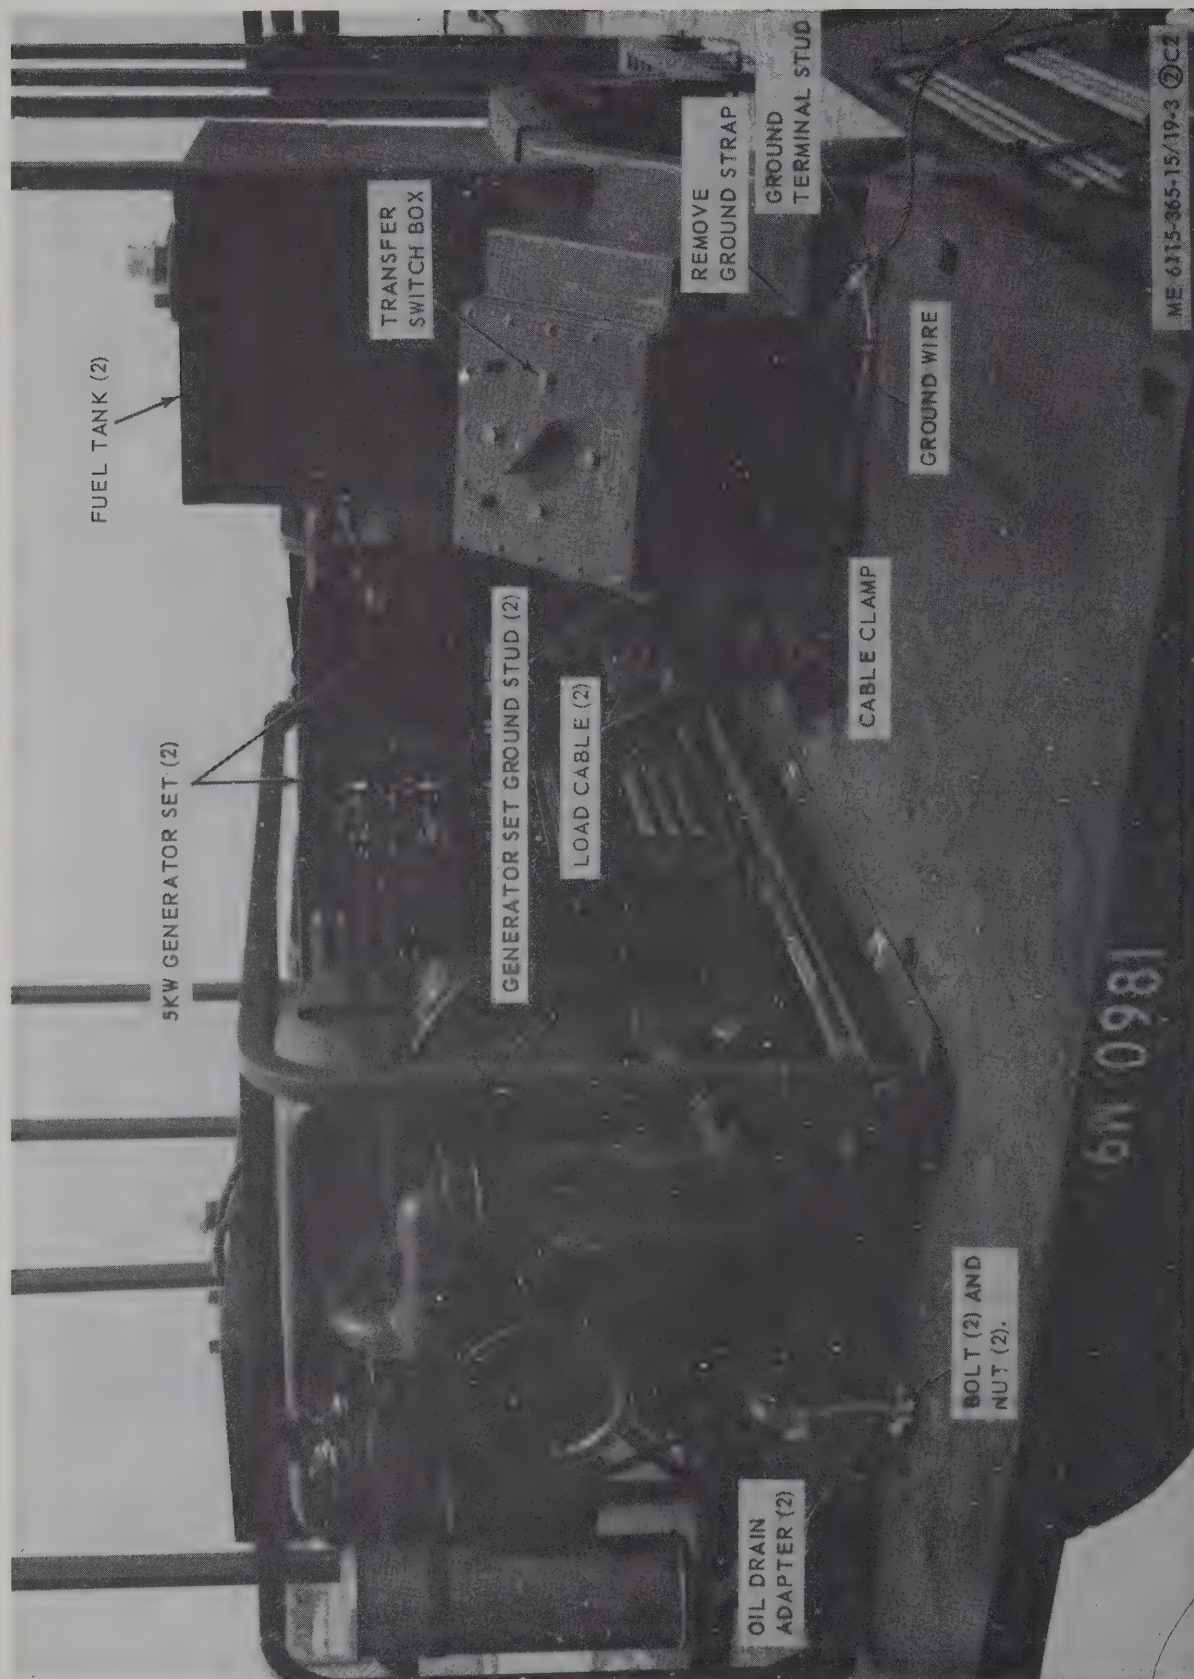


Figure 19-3. PU-926/G set up for operation (sheet 2 of 2).

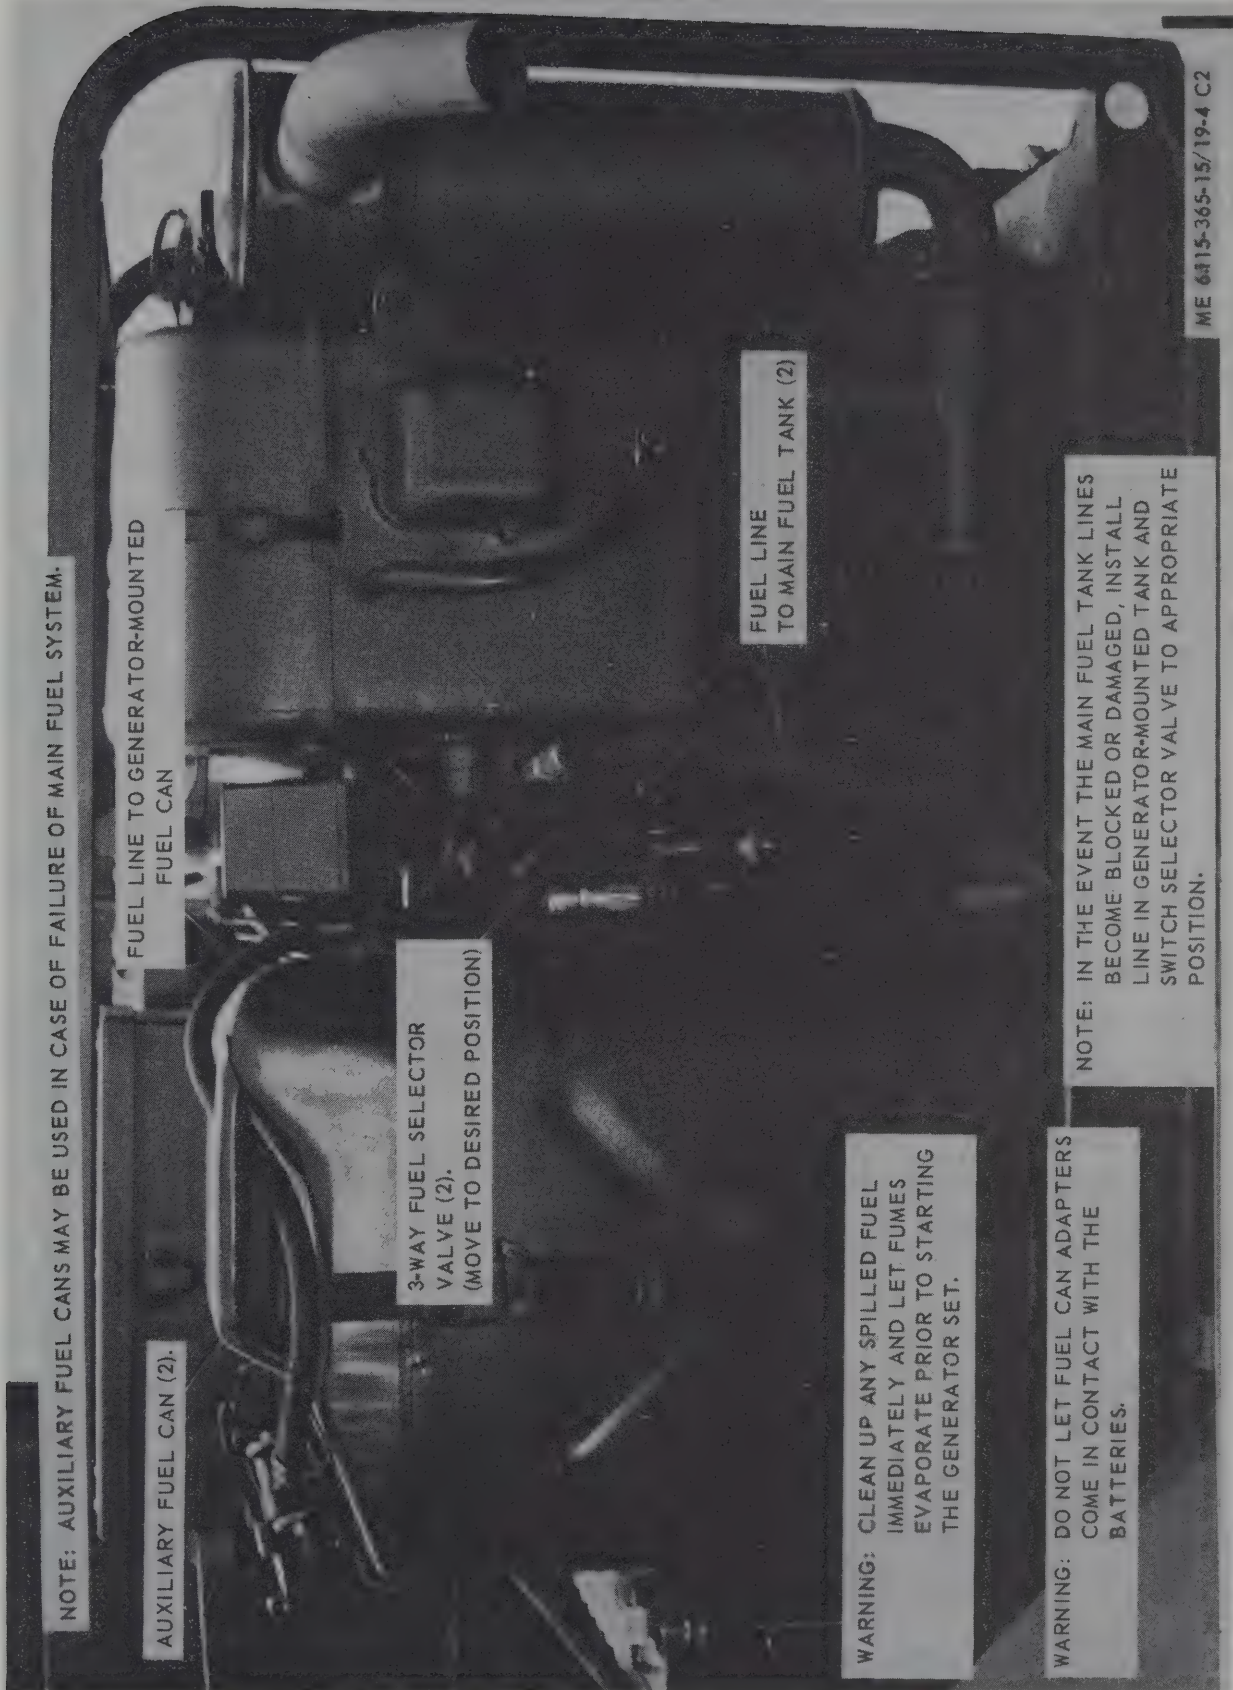



Figure 19-4. Fuel system connection and transfer procedure.

Section III. OPERATOR'S MAINTENANCE INSTRUCTIONS

19-7. Transfer Switch Indicating Lamps

a. *Removal.* Remove lens and remove indicator lamp as illustrated in figure 19-5.

b. *Installation.* Install the indicator lamp and lens as illustrated in figure 19-5.

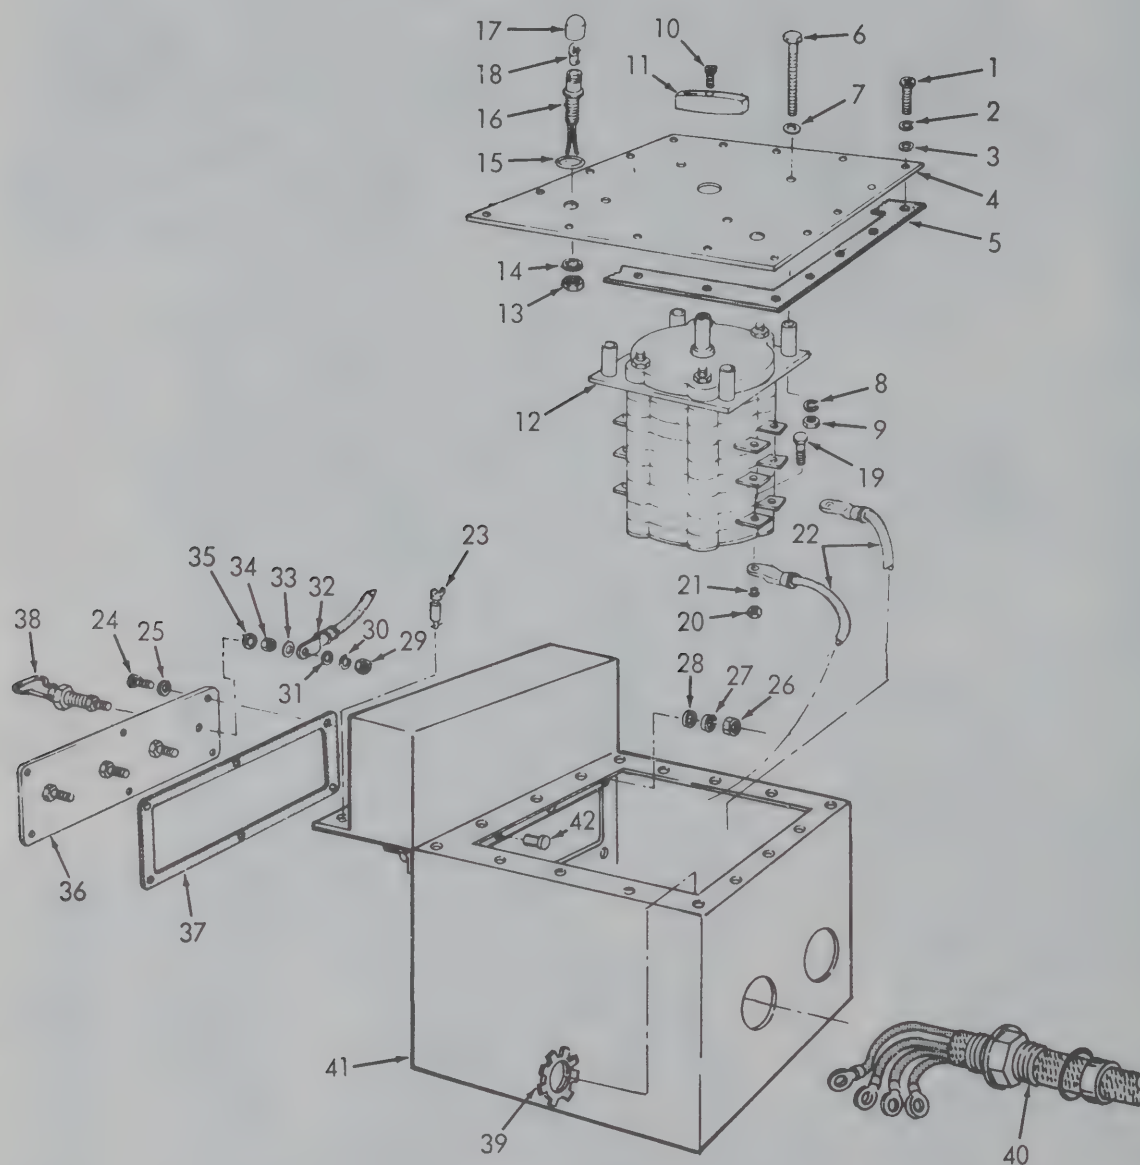

ME 6115-365-15/19-5 C2

- | | | | | |
|---------------|------------------------|--------------------|--------------------|------------------------|
| 1 Screw | 10 Screw | 19 Screw | 28 Flat washer | 37 Gasket |
| 2 Lockwasher | 11 Knob | 20 Hex nut | 29 Hex nut | 38 Terminal lug |
| 3 Flat washer | 12 Transfer switch | 21 Lockwasher | 30 Lockwasher | 39 Locknut |
| 4 Cover | 13 Hex nut | 22 Electrical lead | 31 Flat washer | 40 Stuffing tube assy |
| 5 Gasket | 14 Lockwasher | 23 Fastener | 32 Electrical lead | 41 Transfer switch box |
| 6 Screw | 15 Preformed packing | 24 Screw | 33 Flat washer | 42 Rivet |
| 7 Flat washer | 16 Light and wire assy | 25 Flat washer | 34 Hex nut | |
| 8 Lockwasher | 17 Lens | 26 Hex nut | 35 Lockwasher | |
| 9 Hex nut | 18 Lamp | 27 Lockwasher | 36 Terminal board | |

Figure 19-5. Transfer switch, removal, disassembly, reassembly, and installation.

Section IV. ORGANIZATIONAL MAINTENANCE INSTRUCTIONS

19-8. Transfer Switch Indicating Lights

a. Removal. Remove the indicating lights as illustrated in figure 19-5.

b. Installation. Install the indicating lights as illustrated in figure 19-5.

19-9. Ground Wires and Terminal Stud

a. Removal. Remove the ground wires from the ground terminal stud and generator sets as shown in figure 19-3. Remove the terminal stud.

b. Installation. Install the terminal stud and ground wires as shown in figure 19-3.

19-10. Tarpaulin, Roof Bows, and Leg Prop

a. Removal.

(1) Remove the tarpaulin from the unit.

(2) Pull out the chain-secured pins that secure the roof bows to the trailer bed and remove the bows.

(3) Remove the hardware that secures the leg prop to the rear underside of the trailer bed and remove the leg prop.

b. Cleaning and Inspection.

(1) Clean tarpaulin with water and detergent. Clean roof bows and leg prop with approved cleaning solvent. Dry thoroughly.

(2) Inspect tarpaulin for tears, holes, broken or missing straps or ropes and other defects. Inspect bows and leg prop for breaks, cracks, damaged or missing hardware, and any other defects.

c. Installation.

(1) Mount the leg prop to the underside of the trailer bed and secure with mounting hardware.

(2) Install the roof bows in the trailer bed and secure with pins. Install the tarpaulin and secure in the desired position.

Section V. DIRECT AND GENERAL SUPPORT AND DEPOT MAINTENANCE INSTRUCTIONS

19-11. Generator Transfer Switch

a. Removal and Disassembly.

(1) Tag and disconnect leads from the output terminals to load.

(2) Remove and disassemble the transfer switch as illustrated in figure 19-5.

b. Reassembly and Installation.

(1) Reassemble and install the transfer switch as illustrated in figure 19-5.

(2) Connect load connections (fig. 19-6).

19-12. Generator Sets

a. Removal. Use figure 19-7 as a guide and perform the following steps:

(1) Disconnect fuel lines.

(2) Disconnect electrical leads and cables.

(3) Disconnect oil drain adapters.

(4) Remove 2 bolts and 2 nuts that secure the front muffler pipe to trailer bed and remove pipe.

(5) Remove the 8 bolts (4 to each set) that secure the generator sets to the trailer bed and remove generator sets.

b. Installation. Use figure 19-7 as a guide and perform the following steps:

(1) Secure the two generator sets to the trailer bed with 8 bolts.

(2) Secure front muffler pipe to trailer bed with 2 bolts and 2 nuts.

(3) Connect oil drain adapters.

(4) Connect electrical leads and cables.

(5) Connect fuel lines.

19-13. Tarpaulin, Roof Bows, and Leg Prop


a. Removal. Remove the tarpaulin, roof bows, and leg prop (para 19-10).

b. Repair.

(1) Patch or sew rips or tears in the tarpaulin. Replace damaged or missing straps and ropes. Replace a tarpaulin that is too badly damaged to be repaired.


(2) Weld minor cracks and breaks in the roof bows and leg prop. Straighten bows where possible. Replace defective or missing hardware. Replace bows or leg prop that are damaged beyond repair.

c. Installation. Install tarpaulin, roof bows, and leg prop (para 19-10).

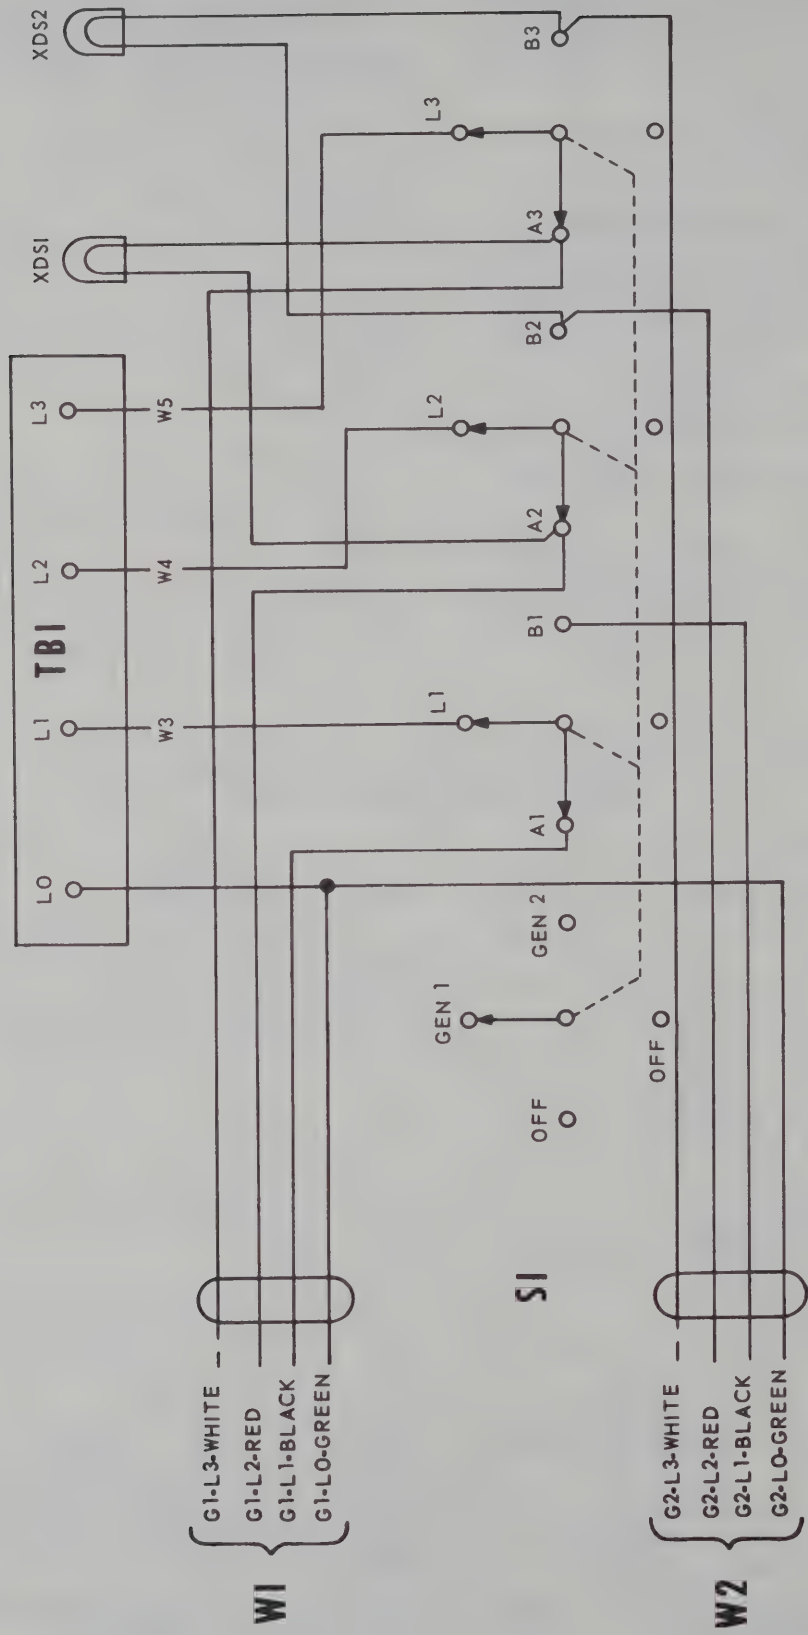

ME 6115-365-15/19-6 C2

Figure 19-6. Transfer switch wiring diagram.

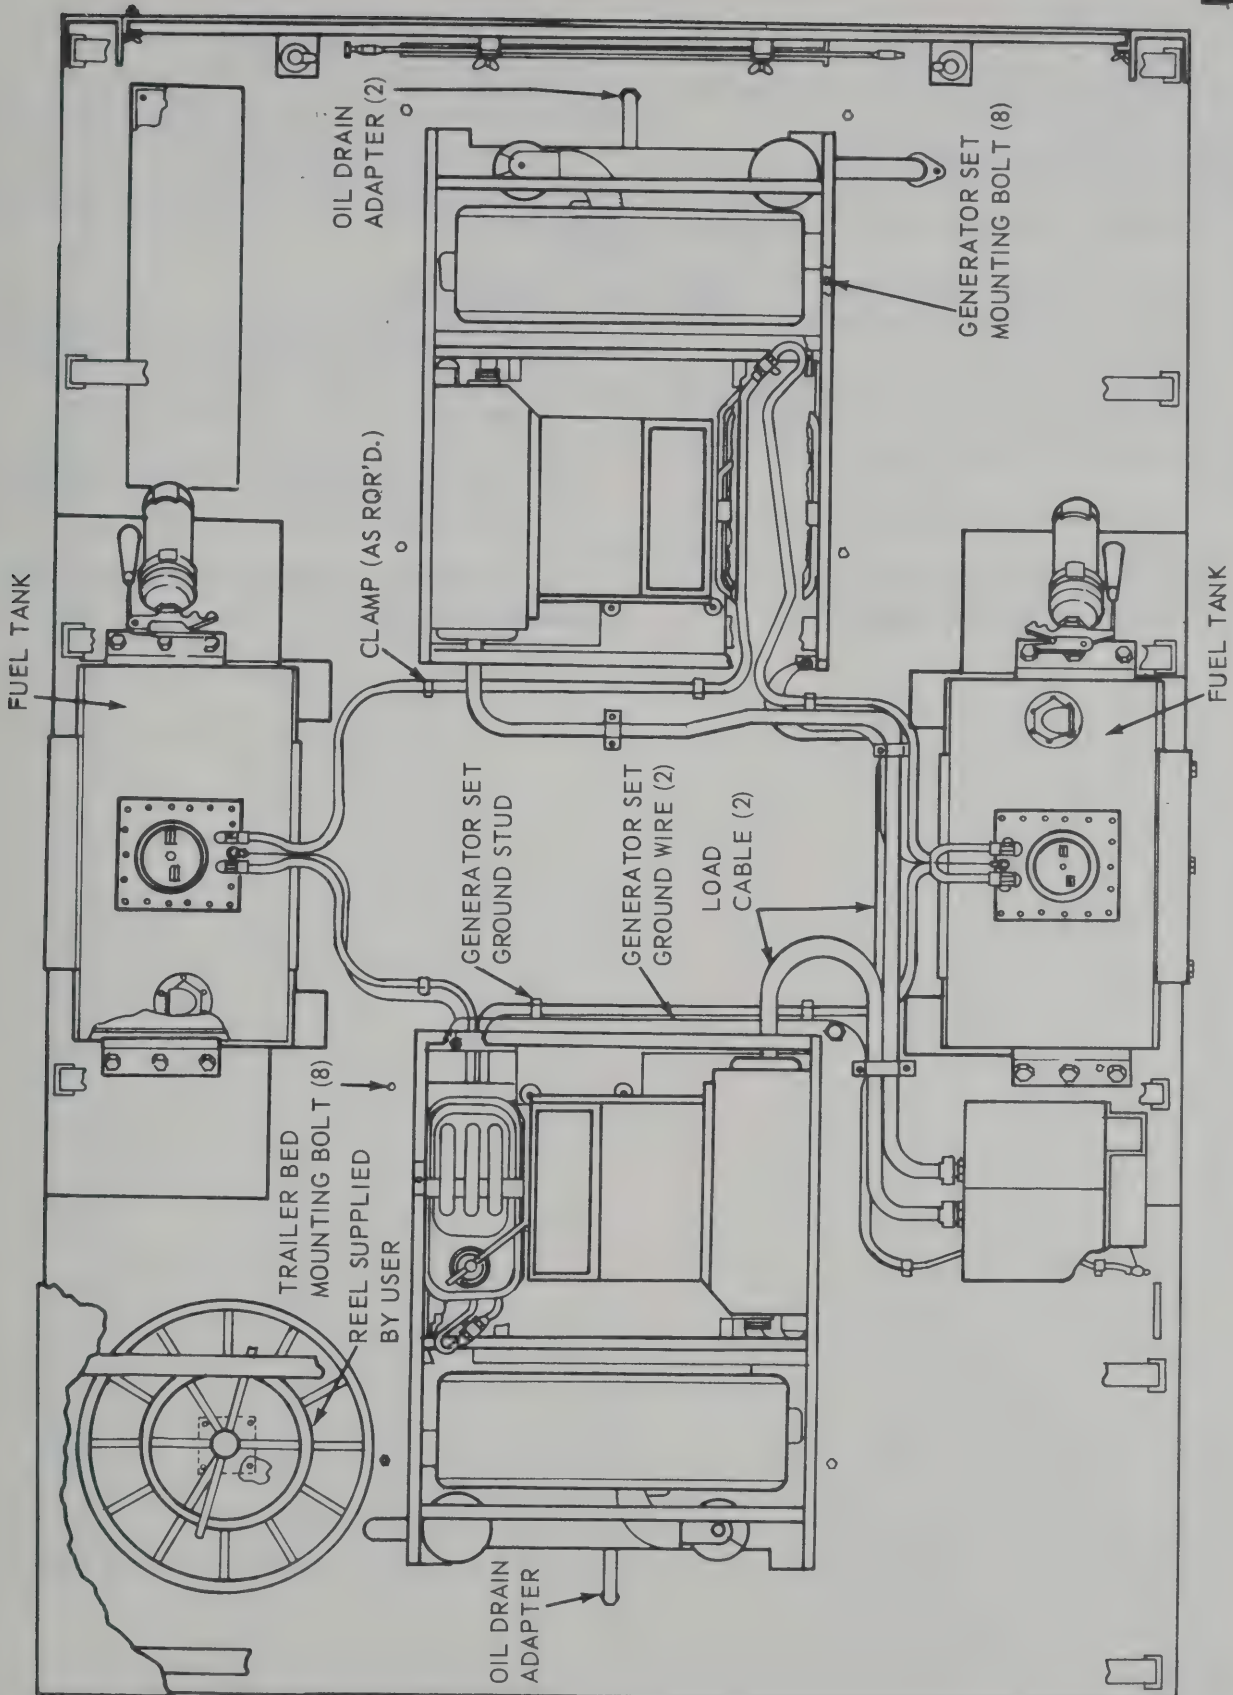

ME 6115-365-15/19-7 C2

Figure 19-7. PU-629/C overall component location diagram.

19-14. Trailer Bed

a. Removal.

(1) Remove tarpaulin, roof bows, and leg prop (para 19-10).

(2) Remove transfer switch from the trailer (para 19-11).

(3) Remove the generator sets (para 19-12).

(4) Remove the 18 bolts (9 each fuel tank) that secure the fuel tanks to the trailer and remove the fuel tanks.

(5) Remove 8 bolts from the top surface of the trailer bed and 12 bolts from the underside that secure the trailer bed gussets to the trailer.

(6) Disconnect electrical leads from the trailer lights.

(7) Remove trailer bed from the trailer.

b. Cleaning, Inspection, and Repair.

(1) Clean trailer bed with approved cleaning solvent and dry thoroughly.

(2) Inspect for broken welds, bends, dents, and any damage that prevents proper assembly of the unit. Weld cracks and breaks and straighten dents or bends where possible. Replace a trailer bed that is damaged beyond repair.

c. Installation.

(1) Install trailer bed on the trailer and secure with 12 bolts on the underside and 8 on the top. Connect wiring to trailer lights.

(2) Secure the two fuel tanks to the trailer with 18 bolts.

(3) Install the generator sets (para 19-12).

(4) Install the transfer switch (para 19-11).

(5) Install the leg prop, roof bows, and tarpaulin (para 19-10).

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS USABLE ON CODE	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
		PART I								
		REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE								
		GROUP 03 - FUEL SYSTEM								
		0306 - TANKS, LINES, FITTINGS, HEADERS								
00001										
00002										
X2 0 00003		CAP, FUEL TANK: tactical vehicle, fording MS35645-1 (96906)	EA	1					19-11	7
00004		GROUP 15 - FRAME, TOWING ATTACHMENTS, AND DRAWBARS								
00005		1501 - FRAME ASSEMBLY								
X2 0 00006	5340-999-6277	BRACKET ASSEMBLY 13214E1214 (97403)	EA	1					19-10	7
X2 0 00007		CLAMP, CABLE, DOUBLE: 1-5/16 height 132.2E3591-2 (97403)	EA	1					19-9	45
X2 0 00008		CLAMP, CABLE, SINGLE 13212E3612 (97403)	EA	2					19-9	59
X2 0 00009	2590-932-7298	CLAMP, GROUND ROD: 1.640 hole, sp 13212E3617-1 (97403)	EA	4					19-10	3
X2 0 00010		CLAMP, LOOP: double cable or tube MS21334-2 (96906)	EA	2					19-9	40
X2 0 00011	5340-914-2578	CLIP, SPRING 13214E1213-1 (97403)	EA	1					19-10	28
X2 0 00012		HOLDDOWN, REEL: 8.62 lg 13214E1426-3 (97403)	EA	1					19-9	1
X2 0 00013	7240-920-5327	HOLDER: fuel drum adapter 13212E3553-1 (97403)	EA	2					19-10	32
0 00014	5310-934-9758	NUT, PLAIN, HEXAGON: machine screw, 10-24	EA	2	*	*	*	*	19-9	44
0 00015	5310-934-9758	NUT, PLAIN, HEXAGON: machine screw, 10-24	EA	6	*	*	*	*	19-9	58
0 00016	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20	EA	1	*	*	*	*	19-10	31
0 00017	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20	EA	2	*	*	*	*	19-9	48
0 00018	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20	EA	2	*	*	*	*	19-9	62
0 00019	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4 x 20	EA	4	*	*	*	*	19-10	10
0 00020	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20	EA	8	*	*	*	*	19-10	6
0 00021	5310-984-3806	NUT, SELF-LOCKING, HEXAGON: 5/16-18	EA	4	*	*	*	*	19-10	35
0 00022	5310-984-3806	NUT, SELF-LOCKING, HEXAGON: 5/16-18	EA	6	*	*	*	*	19-9	32
X2 0 00023		NUT, SELF-LOCKING, HEXAGON: 5/16-18 MS51922-9 (96906)	EA	6					19-9	25
0 00024	5310-984-3806	NUT, SELF-LOCKING, HEXAGON: 5/16-18	EA	12	*	*	*	*	19-9	29
0 00025	5305-071-2241	SCREW, CAP, HEXAGON HEAD: 1/4-20 x 1-1/4	EA	2	*	*	*	*	19-9	46
0 00026	5305-071-2241	SCREW, CAP, HEXAGON HEAD: 1/4-20 x 1-1/4	EA	4	*	*	*	*	19-9	60
0 00027	5305-068-0502	SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4 1g	EA	1	*	*	*	*	19-10	29
0 00028	5305-068-0502	SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4 1g	EA	2	*	*	*	*	19-10	8
X2 0 00029		SCREW, CAP, HEXAGON HEAD: 5/16-18 x 3/4 MS90725-32 (96906)	EA	4					19-10	33
X2 0 00030		SCREW, CAP, HEXAGON HEAD: 5/16-18 x 3/4 1g MS90725-32 (96906)	EA	6					19-9	27
X2 0 00031		SCREW, CAP, HEXAGON HEAD: 5/16-18 x 3/4 1g MS90725-32 (96906)	EA	6					19-9	34

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS USABLE ON CODE	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00032		SCREW, CAP, HEXAGON HEAD: 5/16-18 x 3/4 lg MS90725-32 (96906)	EA	12					19-9	31
0 00033 0 00034 0 00035 X2 0 00036	5305-958-5247	SCREW, MACHINE: flat head, 1/4-20 x 1 lg	EA	8	*	*	*	*	19-10	4
	5305-984-6212	SCREW, MACHINE, PAN HEAD: 10-24 x 3/4 lg	EA	2	*	*	*	*	19-9	41
	5305-984-6212	SCREW, MACHINE, PAN HEAD: 10-24 x 3/4 lg	EA	6	*	*	*	*	19-9	55
		WASHER, FLAT, ROUND MS27183-12 (96906)	EA	6					19-9	33
0 00037 0 00038 X2 0 00039	5310-809-8546	WASHER, FLAT, ROUND: No. 10 nominal size	EA	2	*	*	*	*	19-9	43
	5310-809-8546	WASHER, FLAT, ROUND: No. 10	EA	6	*	*	*	*	19-9	57
		WASHER, FLAT, ROUND: 1/4 nominal size MS27183-11 (96906)	EA	2					19-10	30
X2 0 00040		WASHER, FLAT, ROUND: 1/4 nominal size MS27183-11 (96906)	EA	4					19-10	9
X2 0 00041		WASHER, FLAT, ROUND: 1/4 nominal size MS27183-11 (96906)	EA	8					19-10	5
X2 0 00042		WASHER, FLAT, ROUND: 1/4-20 nominal size MS27183-11 (96906)	EA	4					19-9	47
X2 0 00043		WASHER, FLAT, ROUND: 1/4-20 nominal size MS27183-11 (96906)	EA	8					19-9	61
0 00044 0 00045 0 00046 0 00047 0 00048 00049	5310-081-4219	WASHER, FLAT, ROUND: 5/16 nominal size	EA	6	*	*	*	*	19-9	26
	5310-081-4219	WASHER, FLAT, ROUND: 5/16 nominal size	EA	8	*	*	*	*	19-10	34
	5310-081-4219	WASHER, FLAT, ROUND: 5/16 nominal size	EA	12	*	*	*	*	19-9	30
	5310-045-3296	WASHER, LOCK, HELICAL: No. 10 nominal size	EA	6	*	*	*	*	19-9	56
	5310-045-3296	WASHER, LOCK: spring helical, No. 10	EA	2	*	*	*	*	19-9	42
00050		GROUP 22 - BODY, CHASSIS OR HULL, AND ACCESSORY ITEMS 2202 - ACCESSORY ITEMS								
X2 0 00051		ACCESSORY BOX 13205E4949 (97403)	EA	1					19-9	8
P C 00052	2910-066-1235	ADAPTER ASSEMBLY, FUEL DRUM 13211E7541 (97403)	EA	2	*	*	*	*	19-10	1
P C 00053	5120-265-7462	HAMMER HAND: 8 lb GGGH86TYPEX (81348)	EA	1	*	*	*	*	19-10	27
0 00054 P C 00055	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20	EA	4	*	*	*	*	19-9	11
	5975-878-3791	ROD, GROUND ASSEMBLY MILR11461TYPE (81349)	EA	2	*	*	*	*	19-10	2
0 00056 X2 0 00057	5305-068-0502	SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4 lg	EA	4	*	*	*	*	19-9	9
		WASHER, FLAT, ROUND: 1/4 nominal size MS27183-11 (96906)	EA	4					19-9	10
M 0 00058		WIRE, ELECTRICAL: No. 6 AWG, 10 ft MANUFACTURE FROM:	FT						19-9	53
P 0 00059	6145-395-8755	WIRE, ELECTRICAL: No. 6 AWG QQW343TYPE RB (81348)	FT			SEE	GRP	9501		
00060		2210 - DATA PLATES								
X2 0 00061		PLATE, IDENTIFICATION: ground terminal 13205E4918 (97403)	EA	1					19-9	39
X2 0 00062		PLATE, IDENTIFICATION: PU-6290/6 13205E4916-22 (97403)	EA	1					19-9	17

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS USABLE ON CODE	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(a) FIG. NO.	(b) ITEM NO.
00063		GROUP 29 - AUXILIARY GENERATOR AND ENGINE AND CONTROLS								
00064		2941 - EXHAUST AND TAIL PIPES								
0	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-10	EA	4	*	*	*	*	19-9	51
00065	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20	EA	2	*	*	*	*	19-9	16
00066	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4-20 x 1 lg	EA	2	*	*	*	*	19-9	14
00067	5305-068-0502	SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4 lg	EA	4	*	*	*	*	19-9	50
00068		WASHER, FLAT, ROUND: 1/4 nominal size	EA	4					19-9	15
X2 0		MS27183-11 (96906)								
00069		WASHER, FLAT, ROUND: 1/4 nominal size	EA	8						
X2 0		MS27183-11 (96906)								
00070										
00071		GROUP 40 - ELECTRIC MOTORS AND GENERATORS								
00072		4000 - GENERATOR ASSEMBLY								
X2 0		NUT, SELF-LOCKING, HEAD	EA	8					19-9	19
00073		MS51922-33 (96906)								
0	5305-782-9494	SCREW, CAP, HEXAGON HEAD: 1/2-13 x 1-3/4	EA	8	*	*	*	*	19-9	21
00074		WASHER, BEVELED: 1/2 nominal bolt size	EA	8					19-9	22
X2 0		13206E4482-2 (97403)								
00075		WASHER, FLAT, ROUND: 1/2 nominal size	EA	8					19-9	20
X2 0		MS27183-18 (96906)								
00076										
00077		GROUP 42 - ELECTRICAL EQUIPMENT								
00078		4206 - THERMOSTATIC, AUTOMATIC AND MANUAL CONTROL DEVICES								
0	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16	EA	4	*	*	*	*	19-9	38
00079	5305-269-3211	SCREW, CAP, HEXAGON HEAD: 3/8-16 x 1 lg	EA	4	*	*	*	*	19-9	36
00080	5310-809-4061	WASHER, FLAT, ROUND: 3/8 nominal size	EA	8	*	*	*	*	19-9	37
00081		4216 - MISCELLANEOUS WIRING AND FITTINGS								
00082		CLAMP, LOOP: double cable or tube	EA	2					19-10	13
X2 0		MS21334-30 (96906)								
00083										
0	5310-543-4717	NUT, PLAIN, WING: brass, 3/8-16	EA	1	*	*	*	*	19-10	18
00084		NUT, PLAIN, HEXAGON: jam, 3/8-16	EA	1					19-10	24
X2 0		MS16203-39 (96906)								
00085		NUT, PLAIN, HEXAGON: jam, 3/8-16	EA	3					19-10	22
X2 0		MS16203-39 (96906)								
00086										
0	5310-934-9758	NUT, PLAIN, HEXAGON: machine screw, No. 10-24	EA	2	*	*	*	*	19-10	14
00087	5940-688-6010	TERMINAL, LUG: Type I, Class I, No. 6-3/8	EA	4	*	*	*	*	19-10	23
00088		TERMINAL, LUG: No. 6 wire, No. 10 stud	EA	2					19-10	11
X2 0		MS20659-130 (96906)								
00089		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 3/4	EA	1					19-10	26
X2 0		MS35309-358 (96906)								
00090										
0	5305-984-6212	SCREW, MACHINE: pan head, No. 10-24 x 3/4 lg	EA	2	*	*	*	*	19-10	17
00091		STUD GROUNDING	EA	1					19-10	21
X2 0		13214E1223 (97403)								
00092		WASHER, FLAT, ELECTRIC: 3/8 nominal size	EA	4					19-10	19
X2 0		AN961-616T (88044)								
00093										
0	5310-809-8546	WASHER, FLAT, ROUND: No. 10 nominal size	EA	2	*	*	*	*	19-10	15
00094										

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
0 00095 0 00096 0 00097 00098 00099	5310-913-9776 5310-913-9776 5310-045-3296	WASHER, LOCK: flat, external tooth, 3/8 WASHER, LOCK: flat, external tooth, 3/8 WASHER, LOCK: spring helical, No. 10 GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS 7638 - PORTABLE FIRE FIGHTING EQUIPMENT	EA EA EA	1 2 2	*	*	*	*	19-10	25 20 16
P C 00100	4210-555-8837	EXTINGUISHER, FIRE MILE52031 (81349)	EA	2	*	*	*	*	19-9	4
0 00101 0 00102 X2 0 00103	5310-088-1251 5305-068-0502 5310-809-4058	NUT, SELF-LOCKING, HEXAGON: 1/4-20 SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4 1g WASHER, FLAT, ROUND: 1/4 nominal size MS27183-11 (96906)	EA EA EA	8 8 16	*	*	*	*	19-9 19-9 19-9	7 5 6
00104 00105		GROUP 95 - GENERAL USE STANDARDIZED PARTS 9501 - HARDWARE SUPPLIES AND BULK MATERIEL, COMMON								
P 0 00106	6145-395-8755	WIRE, ELECTRICAL: No. 6 AWG QQW343TYPERB (81348)	FT	AR					19-10	12

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
		PART II												
		REPAIR PARTS FOR DS, GS, AND DEPOT MAINTENANCE												
		GROUP 03 - FUEL SYSTEM												
00001														
00002		0306 - TANK, LINES, FITTINGS, HEADERS												
X2 F 00003		BRACKET, FUEL TANK 13216E7416 (97403)	EA	2									19-9	24
X2 F 00004		BRACKET, FUEL TANK 13216E7423 (97403)	EA	4									19-9	28
X2 F 00005		BRACKET, FUEL TANK 13216E7463 (97403)	EA	2									19-9	35
X2 O 00006		CAP, FUEL TANK: tactical vehicle, fording MS35645-1 (96906)	EA	1									19-11	7
X2 F 00007		ELBOW: 90 deg, flared, 5/16 x 1/2-20 SAEJ514 (81343)	EA	2									19-11	1
X2 F 00008		FILLER, NECK 13216E7574 (97403)	EA	1									19-11	10
X2 F 00009		FILTER, FUEL: 15.75 lg 13216E7570-2 (97403)	EA	2									19-11	12
X2 F 00010		GAGE LIQUID LEVEL: 21.25 lg 13216E7459-3 (97403)	EA	1									19-11	4
X2 F 00011		GASKET 13216E7460 (97403)	EA	1									19-11	6
X2 F 00012		GASKET 13216E7575 (97403)	EA	1									19-11	11
X2 F 00013		MOUNT GAGE 13216E7458 (97403)	EA	1									19-11	5
X2 F 00014		PLUG, SQUARE HEAD: pipe thread, steel, 1/4 NPT MS20913-28 (96906)	EA	1									19-11	13
X2 F 00015		SCREW, MACHINE: pan head, No. 10-32 x 5/8 in. lg MS35207-264 (96906)	EA	6									19-11	3
X2 F 00016		SCREW, MACHINE: pan head, No. 10-32 x 5/8 MS35207-264 (96906)	EA	18									19-11	8
X2 F 00017		TANK, FUEL 13216E7573 (97403)	EA	1									19-11	14
X2 F 00018		WASHER, LOCK: spring helical, No. 10 MS35338-43 (96906)	EA	6									19-11	2
X2 F 00019		WASHER, LOCK: spring helical, No. 10 MS35338-43 (96906)	EA	18									19-11	9
00020		GROUP 15 - FRAME, TOWING ATTACHMENTS, AND DRAWBARS												
00021		1501 - FRAME ASSEMBLY												
X2 O 00022	5340-999-6277	BRACKET ASSEMBLY 13214E1214 (97403)	EA	1									19-10	7
X2 O 00023		CLAMP, CABLE, DOUBLE: 1-5/16 height 13212E3591-2 (97403)	EA	1									19-9	45
X2 O 00024		CLAMP, CABLE, SINGLE 13212E3612 (97403)	EA	2									19-9	59

(1)	(2)	(3)	(4)	(5)	(6)			(7)			(8)	(9)	(10)		
SMR CODE	FEDERAL STOCK NUMBER	DESCRIPTION	USABLE ON CODE	UNIT OF MEAS	QTY INC IN UNIT	30-DAY DS MAINT ALLOWANCE			30-DAY GS MAINT ALLOWANCE			1-YR ALW PER 100 EQUIP CNTGY	DEPOT MAINT ALW PER 100 EQUIP	ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
		REF NUMBER & MFR CODE				1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 0 00025	2590-932-7298	CLAMP, GROUND ROD: 1.640 hole, sp 13212E3617-1 (97403)		EA	4									19-10	3
X2 0 00026		CLAMP, LOOP: double cable or tube MS21334-2 (96906)		EA	2									19-9	40
X2 F 00027		CLAMP, LOOP: Type II, Class A and B MS21104D10 (96906)		EA	6									19-9	54
X2 0 00028	5340-914-2578	CLIP, SPRING 13214E1213-1 (97403)		EA	1									19-10	28
X2 0 00029		HOLDDOWN, REEL: 8.62 lg 13214E1426-3 (97403)		EA	1									19-9	1
X2 0 00030	7240-920-5327	HOLDER: fuel drum adapter 13212E3553-1 (97403)		EA	2									19-10	32
0 00031	5310-934-9758	NUT, PLAIN, HEXAGON: machine screw, 10-24		EA	2	*	*	*	*	*	*	*	*	19-9	44
0 00032	5310-934-9758	NUT, PLAIN, HEXAGON: machine screw, 10-24		EA	6	*	*	*	*	*	*	*	*	19-9	58
0 00033	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20		EA	1	*	*	*	*	*	*	*	*	19-10	31
0 00034	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20		EA	2	*	*	*	*	*	*	*	*	19-9	48
0 00035	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20		EA	2	*	*	*	*	*	*	*	*	19-9	62
0 00036	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4 x 20		EA	4	*	*	*	*	*	*	*	*	19-10	10
0 00037	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20		EA	8	*	*	*	*	*	*	*	*	19-10	6
0 00038	5310-984-3806	NUT, SELF-LOCKING, HEXAGON: 5/16-18		EA	4	*	*	*	*	*	*	*	*	19-10	35
0 00039	5310-984-3806	NUT, SELF-LOCKING, HEXAGON: 5/16-18		EA	6	*	*	*	*	*	*	*	*	19-9	32
X2 0 00040		NUT, SELF-LOCKING, HEXAGON: 5/16-18 MS51922-9 (96906)		EA	6									19-9	25
0 00041	5310-984-3806	NUT, SELF-LOCKING, HEXAGON: 5/16-18		EA	12	*	*	*	*	*	*	*	*	19-9	29
0 00042	5305-071-2241	SCREW, CAP, HEXAGON HEAD: 1/4-20 x 1-1/4		EA	2	*	*	*	*	*	*	*	*	19-9	46
0 00043	5305-071-2241	SCREW, CAP, HEXAGON HEAD: 1/4-20 x 1-1/4		EA	4	*	*	*	*	*	*	*	*	19-9	60
0 00044	5305-068-0502	SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4 lg		EA	1	*	*	*	*	*	*	*	*	19-10	29
0 00045	5305-068-0502	SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4 lg		EA	2	*	*	*	*	*	*	*	*	19-10	8
X2 0 00046		SCREW, CAP, HEXAGON HEAD: 5/16-18 x 3/4 MS90725-32 (96906)		EA	4									19-10	33
X2 0 00047		SCREW, CAP, HEXAGON HEAD: 5/16-18 x 3/4 lg MS90725-32 (96906)		EA	6									19-9	27
X2 0 00048		SCREW, CAP, HEXAGON HEAD: 5/16-18 x 3/4 lg MS90725-32 (96906)		EA	6									19-9	34
X2 0 00049		SCREW, CAP, HEXAGON HEAD: 5/16-18 x 3/4 lg MS90725-32 (96906)		EA	12									19-9	31
0 00050	5305-958-5247	SCREW, MACHINE: flat head, 1/4-20 x 1 lg		EA	8	*	*	*	*	*	*	*	*	19-10	4
0 00051	5305-984-6212	SCREW, MACHINE, PAN HEAD: 10-24 x 3/4 lg		EA	2	*	*	*	*	*	*	*	*	19-9	41
0 00052	5305-984-6212	SCREW, MACHINE, PAN HEAD: 10-24 x 3/4 lg		EA	6	*	*	*	*	*	*	*	*	19-9	55


(1)	(2)	(3)	(4)	(5)	(6)			(7)			(8)	(9)	(10)		
SMR CODE	FEDERAL STOCK NUMBER	DESCRIPTION REF NUMBER & MFR CODE	USABLE ON CODE	UNIT OF MEAS	QTY INC IN UNIT	30-DAY DS MAINT ALLOWANCE			30-DAY GS MAINT ALLOWANCE			1-YR ALW PER 100 EQUIP CNTGY	DEPOT MAINT ALW PER 100 EQUIP	ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
						1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 O 00053		WASHER, FLAT, ROUND MS27183-12 (96906)		EA	6									19-9	33
O 00054	5310-809-8546	WASHER, FLAT, ROUND: No. 10 nominal size		EA	2	*	*	*	*	*	*	*	*	19-9	43
O 00055	5310-809-8546	WASHER, FLAT, ROUND: No. 10 nominal size		EA	6	*	*	*	*	*	*	*	*	19-9	57
X2 O 00056		WASHER, FLAT, ROUND: 1/4 nominal size MS27183-11 (96906)		EA	2									19-10	30
X2 O 00057		WASHER, FLAT, ROUND: 1/4 nominal size MS27183-11 (96906)		EA	4									19-10	9
X2 O 00058		WASHER, FLAT, ROUND: 1/4 nominal size MS27183-11 (96906)		EA	8									19-10	5
X2 O 00059		WASHER, FLAT, ROUND: 1/4-20 nominal size MS27183-11 (96906)		EA	4									19-9	47
X2 O 00060		WASHER, FLAT, ROUND: 1/4-20 nominal size MS27183-11 (96906)		EA	8									19-9	61
O 00061	5310-081-4219	WASHER, FLAT, ROUND: 5/16 nominal size		EA	6	*	*	*	*	*	*	*	*	19-9	26
O 00062	5310-081-4219	WASHER, FLAT, ROUND: 5/16 nominal size		EA	8	*	*	*	*	*	*	*	*	19-10	34
O 00063	5310-081-4219	WASHER, FLAT, ROUND: 5/16 nominal size		EA	12	*	*	*	*	*	*	*	*	19-9	30
O 00064	5310-045-3296	WASHER, LOCK, HELICAL: No. 10 nominal size		EA	6	*	*	*	*	*	*	*	*	19-9	56
O 00065	5310-045-3296	WASHER, LOCK: spring helical, No. 10		EA	2	*	*	*	*	*	*	*	*	19-9	42
O 00066		GROUP 18 - BODY, CAB, HOOD AND HULL													
O 00067		1810 - CARGO BODY													
X2 DR 00068	2330-141-8052	TRAILER, FLAT BED 13205E5157 (97403)		EA	1									19-9	12
O 00069		GROUP 22 - BODY, CHASSIS OR HULL, AND ACCESSORY ITEMS													
O 00070		2202 - ACCESSORY ITEMS													
X2 O 00071		ACCESSORY, BOX 13205E4949 (97403)		EA	1									19-9	8
P C 00072	2910-066-1235	ADAPTER ASSEMBLY, FUEL DRUM 13211E7541 (97403)		EA	2	*	*	2	*	*	2	10	10	19-10	1
P C 00073	5120-265-7462	HAMMER HAND: 8 lb GGGH86TYPEX (81348)		EA	1	*	*	2	*	*	2	10	10	19-10	27
X2 F 00074		HOSE ASSEMBLY: 5/16 od x 112 MS28741-5-1120 (96906)		EA	2									19-9	3
X2 F 00075		HOSE ASSEMBLY: 5/16 od x 96 in. lg MS28741-5-0960 (96906)		EA	2									19-9	2
O 00076	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20		EA	4	*	*	*	*	*	*	*	*	19-9	11
P C 00077	5975-878-3791	ROD, GROUND ASSEMBLY MLRL1461TYPE (81349)		EA	2	*	*	2	*	*	2	10	10	19-10	2
O 00078	5305-068-0502	SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4 lg		EA	4	*	*	*	*	*	*	*	*	19-9	9
X2 O 00079		WASHER, FLAT, ROUND: 1/4 nominal size MS27183-11 (96906)		EA	4									19-9	10
M O 00080		WIRE, ELECTRICAL: No. 6 AWG, 10 ft MANUFACTURE FROM:		FT										19-9	53
P O 00081	6145-395-8755	WIRE, ELECTRICAL: No. 6 AWG QQW343TYPEB (81348)		FT					SEE GRP	9501					

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
00082		2210 - DATA PLATES												
X2 O 00083		PLATE, IDENTIFICATION: ground terminal 13205E4918 (97403)	EA	1									19-9	39
X2 O 00084		PLATE, IDENTIFICATION: PU-6290/6 13205E4916-22 (97403)	EA	1									19-9	17
X2 F 00085		PLATE, INFORMATION WIRING DIAGRAM 13212E3587 (97403)	EA	1										
00086		GROUP 29 - AUXILIARY GENERATOR AND ENGINE AND CONTROLS												
00087		2935 - ENGINE FUEL TANK												
X2 F 00088		TANK ASSEMBLY, FUEL 13216E7417 (97403)	EA	2									19-9	23
00089		2941 - EXHAUST AND TAIL PIPES												
P2 F 00090	6115-947-3331	EXHAUST TUBE 13214E1486 (97403)	EA	1	*	*	*	*	*	*	2	4	19-9	49
P F 00091	6115-947-3335	EXHAUST TUBE 13214E1487 (97403)	EA	1	*	*	*	*	*	*	2	4	19-9	13
X2 F 00092		NUT PLATE, REEL BOLDDOWN 13205E4948 (97403)	EA	1									19-9	52
O 00093	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-10	EA	4	*	*	*	*	*	*	*	*	19-9	51
O 00094	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20	EA	2	*	*	*	*	*	*	*	*	19-9	16
O 00095	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4-20 x 1 lg	EA	2	*	*	*	*	*	*	*	*	19-9	14
O 00096	5305-058-0502	SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4 lg	EA	4	*	*	*	*	*	*	*	*	19-9	50
X2 O 00097		WASHER, FLAT, ROUND: 1/4 nominal size MS27183-11 (96906)	EA	4									19-9	15
X2 O 00098		WASHER, FLAT, ROUND: 1/4 nominal size MS27183-11 (96906)	EA	8										
00099		GROUP 40 - ELECTRIC MOTORS AND GENERATORS												
00100		4000 - GENERATOR ASSEMBLY												
X2 FR 00101	6115-017-8240	GENERATOR SET: SF-5.0-MD MILG52279TYPE1 (81349)	EA	2									19-9	18
X2 O 00102		NUT, SELF-LOCKING, HEAD MS51922-33 (96906)	EA	8									19-9	19
O 00103	5305-782-9494	SCREW, CAP, HEXAGON HEAD: 1/2-13 x 1-3/4	EA	8	*	*	*	*	*	*	*	*	19-9	21
X2 O 00104		WASHER, BEVELED: 1/2 nominal bolt size 13206E4482-2 (97403)	EA	8									19-9	22
X2 O 00105		WASHER, FLAT, ROUND: 1/2 nominal size MS27183-18 (96906)	EA	8									19-9	20
00106		GROUP 42 - ELECTRICAL EQUIPMENT												
00107		4206 - THERMOSTATIC, AUTOMATIC AND MANUAL CONTROL DEVICES												
X2 F 00108		BOX, DISTRIBUTION 13212E3602 (97403)	EA	1									19-8	17
X2 F 00109		CABLE 13212E3607 (97403)	EA	1									19-8	15
X2 F 00110		CABLE 13212E3608 (97403)	EA	1									19-8	16
X2 F 00111		COVER 13212E3603 (97403)	EA	1									19-8	32

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 F 00112		GASKET 13212E3610 (97403)	EA	1									19-8	18
X2 F 00113		LEAD, ELECTRICAL 13212E3609-3 (97403)	EA	1									19-8	12
X2 F 00114		LEAD, ELECTRICAL: No. W3 13212E3609-1 (97403)	EA	1									19-8	10
X2 F 00115		LEAD, ELECTRICAL: No. W4 13212E3609-2 (97403)	EA	1									19-8	11
2 F 0116		LIGHT AND WIRE: 12 in. lg 13212E3581-1 (97403)	EA	2									19-8	1
X2 F 00117		NUT, PLAIN, HEXAGON: brass, 1/4-28 MS51970-1 (96906)	EA	9									19-8	28
X2 F 00118		NUT, PLAIN, HEXAGON: jam, 1/4-20 MS16203-37 (96906)	EA	8									19-8	24
X2 F 00119		NUT, PLAIN, HEXAGON: machine screw, No. 10-24 MS35649-202 (96906)	EA	6									19-8	27
X2 F 00120		NUT, SELF-LOCKING, HEXAGON: 3/8-16 MS51922-17 (96906)	EA	4									19-8	8
0 00121 X2 F 00122	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16	EA	4	*	*	*	*	*	*	*	*	19-9	38
X2 F 00123		PACKING, PREFORMED "O" RING MS28775-111 (96906)	EA	1									19-8	31
X2 F 00124		PACKING, PREFORMED "O" RING MS28775-013 (96906)	EA	4									19-8	3
X2 F 00125		PACKING, PREFORMED "O" RING MS28775-132 (96906)	EA	2									19-8	13
X2 F 00126		PLATE INFORMATION WIRING DIAGRAM 13212E3587 (97403)	EA	1				SEE GRP	2210					
0 00126 X2 F 00127	5305-269-3211	SCREW, CAP, HEXAGON HEAD: 3/8-16 x 1 lg	EA	4	*	*	*	*	*	*	*	*	19-9	36
X2 F 00128		SCREW, MACHINE: pan head, No. 10-24 x 1 lg MS35206-267 (96906)	EA	6									19-8	21
X2 F 00129		SCREW, MACHINE: pan head, No. 10-32 x 1/2 MS35207-263 (96906)	EA	16									19-8	4
X2 F 00130		SCREW, MACHINE: pan head, 1/4-28 x 7/16 MS35215-68 (96906)	EA	9									19-8	9
X2 F 00131		SCREW, MACHINE: pan head, 3/8-16 x 2 lg MS35206-315 (96906)	EA	4									19-8	2
X2 F 00132	5930-829-3243	STUFFING TUBE 13212E3582-20 (97403)	EA	2									19-8	14
X2 F 00133		SWITCH, ROTARY: 60 amp 13205E5023 (97403)	EA	1	*	*	*	*	*	*	2	2	19-8	30
X2 F 00134		TERMINAL BOARD 13212E3606 (97403)	EA	1									19-8	19
X2 F 00135		TERMINAL LOAD: 3-3/16 in. lg 13208E5820-6 (97403)	EA	4									19-8	20
X2 F 00136		TERMINAL, LUG: size 22-18 stud, 1/4 in. lg MS25036-150 (96906)	EA	4										
X2 F 00136		WASHER, FLAT, ROUND: No. 10 nominal size MS27183-8 (96906)	EA	12									19-8	22


(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION			
						(a)	(b)	(c)	(a)	(b)	(c)			(a) FIG. NO.	(b) ITEM NO.		
						1-20	21-50	51-100	1-20	21-50	51-100						
X2 F 00137	5310-809-4061	WASHER, FLAT, ROUND: No. 10 nominal size MS27183-8 (96906)		EA	16										19-8	6	
0 00138 X2 F 00139		WASHER, FLAT, ROUND: 3/8 nominal size		EA	8	*	*	*	*	*	*	*	*		19-9	37	
X2 F 00140		WASHER, FLAT, ROUND: 3/8 nominal size MS27183-14 (96906)		EA	8										19-8	7	
X2 F 00141		WASHER, LOCK: flat, external tooth, 1/4 lg MS35335-89 (96906)		EA	9										19-8	29	
X2 F 00142		WASHER, LOCK: flat, internal tooth, 1/4 lg MS35333-108 (96906)		EA	4										19-8	23	
X2 F 00143		WASHER, LOCK: spring helical, No. 10 MS35338-43 (96906)		EA	6										19-8	26	
X2 F 00144		WASHER, LOCK: spring helical, No. 10 MS35338-43 (96906)		EA	16										19-8	5	
X2 F 00145		WASHER, LOCK: spring helical, 1/4 lg MS35338-101 (96906)		EA	8										19-8	25	
00145		4216 - MISCELLANEOUS WIRING AND FITTINGS															
X2 O 00146		CLAMP, LOOP: double cable or tube MS21334-30 (96906)		EA	2											19-10	13
0 00147 X2 O 00148	5310-543-4717	NUT, PLAIN, WING: brass, 3/8-16		EA	1	*	*	*	*	*	*	*	*		19-10	18	
		NUT, PLAIN, HEXAGON: jam, 3/8-16 MS16203-39 (96906)		EA	1										19-10	24	
		NUT, PLAIN, HEXAGON: jam, 3/8-16 MS16203-39 (96906)		EA	3										19-10	22	
0 00150	5310-934-9758	NUT, PLAIN, HEXAGON: machine screw, No. 10-24		EA	2	*	*	*	*	*	*	*	*		19-10	14	
0 00151	5940-688-6010	TERMINAL, LUG: Type I, Class 1, No. 6-3/8		EA	4	*	*	*	*	*	*	*	*		19-10	23	
X2 O 00152		TERMINAL, LUG: No. 6 wire, No. 10 stud MS20659-130 (96906)		EA	2										19-10	11	
X2 O 00153		SCREW, CAP, HEXAGON HEAD: 3/8-16 x 3/4 MS35309-358 (96906)		EA	1										19-10	26	
0 00154	5305-984-6212	SCREW, MACHINE: pan head, No. 10-24 x 3/4 lg		EA	2	*	*	*	*	*	*	*	*		19-10	17	
X2 O 00155		STUD GROUNDING 1321481223 (97403)		EA	1										19-10	21	
X2 O 00156		WASHER, FLAT, ELECTRIC: 3/8 nominal size AN961-616T (88044)		EA	4										19-10	19	
0 00157	5310-809-8546	WASHER, FLAT, ROUND: No. 10 nominal size		EA	2	*	*	*	*	*	*	*	*		19-10	15	
0 00158	5310-913-9776	WASHER, LOCK: flat, external tooth, 3/8		EA	1	*	*	*	*	*	*	*	*		19-10	25	
0 00159	5310-913-9776	WASHER, LOCK: flat, external tooth, 3/8		EA	2	*	*	*	*	*	*	*	*		19-10	20	
0 00160 00161	5310-045-3296	WASHER, LOCK: spring helical, No. 10		EA	2	*	*	*	*	*	*	*	*		19-10	16	
00162		GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS															
		7638 - PORTABLE FIRE FIGHTING EQUIPMENT															
P C 00163	4210-555-8837	EXTINGUISHER, FIRE MILE52031 (81349)		EA	2	*	*	2	*	*	2	10	10		19-9	4	
0 00164	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20		EA	8	*	*	*	*	*	*	*	*		19-9	7	

(1)	(2)	(3)	(4)	(5)	(6)			(7)			(8)	(9)	(10)		
SMR CODE	FEDERAL STOCK NUMBER	DESCRIPTION REF NUMBER & MFR CODE	USABLE ON CODE	UNIT OF MEAS	QTY INC IN UNIT	30-DAY DS MAINT ALLOWANCE			30-DAY GS MAINT ALLOWANCE			1-YR ALW PER 100 EQUIP CNTGY	DEPOT MAINT ALW PER 100 EQUIP	ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
0 00165	5305-068-0502	SCREW, CAP, HEXAGON HEAD: 1/4-20 x 3/4 lg		EA	8	*	*	*	*	*	*	*	*	19-9	5
X2 0 00166	5310-809-3078	WASHER, FLAT, ROUND: 1/4 nominal size MS27183-11 (96906)		EA	16									19-9	6
00167		GROUP 95 - GENERAL USE STANDARDIZED PARTS													
00168		9501 - HARDWARE SUPPLIES AND BULK MATERIEL, COMMON													
X2 0 00169	6145-395-8755	WIRE, ELECTRICAL: No. 6 AWG QQW343TYPERB (81348)		FT	AR									19-10	12

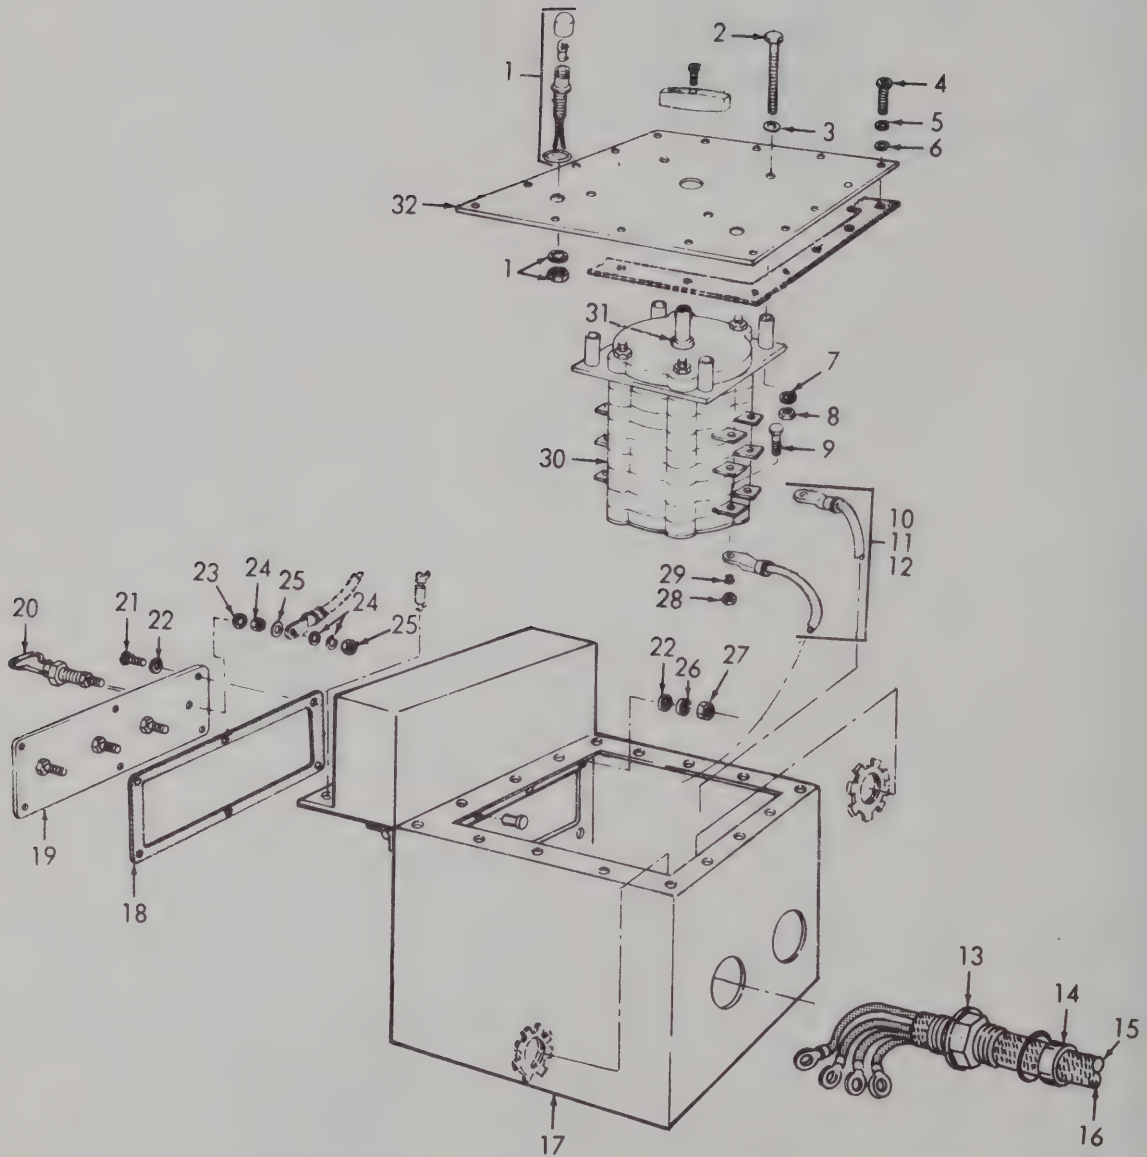





ME 6115-365-15/19-8, C2

Figure 19-8. Generator transfer switch.

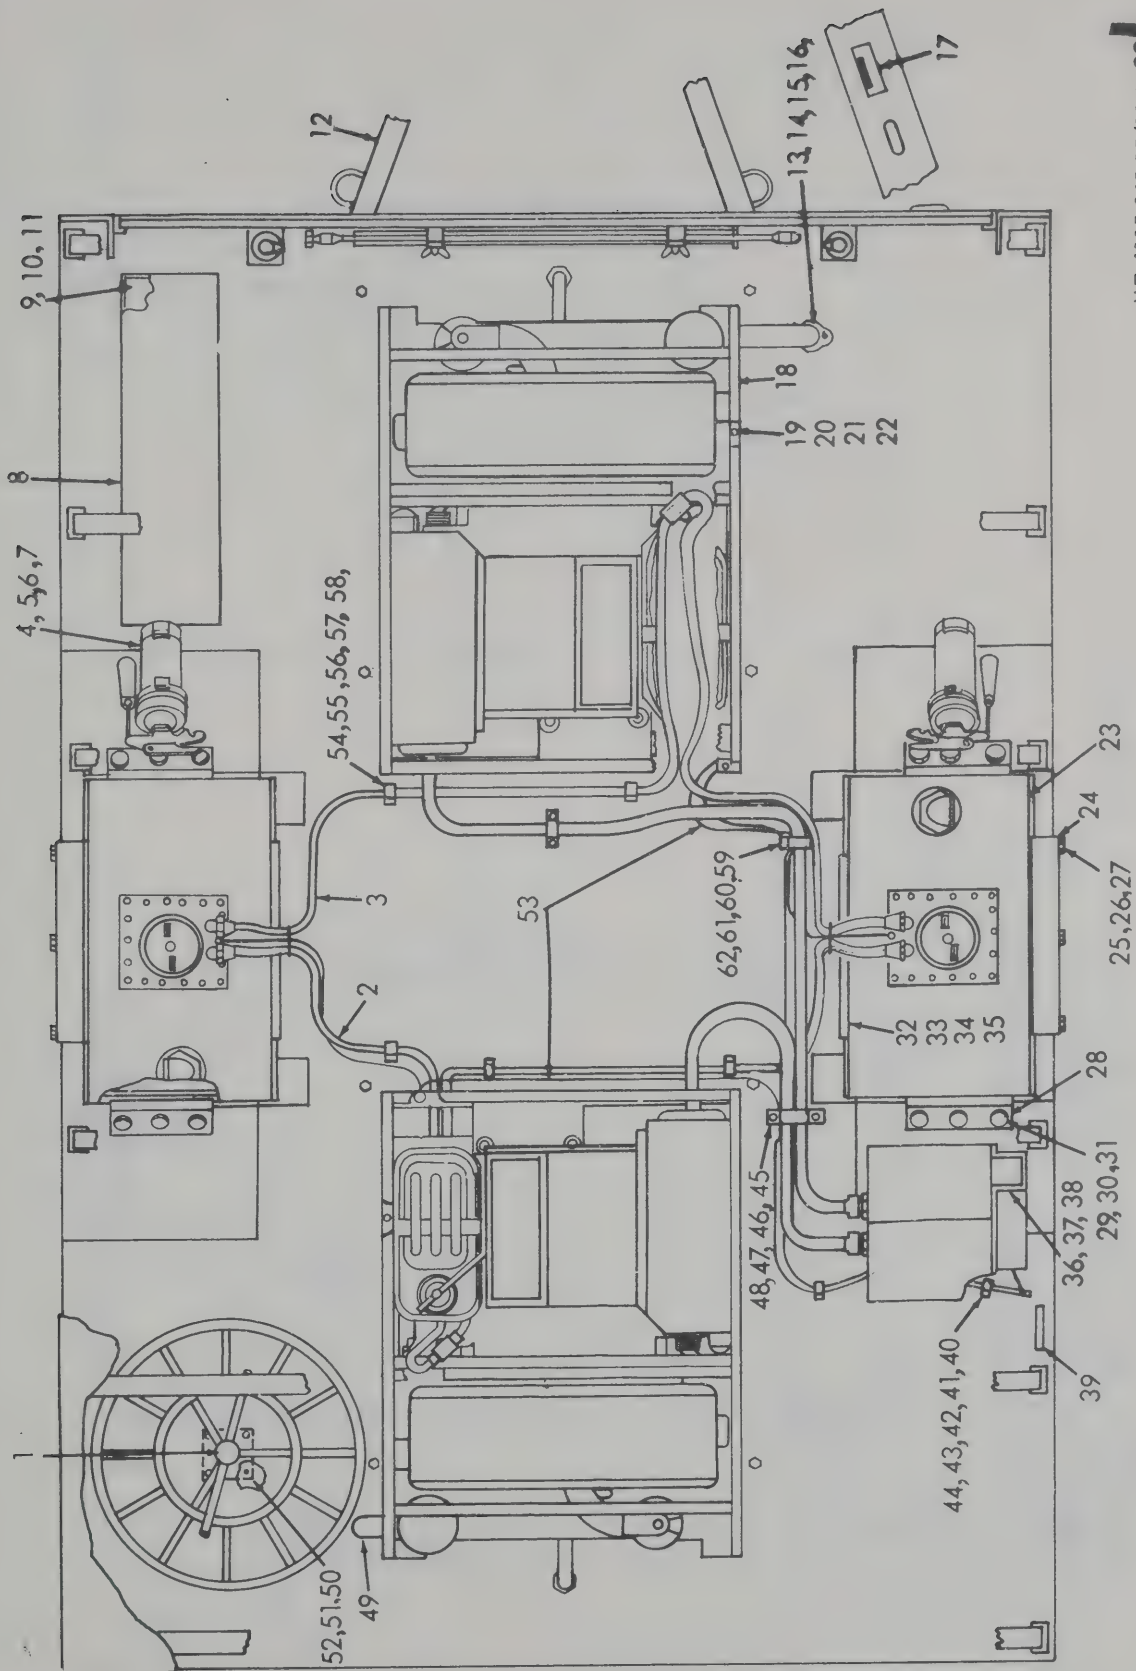


ME 6115-365-15/19-9, C2

Figure 19-9. Power unit components.

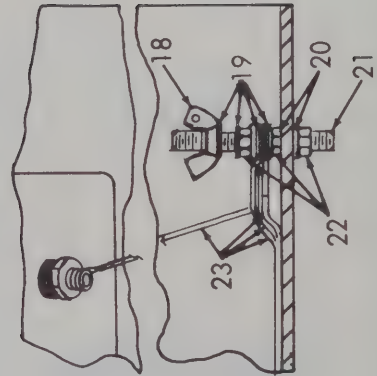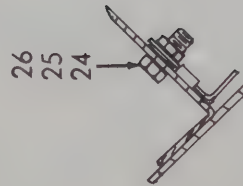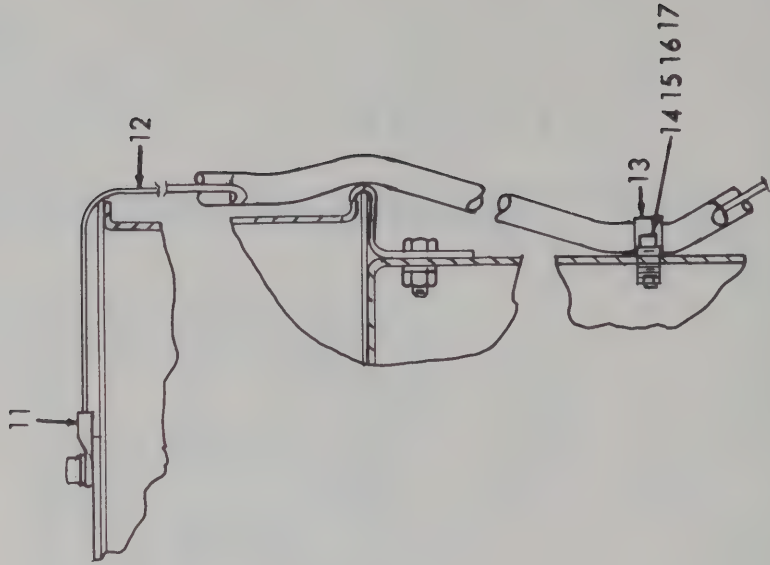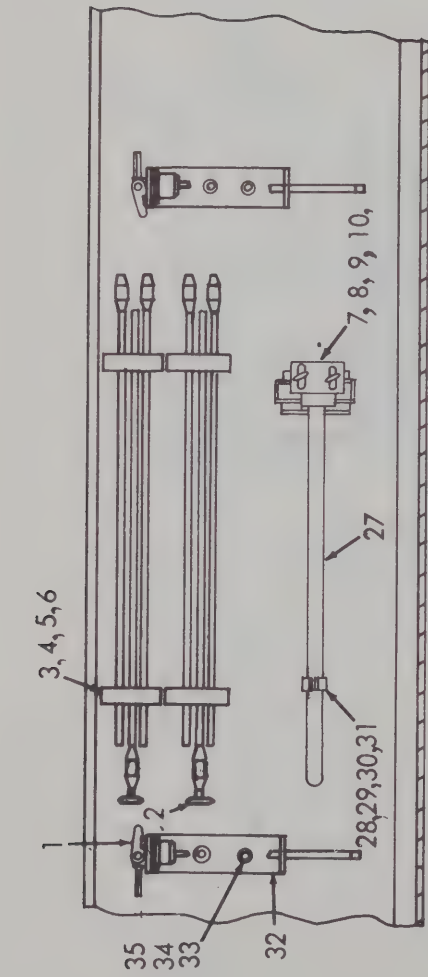

ME 6115-365-15/19-10, C2

Figure 19-10. Detail components.

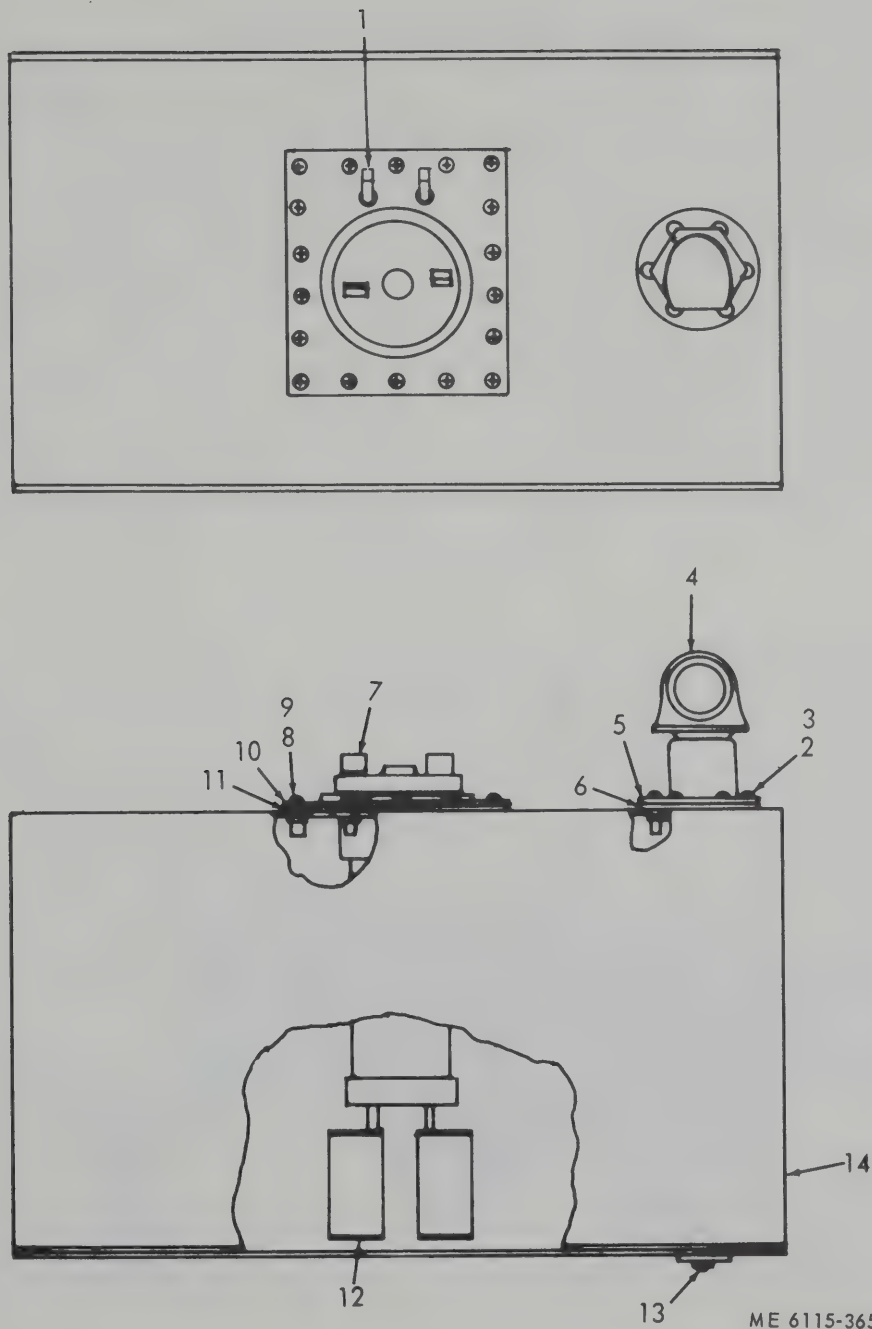

ME 6115-365-15/19-11, C2

Figure 19-11. Fuel tank components.

CHAPTER 20

GENERATOR SET, PU-631/G, FSN 6115-059-5172

Section I. DESCRIPTION AND DATA

20-1. Description

a. General. The trailer mounted generator set, PU-631/G, consists of two 5 kw, Model SF 5.0 military design generators mounted on a modified 1 1/2-ton, 2-wheel cargo trailer, Model M-103-A3, (figures 20-1 and 20-2). Brackets, racks, holders, and platforms are provided for transporting and installing communications equipment. Table 20-1 lists components of the PU-631/G generator set.

b. Generators. Each Model SF 5.0, 5 kw generator is powered by a directly-coupled, 2-cylinder, 10 hp, military standard model 2A042-1 gasoline engine. For description, operation, and maintenance of the genera-

tors, refer to TM 5-6115-332-12. A power transfer switch is provided for connecting the generators to a common load.

c. Engines. For description, operation, and maintenance information not covered in TM 5-6115-332-12, refer to TM 5-2805-258-14.

d. Trailers. For description and maintenance of the trailer chassis, refer to TM 9-2330-213-14.

e. Lubrication. For lubrication instructions for the gasoline engines, refer to LO 5-2805-258-14; the trailer lubrication information is contained in LO 9-2330-213-12.


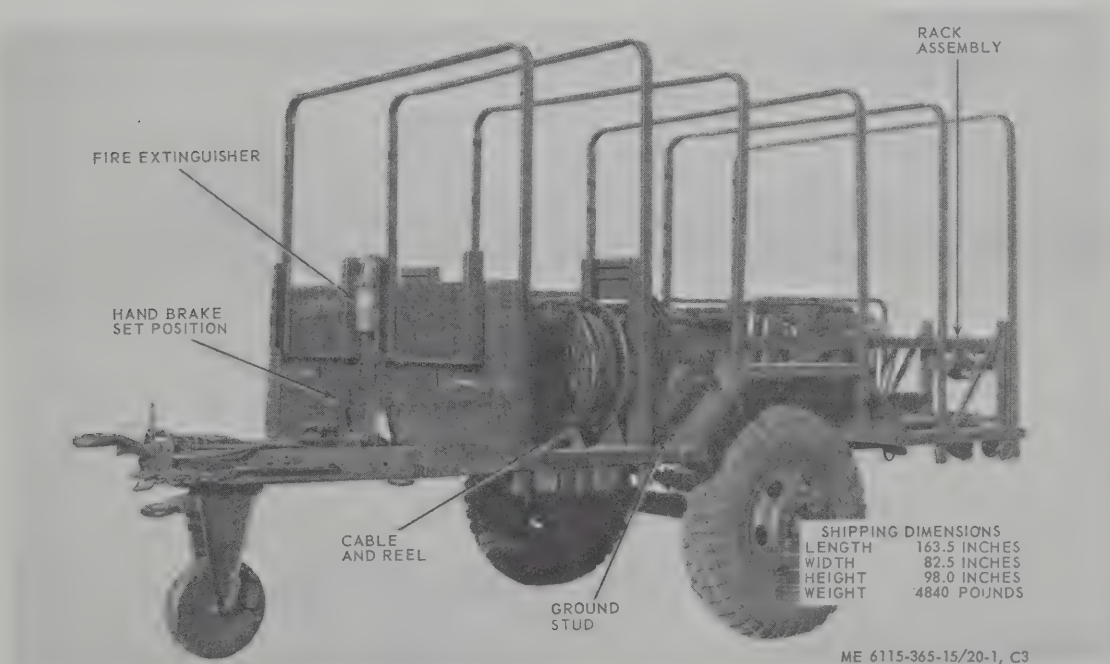


Figure 20-1. PU-631/G left front, 3/4 view

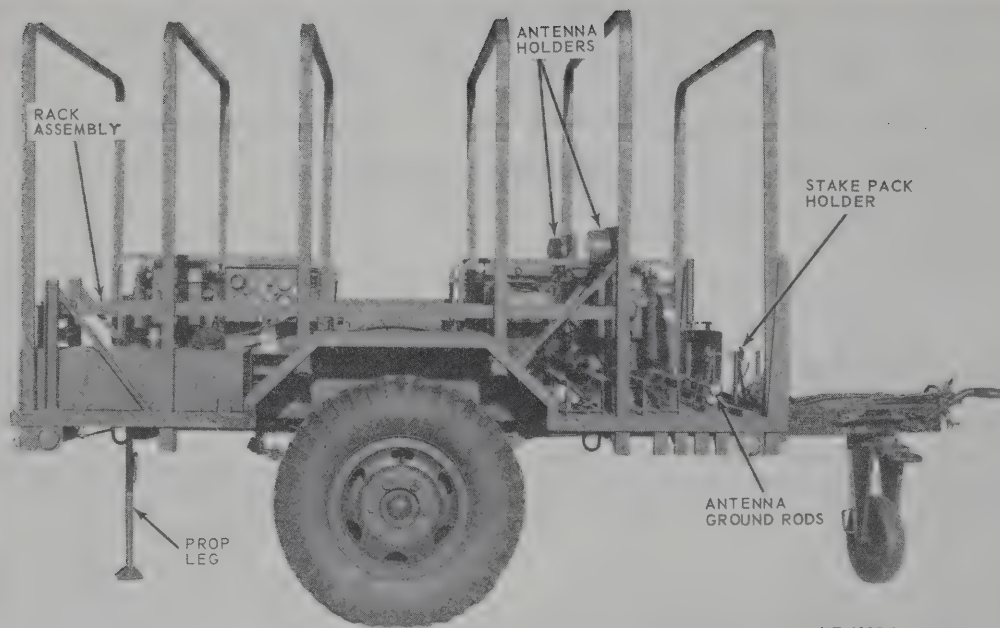

ME 6115-365-15/20-2, C3

Figure 20-2. PU-631/G right side

20-2. Tabulated Data

Table 20-1 lists components for the PU- 631/G generator set.

Table 20-1. PU-631/G components.

FSN	QTY	Nomenclature
4210-555-8837	1	Fire extinguisher
6115-017-8240	2	Generator, 5 kw, Model SF 5.0 MD
5975-928-8865	2	Ground rod, 6 ft.
5975-878-3791	2	Ground rod w/attachments
2590-318-6691	1	Leg prop assembly, trailer
5120-251-4489	1	Sledge hammer
2330-141-8052	1	Trailer, M103-A3

Section II. OPERATING INSTRUCTIONS

20-3. Setting-Up Instructions

a. Leveling.

(1) Locate the trailer on as level a surface as possible in order for the generators to operate efficiently.

(2) Set brake and block wheels securely

to prevent any movement. Operate hand-brake at weekly intervals to insure freedom of movement.

(3) Pull leg prop down and adjust length for firm contact with ground.

WARNING

Wheels must be blocked, brakes set, and leg prop down in support position before attempting to roll up the tarpaulin and before starting to assemble or set up equipment for operation.

b. Preparation for Starting.

(1) Remove canvas tarpaulin, roof bows, splash shield, and racks.

(2) Remove all loose auxiliary items that might block air flow through the trailer and around the generator sets.

CAUTION

It is of foremost importance that there be free circulation of air around the generator sets at all times during operation.

c. Grounding**WARNING**

Never operate the generator set until it has been properly grounded. Electrical defects in the loadlines or equipment can cause death by electrocution.

(1) The ground may be any of three methods, depending on the location and the terrain.

(a) A ground rod driven to a depth of 8 feet.

(b) An underground metallic water piping system.

(c) A metal plate (9 square ft.) buried to a depth of 4 feet.


(2) The ground lead must be No. 6 AWG copper wire bolted or clamped to the rod, plate, or piping system.

(3) Connect the other end of the ground lead to the trailer ground terminal.

d. Servicing. Service the generators as described in TM 5-6115-332-12. Install the engine oil drain hoses. Connect the load lines to the proper terminals on the power transfer switchbox (fig. 20-3).

20-4. Starting**WARNING**

Never operate the generator set in an enclosed area unless exhaust gases are piped outside. Inhalation of exhaust fumes may result in serious illness or death.

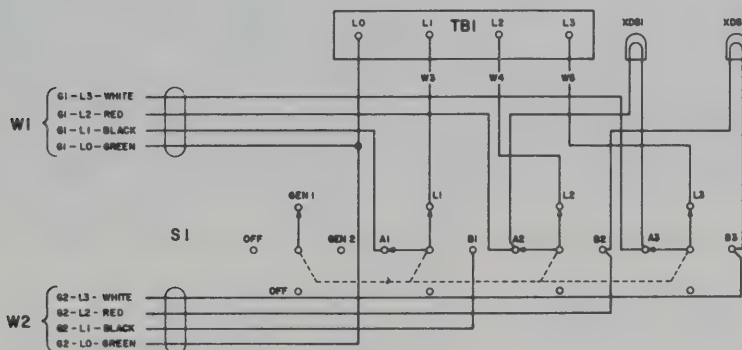

DESIGNATION	PART NO.	DESCRIPTION
TBI		TERMINAL BOARD
S1	D-120565023	SWITCH, RC16RT, 60 AMP
W1	C132121807	CABLE
W2	C132121808	CABLE
W3	C132121809-1	LEAD, ELECTRICAL
W4	C132121809-2	LEAD, ELECTRICAL
W5	C132121809-3	LEAD, ELECTRICAL
XDB1	C132121801	LIGHT AND WIRE
XDB2	C132121801	LIGHT AND WIRE

ME 6115-365-15/20-3 C3

Figure 20-3. Wiring diagram

a. Perform the pre-starting operations in TM 5-6115-332-12.

b. Position the transfer switch to the desired generator.

c. Start the generator as described in TM 5-6115-332-12.

20-5. Stopping

Stop the generator set as described in TM 5-6115-332-12.

Section III. OPERATOR'S MAINTENANCE INSTRUCTIONS

Operator's maintenance of the power unit is concerned with keeping the generator sets lubricated; the fuel tank filled; the battery electrolyte level maintained; and cleaning and servicing the fuel filter and

20-6. Operation

Operate the generator set as instructed in TM 5-6115-332-12. Use fuel from the trailer mounted fuel tank. When refueling tank, operate the engine with fuel from the 5-gallon can until sediment has had a chance to settle in the fuel tank. Use the fuel transfer valve to perform fuel transfer operations.

air cleaner filters as described in TM 5-6115-332-12. Removal of dust and dirt from the equipment is also a routine maintenance function of the operator.

Section IV. ORGANIZATIONAL MAINTENANCE INSTRUCTIONS

20-7. Fuel System Components

(fig. 20-4)

a. *General.* The fuel system consists of the fuel tank mounted on the right-rear bed of the trailer; the fuel filters located inside the fuel tank; the auxiliary 5-gallon fuel tanks; and the hoses and fittings to provide fuel to the gasoline engines. A fuel strainer in the filler neck is removable for cleaning. The fuel level gage is located on the top of the tank.

b. Fuel Filter Replacement

(1) Remove screws and washers that secure gage base to fuel tank and remove gage assembly and gasket.

(2) Remove nuts and bolts securing filters to tube base.

(3) Install new filters on assembly and secure with bolts and nuts.

(4) Using new gasket install gage assembly and secure with screws and washers.

c. Gage Replacement

(1) Remove screws that secure gage to assembly and remove gage from tank. Remove gasket.

(2) Using a serviceable gage assembly and a new gasket, reinstall gage and secure with screws.

20-8. Fuel Tank

(fig. 20-4)

a. Removal

(1) Remove drain plug and drain fuel from tank.

(2) Remove fuel gage assembly (para 20-7).

(3) Remove screws and washers that secure filler neck to tank and remove filler neck and gasket.

(4) Remove nuts, washers, and cap-screws that secure and stancion and brace for curb-side antenna bracket.

(5) Lift end stancion and bracket slightly and slide fuel tank to the rear and off trailer bed.

(6) Purge and clean fuel tank in accordance with TB ORD 1031.

b. *Installation.* Installation is reverse procedure of removal. Install new fuel filters before reinstalling gage assembly. Clean fuel filler screen before reinstalling fuel filler neck.

20-9. Rack Assemblies

(figs. 20-1 and 20-2)

a. Removal

(1) Remove load from rack assembly.

(2) Remove nuts, washers, and cap-screws that secure rack to trailer bed and remove rack.

b. Disassembly

(1) Remove nuts, washers, and cap-screws that secure clamp to rear stancion. Remove clamp.

(2) Remove nuts, washers, and cap-screws that secure roller supports to the rack. Remove rollers.

(3) Knock out rivets and remove nylon

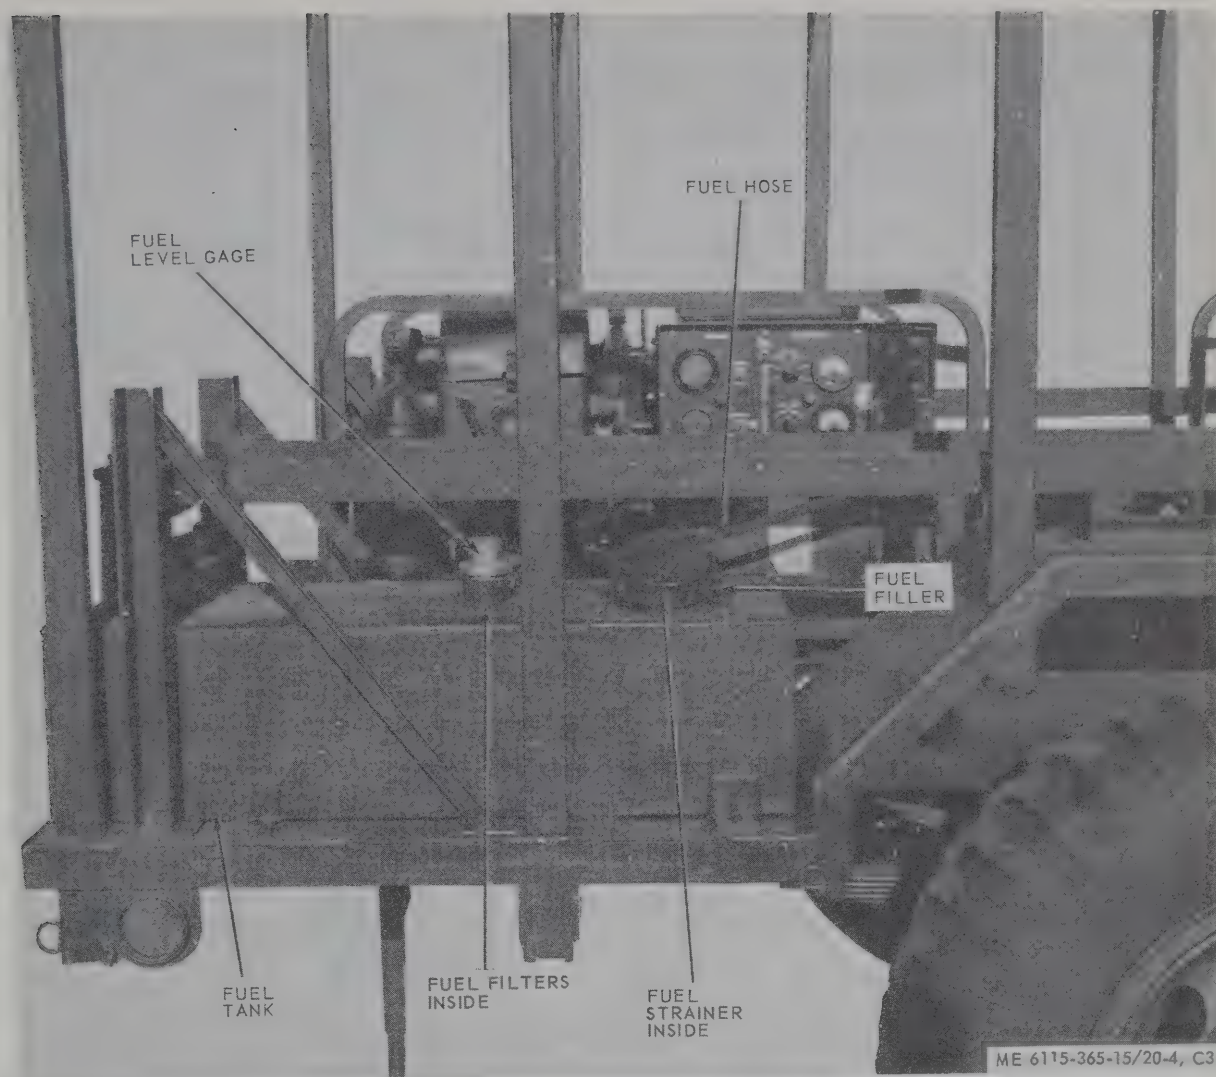


Figure 20-4. Fuel system components

runners from racks if nylon is to be replaced.

c. Reassembly. Using serviceable parts, reassembly is reverse of procedure *b* above. Attach nylon runners with rivets. Make sure the roller supports are attached with the beveled edge to the outside of stancion.

d. Installation. Installation is reverse of procedure *a* above. Cover nylon runners with cloth tape if load is not to be re-installed on rack. Touch up with paint after reassembly.

20-10. Accessory Box

(fig. 20-5)

a. Removal

(1) Remove contents of box and stow in safe place.

(2) Remove nuts, washers, and cap-screws that secure box to trailer bed. Remove box.

b. Installation. Installation is reverse procedure of removal, *a* above.

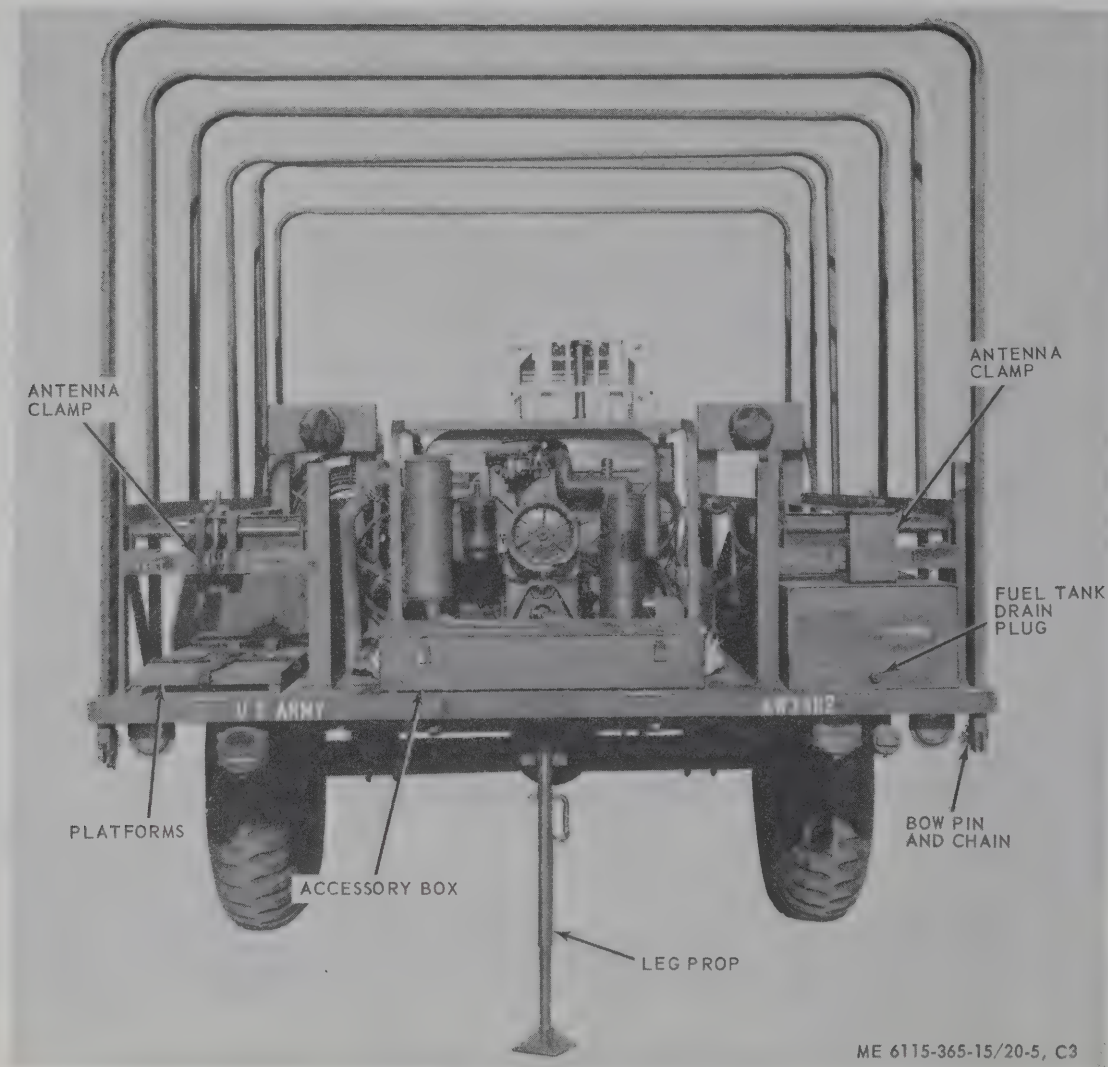


Figure 20-5. PU-631/G, rear view

20-11. Cable Reel

(fig. 20-6)

a. Removal

(1) Remove pin from reel shaft and unscrew shaft from reel support. Remove cable reel.

(2) Remove nuts, washers, and capscrews that secure reel supports to trailer bed and remove supports.

b. *Installation.* Installation is reverse of removal, a above.


20-12. Platforms

(fig. 20-5)

a. *Removal.* Remove nuts, washers, and capscrews that secure perforated platforms to trailer bed and remove platforms.

b. *Repair.* Repair platforms by replacement of webbing straps, buckles, and strap ends.

c. *Installation.* Installation is reverse of removal, a above.

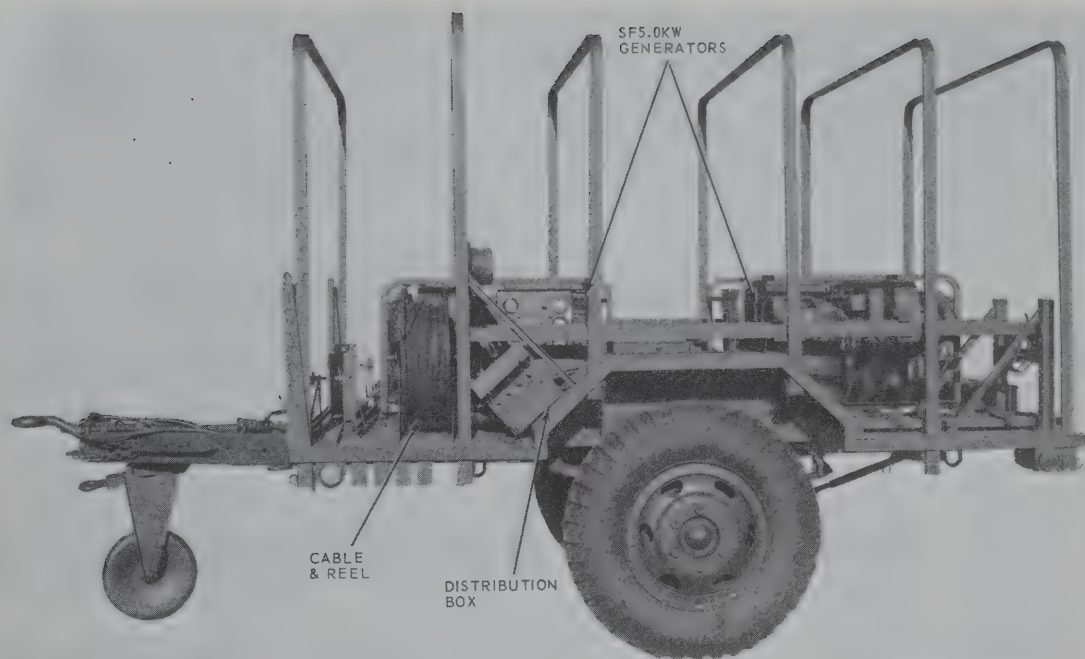

ME 6115-365-15/20-6, C3

Figure 20-6. Electrical distribution system.

20-13. Tarpaulin, Roof Bows, and Leg Prop

(fig. 20-5)

a. Removal

- (1) Remove tarpaulin from unit.
- (2) Pull out chain-secured pins that secure roof bows to trailer bed and remove bows.

- (3) Remove nuts, washers, and cap-screws that secure leg prop to rear of trailer and remove leg prop.

b. Cleaning and Inspection.

- (1) Clean tarpaulin and bows with water and detergent. Clean leg prop with cleaning solvent. Dry thoroughly.

- (2) Inspect tarpaulin for tears, holes, broken or missing ropes and straps, and

other defects. Inspect bows and leg prop for cracks, bends, or other defects.

- c. *Installation.* Installation is reverse of procedure *a* above. Be sure tarpaulin is treated for waterproofing and mildew resistance before reinstalling.

20-14. Transfer Switch Indicating Lamp Replacement

Unscrew defective lamp from transfer switch box and remove gasket. Install gasket on replacement lamp and screw into base socket in transfer box.

Section V. DIRECT AND GENERAL SUPPORT AND DEPOT MAINTENANCE INSTRUCTIONS

20-15. Generator Set

(fig. 20-7)

a. Removal.

- (1) Disconnect fuel line at generator set.
- (2) Disconnect electrical leads and load

cables.

- (3) Disconnect oil drain adapter.
- (4) Remove the battery.
- (5) Disconnect exhaust pipe from engine.
- (6) Remove nuts, washers, and cap-

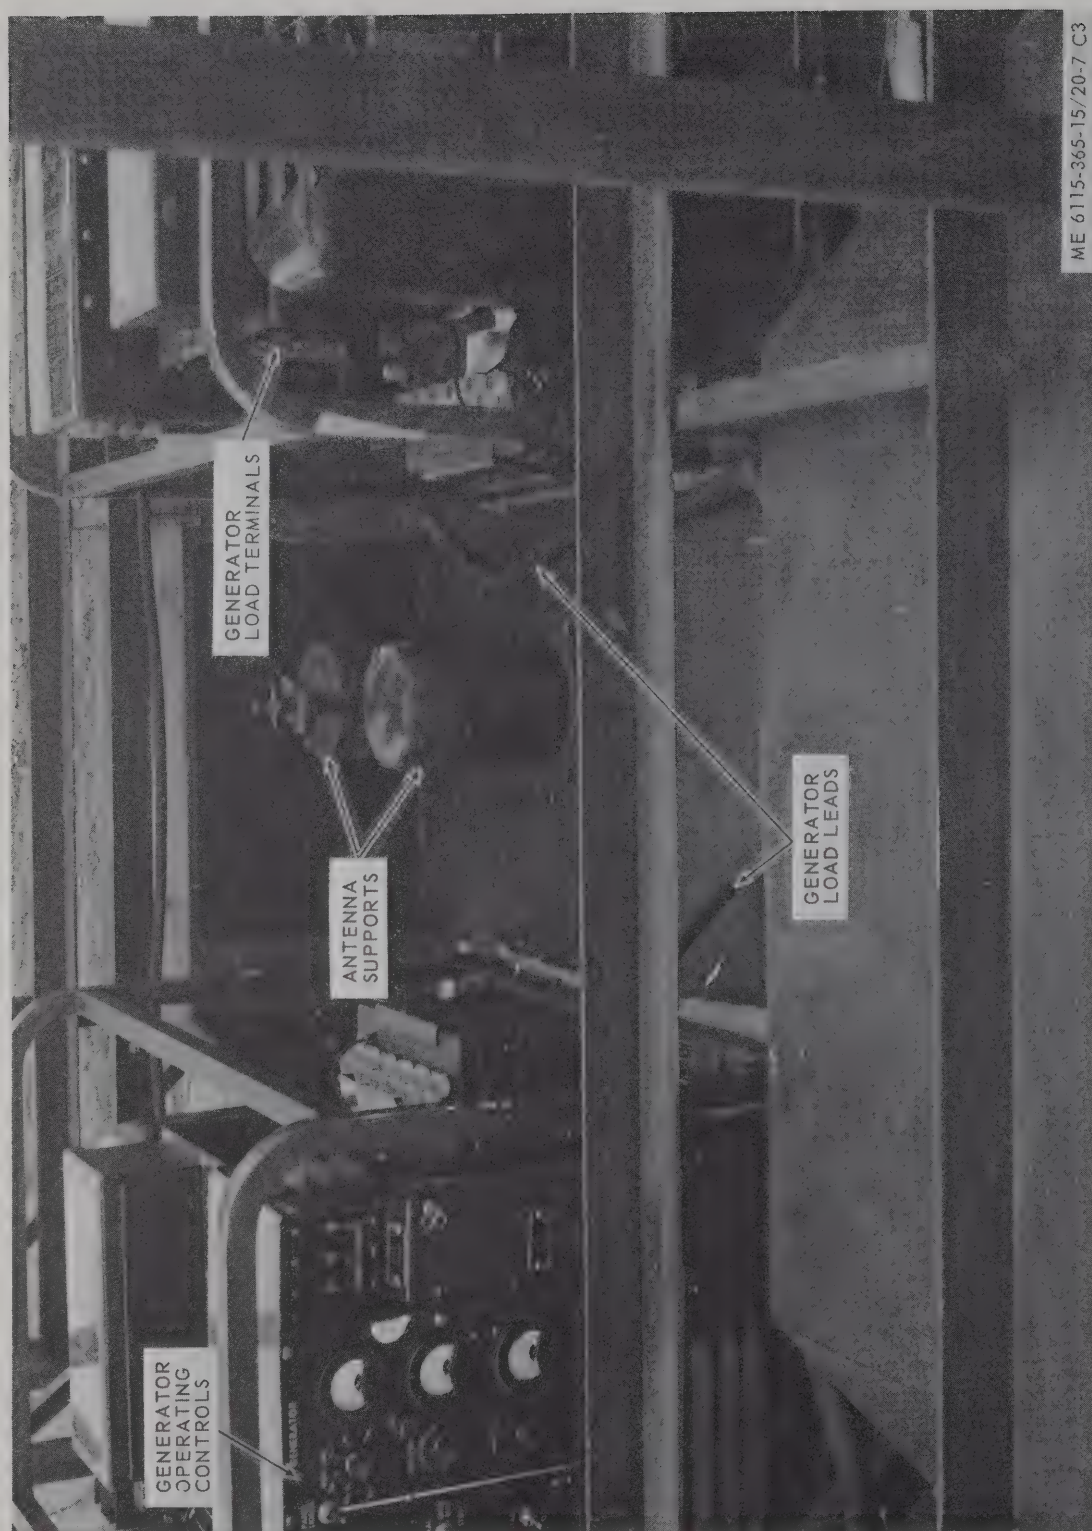


Figure 20-7. Generator sets



Figure 20-8. Ground rod, brackets, and holdowns

screws that secure generator set to trailer body and remove generator set.

b. Installation. Installation is reverse of removal procedure *a* above. Make sure that the bevel washers are properly positioned so that generator set is securely mounted to the trailer body.

20-16. Generator Transfer Switch

a. Removal (fig. 20-6)

(1) Disconnect the load lines and the ground wire at the distributor box.

(2) Disconnect the generator load lines from the generators and loosen the cable clamps so that the cables will be removed with the distribution box.

(3) Remove nuts, washers, and cap-screws that secure distribution box to the trailer body and remove box and cables as an assembly.

b. Disassembly. Refer to figure 20-9 and disassemble the distribution box components. Tag the cable ends for proper reassembly.

c. Reassembly. Reassembly is reverse of disassembly procedure *b* above.

d. Installation. Installation is reverse of removal procedure *a* above. Refer to figure 20-3 to assure that electrical load cables are properly connected.

20-17. Trailer Body

a. Removal

(1) Remove tarpaulin and roof bows (para 20-13).

(2) Remove rack assemblies (para 20-9).

(3) Remove accessory box (para 20-10).

(4) Remove fuel tank (para 20-8).

(5) Remove platforms (para 20-12).

(6) Remove cable reel (para 20-11).

(7) Remove distribution box (para 20-16).


(8) Remove generator sets (para 20-15).

(9) Remove remaining racks and holders (fig. 20-8).

(10) Disconnect and tag trailer wiring beneath trailer bed.

(11) Remove nuts, washers, and bolts that secure trailer body to chassis and remove body.

b. Installation. Using a serviceable trailer body, reverse removal procedure *a* above. Apply touch-up paint to securing hardware after complete reassembly. Connect electrical system to prime mover and check for proper operation of lights and signals.

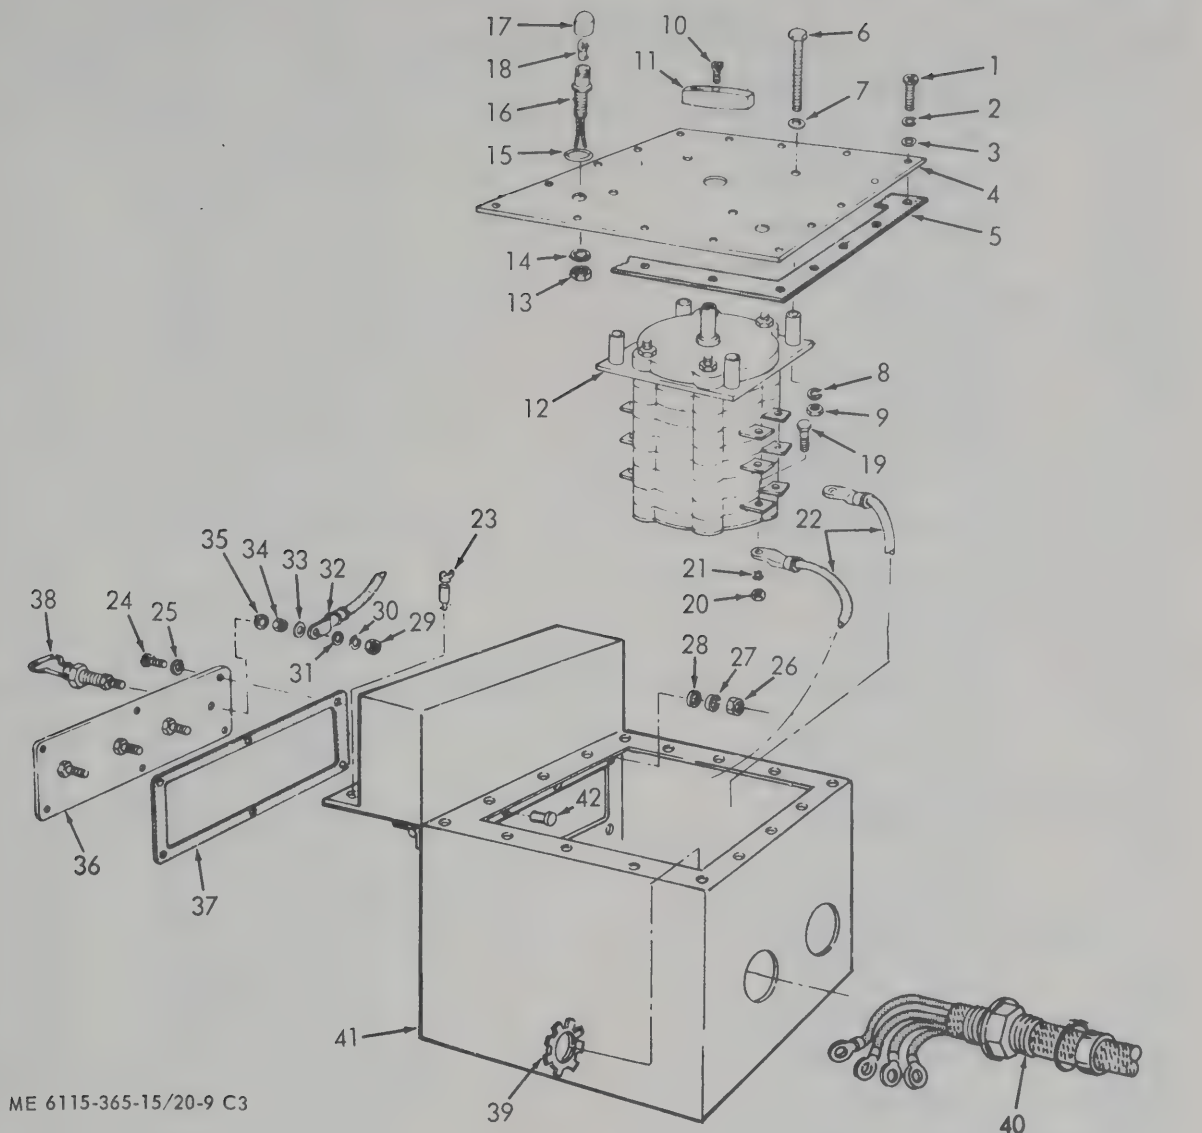

ME 6115-365-15/20-9 C3

- | | | |
|--------------------|------------------------|------------------------|
| 1 Screw | 15 Preformed packing | 29 Hex nut |
| 2 Lockwasher | 16 Light and wire assy | 30 Lockwasher |
| 3 Flat washer | 17 Lens | 31 Flat washer |
| 4 Cover | 18 Lamp | 32 Electrical lead |
| 5 Gasket | 19 Screw | 33 Flat washer |
| 6 Screw | 20 Hex nut | 34 Hex nut |
| 7 Flat washer | 21 Lockwasher | 35 Lockwasher |
| 8 Lockwasher | 22 Electrical lead | 36 Terminal board |
| 9 Hex nut | 23 Fastener | 37 Gasket |
| 10 Screw | 24 Screw | 38 Terminal lug |
| 11 Knob | 25 Flat washer | 39 Locknut |
| 12 Transfer switch | 26 Hex nut | 40 Stuffing tube assy |
| 13 Hex nut | 27 Lockwasher | 41 Transfer switch box |
| 14 Lockwasher | 28 Flat washer | 42 Rivet |

Figure 20-9. Generator distribution box

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS USABLE ON CODE	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
00001		PART I - PU-631/G								
00002		REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE								
00003		GROUP 03 - FUEL SYSTEM								
00003		0306 - TANKS, LINES AND FITTINGS								
P 0 00004	2910-141-9758	CAP, FUEL TANK MS35645-1 (96906)	EA	1	*	*	*	*	20- 10	16
X2 0 00005	5340-057-2907	CLAMP, LOOP MS21333-74 (96906)	EA	4					20- 10	48
X2 0 00006		CLAMP, LOOP: 5/16 IN. NOM. ID, MS21333-73 (96906)	EA	3					20- 10	43
P 0 00007	4720-879-4091	HOSE ASSEMBLY, DETACHABLE: 5/16 IN. OD X 90 IN. LG MS28741-5-0900 (96906)	EA	2	*	*	*	*	20- 10	42
P 0 00008	4720-021-3320	HOSE ASSEMBLY, DETACHABLE: 5/16 IN. OD X 25 FT LG MS28741-5-1440 (96906)	EA	1	*	*	*	*	20- 10	47
X2 0 00009	5310-877-5797	NUT, SELF-LOCKING: NO. 10-32 UNF 3B MS21044N3 (96906)	EA	3					20- 10	44
X2 0 00010	5310-877-5797	NUT, SELF-LOCKING: NO. 10-32 UNF 3B MS21044N3 (96906)	EA	4					20- 10	49
X2 0 00011	5305-984-7341	SCREW, MACHINE: COUNTERSUNK HEAD, NO. 10-32 X 5/8 IN. LG MS35191-273 (96906)	EA	3					20- 10	46
X2 0 00012	5305-993-1851	SCREW, MACHINE: PAN HEAD, NO. 10-32 X 1 IN. LG MS35207-267 (96906)	EA	4					20- 10	51
P 0 00013	2910-470-1301	TANK ASSEMBLY, FUEL 13216E7510 (97403)	EA	1	*	*	*	*	20- 10	40
X2 0 00014		ELBOW: 90 DEG, 5/16 IN. NOM. TUBE OD, SAEJ514 (81343)	EA	2					20- 10	17
P 0 00015	2910-450-6565	FILTER, FUEL: 9.25 IN. LG 13216E7570-1 (97403)	EA	2	2	2	4	8	20- 10	6
X2 0 00016		FILLER, NECK 13216E7569 (97403)	EA	1					20- 10	13
X2 0 00017		GAGE, LIQUID LEVEL: 13.25 IN. LG 13216E7459-2 (97403)	EA	1					20- 10	11
P 0 00018	5330-356-7904	GASKET, GAGE PLATE 13216E7571 (97403)	EA	1	*	2	2	4	20- 15	8
P 0 00019	5330-350-3965	GASKET, FILLER NECK 13216E7572 (97403)	EA	1	*	2	4	4	20- 15	12
X2 0 00020	5310-984-3806	NUT, SELF-LOCKING: 5/16-18 THD SIZE, TANK MTG MS51922-9 (96906)	EA	4					20- 15	2
X2 0 00021		PLATE, MOUNTING: FUEL GAGE 13216E7568 (97403)	EA	1					20- 15	7
X2 0 00022	4730-223-9268	PLUG, SQUARE HEAD, PIPE: 1/4 IN. NPT MS20913-2D (96906)	EA	1					20- 15	5
X2 0 00023	5306-225-8499	SCREW, CAP: 5/16-18 X 1 IN. LG, TANK MTG MS90725-34 (96906)	EA	4					20- 15	4
X2 0 00024	5305-989-7435	SCREW, MACHINE: PAN HEAD, NO. 10-32 X 5/8 IN. LG MS35207-264 (96906)	EA	14					20- 15	9

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00025	5305-989-7435	SCREW, MACHINE: PAN HEAD, NO. 10-32 X 5/8 IN. LG MS35207-264 (96906)	EA	22					20- 15	14
X2 0 00026		TANK, FUEL 13216E7567 (97403)	EA	1					20- 15	1
X2 0 00027	5310-081-4219	WASHER, FLAT: 5/16 IN. BSC, TANK MTG MS27183-12 (96906)	EA	4					20- 15	3
X2 0 00028	5310-045-3296	WASHER, LOCK: NO. 10, NOM. SIZE, NECK MTG MS35338-43 (96906)	EA	22					20- 15	15
X2 0 00029	5310-045-3296	WASHER, LOCK: NO. 10 NOM. SIZE, MS35338-43 (96906)	EA	14					20- 15	10
X2 0 00030	5310-014-5850	WASHER, FLAT MS27183-42 (96906)	EA	3					20- 10	45
X2 0 00031	5310-014-5850	WASHER, FLAT: NO. 10-32 THD SIZE MS27183-42 (96906)	EA	4					20- 10	50
00032		GROUP 15 - FRAME								
00035		1507 - LEVELING JACKS								
X2 0 00036	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16 THD SIZE MS51922-17 (96906)	EA	3					20- 13	22
X2 0 00037	5305-269-3213	SCREW, CAP, HEXAGON HEAD: 3/8-16 X 1 1/4 IN. LG MS90725-62 (96906)	EA	3					20- 13	23
P 0 00038	2590-318-6691	TRAILER LEG PROP ASSEMBLY 13214E1206 (97403)	EA	1	*	*	*	*	20- 13	24
00039		GROUP 18 - BODY								
00040		1808 - STOWAGE RACKS, BOXES AND CABLE REELS								
X2 0 00041		ACCESSORY BOX 13205E4949 (97403)	EA	1					20- 10	56
X2 0 00042		BRACKET, REEL 13205E5092 (97403)	EA	1					20- 10	98
X2 0 00043	5340-999-6277	BRACKET ASSEMBLY, SLEDGE HAMMER 13214E1214 (97403)	EA	1					20- 11	18
X2 0 00044	2590-932-7298	CLAMP, GROUND ROD 13212E3617 (97403)	EA	4					20- 11	14
X2 0 00045	2590-932-7298	CLAMP, GROUND ROD: 6 FT 13212E3617 (97493)	EA	2					20- 10	10
X2 0 00046	5340-914-2578	CLIP, SPRING, SLEDGE HAMMER 13214E1213-1 (97403)	EA	1					20- 11	23
X2 0 00047		HOLDER ASSEMBLY 13216E7506 (97403)	EA	1					20- 10	25
X2 0 00048		HOLDER 13216E7508 (97403)	EA	1					20- 18	1
X2 0 00049		CLAMP 13216E7507 (97403)	EA	1					20- 18	3
X2 0 00050		KNOB: 5/16-18 UNC 2B 13205E5105-2 (97403)	EA	1					20- 18	2
X2 0 00051	5315-143-6284	PIN, SPRING, CORROSION RESISTANT STEEL, 1/8 IN. DIA X 1 IN. LG MS171534 (96906)	EA	1					20- 18	5

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
						(a)	(b)	(c)	(d)	(a)	(b)
						1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00052		SHAFT 13216E7509 (97403)		EA	1					20- 18	4
X2 0 00053		HOLDER ASSEMBLY 13216E7493 (97403)		EA	2					20- 10	21
X2 0 00054		HOLDER 13216E7495 (97403)		EA	1					20- 18	6
X2 0 00055		CLAMP 13216E7494 (97403)		EA	1					20- 18	7
X2 0 00056		KNOB: 5/16-18 UNC 2B 13205E5105-2 (97403)		EA	1					20- 18	11
X2 0 00057	5310-984-3806	NUT, SELF-LOCKING, HEXAGON: 5/16-18 UNC MS51922-9 (96906)		EA	1					20- 18	15
X2 0 00058	5315-842-3044	PIN, COTTER: 3/32 IN. NOM. DIA X 3/4 IN. LG MS24665-283 (96906)		EA	2					20- 18	10
X2 0 00059	5315-842-3044	PIN, COTTER: 3/32 IN. NOM. DIA X 3/4 IN. LG MS24665-283 (96906)		EA	2					20- 18	14
X2 0 00060		TEE 13216E7496 (97403)		EA	1					20- 18	8
X2 0 00061		TEE 13216E7496 (97403)		EA	1					20- 18	12
X2 0 00062	5310-081-4219	WASHER, FLAT: 3/8 IN. BSC SIZE MS27183-12 (96906)		EA	3					20- 18	9
X2 0 00063	5310-081-4219	WASHER, FLAT: 3/8 IN. BSC SIZE MS27183-12 (96906)		EA	3					20- 18	13
X2 0 00064	5310-933-8121	WASHER, LOCK: 1/4 IN. NOM. SIZE MS35338-139 (96906)		EA	2					20- 13	8
X2 0 00065	5310-080-8495	NUT, PLAIN, WING: 1/4-20 UNC 2B MS35425-39 (96906)		EA	2					20- 13	7
X2 0 00066	5310-984-3806	NUT, SELF-LOCKING, HEXAGON: 5/16-18 UNC MS51922-9 (96906)		EA	12					20- 10	2
X2 0 00067	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)		EA	4					20- 10	7
X2 0 00068	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)		EA	8					20- 10	22
X2 0 00069	5310-984-3806	NUT, SELF-LOCKING: 5/16-18 UNC MS51922-9 (96906)		EA	8					20- 10	26
X2 0 00070	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: MS51922-1 (96906)		EA	4					20- 10	57
X2 0 00071	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)		EA	16					20- 10	67
X2 0 00072	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)		EA	3					20- 10	81
X2 0 00073	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)		EA	3					20- 10	84
X2 0 00074	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)		EA	4					20- 10	99

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00075	5310-984-3806	NUT, SELF-LOCKING, HEXAGON: 5/16-18 UNC MS51922-9 (96906)		EA	16				20- 11	7
X2 0 00076	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)		EA	8				20- 11	15
X2 0 00077	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)		EA	2				20- 11	19
X2 0 00078	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)		EA	1				20- 11	24
X2 0 00079	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)		EA	16				20- 16	2
X2 0 00080	5310-984-3806	NUT, SELF-LOCKING, HEXAGON: 5/16-18 UNC MS51922-9 (96906)		EA	16				20- 16	5
X2 0 00081	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)		EA	16				20- 17	1
X2 0 00082	5310-984-3806	NUT, SELF-LOCKING MS51922-9 (96906)		EA	16				20- 17	4
P 0 00083	5315-059-0206	PIN, COTTER: STEEL CADMIUM PLATED, 3/16 IN. DIA X 1 IN. LG, REEL SHAFT MS24665-491 (96906)		EA	1	*	*	*	*	
X2 0 00084		PLATFORM 13216E7503 (97403)		EA	4				20- 10	66
X2 0 00085		RACK 13216E7497 (97403)		EA	1				20- 10	5
X2 0 00086		RACK 13216E7502 (97403)		EA	2				20- 11	6
X2 0 00087		RACK ASSEMBLY, CURBSIDE 13216E7513 (97403)		EA	1				20- 10	41
X2 0 00088		RACK, CURBSIDE 13216E7514 (97403)		EA	1				20- 17	7
X2 0 00089		BRACKET 13216E7517 (97403)		EA	1				20- 17	12
X2 0 00090		BRACKET 13216E7521 (97403)		EA	2				20- 17	13
X2 0 00091		CLAMP 13216E7515 (97403)		EA	1				20- 17	22
X2 0 00092	5310-877-5797	NUT, SELF-LOCKING: NO. 10-32 UNF 3B MS21044N3 (96906)		EA	26				20- 17	9
X2 0 00093	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)		EA	4				20- 17	14
X2 0 00094	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)		EA	2				20- 17	19
X2 0 00095	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)		EA	2				20- 17	27
X2 0 00096	5315-839-5822	PIN, COTTER: 1/8 X 1 IN. LG MS24665-353 (96906)		EA	1				20- 17	23
X2 0 00097	5315-842-3154	PIN, STRAIGHT HEADED: 1/2 X 1 27/64 IN. LG MS35810-36 (96906)		EA	1				20- 17	25
X2 0 00098		RUNNER, NYLON 13216E7520 (97403)		EA	2				20- 17	8

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00099	5305-071-2234	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 2 3/4 IN. LG MS90725-17 (96906)		EA	4				20- 17	16
X2 0 00100	5305-071-2234	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 2 3/4 IN. LG MS90725-17 (96906)		EA	2				20- 17	21
X2 0 00101	5305-071-2234	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 2 3/4 IN. LG MS90725-17 (96906)		EA	2				20- 17	29
X2 0 00102	5305-993-1848	SCREW, MACHINE: PAN HEAD, NO. 10-32 X 3/4 IN. LG MS35207-265 (96906)		EA	26				20- 17	11
X2 0 00103		SUPPORT, ROLLER 13216E7518 (97403)		EA	1				20- 17	18
X2 0 00104		SUPPORT, ROLLER 13216E7519 (97403)		EA	1				20- 17	26
X2 0 00105	5310-809-8546	WASHER, FLAT: NO. 10-32 BSC SIZE MS27183-8 (96906)		EA	26				20- 17	10
X2 0 00106	5310-809-4058	WASHER, FLAT: 1/4-20 BSC SIZE MS27183-10 (96906)		EA	4				20- 17	15
X2 0 00107	5310-809-4058	WASHER, FLAT: 1/4-20 BSC SIZE MS27183-10 (96906)		EA	2				20- 17	20
X2 0 00108	5310-809-5998	WASHER, FLAT: 1/2 IN. BSC SIZE MS27183-18 (96906)		EA	1				20- 17	24
X2 0 00109	5310-809-4058	WASHER, FLAT: 1/4-20 BSC SIZE MS27183-10 (96906)		EA	2				20- 17	28
X2 0 00110		RACK ASSEMBLY, ROADSIDE 13216E7511 (97403)		EA	1				20- 10	65
X2 0 00111		RACK, ROADSIDE 13216E7512 (97403)		EA	1				20- 16	1
X2 0 00112		BRACE: 2.62 IN. LG 13216E7522-2 (97403)		EA	1				20- 10	80
X2 0 00113		BRACKET 13216E7517 (97403)		EA	1				20- 16	12
X2 0 00114		BRACKET 13216E7521 (97403)		EA	2				20- 16	13
X2 0 00115		CLAMP 13216E7515 (97403)		EA	1				20- 16	22
X2 0 00116	5310-877-5797	NUT, SELF-LOCKING, HEXAGON: NO. 10-32 UNF 3B MS21044N3 (96906)		EA	26				20- 16	9
X2 0 00117	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)		EA	4				20- 16	14
X2 0 00118	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)		EA	2				20- 16	19
X2 0 00119	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)		EA	2				20- 16	27
X2 0 00120	5315-839-5822	PIN, COTTER: 1/8 IN. DIA X 1 IN. LG MS24665-353 (96906)		EA	1				20- 16	23
X2 0 00121	5315-842-3154	PIN, STRAIGHT HEADED: 1/2 IN. DIA X 1 27/64 IN. LG MS35810-36 (96906)		EA	1				20- 16	25
X2 0 00122		ROLLER 13216E7523 (97403)		EA	1				20- 16	17

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00123		ROLLER 13216E7523 (97403)	EA	1					20- 17	17
X2 0 00124		RUNNER, NYLON 13216E7520 (97403)	EA	2					20- 16	8
X2 0 00125	5305-071-2234	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 2 3/4 IN. LG MS90725-17 (96906)	EA	4					20- 16	16
X2 0 00126	5305-071-2234	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 2 3/4 IN. LG MS90725-17 (96906)	EA	2					20- 16	21
X2 0 00127	5305-071-2234	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 2 3/4 IN. LG MS90725-17 (96906)	EA	2					20- 16	29
X2 0 00128	5305-993-1848	SCREW, MACHINE: PAN HEAD, NO. 10-32 X 3/4 IN. LG MS35207-265 (96906)	EA	26					20- 16	11
X2 0 00129		SUPPORT, ROLLER 13216E7518 (97403)	EA	1					20- 16	18
X2 0 00130		SUPPORT, ROLLER 13216E7519 (97403)	EA	1					20- 16	26
X2 0 00131	5310-809-8546	WASHER, FLAT: NO. 10-32 BSC SIZE MS27183-8 (96906)	EA	26					20- 16	10
X2 0 00132	5310-809-4058	WASHER, FLAT: 1/4-20 BSC SIZE MS27183-10 (96906)	EA	4					20- 16	15
X2 0 00133	5310-809-4058	WASHER, FLAT: 1/4-20 BSC SIZE MS27183-10 (96906)	EA	2					20- 16	20
X2 0 00134	5310-809-5998	WASHER, FLAT: 1/2 IN. BSC SIZE MS27183-18 (96906)	EA	1					20- 16	24
X2 0 00135	5310-809-4058	WASHER, FLAT: 1/4-20 BSC SIZE MS27183-10 (96906)	EA	2					20- 16	28
X2 0 00136		REEL, CABLE 13214E1425 (97403)	EA	1					20- 10	97
X2 0 00137	5306-225-9081	SCREW, CAP, HEXAGON HEAD: 5/16-18 X 1 1/4 IN. LG MS90725-36 (96906)	EA	6					20- 10	4
X2 0 00138	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)	EA	8					20- 10	24
X2 0 00139	5306-225-9081	SCREW, CAP, HEXAGON HEAD: 5/16 X 1 1/4 IN. LG MS90725-36 (96906)	EA	8					20- 10	28
X2 0 00140	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)	EA	4					20- 10	59
X2 0 00141	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)	EA	16					20- 10	69
X2 0 00142	5305-068-0502	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 3/4 IN. LG MS90725-6 (96906)	EA	3					20- 10	83
X2 0 00143	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)	EA	3					20- 10	86
X2 0 00144	5305-068-0502	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 3/4 IN. LG MS90725-6 (96906)	EA	4					20- 10	101
X2 0 00145	5305-068-0502	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 3/4 IN. LG MS90725-6 (96906)	EA	2					20- 11	21

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
						(a)	(b)	(c)	(d)	(a)	(b)
						1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00146	5305-068-0502	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 3/4 IN. LG MS90725-6 (96906)		EA	1					20- 11	26
X2 0 00147	5305-721-8010	SCREW, CAP, HEXAGON: 1/4-20 X 2 IN. LG MS35307-314 (96906)		EA	2					20- 13	10
X2 0 00148	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4-20 UNC X 1 IN. LG MS90725-8 (96906)		EA	16					20- 16	4
X2 0 00149	5305-225-8499	SCREW, CAP, HEXAGON HEAD: 5/16-18 X 1 IN. LG MS90725-34 (96906)		EA	16					20- 16	7
X2 0 00150	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)		EA	16					20- 17	3
X2 0 00151	5305-225-8499	SCREW, CAP, HEXAGON HEAD: 5/16-18 X 1 IN. LG MS90725-34 (96906)		EA	16					20- 17	6
X2 0 00152	5305-225-3839	SCREW, MACHINE: 1/4-20 X 1 IN. LG MS90725-8 (96906)		EA	8					20- 11	17
X2 0 00153	5305-958-6073	SCREW, MACHINE: 82 DEG, FLAT, 5/16-18 X 1 3/4 IN. LG MS35190-309 (96906)		EA	6					20- 10	1
X2 0 00154	5309-071-2241	SCREW, MACHINE: 82 DEG, FLAT, 1/4-20 X 1 1/4 IN. LG MS90725-10 (96906)		EA	4					20- 10	9
X2 0 00155		SHIELD 13216E7433 (97403)		EA	1					20- 13	6
X2 0 00156		SUPPORT, REEL 13205E5093 (97403)		EA	1					20- 10	102
X2 0 00157	5310-081-4219	WASHER, FLAT: 5/16 IN. BSC SIZE MS27183-12 (96906)		EA	12					20- 10	3
X2 0 00158	5310-809-3078	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-11 (96906)		EA	4					20- 10	8
X2 0 00159	5310-809-3078	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-11 (96906)		EA	8					20- 10	23
X2 0 00160	5310-081-4219	WASHER, FLAT: 5/16 IN. BSC SIZE MS27183-12 (96906)		EA	8					20- 10	27
X2 0 00161	5310-809-3078	WASHER, FLAT: 1/4-20 BSC SIZE MS27183-11 (96906)		EA	4					20- 10	58
X2 0 00162	5310-809-3078	WASHER, FLAT: 1/4-20 IN. BSC SIZE MS27183-11 (96906)		EA	16					20- 10	68
X2 0 00163	5310-809-3078	WASHER, FLAT: 1/4-20 IN. BSC SIZE MS27183-11 (96906)		EA	3					20- 10	82
X2 0 00164	5310-809-3078	WASHER, FLAT: 1/4-20 IN. BSC SIZE MS27183-11 (96906)		EA	3					20- 10	85
X2 0 00165	5310-809-3078	WASHER, FLAT: 1/4-20 IN. BSC SIZE MS27183-11 (96906)		EA	4					20- 10	100
X2 0 00166	5310-081-4219	WASHER, FLAT: 5/16 IN. BSC SIZE MS27183-12 (96906)		EA	16					20- 11	8
X2 0 00167	5310-809-3078	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-11 (96906)		EA	8					20- 11	16
X2 0 00168	5310-809-3078	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-11 (96906)		EA	2					20- 11	20
X2 0 00169	5310-809-3078	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-11 (96906)		EA	1					20- 11	25

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(a) FIG. NO.	(b) ITEM NO.
X2 0 00170	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	4				20- 13	9
X2 0 00171	5310-809-3078	WASHER, FLAT: 1/4-20 IN. BSC SIZE MS27183-11 (96906)		EA	16				20- 16	3
X2 0 00172	5310-081-4219	WASHER, FLAT: 5/16-18 IN. BSC SIZE MS27183-12 (96906)		EA	16				20- 16	6
X2 0 00173	5310-809-3078	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-11 (96906)		EA	16				20- 17	2
X2 0 00174	5310-081-4219	WASHER, FLAT: 5/16 IN. BSC SIZE MS27183-12 (96906)		EA	16				20- 17	5
00175		1810 - CARGO BODY								
X2 0 00178		BRACE 13216E7522-1 (97403)		EA	1				20- 10	33
X2 0 00180	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16 UNC MS51922-17 (96906)		EA	12				20- 13	1
X2 0 00181	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)		EA	3				20- 10	34
X2 0 00182	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)		EA	3				20- 10	37
X2 0 00184	5305-269-3211	SCREW, CAP, HEXAGON HEAD: 3/8-16 X 1 IN. LG MS90725-60 (96906)		EA	16				20- 13	5
X2 0 00185	5305-068-0502	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 3/4 IN. LG MS90725-6 (96906)		EA	3				20- 10	36
X2 0 00186	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)		EA	3				20- 10	39
X2 0 00189	5310-080-6004	WASHER, FLAT: 3/8 IN. BSC SIZE MS27183-14 (96906)		EA	16				20- 13	3
X2 0 00190	5310-637-9541	WASHER, LOCK: 3/8 IN. NOM. BSC SIZE MS35338-46 (96906)		EA	4				20- 13	2
X2 0 00191	5310-809-3078	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-11 (96906)		EA	3				20- 10	35
X2 0 00192	5310-809-3078	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-11 (96906)		EA	3				20- 10	38
00193		GROUP 22 - BODY ACCESSORY ITEMS								
00194		2201 - CANVAS ITEMS								
X2 0 00195	5340-764-2334	LOOP, STRAP, FASTENER: 1 1/4 IN. SIZE MS51939-1 (96906)		EA	7				20- 10	71
X2 0 00196	5340-764-2334	LOOP, STRAP, FASTENER: 1 1/4 IN. SIZE MS51939-1 (96906)		EA	6				20- 10	76
X2 0 00197	5340-764-2334	LOOP, STRAP, FASTENER: 1 1/4 IN. SIZE MS51939-1 (96906)		EA	1				20- 10	88
X2 0 00198	5310-811-3494	NUT, SELF-LOCKING, HEXAGON: NO. 8-32 UNC 3B MS21044N08 (96906)		EA	14				20- 10	72
X2 0 00199	5310-811-3494	NUT, SELF-LOCKING, HEXAGON: NO. 8-32 UNC 3B MS21044N08 (96906)		EA	12				20- 10	77
X2 0 00200	5310-811-3494	NUT, SELF-LOCKING, HEXAGON: NO. 8-32 UNC 3B MS21044N08 (96906)		EA	2				20- 10	89

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00201	5305-984-6195	SCREW, MACHINE: PAN HEAD, NO. 8-32 X 3/4 IN. LG MS35206-247 (96906)	EA	14					20- 10	74
X2 0 00202	5305-984-6195	SCREW, MACHINE: PAN HEAD, NO. 8-32 X 3/4 IN. LG MS35206-247 (96906)	EA	2					20- 10	79
X2 0 00203	5305-984-6195	SCREW, MACHINE: PAN HEAD, NO. 8-32 X 3/4 IN. LG MS35206-247 (96906)	EA	2					20- 10	91
P 0 00204	5340-195-5656	STRAP, WEBBING: 22 IN. LG 13216E7504 (97403)	EA	7	*	*	*	*	20- 10	70
P 0 00205	5340-197-5029	STRAP, WEBBING: 21 IN. LG 13216E7505-1 (97403)	EA	6	*	*	*	*	20- 10	75
P 0 00206	5340-409-3880	STRAP, WEBBING: 34 IN. LG 13216E7505-2 (97403)	EA	1	*	*	*	*	20- 10	87
P OR 00207	6115-459-5946	TARPAULIN 13216E7434 (97403)	EA	1	*	*	*	2	20- 13	12
X2 0 00208		WASHER, FLAT: NO. 8-32 BSC SIZE MS27183-41 (96906)	EA	14					20- 10	73
X2 0 00209		WASHER, FLAT: NO. 8-32 BSC SIZE MS27183-41 (96906)	EA	12					20- 10	78
X2 0 00210		WASHER, FLAT: NO. 8-32 BSC SIZE MS27183-41 (96906)	EA	2					20- 10	90
00211		2202 - ACCESSORY ITEMS								
P 0 00212	2540-924-8478	BOW, TRAILER TARPAULIN: 68 IN. H 13212E3597-1 (97403)	EA	4	*	*	*	*	20- 13	11
P 0 00213	2540-926-1003	BOW, TRAILER TARPAULIN: 55.75 IN. H 13212E3597-2 (97403)	EA	2	*	*	*	*	20- 13	13
X2 0 00214	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 IN. UNC MS51922-1 (96906)	EA	8					20- 13	15
X2 0 00215	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 IN. UNC MS51922-1 (96906)	EA	4					20- 13	19
P 0 00216	9905-202-3639	REFLECTOR, AMBER, CLEARANCE INDICATOR MS35387-2 (96906)	EA	2	*	*	*	*	20- 13	18
P 0 00217	9905-205-2795	REFLECTOR, RED, CLEARANCE INDICATOR MS35387-1 (96906)	EA	4	*	*	*	2	20- 13	14
P 0 00218	5975-928-8865	ROD, GROUND: 6 FT MILR11461TYPE2STYLE3 (81349)	EA	2	*	*	*	*	20- 10	6
X2 0 00219	5305-068-0500	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1/2 IN. LG MS90725-3 (96906)	EA	8					20- 13	17
X2 0 00220	5305-068-0500	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1/2 IN. LG MS90725-3 (96906)	EA	4					20- 13	21
X2 0 00221	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	8					20- 13	16
X2 0 00222	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	4					20- 13	20
00223		2210 - DATA PLATES								
X2 0 00224		PLATE, IDENTIFICATION: GROUND TERMINAL 13205E4918 (97403)	EA	1					20- 10	96

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) QTY INC IN UNIT	(7) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(8) ILLUS- TRATION	
						(a)	(b)	(c)	(d)	(a)	(b)
						1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00225		PLATE, IDENTIFICATION: PU-631/G 13205E4916-23 (97403)		EA	1					20- 10	16
X2 0 00226		PLATE, INFORMATION: WIRING DIAGRAM 13212E3587 (97403)		EA	1						
00227		GROUP 29 - AUXILIARY GENERATORS AND ENGINE									
00234		2941 - ENGINE EXHAUST									
X2 0 00235		ELBOW, STREET: 45 DEG SAEJ926 (81343)		EA	2					20- 10	64
X2 0 00236	6115-947-3335	EXHAUST, TUBE 13214E1487 (97403)		EA	1					20- 10	17
X2 0 00237	6115-947-3335	EXHAUST TUBE 13214E1487 (97403)		EA	1					20- 10	60
X2 0 00238	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)		EA	2					20- 10	18
X2 0 00239	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)		EA	2					20- 10	61
X2 0 00240	5305-071-2242	SCREW, CAP, HEXAGON: 1/4-20 X 1 1/8 IN. LG MS90725-9 (96906)		EA	2					20- 10	63
X2 0 00241	5305-071-2242	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1 1/8 IN. LG MS90725-9 (96906)		EA	2					20- 10	20
X2 0 00242	5310-809-3078	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-11 (96906)		EA	2					20- 10	19
X2 0 00243	5310-809-3078	WASHER, FLAT: 1/4-20 BSC SIZE MS27183-11 (96906)		EA	2					20- 10	62
00244		GROUP 42 - ELECTRICAL EQUIPMENT									
00245		4202 - ELECTRICAL CONTROLS									
X2 0 00260	5305-989-7434	SCREW, MACHINE: PAN HEAD, NO. 10-32 X 1/2 IN. LG MS35206-263 (96906)		EA	16					20- 14	14
X2 0 00269	5310-809-8546	WASHER, FLAT: NO. 10 SCREW SIZE MS27183-8 (96906)		EA	16					20- 14	16
X2 0 00273	5310-045-3296	WASHER, LOCK: NO. 10 SCREW SIZE MS35338-43 (96906)		EA	16					20- 14	15
00282		4216 - MISCELLANEOUS WIRING AND FITTINGS									
X2 0 00285		CLAMP, CABLE, SINGLE 13212E3612 (97403)		EA	1					20- 10	29
X2 0 00286	5340-778-2738	CLAMP, LOOP: SINGLE CABLE MS21333-2 (96906)		EA	2					20- 11	5
0 00287	5340-978-6063	CLAMP, LOOP: DOUBLE CABLE MS21334-30 (96906)		EA	3	*	*	*	*	20- 10	52
X2 0 00288		CLAMP, CABLE, DOUBLE: 1 5/16 IN. H 13212E3591-2 (97403)		EA	1					20- 10	92
0 00289	5340-930-1754	CLAMP, LOOP, DOUBLE: .188 IN. NOM. ID MS21334-2 (96906)		EA	2	*	*	*	*	20- 11	5

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
		REF NUMBER & MFR CODE								
X2 0 00293	5310-918-6921	NUT, PLAIN, HEXAGON: JAM, 3/8-16 UNC 2B MS16203-39 (96906)	EA	3					20- 11	31
X2 0 00294	5310-918-6921	NUT, PLAIN, HEXAGON: JAM MS16203-39 (96906)	EA	1					20- 11	34
X2 0 00295	5310-543-4717	NUT, PLAIN, WING: 3/8-16 UNC 2B MS35425-28 (96906)	EA	1					20- 11	29
X2 0 00296	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)	EA	2					20- 10	30
X2 0 00297	5310-877-5797	NUT, SELF-LOCKING: NO. 10-32 UNF 3B MS21044N3 (96906)	EA	3					20- 10	53
X2 0 00298	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)	EA	2					20- 10	93
X2 0 00299	5310-877-5797	NUT, SELF-LOCKING, HEXAGON: NO. 10-32 UNF 3B MS21044N3 (96906)	EA	2					20- 11	2
X2 0 00300	5310-877-5797	NUT, SELF-LOCKING, HEXAGON: NO. 10-32 UNF 3B MS21044N3 (96906)	EA	2					20- 11	2
X2 0 00301	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)	EA	2					20- 10	32
X2 0 00302	5305-071-2242	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1 1/8 IN. LG MS90725-9 (96906)	EA	2					20- 10	95
X2 0 00303	5305-543-4718	SCREW, CAP, HEXAGON HEAD: 3/8-16 X 3/4 IN. LG MS35309-358 (96906)	EA	1					20- 11	36
X2 0 00304	5305-984-7341	SCREW, MACHINE: NO. 10-32 X 5/8 IN. LG MS35191-273 (96906)	EA	3					20- 10	55
X2 0 00305	5305-993-1848	SCREW, MACHINE: PAN HEAD, NO. 10-32 X 3/4 IN. LG MS35207-265 (96906)	EA	2					20- 11	4
X2 0 00306	5305-993-1848	SCREW, MACHINE: PAN HEAD, NO. 10-32 X 3/4 IN. LG MS35207-265 (96906)	EA	2					20- 11	4
X2 0 00307	5307-722-9437	STUD, GROUNDING 13214E1223 (97403)	EA	1					20- 11	28
X2 0 00308	5940-688-6010	TERMINAL, LUG: CRIMP STYLE, 3/8 IN. MS20659-110 (96906)	EA	3					20- 11	27
P 0 00309	5940-114-1310	TERMINAL, LUG: CRIMP, NO. 6 WIRE, IOSD MS25036-119TYPE2CL1 (96906)	EA	1	*	*	*	*		
X2 0 00310	5940-688-6010	TERMINAL, LUG: 3/8 IN. STUD, NO. 6 WIRE MS20659-10 (96906)	EA	1					20- 11	33
X2 0 00312	5310-187-2413	WASHER, FLAT: ELECTRIC, 3/8 IN. BSC SIZE AN961-616T (88044)	EA	4					20- 11	30
X2 0 00313	5310-809-3078	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-11 (96906)	EA	2					20- 10	31
X2 0 00314	5310-014-5850	WASHER, FLAT: NO. 10-32 BSC SIZE MS27183-42 (96906)	EA	3					20- 10	54
X2 0 00315	5310-809-3078	WASHER, FLAT: 1/4-20 BSC SIZE MS27183-11 (96906)	EA	2					20- 10	94

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
						(a)	(b)	(c)	(d)	(a)	(b)
						1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00316	5310-014-5850	WASHER, FLAT: NO. 10-32 BSC SIZE MSZ7183-42 (96906)		EA	2					20- 11	3
X2 0 00317	5310-014-5850	WASHER, FLAT: NO. 10-32 BSC SIZE MSZ7183-42 (96906)		EA	2					20- 11	3
X2 0 00318	5310-913-9776	WASHER, LOCK: 3/8 IN. NOM. SIZE MS35335-91 (96906)		EA	2					20- 11	32
X2 0 00319	5310-913-9776	WASHER, LOCK: 3/8 IN. NOM. SIZE MS35335-91 (96906)		EA	1					20- 11	35
P 0 00320	6145-395-8799	WIRE, ELECTRICAL: 6 FT. LG, NO. 6 AWG QQW343TYPERR (81348)		FT	1	*	*	*	*	20- 11	1
P 0 00322	6145-395-8799	WIRE, ELECTRICAL: 8 FT. LG, NO. 6 AWG QQW343TYPERR (81348)		FT	1	*	*	*	*		
P 0 00323	6145-395-8799	WIRE, ELECTRICAL: 5 FT LG, NO. 6 AWG QQW343TYPERR (81348)		FT	1	*	*	*	*		
P 0 00324	6145-395-8799	WIRE, ELECTRICAL: 1 FT LG, NO. 6 AWG QQW343TYPERR (81348)		FT	1	*	*	*	*		
P 0 00325	6145-395-8799	WIRE, ELECTRICAL: DRAWN AND ANNEALED (AS REQUIRED) QQW343TYPERR (81348)		FT		*	*	*	*		

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION		
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)	
						1-20	21-50	51-100	1-20	21-50	51-100					
00001	2910-141-9758	PART II - PU-631/G														
		REPAIR PARTS FOR DS, GS AND DEPOT MAINTENANCE														
00002		GROUP 03 - FUEL SYSTEM														
00003		0306 - TANKS, LINES AND FITTINGS														
P 0 00004	5340-057-2907	CAP, FUEL TANK MS35645-1 (96906)	EA	1	*	*	2	*	*	2	10	10	20- 15	16		
X2 0 00005		CLAMP, LOOP MS21333-74 (96906)	EA	4									20- 10	48		
X2 0 00006		CLAMP, LOOP: 5/16 IN. NOM. ID, MS21333-73 (96906)	EA	3									20- 10	43		
P 0 00007	4720-879-4091	HOSE ASSEMBLY, DETACHABLE: 5/16 IN. OD X 90 IN. LG MS28741-5-0900 (96906)	EA	2	*	*	2	*	*	2	10	10	20- 10	42		
P 0 00008	4720-021-3320	HOSE ASSEMBLY, DETACHABLE: 5/16 IN. OD X 25 FT LG MS28741-5-1440 (96906)	EA	1	*	*	2	*	*	2	10	10	20- 10	47		
X2 0 00009	5310-877-5797	NUT, SELF-LOCKING: NO. 10-32 UNF 3B MS21044N3 (96906)	EA	3									20- 10	44		
X2 0 00010	5310-877-5797	NUT, SELF-LOCKING: NO. 10-32 UNF 3B MS21044N3 (96906)	EA	4									20- 10	49		
X2 0 00011	5305-984-7341	SCREW, MACHINE: COUNTERSUNK HEAD, NO. 10-32 X 5/8 IN. LG MS35191-273 (96906)	EA	3									20- 10	46		
X2 0 00012	5305-993-1851	SCREW, MACHINE: PAN HEAD, NO. 10-32 X 1 IN. LG MS35207-267 (96906)	EA	4									20- 10	51		
P 0 00013	2910-470-1301	TANK ASSEMBLY, FUEL 13216E7510 (97403)	EA	1	*	*	1	*	*	1	3	3	20- 10	40		
X2 0 00014		ELBOW: 90 DEG, 5/16 IN. NOM. TUBE OD, SAEJ514 (81343)	EA	2									20- 15	17		
P 0 00015	2910-450-6565	FILTER, FUEL: 9.25 IN. LG 13216E7570-1 (97403)	EA	2	4	8	17	4	8	17	200	200	20- 15	6		
X2 0 00016		FILLER, NECK 13216E7569 (97403)	EA	1									20- 15	13		
X2 0 00017		GAGE, LIQUID LEVEL: 13.25 IN. LG 13216E7459-2 (97403)	EA	1									20- 15	11		
P 0 00018	5330-356-7904	GASKET, GAGE PLATE 13216E7571 (97403)	EA	1	2	4	8	2	4	8	100	100	20- 15	8		
P 0 00019	5330-350-3965	GASKET, FILLER NECK 13216E7572 (97403)	EA	1	2	4	8	2	4	8	100	100	20- 15	12		
X2 0 00020	5310-984-3806	NUT, SELF-LOCKING: 5/16-18 THD SIZE, TANK MTC MS51922-9 (96906)	EA	4									20- 15	2		
X2 0 00021		PLATE, MOUNTING: FUEL GAGE 13216E7568 (97403)	EA	1									20- 15	7		
X2 0 00022	4730-223-9268	PLUG, SQUARE HEAD, PIPE: 1/4 IN. NPT MS20913-2D (96906)	EA	1									20- 15	5		
X2 0 00023	5306-225-8499	SCREW, CAP: 5/16-18 X 1 IN. LG TANK MTC MS90725-34 (96906)	EA	4									20- 15	4		
X2 0 00024	5305-989-7435	SCREW, MACHINE: PAN HEAD, NO. 10-32 X 5/8 IN. LG MS35207-264 (96906)	EA	14									20- 15	9		

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 0 00025	5305-989-7435	SCREW, MACHINE: PAN HEAD, NO. 10-32 X 5/8 IN. LG MS35207-264 (96906)	EA	22									20- 15	14
X2 0 00026		TANK, FUEL 13216E7567 (97403)	EA	1									20- 15	1
X2 0 00027	5310-081-4219	WASHER, FLAT: 5/16 IN. BSC, TANK MTG MS27183-12 (96906)	EA	4									20- 15	3
X2 0 00028	5310-045-3296	WASHER, LOCK: NO. 10 NOM. NECK MTG MS35338-43 (96906)	EA	22									20- 15	15
X2 0 00029	5310-045-3296	WASHER, LOCK: NO. 10 NOM. MS35338-43 (96906)	EA	14									20- 15	10
X2 0 00030	5310-014-5850	WASHER, FLAT MS27183-42 (96906)	EA	3									20- 10	45
X2 0 00031	5310-014-5850	WASHER, FLAT: NO. 10-32 THD SIZE MS27183-42 (96906)	EA	4									20- 10	50
00032		GROUP 15 - FRAME												
00033		1501 - FRAME ASSEMBLY												
X2 DR 00034	2330-141-8052	CHASSIS, TRAILER, M103A3 13216E7431 (97403)	EA	1									20- 12	1
00035		1507 - LEVELING JACKS												
X2 0 00036	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16 THD SIZE MS51922-17 (96906)	EA	3									20- 13	22
X2 0 00037	5305-269-3213	SCREW, CAP, HEXAGON HEAD: 3/8-16 X 1 1/4 IN. LG MS90725-62 (96906)	EA	3									20- 13	23
P 0 00038	2590-318-6691	TRAILER LEG PROP ASSEMBLY 13214E1206 (97403)	EA	1	*	*	2	*	*	2	10	10	20- 13	24
00039		GROUP 18 - BODY												
00040		1808 - STOWAGE RACKS, BOXES AND CABLE REELS												
X2 0 00041		ACCESSORY BOX 13205E4949 (97403)	EA	1									20- 10	56
X2 0 00042		BRACKET, REEL 13205E5092 (97403)	EA	1									20- 10	98
X2 0 00043	5340-999-6277	BRACKET ASSEMBLY, SLEDGE HAMMER 13214E1214 (97403)	EA	1									20- 11	18
X2 0 00044	2590-932-7298	CLAMP, GROUND ROD 13212E3617 (97403)	EA	4									20- 11	14
X2 0 00045	2590-932-7298	CLAMP, GROUND ROD: 6 FT 13212E3617 (97403)	EA	2									20- 10	10
X2 0 00046	5340-914-2578	CLIP, SPRING, SLEDGE HAMMER 13214E1213-1 (97403)	EA	1									20- 11	23
X2 0 00047		HOLDER ASSEMBLY 13216E7506 (97403)	EA	1									20- 10	25
X2 0 00048		HOLDER 13216E7508 (97403)	EA	1									20- 18	1
X2 0 00049		CLAMP 13216E7507 (97403)	EA	1									20- 18	3

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 0 00050		KNOB: 5/16-18 UNC 2B 13205E5105-2 (97403)		EA	1								20- 18	2
X2 0 00051	5315-143-6284	PIN, SPRING, CORROSION RESISTANT STEEL, 1/8 IN. DIA X 1 IN. LG MS171534 (96906)		EA	1								20- 18	5
X2 0 00052		SHAFT 13216E7509 (97403)		EA	1								20- 18	4
X2 0 00053		HOLDER ASSEMBLY 13216E7493 (97403)		EA	2								20- 10	21
X2 0 00054		HOLDER 13216E7495 (97403)		EA	1								20- 18	6
X2 0 00055		CLAMP 13216E7494 (97403)		EA	1								20- 18	7
X2 0 00056		KNOB: 5/16-18 UNC 2B 13205E5105-2 (97403)		EA	1								20- 18	11
X2 0 00057	5310-984-3806	NUT, SELF-LOCKING, HEXAGON: 5/16-18 UNC MS51922-9 (96906)		EA	1								20- 18	15
X2 0 00058	5315-842-3044	PIN, COTTER: 3/32 IN. NOM. DIA X 3/4 IN. LG MS24665-283 (96906)		EA	2								20- 18	10
X2 0 00059	5315-842-3044	PIN, COTTER: 3/32 IN. NOM. DIA 3/4 IN. LG MS24665-283 (96906)		EA	2								20- 18	14
X2 0 00060		TEE 13216E7496 (97403)		EA	1								20- 18	8
X2 0 00061		TEE 13216E7496 (97403)		EA	1								20- 18	12
X2 0 00062	5310-081-4219	WASHER, FLAT: 3/8 IN. BSC SIZE MS27183-12 (96906)		EA	3								20- 18	9
X2 0 00063	5310-081-4219	WASHER, FLAT: 3/8 IN. BSC SIZE MS27183-12 (96906)		EA	3								20- 18	13
X2 0 00064	5310-933-8121	WASHER, LOCK: 1/4 IN. NOM. SIZE MS35338-139 (96906)		EA	2								20- 13	8
X2 0 00065	5310-080-8495	NUT, PLAIN, WING: 1/4-20 UNC 2B MS35425-39 (96906)		EA	2								20- 13	7
X2 0 00066	5310-984-3806	NUT, SELF-LOCKING, HEXAGON: 5/16-18 UNC MS51922-9 (96906)		EA	12								20- 10	2
X2 0 00067	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)		EA	4								20- 10	7
X2 0 00068	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)		EA	8								20- 10	22
X2 0 00069	5310-984-3806	NUT, SELF-LOCKING: 5/16-18 UNC MS51922-9 (96906)		EA	8								20- 10	26
X2 0 00070	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: MS51922-1 (96906)		EA	4								20- 10	57
X2 0 00071	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)		EA	16								20- 10	67
X2 0 00072	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)		EA	3								20- 10	81
X2 0 00073	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)		EA	3								20- 10	84

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 0 00074	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)	EA	4									20- 10	99
X2 0 00075	5310-984-3806	NUT, SELF-LOCKING, HEXAGON: 5/16-18 UNC MS51922-9 (96906)	EA	16									20- 11	7
X2 0 00076	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)	EA	8									20- 11	15
X2 0 00077	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)	EA	2									20- 11	19
X2 0 00078	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)	EA	1									20- 11	24
X2 0 00079	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)	EA	16									20- 16	2
X2 0 00080	5310-984-3806	NUT, SELF-LOCKING, HEXAGON: 5/16-18 UNC MS51922-9 (96906)	EA	16									20- 16	5
X2 0 00081	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)	EA	16									20- 17	1
X2 0 00082	5310-984-3806	NUT, SELF-LOCKING MS51922-9 (96906)	EA	16									20- 17	4
P 0 00083	5315-059-0206	PIN, COTTER: STEEL CADMIUM PLATED, 3/16 IN. DIA X 1 IN. LG, REEL SHAFT MS24665-491 (96906)	EA	1	*	*	*	*	*	*	*	*		
X2 0 00084		PLATFORM 13216E7503 (97403)	EA	4									20- 10	66
X2 0 00085		RACK 13216E7497 (97403)	EA	1									20- 10	5
X2 0 00086		RACK 13216E7502 (97403)	EA	2									20- 11	6
X2 0 00087		RACK ASSEMBLY, CURBSIDE 13216E7513 (97403)	EA	1									20- 10	41
X2 0 00088		RACK, CURBSIDE 13216E7514 (97403)	EA	1									20- 17	7
X2 0 00089		BRACKET 13216E7517 (97403)	EA	1									20- 17	12
X2 0 00090		BRACKET 13216E7521 (97403)	EA	2									20- 17	13
X2 0 00091		CLAMP 13216E7515 (97403)	EA	1									20- 17	22
X2 0 00092	5310-877-5797	NUT, SELF-LOCKING: NO. 10-32 UNF 3B MS21044N3 (96906)	EA	26									20- 17	9
X2 0 00093	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)	EA	4									20- 17	14
X2 0 00094	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)	EA	2									20- 17	19
X2 0 00095	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)	EA	2									20- 17	27
X2 0 00096	5315-839-5822	PIN, COTTER: 1/8 X 1 IN. LG MS24665-353 (96906)	EA	1									20- 17	23
X2 0 00097	5315-842-3154	PIN, STRAIGHT HEADED: 1/2 X 1 27/64 IN. LG MS35810-36 (96906)	EA	1									20- 17	25

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 0 00098		RUNNER, NYLON 13216E7520 (97403)	EA	2									20- 17	8
X2 0 00099	5305-071-2234	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 2 3/4 IN. LG MS90725-17 (96906)	EA	4									20- 17	16
X2 0 00100	5305-071-2234	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 2 3/4 IN. LG MS90725-17 (96906)	EA	2									20- 17	21
X2 0 00101	5305-071-2234	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 2 3/4 IN. LG MS90725-17 (96906)	EA	2									20- 17	29
X2 0 00102	5305-993-1848	SCREW, MACHINE: PAN HEAD, NO. 10-32 X 3/4 IN. LG MS35207-265 (96906)	EA	26									20- 17	11
X2 0 00103		SUPPORT, ROLLER 13216E7518 (97403)	EA	1									20- 17	18
X2 0 00104		SUPPORT, ROLLER 13216E7519 (97403)	EA	1									20- 17	26
X2 0 00105	5310-809-8546	WASHER, FLAT: NO. 10-32 BSC SIZE MS27183-8 (96906)	EA	26									20- 17	10
X2 0 00106	5310-809-4058	WASHER, FLAT: 1/4-20 BSC SIZE MS27183-10 (96906)	EA	4									20- 17	15
X2 0 00107	5310-809-4058	WASHER, FLAT: 1/4-20 BSC SIZE MS27183-10 (96906)	EA	2									20- 17	20
X2 0 00108	5310-809-5998	WASHER, FLAT: 1/2 IN. BSC SIZE MS27183-18 (96906)	EA	1									20- 17	24
X2 0 00109	5310-809-4058	WASHER, FLAT: 1/4-20 BSC SIZE MS27183-10 (96906)	EA	2									20- 17	28
X2 0 00110		RACK ASSEMBLY, ROADSIDE 13216E7511 (97403)	EA	1									20- 10	65
X2 0 00111		RACK, ROADSIDE 13216E7512 (97403)	EA	1									20- 16	1
X2 0 00112		BRACE: 3.62 IN. LG 13216E7522-2 (97403)	EA	1									20- 10	80
X2 0 00113		BRACKET 13216E7517 (97403)	EA	1									20- 16	12
X2 0 00114		BRACKET 13216E7521 (97403)	EA	2									20- 16	13
X2 0 00115		CLAMP 13216E7515 (97403)	EA	1									20- 16	22
X2 0 00116	5310-877-5797	NUT, SELF-LOCKING, HEXAGON: NO. 10-32 UNF 3B MS21044N3 (96906)	EA	26									20- 16	9
X2 0 00117	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)	EA	4									20- 16	14
X2 0 00118	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)	EA	2									20- 16	19
X2 0 00119	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)	EA	2									20- 16	27
X2 0 00120	5315-839-5822	PIN, COTTER: 1/8 IN. DIA X 1 IN. LG MS24665-353 (96906)	EA	1									20- 16	23
X2 0 00121	5315-842-3154	PIN, STRAIGHT HEADED: 1/2 IN. DIA X 1 27/64 IN. LG MS35810-36 (96906)	EA	1									20- 16	25

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 0 00122		ROLLER 13216E7523 (97403)	EA	1									20- 16	17
X2 0 00123		ROLLER 13216E7523 (97403)	EA	1									20- 17	17
X2 0 00124		RUNNER, NYLON 13216E7520 (97403)	EA	2									20- 16	8
X2 0 00125	5305-071-2234	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 2 3/4 IN. LG MS90725-17 (96906)	EA	4									20- 16	16
X2 0 00126	5305-071-2234	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 2 3/4 IN. LG MS90725-17 (96906)	EA	2									20- 16	21
X2 0 00127	5305-071-2234	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 2 3/4 IN. LG MS90725-17 (96906)	EA	2									20- 16	29
X2 0 00128	5305-993-1848	SCREW, MACHINE: PAN HEAD, NO. 10-32 X 3/4 IN. LG MS35207-265 (96906)	EA	26									20- 16	11
X2 0 00129		SUPPORT, ROLLER 13216E7518 (97403)	EA	1									20- 16	18
X2 0 00130		SUPPORT, ROLLER 13216E7519 (97403)	EA	1									20- 16	26
X2 0 00131	5310-809-8546	WASHER, FLAT: NO. 10-32 BSC SIZE MS27183-8 (96906)	EA	26									20- 16	10
X2 0 00132	5310-809-4058	WASHER, FLAT: 1/4-20 BSC SIZE MS27183-10 (96906)	EA	4									20- 16	15
X2 0 00133	5310-809-4058	WASHER, FLAT: 1/4-20 BSC SIZE MS27183-10 (96906)	EA	2									20- 16	20
X2 0 00134	5310-809-5998	WASHER, FLAT: 1/2 IN. BSC SIZE MS27183-18 (96906)	EA	1									20- 16	24
X2 0 00135	5310-809-4058	WASHER, FLAT: 1/4-20 BSC SIZE MS27183-10 (96906)	EA	2									20- 16	28
X2 0 00136		REEL, CABLE 13214E1425 (97403)	EA	1									20- 10	97
X2 0 00137	5306-225-9081	SCREW, CAP, HEXAGON HEAD: 5/16-18 X 1 1/4 IN. LG MS90725-36 (96906)	EA	6									20- 10	4
X2 0 00138	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)	EA	8									20- 10	24
X2 0 00139	5306-225-9081	SCREW, CAP, HEXAGON HEAD: 5/16 X 1 1/4 IN. LG MS90725-36 (96906)	EA	8									20- 10	28
X2 0 00140	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)	EA	4									20- 10	59
X2 0 00141	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)	EA	16									20- 10	69
X2 0 00142	5305-068-0502	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 3/4 IN. LG MS90725-6 (96906)	EA	3									20- 10	83
X2 0 00143	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)	EA	3									20- 10	86
X2 0 00144	5305-068-0502	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 3/4 IN. LG MS90725-6 (96906)	EA	4									20- 10	101

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
						1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 0 00145	5305-068-0502	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 3/4 IN. LG MS90725-6 (96906)		EA	2									20- 11	21
X2 0 00146	5305-068-0502	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 3/4 IN. LG MS90725-6 (96906)		EA	1									20- 11	26
X2 0 00147	5305-721-8010	SCREW, CAP, HEXAGON: 1/4-20 X 2 IN. LG MS35307-314 (96906)		EA	2									20- 13	10
X2 0 00148	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4-20 UNC X 1 IN. LG MS90725-8 (96906)		EA	16									20- 16	4
X2 0 00149	5305-225-8499	SCREW, CAP, HEXAGON HEAD: 5/16-18 X 1 IN. LG MS90725-34 (96906)		EA	16									20- 16	7
X2 0 00150	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)		EA	16									20- 17	3
X2 0 00151	5305-225-8499	SCREW, CAP, HEXAGON HEAD: 5/16-18 X 1 IN. LG MS90725-34 (96906)		EA	16									20- 17	6
X2 0 00152	5305-225-3839	SCREW, MACHINE: 1/4-20 X 1 IN. LG MS90725-8 (96906)		EA	8									20- 11	17
X2 0 00153	5305-958-6073	SCREW, MACHINE: 82 DEG, FLAT, 5/16-18 X 1 3/4 IN. LG MS35190-309 (96906)		EA	6									20- 10	1
X2 0 00154	5309-071-2241	SCREW, MACHINE: 82 DEG, FLAT, 1/4-20 X 1 1/4 IN. LG MS90725-10 (96906)		EA	4									20- 10	9
X2 0 00155		SHIELD 13216E7433 (97403)		EA	1									20- 13	6
X2 0 00156		SUPPORT, REEL 13205E5093 (97403)		EA	1									20- 10	102
X2 0 00157	5310-081-4219	WASHER, FLAT: 5/16 IN. BSC SIZE MS27183-12 (96906)		EA	12									20- 10	3
X2 0 00158	5310-809-3078	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-11 (96906)		EA	4									20- 10	8
X2 0 00159	5310-809-3078	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-11 (96906)		EA	8									20- 10	23
X2 0 00160	5310-081-4219	WASHER, FLAT: 5/16 IN. BSC SIZE MS27183-12 (96906)		EA	8									20- 10	27
X2 0 00161	5310-809-3078	WASHER, FLAT: 1/4-20 BSC SIZE MS27183-11 (96906)		EA	4									20- 10	58
X2 0 00162	5310-809-3078	WASHER, FLAT: 1/4-20 IN. BSC SIZE MS27183-11 (96906)		EA	16									20- 10	68
X2 0 00163	5310-809-3078	WASHER, FLAT: 1/4-20 IN. BSC SIZE MS27183-11 (96906)		EA	3									20- 10	82
X2 0 00164	5310-809-3078	WASHER, FLAT: 1/4-20 IN. BSC SIZE MS27183-11 (96906)		EA	3									20- 10	85
X2 0 00165	5310-809-3078	WASHER, FLAT: 1/4-20 IN. BSC SIZE MS27183-11 (96906)		EA	4									20- 10	100
X2 0 00166	5310-081-4219	WASHER, FLAT: 5/16 IN. BSC SIZE MS27183-12 (96906)		EA	16									20- 11	8
X2 0 00167	5310-809-3078	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-11 (96906)		EA	8									20- 11	16
X2 0 00168	5310-809-3078	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-11 (96906)		EA	2									20- 11	20

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 O 00169	5310-809-3078	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-11 (96906)	EA	1									20- 11	25
X2 O 00170	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	4									20- 13	9
X2 O 00171	5310-809-3078	WASHER, FLAT: 1/4-20 IN. BSC SIZE MS27183-11 (96906)	EA	16									20- 16	3
X2 O 00172	5310-081-4219	WASHER, FLAT: 5/16-18 IN. BSC SIZE MS27183-12 (96906)	EA	16									20- 16	6
X2 O 00173	5310-809-3078	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-11 (96906)	EA	16									20- 17	2
X2 O 00174	5310-081-4219	WASHER, FLAT: 5/16 IN. BSC SIZE MS27183-12 (96906)	EA	16									20- 17	5
00175		1810 - CARGO BODY												
X2 D 00176		BODY, TRAILER 13216E7432 (97403)	EA	1									20- 12	2
X2 D 00177		BOLT, HEXAGON: 5/8-11 UNC 2A X 6 1/2 IN. LG FFB575TYPE3 (81349)	EA	2									20- 12	5
X2 O 00178		BRACE 13216E7522-1 (97403)	EA	1									20- 10	33
X2 D 00179	5310-269-4040	NUT, SELF-LOCKING: 5/8-11 UNC MS51922-49 (96906)	EA	8									20- 12	3
X2 O 00180	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16 UNC MS51922-17 (96906)	EA	12									20- 13	1
X2 O 00181	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)	EA	3									20- 10	34
X2 O 00182	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)	EA	3									20- 10	37
X2 D 00183	5305-724-5911	SCREW, CAP, HEXAGON HEAD: 5/8-11 X 1 3/4 IN. LG MS90725-163 (96906)	EA	6									20- 12	6
X2 O 00184	5305-269-3211	SCREW, CAP, HEXAGON HEAD: 3/8-16 X 1 IN. LG MS90725-60 (96906)	EA	16									20- 13	5
X2 O 00185	5305-068-0502	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 3/4 IN. LG MS90725-6 (96906)	EA	3									20- 10	36
X2 O 00186	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)	EA	3									20- 10	39
X2 D 00187		SHIM (AS REQUIRED) 13212E3590 (97403)	EA										20- 13	4
X2 D 00188	5310-823-8003	WASHER, FLAT: 5/8 IN. BSC SIZE MS27183-21 (96906)	EA	8									20- 12	4
X2 O 00189	5310-080-6004	WASHER, FLAT: 3/8 IN. BSC SIZE MS27183-14 (96906)	EA	16									20- 13	3
X2 O 00190	5310-637-9541	WASHER, LOCK: 3/8 IN. NOM. SIZE MS35338-46 (96906)	EA	4									20- 13	2
X2 O 00191	5310-809-3078	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-11 (96906)	EA	3									20- 10	35
X2 O 00192	5310-809-3078	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-11 (96906)	EA	3									20- 10	38

(1) SWR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
00193		GROUP 22 - BODY ACCESSORY ITEMS												
00194		2201 - CANVAS ITEMS												
X2 0 00195	5340-764-2334	LOOP, STRAP, FASTENER: 1 1/4 IN. SIZE MS51939-1 (96906)	EA	7									20- 10	71
X2 0 00196	5340-764-2334	LOOP, STRAP, FASTENER: 1 1/4 IN. SIZE MS51939-1 (96906)	EA	6									20- 10	76
X2 0 00197	5340-764-2334	LOOP, STRAP, FASTENER: 1 1/4 IN. SIZE MS51939-1 (96906)	EA	1									20- 10	88
X2 0 00198	5310-811-3494	NUT, SELF-LOCKING, HEXAGON: NO. 8-32 UNC 3B MS21044N08 (96906)	EA	14									20- 10	72
X2 0 00199	5310-811-3494	NUT, SELF-LOCKING, HEXAGON: NO. 8-32 UNC 3B MS21044N08 (96906)	EA	12									20- 10	77
X2 0 00200	5310-811-3494	NUT, SELF-LOCKING, HEXAGON: NO. 8-32 UNC 3B MS21044N08 (96906)	EA	2									20- 10	89
X2 0 00201	5305-984-6195	SCREW, MACHINE: PAN HEAD, NO. 8-32 X 3/4 IN. LG MS35206-247 (96906)	EA	14									20- 10	74
X2 0 00202	5305-984-6195	SCREW, MACHINE: PAN HEAD, NO. 8-32 X 3/4 IN. LG MS35206-247 (96906)	EA	2									20- 10	79
X2 0 00203	5305-984-6195	SCREW, MACHINE: PAN HEAD, NO. 8-32 X 3/4 IN. LG MS35206-247 (96906)	EA	2									20- 10	91
P 0 00204	5340-195-5656	STRAP, WEBBING: 22 IN. LG 13216E7504 (97403)	EA	7	*	*	*	*	*	*	*	*	20- 10	70
P 0 00205	5340-197-5029	STRAP, WEBBING: 21 IN. LG 13216E7505-1 (97403)	EA	6	*	*	2	*	*	2	10	10	20- 10	75
P 0 00206	5340-409-3880	STRAP, WEBBING: 34 IN. LG 13216E7505-2 (97403)	EA	1	*	*	2	*	*	2	10	10	20- 10	87
P OR 00207	6115-459-5946	TARPAULIN 13216E7434 (97403)	EA	1	*	2	2	*	2	2	13	13	20- 13	12
X2 0 00208		WASHER, FLAT: NO. 8-32 BSC SIZE MS27183-41 (96906)	EA	14									20- 10	73
X2 0 00209		WASHER, FLAT: NO. 8-32 BSC SIZE MS27183-41 (96906)	EA	12									20- 10	78
X2 0 00210		WASHER, FLAT: NO. 8-32 BSC SIZE MS2 183-41 (96906)	EA	2									20- 10	90
00211		2202 - ACCESSORY ITEMS												
P 0 00212	2540-924-8478	BOW, TRAILER TARPAULIN: 68 IN. H 13212E3597-1 (97403)	EA	4	*	*	2	*	*	2	8	8	20- 13	11
P 0 00213	2540-926-1003	BOW, TRAILER TARPAULIN: 55.75 IN. H 13212E3597-2 (97403)	EA	2	*	*	*	*	*	*	4	4	20- 13	13
X2 0 00214	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 IN. UNC MS51922-1 (96906)	EA	8									20- 13	15
X2 0 00215	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 IN. UNC MS51922-1 (96906)	EA	4									20- 13	19
P 0 00216	9905-202-3639	REFLECTOR, AMBER, CLEARANCE INDICATOR MS35387-2 (96906)	EA	2	*	*	*	*	*	*	6	6	20- 13	18


(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
P O 00217	9905-205-2795	REFLECTOR, RED, CLEARANCE INDICATOR MS35387-1 (96906)	EA	4	*	2	2	*	2	2	12	12	20- 13	14
P O 00218	5975-928-8865	ROD, GROUND: 6 FT MILR11461TYPE2STILE3 (81349)	EA	2	*	*	*	*	*	*	*	*	20- 10	6
X2 O 00219	5305-068-0500	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1/2 IN. LG MS90725-3 (96906)	EA	8									20- 13	17
X2 O 00220	5305-068-0500	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1/2 IN. LG MS90725-3 (96906)	EA	4									20- 13	21
X2 O 00221	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	8									20- 13	16
X2 O 00222	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	4									20- 13	20
00223		2210 - DATA PLATES												
X2 O 00224		PLATE, IDENTIFICATION: GROUND TERMINAL 13205E4918 (97403)	EA	1									20- 10	96
X2 O 00225		PLATE, IDENTIFICATION: PU-631/G 13205E4916-23 (97403)	EA	1									20- 10	16
X2 O 00226		PLATE, INFORMATION: WIRING DIAGRAM 13212E3587 (97403)	EA	1										
00227		GROUP 29 - AUXILIARY GENERATORS AND ENGINE												
00228		2901 - GENERATOR AND ENGINE ASSEMBLY												
X2 FR 00229	6115-017-8240	GENERATOR SET: SF5.OMD MILG52279TYPE1 (81349)	EA	2									20- 10	11
X2 F 00230	5310-225-6993	NUT, SELF-LOCKING, HEXAGON MS51922-33 (96906)	EA	8									20- 10	12
X2 F 00231	5305-782-9494	SCREW, CAP, HEXAGON HEAD: 1/2-13 X 1 3/4 IN. LG MS90725-114 (96906)	EA	8									20- 10	15
X2 F 00232	5310-520-3091	WASHER, BEVELED: 1/2 IN. NOM. SIZE 13206E4482-2 (97403)	EA	8									20- 10	14
X2 F 00233	5310-809-3079	WASHER, FLAT: 1/2 IN. BSC SIZE MS27183-19 (96906)	EA	8									20- 10	13
00234		2941 - ENGINE EXHAUST												
X2 O 00235		ELBOW, STREET: 45 DEG SAEJ926 (81343)	EA	2									20- 10	64
X2 O 00236	6115-947-3335	EXHAUST, TUBE 13214E1487 (97403)	EA	1									20- 10	17
X2 O 00237	6115-947-3335	EXHAUST, TUBE 13214E1487 (97403)	EA	1									20- 10	60
X2 O 00238	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)	EA	2									20- 10	18
X2 O 00239	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)	EA	2									20- 10	61
X2 O 00240	5305-071-2242	SCREW, CAP, HEXAGON: 1/4-20 X 1 1/8 IN. LG MS90725-9 (96906)	EA	2									20- 10	63

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION		
						(a)	(b)	(c)	(a)	(b)	(c)			(a) FIG. NO.	(b) ITEM NO.	
						1-20	21-50	51-100	1-20	21-50	51-100					
X2 O 00241	5305-071-2242	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1 1/8 IN. LG MS90725-9 (96906)		EA	2										20- 10	20
X2 O 00242	5310-809-3078	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-11 (96906)		EA	2										20- 10	19
X2 O 00243	5310-809-3078	WASHER, FLAT: 1/4-20 BSC SIZE MS27183-11 (96906)		EA	2										20- 10	62
00244		GROUP 42 - ELECTRICAL EQUIPMENT														
00245		4202 - ELECTRICAL CONTROLS														
X2 F 00246		BRACKET, DISTRIBUTION BOX 13216E7499 (97403)		EA	1										20- 10	107
P F 00247	6110-913-9275	DISTRIBUTION BOX 13212E3601 (97403)		EA	1	*	*	*	*	*	*	2	2		20- 10	103
X2 F 00248	6115-104-4550	BOX 13212E3603 (97403)		EA	1										20- 14	1
X2 F 00249		COVER 13212E3603 (97403)		EA	1										20- 14	13
X2 F 00250		GASKET 13212E3610 (97403)		EA	1										20- 14	4
X2 F 00251		LIGHT AND WIRE: 12 IN. LG 13212E3581-1 (97403)		EA	2										20- 14	28
X2 F 00252	5310-924-4218	NUT, PLAIN, HEXAGON: 1/4-28 UNC MS51970-1 (96906)		EA	9										20- 14	23
X2 F 00253		NUT, PLAIN, HEXAGON: JAM, MS16203-37 (96906)		EA	8										20- 14	11
X2 F 00254	5310-934-9758	NUT, PLAIN, HEXAGON: MACHINE SCREW, NO. 10-24 MS35649-202 (96906)		EA	6										20- 14	5
X2 F 00255	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16 UNC MS51922-17 (96906)		EA	4										20- 14	19
X2 F 00256	5330-579-8108	PACKING, PREFORMED: O RING MS28775-111 (96906)		EA	1										20- 14	18
X2 F 00257	5330-684-3420	PACKING, PREFORMED: O RING MS28775-013 (96906)		EA	4										20- 14	22
X2 F 00258	5330-802-5905	PACKING, PREFORMED: O RING MS28775-132 (96906)		EA	2										20- 14	27
X2 F 00259	5305-984-6214	SCREW, MACHINE: PAN HEAD, NO. 10-24 X 1 IN. LG MS35206-267 (96906)		EA	6										20- 14	8
X2 O 00260	5305-989-7434	SCREW, MACHINE: PAN HEAD, NO. 10-32 X 1/2 IN. LG MS35206-263 (96906)		EA	16										20- 14	14
X2 F 00261	5305-984-5695	SCREW, MACHINE: PAN HEAD, 3/8-16 X 2 IN. LG MS35206-315 (96906)		EA	4										20- 14	21
X2 F 00262		SCREW, MACHINE: PAN HEAD, 1/4-28 X 7/16 IN. LG MS35215-68 (96906)		EA	9										20- 14	25
X2 F 00263		STUFFING TUBE 13212E3582-2D (97403)		EA	2										20- 14	26
P F 00264	5930-829-3243	SWITCH, ROTARY: 60 AMP 13205E5023 (97403)		EA	1	*	*	*	*	*	*	2	2		20- 14	17
X2 F 00265		TERMINAL, BOARD 13212E3606 (97403)		EA	1										20- 14	3

(1)	(2)	(3)	(4)	(5)	(6)			(7)			(8)	(9)	(10)		
SMR CODE	FEDERAL STOCK NUMBER	DESCRIPTION	USABLE ON CODE	UNIT OF MEAS	QTY INC IN UNIT	30-DAY DS MAINT ALLOWANCE			30-DAY GS MAINT ALLOWANCE			1-YR ALW PER 100 EQUIP CNTGY	DEPOT MAINT ALW PER 100 EQUIP	ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
		REF NUMBER & MFR CODE				1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
P F 00266	5940-904-9634	TERMINAL, LOAD 13208E5820-6 (97403)	EA	4	*	*	*	*	*	*	*	*	*	20- 14	9
X2 F 00267	5940-660-3631	TERMINAL, LUG MS25036-150 (96906)	EA	4										20- 14	29
X2 O 00268	5310-809-8546	WASHER, FLAT MS27183-8 (96906)	EA	12										20- 14	
X2 O 00269	5310-809-8546	WASHER, FLAT: NO. 10 SCREW SIZE MS27183-8 (96906)	EA	16										20- 14	16
X2 F 00270	5310-080-6004	WASHER, FLAT: 3/8 IN. SCREW SIZE MS27183-14 (96906)	EA	8										20- 14	20
X2 F 00271	5310-045-3296	WASHER, LOCK: NO. 10 MS35338-43 (96906)	EA	6										20- 14	6
X2 F 00272	5310-184-8970	WASHER, LOCK: 1/4 IN. MS35338-101 (96906)	EA	8										20- 14	12
X2 O 00273	5310-045-3296	WASHER, LOCK: NO. 10 SCREW SIZE MS35338-43 (96906)	EA	16										20- 14	15
X2 F 00274	5310-942-5109	WASHER, LOCK: FLAT, EXTERNAL TOOTH, 1/4 IN. MS35335-89 (96906)	EA	19										20- 14	24
X2 F 00275	5310-022-8834	WASHER, LOCK: FLAT, INTERNAL TOOTH, 1/4 IN. MS35338-108 (96906)	EA	4										20- 14	10
X2 F 00276	5310-809-5997	NUT, SELF-LOCKING, HEXAGON, 3/8-16 UNC MS27183-17 (96906)	EA	4										20- 10	104
X2 F 00277	5310-087-4652	NUT, SELF-LOCKING: 3/8-16 UNC MS51922-17 (96906)	EA	2										20- 10	108
X2 F 00278	5305-269-3211	SCREW, CAP, HEXAGON HEAD: 3/8-16 X 1 IN. LG MS90725-60 (96906)	EA	4										20- 10	106
X2 F 00279	5305-269-3211	SCREW, CAP: 3/8-16 X 1 IN. LG MS90725-60 (96906)	EA	2										20- 10	110
X2 F 00280	5310-809-4061	WASHER, FLAT: 3/8 IN. BSC SIZE MS27183-15 (96906)	EA	4										20- 10	105
X2 F 00281	5310-809-4061	WASHER, FLAT: 3/8 IN. BSC SIZE MS27183-15 (96906)	EA	2										20- 10	109
00282		4216 - MISCELLANEOUS WIRING AND FITTINGS													
X2 F 00283	6115-948-7169	CABLE: 85 IN. (W1) 13212E3607 (97403)	EA	1										20- 3	
X2 F 00284	6115-948-7170	CABLE: 60 IN. (W2) 13212E3608 (97403)	EA	1										20- 3	
X2 O 00285		CLAMP, CABLE, SINGLE 13212E3612 (97403)	EA	1										20- 10	29
X2 O 00286	5340-778-2738	CLAMP, LOOP: CABLE, SINGLE MS21333-2 (96906)	EA	2										20- 11	5
O 00287	5340-978-6063	CLAMP, LOOP: DOUBLE CABLE MS21334-30 (96906)	EA	3	*	*	*	*	*	*	*	*	*	20- 10	52
X2 O 00288		CLAMP, CABLE, DOUHLE: 1 5/16 IN. H 13212E3591-2 (97403)	EA	1										20- 10	92
O 00289	5340-930-1754	CLAMP, LOOP, DOUHLE: .188 IN. NOM. ID MS21334-2 (96906)	EA	2	*	*	*	*	*	*	*	*	*	20- 11	5
X2 F 00290		LEAD, ELECTRICAL: TB1-L1 TO S1-L1 (W3) 13212E3609-1 (97403)	EA	1										20- 3	

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 F 00291		LEAD, ELECTRICAL: TB1-L2 TO S1-L2, (W4) 13212E3609-2 (97403)	EA	1									20- 3	
X2 F 00292		LEAD, ELECTRICAL: TB1-L3 TO S1-L3, (W5) 13212E3609-3 (97403)	EA	1									20- 3	
X2 O 00293	5310-918-6921	NUT, PLAIN, HEXAGON: JAM, 3/8-16 UNC 2B MS16203-39 (96906)	EA	3									20- 11	31
X2 O 00294	5310-918-6921	NUT, PLAIN, HEXAGON: JAM MS16203-39 (96906)	EA	1									20- 11	34
X2 O 00295	5310-543-4717	NUT, PLAIN, WING: 3/8-16 UNC 2B MS35425-28 (96906)	EA	1									20- 11	29
X2 O 00296	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)	EA	2									20- 10	30
X2 O 00297	5310-877-5797	NUT, SELF-LOCKING: NO. 10-32 UNF 3B MS21044N3 (96906)	EA	3									20- 10	53
X2 O 00298	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 UNC MS51922-1 (96906)	EA	2									20- 10	93
X2 O 00299	5310-877-5797	NUT, SELF-LOCKING, HEXAGON: NO. 10-32 UNF 3B MS21044N3 (96906)	EA	2									20- 11	2
X2 O 00300	5310-877-5797	NUT, SELF-LOCKING, HEXAGON: NO. 10-32 UNF 3B MS21044N3 (96906)	EA	2									20- 11	2
X2 O 00301	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)	EA	2									20- 10	32
X2 O 00302	5305-071-2242	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1 1/8 IN. LG MS90725-9 (96906)	EA	2									20- 10	95
X2 O 00303	5305-543-4718	SCREW, CAP, HEXAGON HEAD: 3/8-16 X 3/4 IN. LG MS35309-358 (96906)	EA	1									20- 11	36
X2 O 00304	5305-984-7341	SCREW, MACHINE: NO. 10-32 X 5/8 IN. LG MS35191-273 (96906)	EA	3									20- 10	55
X2 O 00305	5305-993-1848	SCREW, MACHINE: PAN HEAD, NO. 10-32 X 3/4 IN. LG MS35207-265 (96906)	EA	2									20- 11	4
X2 O 00306	5305-993-1848	SCREW, MACHINE: PAN HEAD, NO. 10-32 X 3/4 IN. LG MS35207-265 (96906)	EA	2									20- 11	4
X2 O 00307	5307-722-9437	STUD, GROUNDING 13214E1223 (97403)	EA	1									20- 11	28
X2 O 00308	5940-688-6010	TERMINAL, LUG: CRIMP STYLE, 3/8 IN. MS20659-110 (96906)	EA	3									20- 11	27
P O 00309	5940-114-1310	TERMINAL, LUG: CRIMP, NO. 6 WIRE, IOSD MS25036-119TYPE2CL1 (96906)	EA	1	*	*	*	*	*	*	*	*		
X2 O 00310	5940-688-6010	TERMINAL, LUG: 3/8 IN. STUD, NO. 6 WIRE MS20659-10 (96906)	EA	1									20- 11	33
P F 00311	5940-557-4344	TERMINAL, LUG: SIZE 6, STUD 1/4 IN. (AS REQUIRED) MS25036-120 (96906)	EA		*	*	*	*	*	*	*	*		
X2 O 00312	5310-187-2413	WASHER, FLAT: ELECTRIC, 3/8 IN. BSC SIZE AN961-616T (88044)	EA	4									20- 11	30

CS, IM 5-6115-365-1															
(1)	(2)	(3)	(4)	(5)	(6)			(7)			(8)	(9)	(10)		
SMR CODE	FEDERAL STOCK NUMBER	DESCRIPTION	USABLE ON CODE	UNIT OF MEAS	QTY INC IN UNIT	30-DAY DS MAINT ALLOWANCE			30-DAY GS MAINT ALLOWANCE			1-YR ALW PER 100 EQUIP CNTGY	DEPOT MAINT ALW PER 100 EQUIP	ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
		REF NUMBER & MFR CODE				1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 0 00313	5310-809-3078	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-11 (96906)	EA	2										20- 10	31
X2 0 00314	5310-014-5850	WASHER, FLAT: NO. 10-32 BSC SIZE MS27183-42 (96906)	EA	3										20- 10	54
X2 0 00315	5310-809-3078	WASHER, FLAT: 1/4-20 BSC SIZE MS27183-11 (96906)	EA	2										20- 10	94
X2 0 00316	5310- 014-5850	WASHER, FLAT: NO. 10-32 BSC SIZE MS27183-42 (96906)	EA	2										20- 11	3
X2 0 00317	5310- 014-5850	WASHER, FLAT: NO. 10-32 BSC SIZE MS21783-42 (96906)	EA	2										20- 11	3
X2 0 00318	5310-913-9776	WASHER, LOCK: 3/8 IN. NOM. BSC SIZE MS35335-91 (96906)	EA	2										20- 11	32
X2 0 00319	5310-913-9776	WASHER, LOCK: 3/8 IN. NOM. BSC SIZE MS35335-91 (96906)	EA	1										20- 11	35
P 0 00320	6145-395-8799	WIRE, ELECTRICAL: 6 FT LG, NO. 6 AWG QQW343TTPERB (81348)	FT	1		*	*	*	*	*	*	*	*	20- 11	1
P F 00321	6145-578-6594	WIRE, ELECTRICAL: 600V, TYPE 2, SIZE AWG (AS REQUIRED) MIL5086AN6TY2 (04939)	FT			*	*	*	*	*	*	*	*		
P 0 00322	6145-395-8799	WIRE, ELECTRICAL: 8 FT LG, NO. 6 AWG QQW343TTPERB (81348)	FT	1		*	*	*	*	*	*	*	*		
P 0 00323	6145-395-8799	WIRE, ELECTRICAL: 5 FT LG, NO. 6 AWG QQW343TTPERB (81348)	FT	1		*	*	*	*	*	*	*	*		
P 0 00324	6145-395-8799	WIRE, ELECTRICAL: 1 FT LG, NO. 6 AWG QQW343TTPERB (81348)	FT	1		*	*	*	*	*	*	*	*		
P 0 00325	6145-395-8799	WIRE, ELECTRICAL: DRAWN AND ANNEALED (AS REQUIRED) QQW343TTPERB (81348)	FT			*	*	*	*	*	*	*	*		

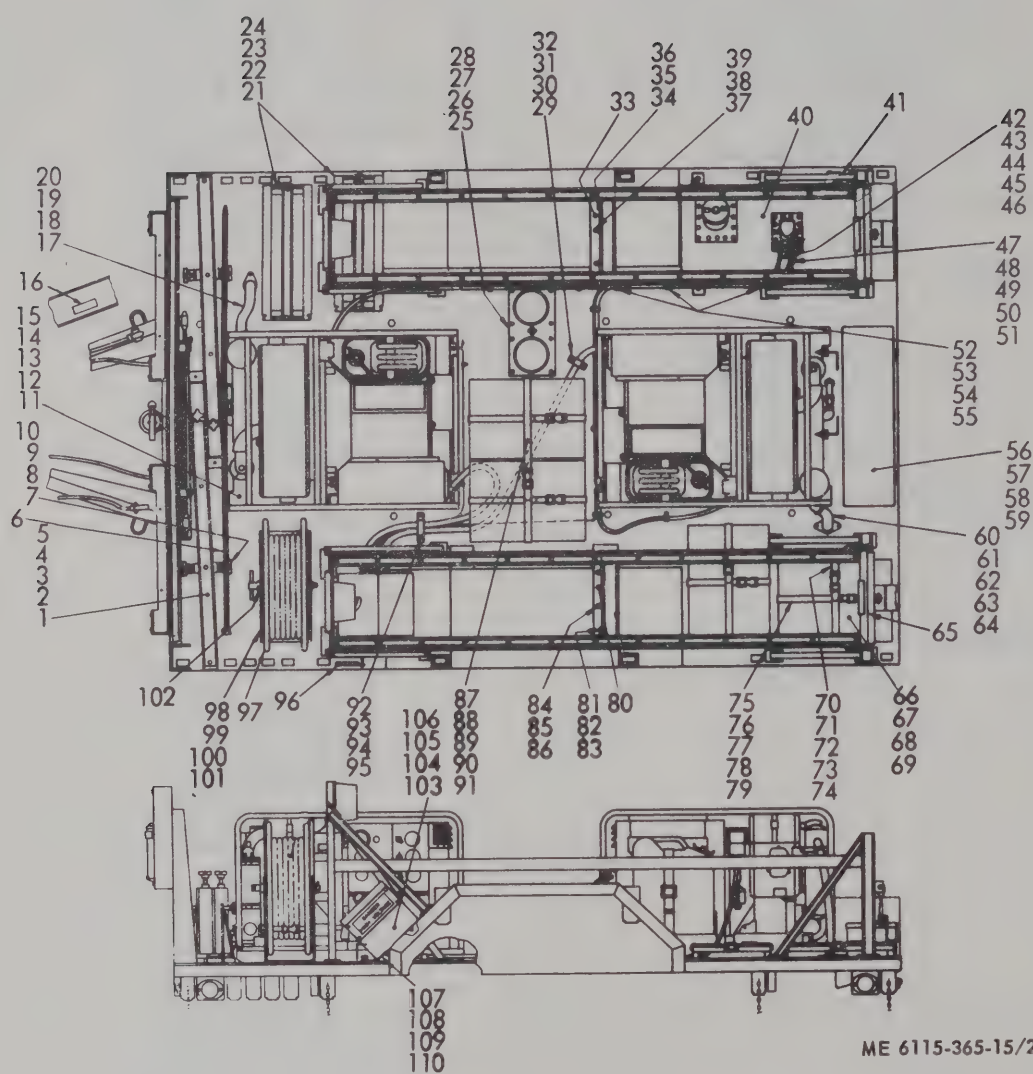

ME 6115-365-15/20-10 C3

Figure 20-10. PU-631/G power unit.



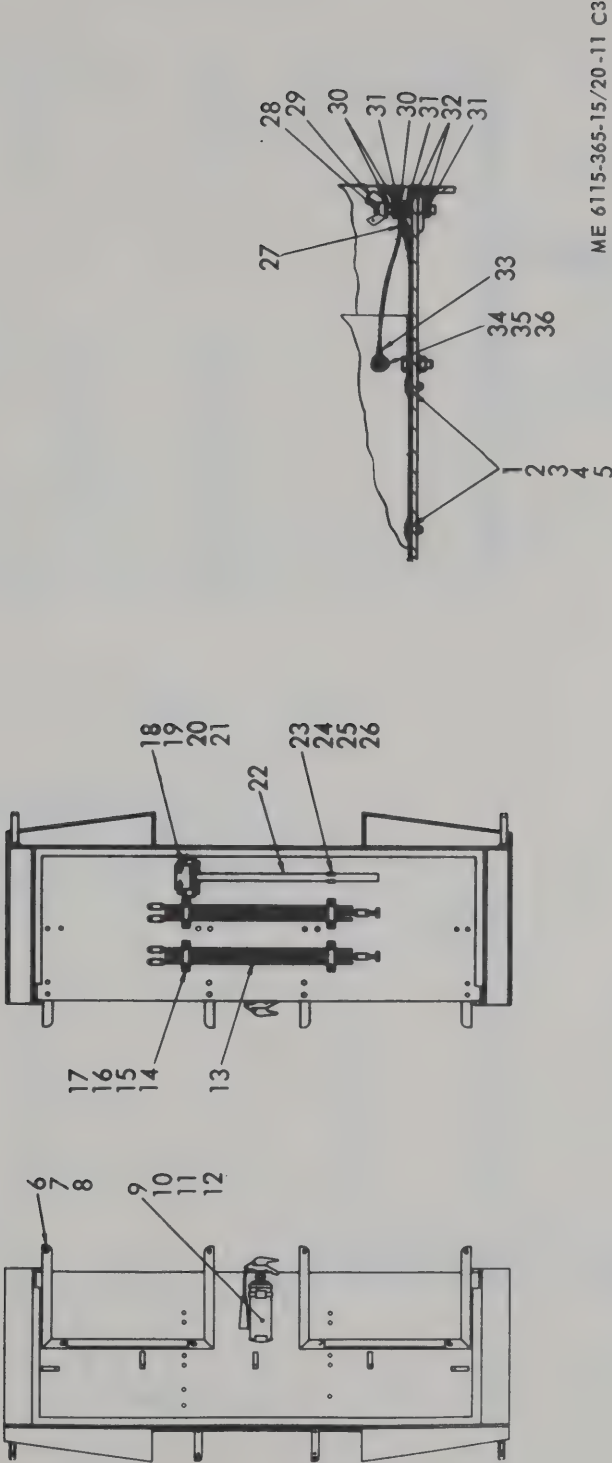


Figure 20-11. PU-631/G accessories.

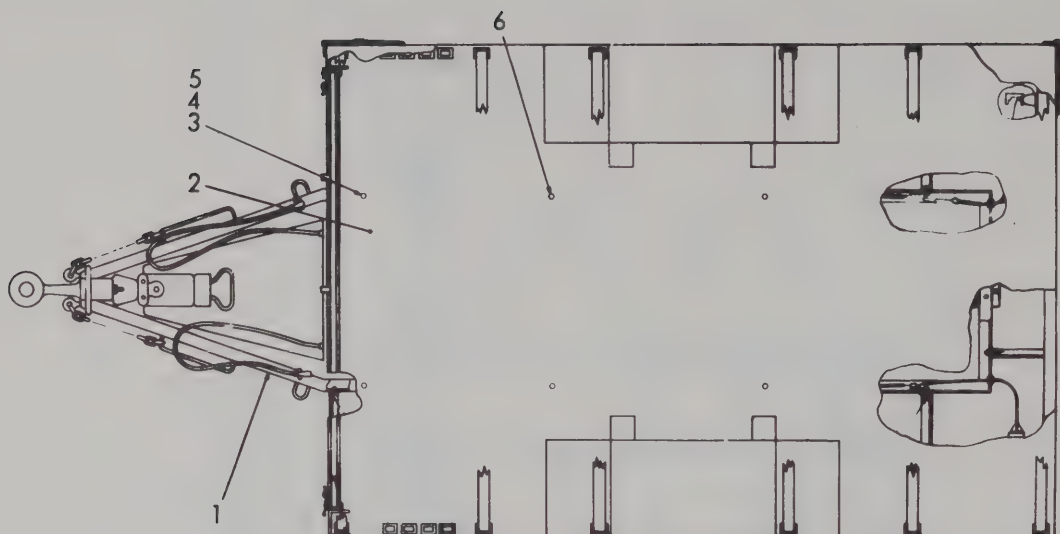


ME 6115-365-15/20-12 C3

Figure 20-12. Trailer body.

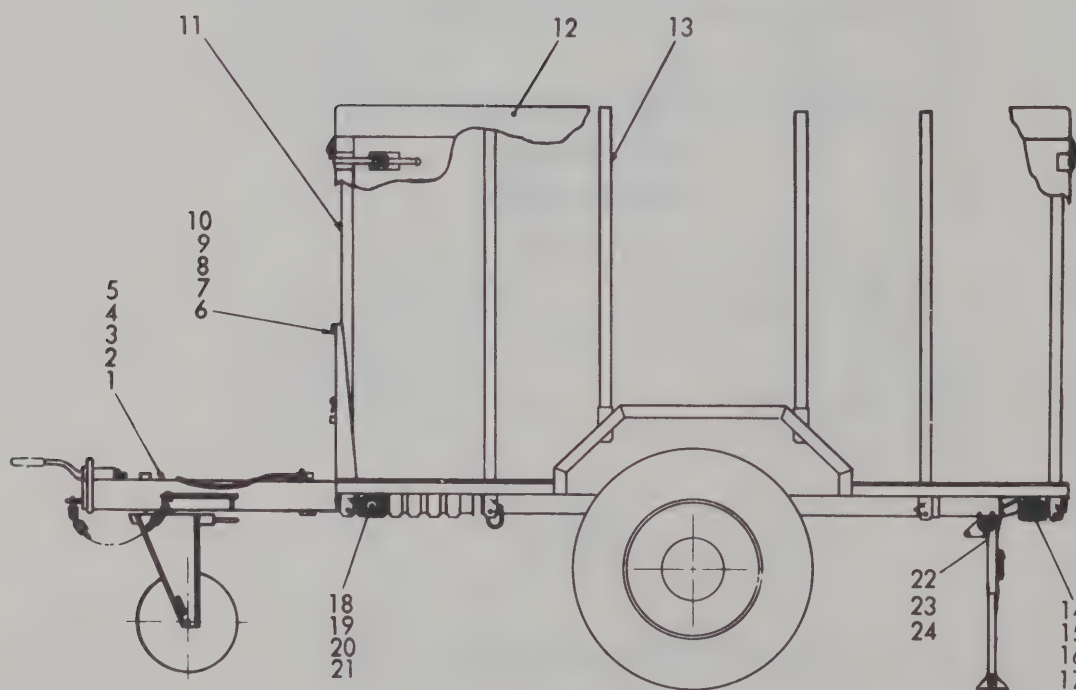

ME 6115-365-15/20-13 C3

Figure 20-13. Trailer accessories.

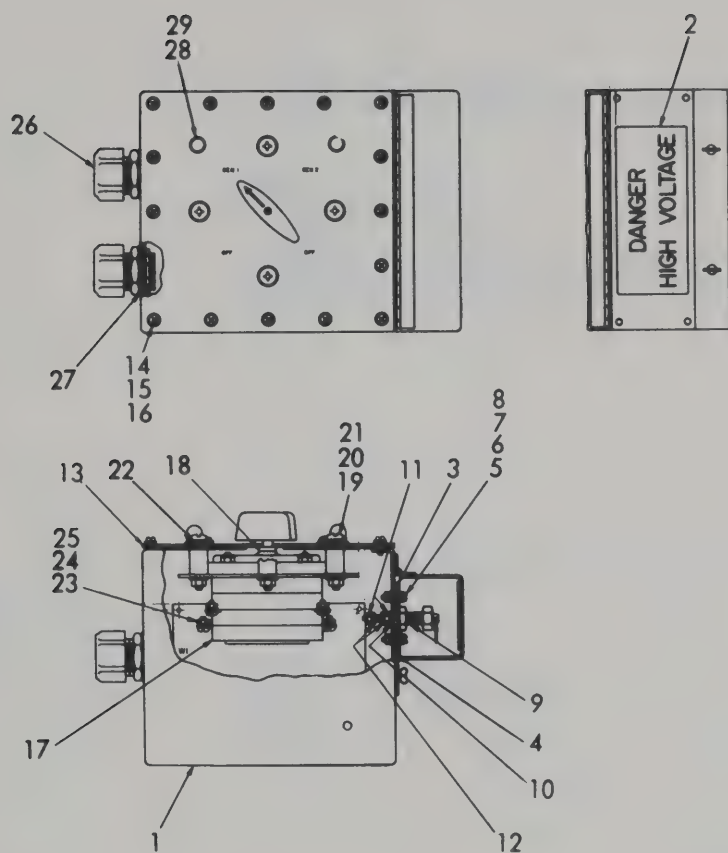

ME 6115-365-15/20-14 C3

Figure 20-14. Distribution box.


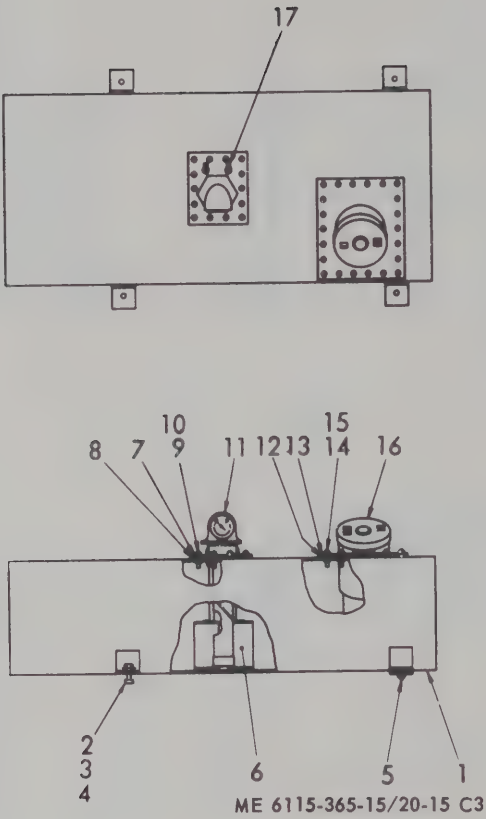


Figure 20-15. Fuel tank.

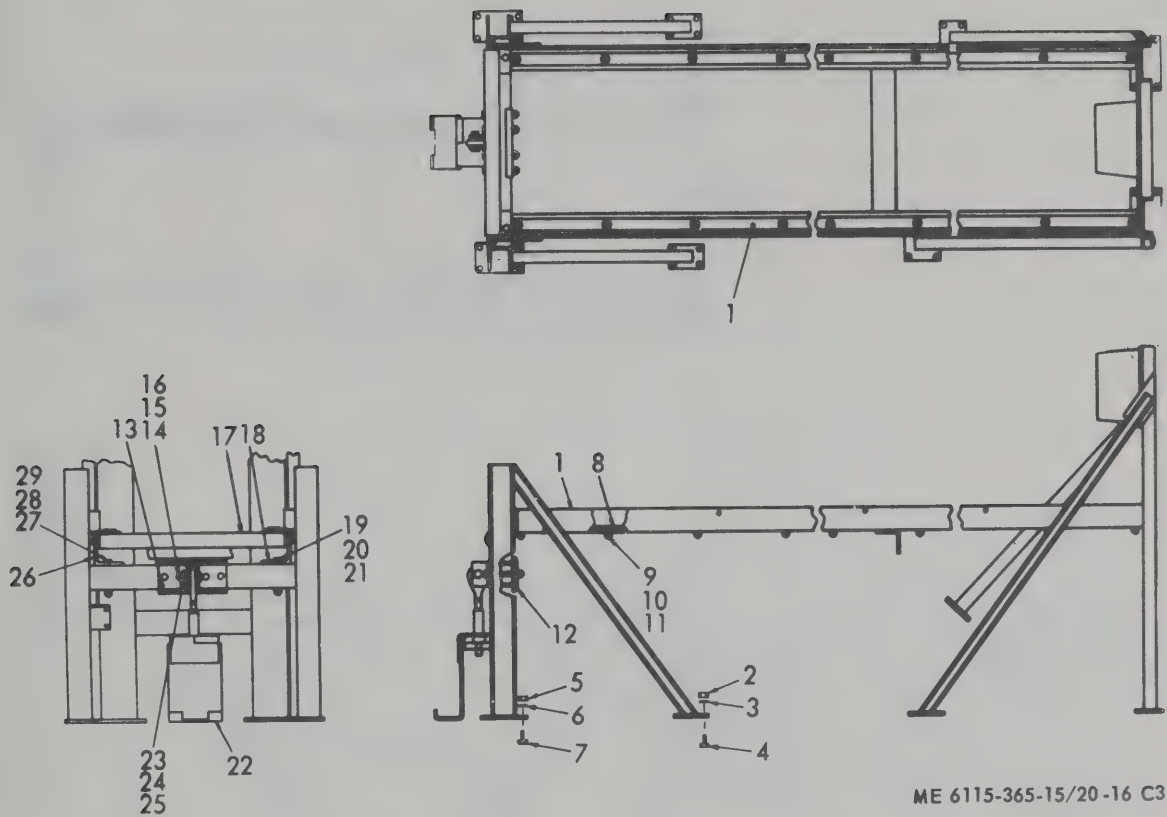

ME 6115-365-15/20-16 C3

Figure 20-16. Roadside rack assembly.


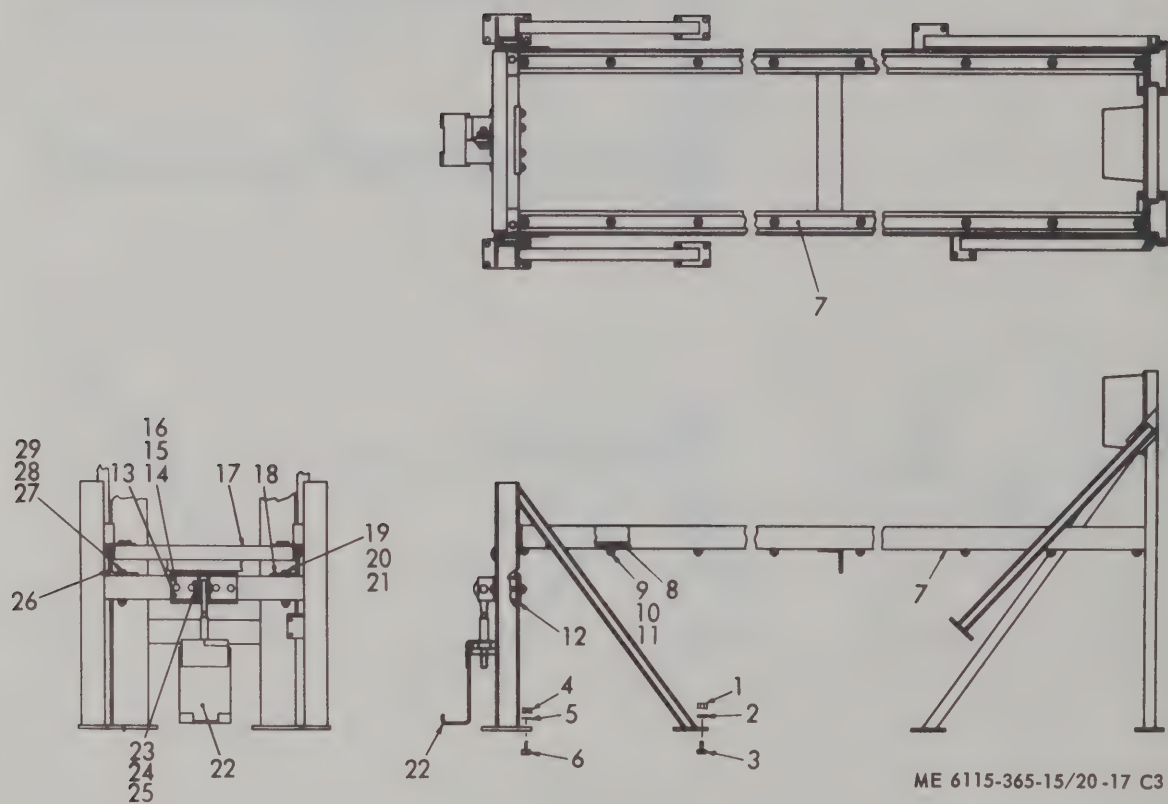


Figure 20-17. Curbside rack assembly.

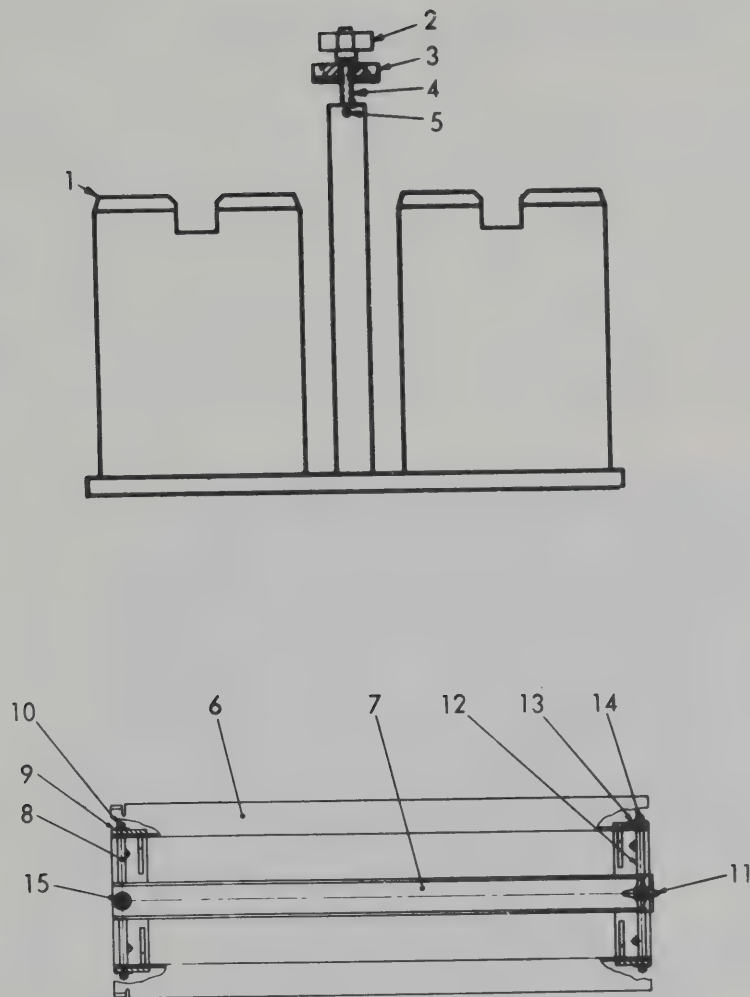

ME 6115-365-15/20-18 C3

Figure 20-18. Holder assemblies.

CHAPTER 21

GENERATOR SET, PU-656/G, FSN 6115-989-3296

Section I. DESCRIPTION AND DATA

21-1. Description


a. General. The trailer mounted generator set, PU-656/G, consists of two 10 KW, DOD Model MEP-023A generator sets mounted on a 1-1/2 ton, 2-wheel cargo trailer, Model M103-A3.

b. Generators. The generators are powered by direct drive 4-cylinder, air-cooled, 20-hp, Military Standard Model 4A084 gasoline engines. For description and generator operation and maintenance, refer to TM 5-6115-450-15.

c. Engines. For description and engine maintenance information, refer to TM 5-2805-259-14.

d. Trailer. For description and maintenance of the trailer, refer to TM 9-2330-213-14.

e. Lubrication. For lubrication of the engine, refer to LO 5-2805-259-12. The trailer lubrication information is contained in LO 9-2330-213-12.

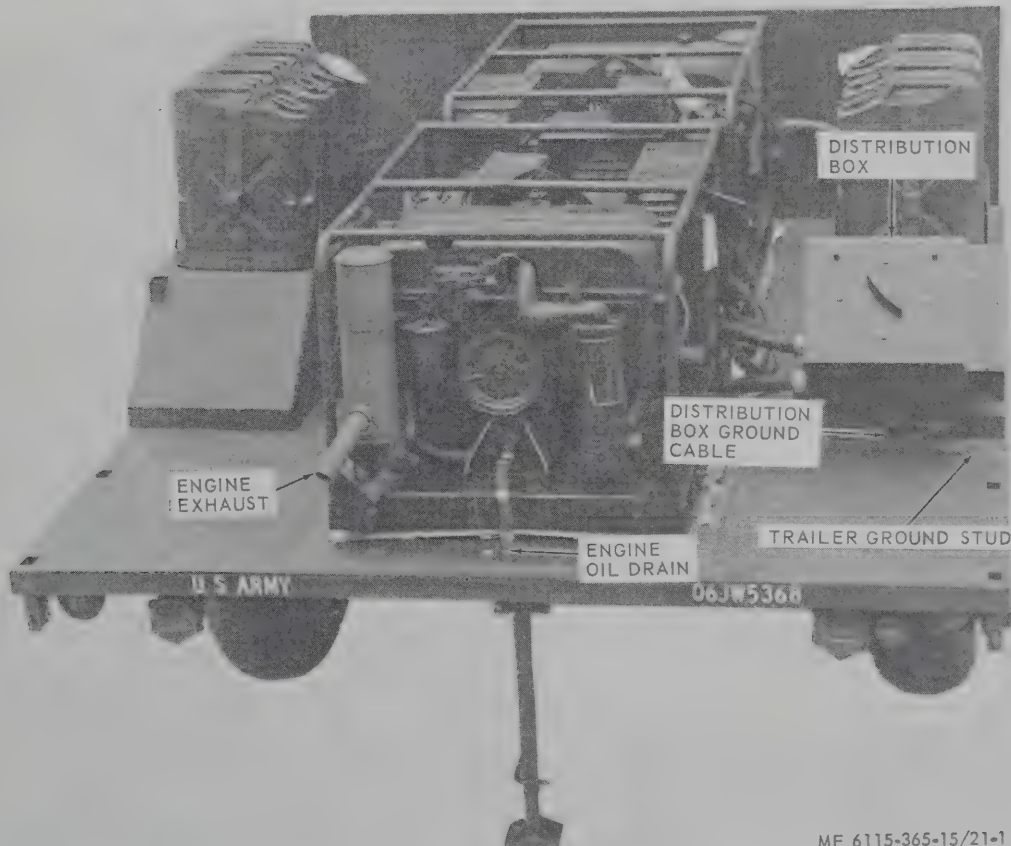

ME 6115-365-15/21-1 C3

Figure 21-1. Generator set, PU-656/G.

21-2. Tabulated Data

Table 21-1 lists components for the PU-656/G Generator Set.

Table 21-1. PU-656/G Components

FSN	QTY	Nomenclature
6110-913-9276	1	Distribution box
6115-926-0843	2	Generator, 10 kw, 400 hz, MEP-023A
5975-878-3791	2	Ground rod, w/attachments
5120-251-4489	1	Sledge hammer
2540-914-2558	1	Tarpaulin
2330-141-8052	1	Trailer, M103-A3, 1-1/2 ton

Section II. OPERATING INSTRUCTIONS**21-3. Setting-Up Instructions***a. Leveling.*

(1) Locate the trailer on as level a surface as possible for the generators to operate efficiently.

(2) Set hand brakes and block wheels securely to prevent any movement. Operate hand brake at weekly intervals to insure freedom of movement.

(3) Lower leg prop and adjust length for firm contact with ground.

WARNING

Wheels must be blocked, brakes set, and leg prop down in support position before attempting to roll up tarpaulin and before starting to assemble or set-up equipment for operation.

b. Preparation for Starting.

(1) Remove canvas tarpaulin, roof bows, and splash shield.

(2) Remove all loose auxiliary items that might block flow of air through the trailer and around the generator sets.

CAUTION

It is of utmost importance that there be free circulation of air around the generator sets at all times.

(3) Remove the pipe plugs from the engine oil drains and install the drain hoses as illustrated on figures 21-1 and 21-2. Be sure the drain cocks are closed.

(4) Install the engine exhausts as illustrated in figures 21-1 and 21-2.

(5) Install the engine spark plugs as described in TM 5-2805-259-14.

(6) Connect the electrical leads from the distribution box to the generator sets as illustrated on figure 21-3.

*c. Grounding.***WARNING**

Never operate generator sets until they are properly grounded. Electrical defects in the load lines can cause death by electrocution.

(1) The ground may be any of three methods, depending on the location and terrain.

(a) A ground rod driven to a depth of 8 feet.

(b) An underground metallic water piping system.

(c) A metal plate (9 square ft.) buried to a depth of 4 feet.

(2) The ground lead must be No. 6 AWG copper wire clamped or bolted to the rod, plate, or piping system.

(3) Connect the other end of the ground lead to the trailer ground terminal.

(4) Connect the ground lead from the distribution box to the trailer ground terminal.

d. Servicing. Service the generators as described in TM 5-6115-450-15.


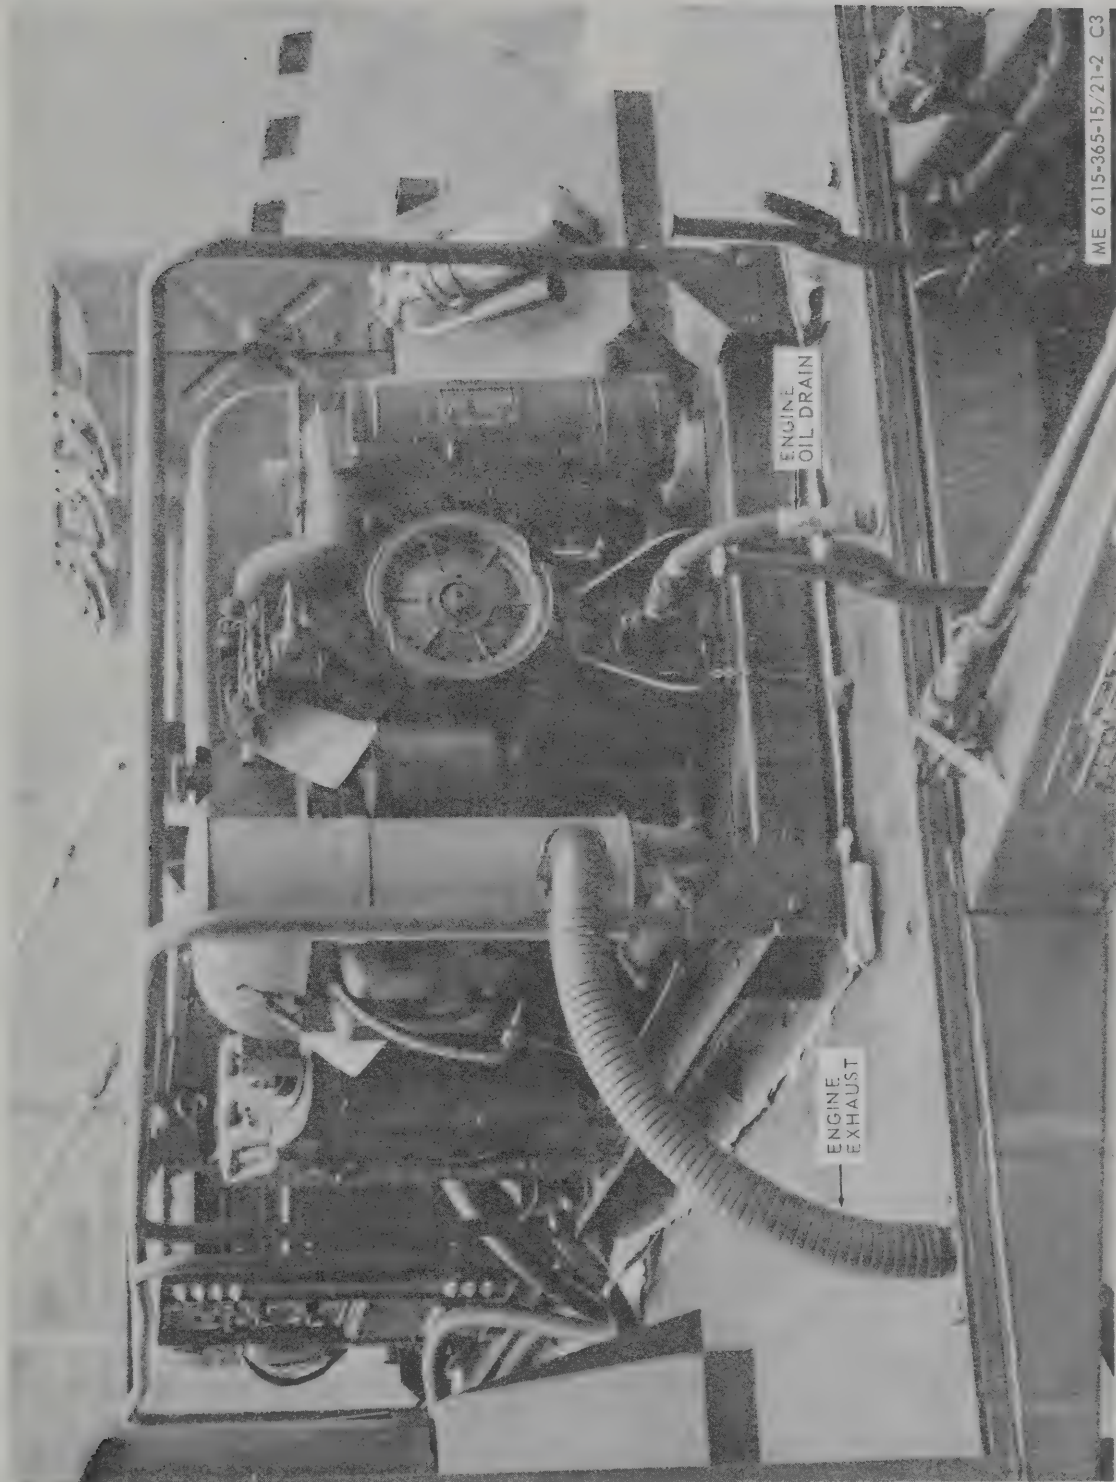


Figure 21-2. Engine accessories, installed new.

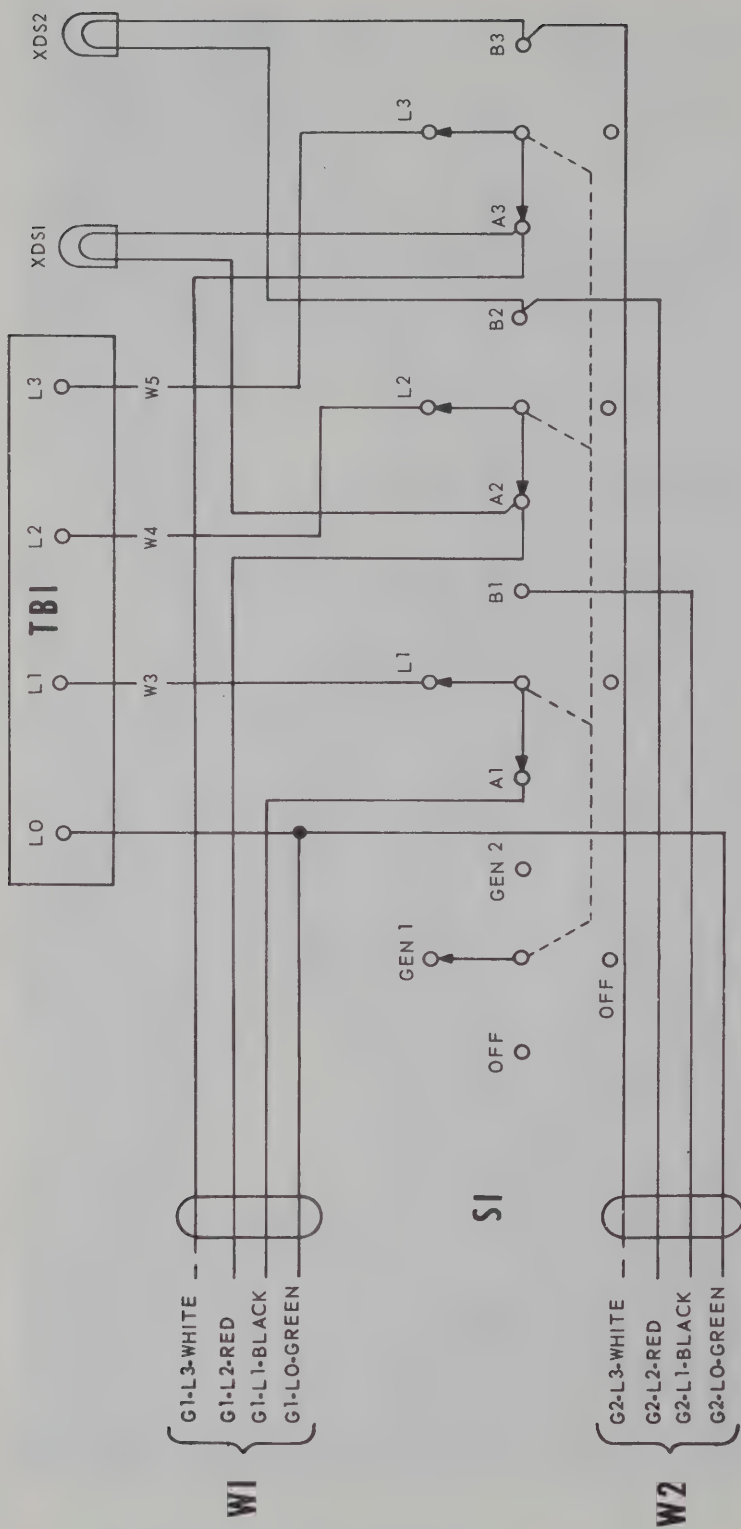

ME 6115-365-15/21-3 C3

Figure 21-3. Wiring diagram.

21-4. Starting**WARNING**

Never operate the generator set in an enclosed area unless exhaust gases are piped outside. Inhalation of exhaust fumes may result in serious illness or death.

- a. Perform the pre-starting operations in TM 5-6115-450-15.
- b. Position the transfer switch to the desired generator.
- c. Start the generator as prescribed in TM 5-6115-450-15.

21-5. Stopping.

Stop the generator as described in TM 5-6115-450-15.

21-6. Operation

Operate the generator set as instructed in TM 5-6115-450-15. Use the fuel transfer valve to perform fuel transfer operations from the set mounted 5-gallon can to the remote cans.

Section III. OPERATOR'S MAINTENANCE INSTRUCTIONS

Operator's maintenance of the power unit is concerned with keeping the generator sets lubricated; the fuel cans filled; the battery electrolyte level maintained; and cleaning and servicing the fuel filters and

air cleaners as described in TM 5-6115-450-15. Removal of dust and dirt from the equipment is also a routine maintenance function of the operator.

Section IV. ORGANIZATIONAL MAINTENANCE INSTRUCTIONS**21-7. Tarpaulin and Roof Bows***a. Removal.*

- (1) Remove tarpaulin from unit.
- (2) Pull out chain-secured pins that secure roof bows to trailer and remove bows.

b. Cleaning and Inspection.

- (1) Clean tarpaulin and bows with water and detergent. Dry thoroughly.
- (2) Inspect tarpaulin for tears, holes, broken or missing ropes and straps, and other defects. Inspect bows for cracks, bends, or other defects.

c. Installation. Installation is reverse of procedure *a* above. Be sure tarpaulin is treated for waterproofing and mildew resistance before reinstalling.

21-8. Transfer Switch Indicating Lamp Replacement

Unscrew defective lamp from switch box and remove gasket. Install gasket on replacement lamp and screw into base socket in distribution box.

Section V. DIRECT AND GENERAL SUPPORT AND DEPOT MAINTENANCE INSTRUCTIONS**21-9. Generator Set***a. Removal.*

- (1) Disconnect remote fuel line at three-way valve.
- (2) Disconnect electrical leads and load cables.
- (3) Disconnect oil drain adapter.
- (4) Remove the battery.
- (5) Disconnect the exhaust pipe (front

engine only).

(6) Remove nuts, washers, and cap-screws that secure generator set to trailer body and remove generator set.

b. Installation. Installation is reverse of removal, procedure *a* above. Make sure that the beveled washers are properly positioned so that generator set is securely mounted to the trailer body.

21-10. Distribution Box

a. Removal.

(1) Disconnect load lines from the generators and loosen cable clamps so that cables will be removed with distribution box.

(2) Disconnect ground wire to trailer terminal stud.

(3) Remove nuts and washers that secure distribution box to trailer fender and remove box and cables.

b. Disassembly. Refer to figure 21-4 and disassemble the distribution box components. Tag the cable ends for proper reassembly.

c. Reassembly. Reassembly is reverse of disassembly procedure *b* above. Make sure "O" rings are properly installed to prevent water entering around the switch and screws.

d. Installation. Installation is reverse of

removal procedure *a* above. Refer to figure 21-3 to assure that electrical load cables are properly connected.

21-11. Trailer Body

a. Removal.

(1) Remove tarpaulin and bows.

(2) Remove fuel cans and holders.

(3) Disconnect exhaust line and remove generators (para 3-9).


(4) Remove distribution box (para 3-10).

(5) Remove nuts, washers, and bolts, and capscrews that secure trailer body to chassis and remove body.

b. Installation. Using a serviceable trailer body, reverse removal procedure *a* above. Apply touch-up paint to securing hardware after complete reassembly.

LEGEND

ITEM NO.	FUNCT GROUP	ITEM NAME
1	4206	COVER
2	4206	LIGHT-WIRE
3	4206	SCREW
4	4206	PACKING
5	2210	SCREW
6	2210	WASHER
7	2210	WASHER
8	4206	LIGHT-WIRE
9	4206	WASHER
10	4206	NUT
11	4206	SCREW
12	4206	LEAD
13	4206	LEAD
14	4206	LEAD
15	4206	PACKING
16	4206	STUFFING
17	4206	CABLE AY
18	4206	CABLE AY
19	4206	BOX
20	4206	GASKET
21	4206	TERMINAL BOARD
22	4206	CONNECTOR
23	4206	SCREW
24	4206	WASHER
25	4206	WASHER
26	4206	NUT
27	4206	WASHER
28	4206	NUT
29	4206	NUT
30	4206	WASHER
31	4206	SWITCH
32	4206	PACKING

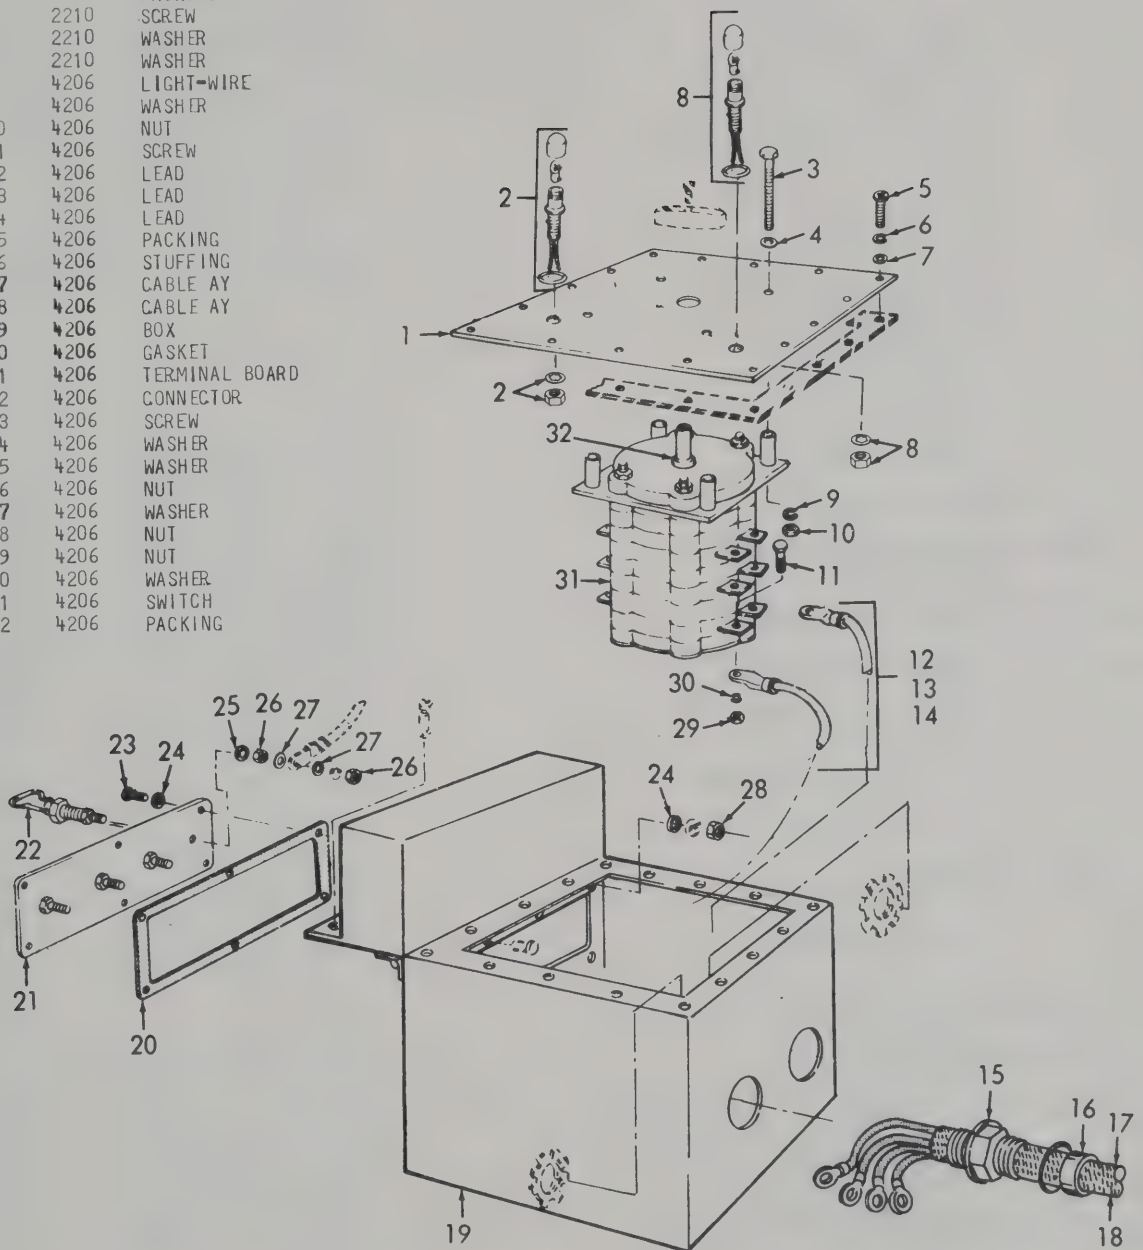

ME 6115-365-15/21-4 C3

Figure 21-4. Distribution box.

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW	(7) ILLUS- TRATION	
						(a)	(b)
						(a) FIG. NO.	(b) ITEM NO.
						1-5	6-20
						(c) 21-50	(d) 51-100
00001		PART I - PU-656/G					
00002		REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE					
00003		GROUP 06 - ELECTRICAL SYSTEM					
00003		0608 - MISCELLANEOUS TRAILER WIRING					
X2 0 00004		CABLE ASSEMBLY, TAILLIGHT 13216E7479 (97403)		EA	2		21- 6
X2 0 00005		LEAD, ELECTRICAL, TAILLIGHT 13216E7476 (97403)		EA	1		21- 6
X2 0 00006		STRAP, CABLE: ADJUSTABLE PLASTIC TYPE MS17821-1-9 (96906)		EA	6		21- 6
00010		GROUP 18 - BODY					
00011		1810 - CARGO BODY					
X2 0 00013		BOLT, HEXAGON HEAD: 5/8-11 X 6 1/2 IN. LG FFB575TYPE3 (81348)		EA	2		21- 5
0 00014	5305-724-5911	CAP SCREW, HEXAGON HEAD: 5/8-11 X 1 3/4 IN. LG MS90725-163 (96906)		EA	6	*	21- 5
0 00015	5310-269-3211	CAP SCREW, HEXAGON HEAD: 3/8-16 X 1 IN. LG MS90725-60 (96906)		EA	16	*	21- 5
0 00016	5310-269-4040	NUT, SELF-LOCKING: 5/8-11 UNC MS51922-49 (96906)		EA	8	*	21- 5
0 00017	5310-087-4652	NUT, SELF-LOCKING: 3/8-16 UNC MS51922-17 (96906)		EA	12	*	21- 5
0 00019	5310-823-8803	WASHER, FLAT: 5/8 IN. BSC SIZE MS27183-21 (96906)		EA	16	*	21- 5
0 00020	5310-809-4061	WASHER, FLAT: 3/8 IN. BSC SIZE MS27183-15 (96906)		EA	28	*	21- 5
0 00021	5310-637-9541	WASHER, LOCK: 3/8 IN. NOM. SIZE MS35338-46 (96906)		EA	4	*	21- 5
00022		GROUP 22 - BODY ACCESSORY ITEMS					
00023		2201 - CANVAS ITEMS					
P OR 00024	6115-459-5946	TARPAULIN 13216E7434 (97403)		EA	1	*	2
00025		2202 - ACCESSORY ITEMS					
X2 0 00026	2540-924-8478	BOW, TRAILER: 55 3/4 IN. 13212E3597-2 (97403)		EA	2		21- 5
X2 0 00027	2540-926-1003	BOW, TRAILER: 68 IN. 13212E3597-1 (97403)		EA	4		21- 5
X2 0 00028	2590-473-6331	BRACKET ASSEMBLY: LIQUID CONTAINER, 5 GAL MS53052-1 (96906)		EA	6		21- 5
X2 0 00029	5340-999-6277	BRACKET ASSEMBLY: SLEDGE HAMMER MTG 13214E1214 (97403)		EA	1		21- 5
X2 0 00030	7240-222-3088	CAN, GASOLINE: MILITARY, 5 GAL MILC1283 (81349)		EA	6		21- 5

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
						(a)	(b)	(c)	(d)	(a)	(b)
						1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
0 00031	5305-269-3213	CAPSCREW, HEXAGON HEAD: 3/8-16 X 1 1/4 IN. LG MS90725-62 (96906)		EA	24	*	*	*	*	21- 5	34
0 00032	5305-721-8010	CAPSCREW, HEXAGON HEAD: 1/4-20 X 2 IN. LG MS35307-314 (96906)		EA	2	*	*	*	*	21-	46
0 00033	5305-225-3839	CAPSCREW, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)		EA	2	*	*	*	*	21- 6	23
0 00034	5305-225-3839	CAPSCREW, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)		EA	1	*	*	*	*	21- 6	29
0 00035	5305-068-0502	CAPSCREW, HEXAGON HEAD: 1/4-20 X 3/4 IN. LG MS90725-6 (96906)		EA	8	*	*	*	*	21- 5	10
0 00036	5305-068-0501	CAPSCREW, HEXAGON HEAD: 1/4-20 X 5/8 IN. LG MS90725-5 (96906)		EA	12	*	*	*	*	21- 6	5
X2 0 00037	2590-932-7298	CLAMP: GROUND ROD MTG 13212E3617-1 (97403)		EA	4					21- 6	8
X2 0 00038	5340-914-2578	CLIP, SPRING: SLEDGE HAMMER 13214E1213-1 (97403)		EA	1					21- 6	26
00039											
00040											
0 00041	5310-087-4652	NUT, SELF-LOCKING: 3/8-16 UNC MS51922-17 (96906)		EA	24	*	*	*	*	21- 5	32
0 00042	5310-080-8495	NUT, PLAIN, WING: 1/4-20 UNC MS35425-39 (96906)		EA	2	*	*	*	*	21- 5	43
0 00043	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)		EA	8	*	*	*	*	21- 6	9
0 00044	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)		EA	2	*	*	*	*	21- 6	21
0 00045	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)		EA	1	*	*	*	*	21- 6	27
0 00046	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)		EA	8	*	*	*	*	21- 5	8
0 00047	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)		EA	12	*	*	*	*	21- 6	3
X2 0 00048		PLATE, FRONT SHIELD 13212E3611-1 (97403)		EA	1					21- 5	47
X2 0 00049	9905-202-3639	REFLECTOR, CLEARANCE, AMBER MS35387-2 (96906)		EA	2					21- 6	6
X2 0 00050	9905-205-2795	REFLECTOR, CLEARANCE, RED MS35387-1 (96906)		EA	4					21- 6	2
00051											
0 00052	5305-958-5247	SCREW, MACHINE: 1/4-20 X 1 IN. LG MS35190-291 (96906)		EA	8	*	*	*	*	21- 6	11
0 00053	5310-809-4061	WASHER, FLAT: 3/8 IN. BSC SIZE MS27183-15 (96906)		EA	24	*	*	*	*	21- 5	33
0 00054	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	4	*	*	*	*	21- 5	44
0 00055	5310-933-8121	WASHER, LOCK: 1/4 IN. NOM. SIZE MS35388-139 (96906)		EA	2	*	*	*	*	21- 5	45

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
0 00056	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	8	*	*	*	*	21- 6	10
0 00057	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	4	*	*	*	*	21- 6	22
0 00058	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	2	*	*	*	*	21- 6	28
0 00059	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	16	*	*	*	*	21- 5	9
0 00060	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	12	*	*	*	*	21- 6	4
00061		2210 - DATA PLATES								
X2 0 00062		PLATE, IDENTIFICATION: GROUND TERMINAL 13205E4918 (97403)	EA	1					21- 5	17
X2 0 00063		PLATE, IDENTIFICATION: PU-656/G 13205E4916-17 (97403)	EA	1					21- 5	1
00064		GROUP 29 - AUXILIARY GENERATOR AND ENGINE								
00070		2941 - ENGINE EXHAUST								
0 00071	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)	EA	2	*	*	*	*	21- 5	4
X2 0 00072	5340-917-6400	CLAMP ASSEMBLY 13212E3592-4 (97403)	EA	2	*	*	*	*	21- 5	6
0 00073	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)	EA	2	*	*	*	*	21- 5	2
X2 0 00074		TUBE, EXHAUST, FRONT 13216E7461 (97403)	EA	1					21- 5	5
X2 0 00075		TUBE, EXHAUST, REAR 13214E1238 (97403)	EA	1					21- 5	26
0 00076	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	4	*	*	*	*	21- 5	3
00077		GROUP 42 - ELECTRICAL EQUIPMENT								
00078		4202 - ELECTRICAL CONTROL								
X2 0 00090		LIGHT AND WIRE: 12 IN. LG 13212E3581-1 (97403)	EA	1					21- 4	2
X2 0 00091		LIGHT AND WIRE: 17 IN. LG 13212E3581 (97403)	EA	1					21- 4	8
00112		4216 - MISCELLANEOUS WIRING AND FITTINGS								
0 00113	5305-071-2242	CAPSCREW, HEXAGON HEAD: 1/4-20 X 1 1/4 IN. LG MS90725-10 (96906)	EA	4	*	*	*	*	21- 5	13
0 00114	5305-543-4718	CAPSCREW, HEXAGON HEAD: 3/8-16 X 3/4 IN. LG MS35309-358 (96906)	EA	1	*	*	*	*	21- 6	12
X2 0 00115		CLAMP, CABLE, DOUBLE 13212E3591-5 (97403)	EA	2					21- 5	14
X2 0 00116	5340-930-1754	CLAMP, LOOP, DOUBLE MS21334-2 (96906)	EA	2					21- 5	24

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS USABLE ON CODE	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
0 00117	5310-918-6921	NUT, PLAIN, HEXAGON HEAD: 3/8-16 THD SIZE MS16203-39 (96906)	EA	3	*	*	*	*	21- 6	16
0 00118	5310-543-4717	NUT, PLAIN, WING: BRASS, 3/8-16 UNC MS35425-28 (96906)	EA	1	*	*	*	*	21- 6	14
0 00119	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)	EA	4	*	*	*	*	21- 5	13
0 00120	5310-934-9758	NUT, PLAIN, HEXAGON HEAD: NO. 10-24 UNC MS35649-202 (96906)	EA	2	*	*	*	*	21- 5	20
0 00121	5310-918-6921	NUT, PLAIN, HEXAGON HEAD: 3/8-16 UNC MS16203-39 (96906)	EA	1	*	*	*	*	21- 6	20
0 00122	5305-984-6211	SCREW, MACHINE, PAN HEAD: 10-24 X 5/8 IN. LG MS35206-264 (96906)	EA	2	*	*	*	*	21- 5	20
X2 0 00123	5307-722-9437	STUD, GROUNDING 13214E1223 (97403)	EA	1					21- 6	17
0 00124	5940-688-6010	TERMINAL, LUG: CRIMP STYLE, NO. 6 AWG MS20659-10 (96906)	EA	4	*	*	*	*	21- 6	19
0 00125	5310-913-9776	WASHER, LOCK: 3/8 IN. NOM. SIZE MS35335-91 (96906)	EA	2	*	*	*	*	21- 6	18
X2 0 00126	5310-187-2413	WASHER, FLAT: ELECTRICAL, 3/8 IN. BSC SIZE AN961-616T (88044)	EA	4					21- 6	15
0 00127	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	8	*	*	*	*	21- 5	12
0 00128	5310-045-3296	WASHER, LOCK: NO. 10 NOM SIZE MS35338-43 (96906)	EA	2	*	*	*	*	21- 5	21
0 00129	5310-809-8546	WASHER, FLAT: NO. 10 BSC SIZE MS27183-8 (96906)	EA	4	*	*	*	*	21- 5	22
0 00130	5310-913-9776	WASHER, LOCK: 3/8 IN. NOM. SIZE MS35335-91 (96906)	EA	1	*	*	*	*	21- 6	13
X2 0 00131	6145-299-6188	WIRE, ELECTRICAL: NO. 6 AWG (AS REQUIRED) QQW343TTPERB (81348)	FT						21- 5	19

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGY	(10) DEPOT MAINT ALW PER 100 EQUIP	(11) ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
						1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
00001		PART II - PU-656/G													
00002		REPAIR PARTS FOR DS, GS AND DEPOT MAINTENANCE													
00003		GROUP 06 - ELECTRICAL SYSTEM													
00003		0608 - MISCELLANEOUS TRAILER WIRING													
X2 0 00004		CABLE ASSEMBLY, TAILLIGHT 13216E7479 (97403)		EA	2									21- 6	32
X2 0 00005		LEAD, ELECTRICAL, TAILLIGHT 13216E7476 (97403)		EA	1									21- 6	31
X2 0 00006		STRAP, CABLE: ADJUSTABLE PLASTIC TYPE MS17821-1-9 (96906)		EA	6									21- 6	30
00007		GROUP 15 - FRAME													
00008		1501 - FRAME ASSEMBLY													
X2 DR 00009		CHASSIS, TRAILER 13212E3588-2 (97403)		EA	1									21- 6	1
00010		GROUP 18 - BODY													
00011		1810 - CARGO BODY													
X2 DR 00012		BODY, TRAILER 13214E1495 (97403)		EA	1									21- 5	30
X2 0 00013		BOLT, HEXAGON HEAD: 5/8-11 X 6 1/2 IN. LG FFB575TYPE3 (81348)		EA	2									21- 5	42
0 00014	5305-724-5911	CAPSCREW, HEXAGON HEAD: 5/8-11 X 1 3/4 IN. LG MS90725-163 (96906)		EA	6	*	*	*	*	*	*	*	*	21- 5	29
0 00015	5310-269-3211	CAPSCREW, HEXAGON HEAD: 3/9-16 X 1 IN. LG MS90725-60 (96906)		EA	16	*	*	*	*	*	*	*	*	21- 5	41
0 00016	5310-269-4040	NUT, SELF-LOCKING: 5/8-11 UNC MS51922-49 (96906)		EA	8	*	*	*	*	*	*	*	*	21- 5	27
0 00017	5310-087-4652	NUT, SELF-LOCKING: 3/8-16 UNC MS51922-17 (96906)		EA	12	*	*	*	*	*	*	*	*	21- 5	38
X 2D 00018		SHIM (AS REQUIRED) 13212E3590 (97403)		EA										21- 5	48
0 00019	5310-823-8803	WASHER, FLAT: 5/8 IN. BSC SIZE MS27183-21 (96906)		EA	16	*	*	*	*	*	*	*	*	21- 5	28
0 00020	5310-809-4061	WASHER, FLAT: 3/8 IN. BSC SIZE MS27183-15 (96906)		EA	28	*	*	*	*	*	*	*	*	21- 5	40
0 00021	5310-637-9541	WASHER, LOCK: 3/8 IN. NOM. SIZE MS35338-46 (96906)		EA	4	*	*	*	*	*	*	*	*	21- 5	39
00022		GROUP 22 - BODY ACCESSORY ITEMS													
00023		2201 - CANVAS ITEMS													
P OR 00024	6115-459-5946	TARPAULIN 13216E7434 (97403)		EA	1	*	2	2	*	2	2	10	10		

(1)	(2)	(3)	(4)	(5)	(6)			(7)			(8)	(9)	(10)		
SMR CODE	FEDERAL STOCK NUMBER	DESCRIPTION REF NUMBER & MFR CODE	USABLE ON CODE	UNIT OF MEAS	QTY INC IN UNIT	30-DAY DS MAINT ALLOWANCE			30-DAY GS MAINT ALLOWANCE			1-YR ALW PER 100 EQUIP CNTGY	DEPOT MAINT ALW PER 100 EQUIP	ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
						1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
00025		2202 - ACCESSORY ITEMS													
X2 0 00026	2540-924-8478	BOW, TRAILER: 55 3/4 IN. 13212E3597-2 (97403)		EA	2									21- 5	16
X2 0 00027	2540-926-1003	BOW, TRAILER: 68 IN. 13212E3597-1 (97403)		EA	4									21- 5	18
X2 0 00028	2590-473-6331	BRACKET ASSEMBLY: LIQUID CONTAINER, 5 GAL MS53052-1 (96906)		EA	6									21- 5	31
X2 0 00029	5340-999-6277	BRACKET ASSEMBLY: SLEDGE HAMMER MTG 13214E1214 (97403)		EA	1									21- 5	24
X2 0 00030	7240-222-3088	CAN, GASOLINE: MILITARY, 5 GAL MILC1283 (81349)		EA	6									21- 5	15
0 00031	5305-269-3213	CAPSCREW, HEXAGON HEAD: 3/8-16 X 1 1/4 IN. LG MS90725-62 (96906)		EA	24	*	*	*	*	*	*	*	*	21- 5	34
0 00032	5305-721-8010	CAPSCREW, HEXAGON HEAD: 1/4-20 X 2 IN. LG MS35307-314 (96906)		EA	2	*	*	*	*	*	*	*	*	21- 5	46
0 00033	5305-225-3839	CAPSCREW, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)		EA	2	*	*	*	*	*	*	*	*	21- 6	23
0 00034	5305-225-3839	CAPSCREW, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)		EA	1	*	*	*	*	*	*	*	*	21- 6	29
0 00035	5305-068-0502	CAPSCREW, HEXAGON HEAD: 1/4-20 X 3/4 IN. LG MS90725-6 (96906)		EA	8	*	*	*	*	*	*	*	*	21- 5	10
0 00036	5305-068-0501	CAPSCREW, HEXAGON HEAD: 1/4-20 X 5/8 IN. LG MS90725-5 (96906)		EA	12	*	*	*	*	*	*	*	*	21- 6	5
X2 0 00037	2590-932-7298	CLAMP: GROUND ROD MTG 13212E3617-1 (97403)		EA	4									21- 6	8
X2 0 00038	5340-914-2578	CLIP, SPRING: SLEDGE HAMMER 13214E1213-1 (97403)		EA	1									21- 6	26
00039															
00040															
0 00041	5310-087-4652	NUT, SELF-LOCKING: 3/8-16 UNC MS51922-17 (96906)		EA	24	*	*	*	*	*	*	*	*	21- 5	32
0 00042	5310-080-8495	NUT, PLAIN, WING: 1/4-20 UNC MS35425-39 (96906)		EA	2	*	*	*	*	*	*	*	*	21- 5	43
0 00043	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)		EA	8	*	*	*	*	*	*	*	*	21- 6	9
0 00044	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)		EA	2	*	*	*	*	*	*	*	*	21- 6	21
0 00045	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)		EA	1	*	*	*	*	*	*	*	*	21- 6	27
0 00046	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)		EA	8	*	*	*	*	*	*	*	*	21- 5	8
0 00047	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)		EA	12	*	*	*	*	*	*	*	*	21- 6	3
X2 0 00048		PLATE, FRONT SHIELD 13212E3611-1 (97403)		EA	1									21- 5	47
X2 0 00049	9905-202-3639	REFLECTOR, CLEARANCE, AMBER MS35387-2 (96906)		EA	2									21- 6	6

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	USABLE ON CODE	(4) UNIT OF MCAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
						1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 O 00050	9905-205-2795	REFLECTOR, CLEARANCE, RED MS35387-1 (96906)		EA	4									21- 6	2
00051															
O 00052	5305-958-5247	SCREW, MACHINE: 1/4-20 X 1 IN. LG MS35190-291 (96906)		EA	8	*	*	*	*	*	*	*	*	21- 6	11
O 00053	5310-809-4061	WASHER, FLAT: 3/8 IN. BSC SIZE MS27183-15 (96906)		EA	24	*	*	*	*	*	*	*	*	21- 5	33
O 00054	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	4	*	*	*	*	*	*	*	*	21- 5	44
O 00055	5310-933-8121	WASHER, LOCK: 1/4 IN. NOM. SIZE, MS35388-139 (96906)		EA	2	*	*	*	*	*	*	*	*	21- 5	45
O 00056	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	8	*	*	*	*	*	*	*	*	21- 6	10
O 00057	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	4	*	*	*	*	*	*	*	*	21- 6	22
O 00058	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	2	*	*	*	*	*	*	*	*	21- 6	28
O 00059	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	16	*	*	*	*	*	*	*	*	21- 5	9
O 00060	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	12	*	*	*	*	*	*	*	*	21- 6	4
00061		2210 - DATA PLATES													
X2 O 00062		PLATE, IDENTIFICATION: GROUND TERMINAL 13205E4918 (97403)		EA	1									21- 5	17
X2 O 00063		PLATE, IDENTIFICATION: PU-656/G 13205E4916-17 (97403)		EA	1									21- 5	1
00064		GROUP 29 - AUXILIARY GENERATOR AND ENGINE													
00065		2901 - GENERATOR AND ENGINE ASSEMBLY													
F 00066	5305-724-5911	SCREW, CAP, HEXAGON HEAD: 5/8-11 X 1 3/4 IN. LG MS90725-163 (96906)		EA	8	*	*	*	*	*	*	*	*	21- 5	37
X2 FR 00067	6115-926-0843	GENERATOR SET: 10KW, MEP-023A MILG52280TYPE2 (81349)		EA	2									21- 5	25
F 00068	5310-269-4040	NUT, SELF-LOCKING: 5/8-11 UNC MS51922-49 (96906)		EA	8	*	*	*	*	*	*	*	*	21- 5	35
F 00069	5310-823-8803	WASHER, FLAT: 5/8 IN. BSC SIZE MS27183-21 (96906)		EA	16	*	*	*	*	*	*	*	*	21- 5	36
00070		2941 - ENGINE EXHAUST													
O 00071	5305-225-3839	SCREW, CAP, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)		EA	2	*	*	*	*	*	*	*	*	21- 5	4
X2 O 00072	5340-917-6400	CLAMP ASSEMBLY 13212E3592-4 (97403)		EA	2									21- 5	6
O 00073	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)		EA	2	*	*	*	*	*	*	*	*	21- 5	2
X2 O 00074		TUBE, EXHAUST, FRONT 13216E7461 (97403)		EA	1									21- 5	5

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
						1-20	21-50	51-100	1-20	21-50	51-100				
X2 O 00075	5310-809-4058	TUBE, EXHAUST, REAR 13214E1238 (97403)	EA	1										21- 5	26
O 00076		WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	4	*	*	*	*	*	*	*	*	21- 5	3	
00077		GROUP 42 - ELECTRICAL EQUIPMENT													
00078		4202 - ELECTRICAL CONTROL													
P FR 00079	6110-913-9276	DISTRIBUTION BOX 13212E3577 (97403)	EA	1	*	*	*	*	*	*	2	2	21- 4		
X2 H 00080		BOX 13212E3578 (97403)	EA	1									21- 4	19	
X2 H 00081	6115-948-7389	CABLE ASSEMBLY 13212E3584-1 (97403)	EA	1									21- 4	17	
X2 H 00082	6115-948-7390	CABLE ASSEMBLY 13212E3585-1 (97403)	EA	1									21- 4	18	
F 00083	5305-983-7467	CAPSCREW, SOCKET HEAD: 1/2-13 X 3 IN. LG MS16997-149 (96906)	EA	4	*	*	*	*	*	*	*	*	21- 4	3	
X2 F 00084	5940-943-7740	CONNECTOR, TERMINAL POST 13213E3949 (97403)	EA	4									21- 4	22	
X2 F 00085		COVER, DISTRIBUTION BOX 13212E3579 (97403)	EA	1									21- 4	1	
X2 F 00086		GASKET, TERMINAL BOARD 13212E3583 (97403)	EA	1									21- 4	20	
X2 H 00087		LEAD, ELECTRICAL 13212E3586-1 (97403)	EA	1									21- 4	12	
X2 H 00088		LEAD, ELECTRICAL 13212E3586-2 (97403)	EA	1									21- 4	13	
X2 H 00089		LEAD, ELECTRICAL 13212E586-3 (97403)	EA	1									21- 4	14	
X2 O 00090		LIGHT AND WIRE: 12 IN. LG 13212E3581-1 (97403)	EA	1									21- 4	2	
X2 O 00091		LIGHT AND WIRE: 17 IN. LG 13212E3581 (97403)	EA	1									21- 4	8	
F 00092	5310-225-6993	NUT, PLAIN, HEXAGON: JAM, 1/2-13 THD SIZE MS16203-41 (96906)	EA	4	*	*	*	*	*	*	*	*	21- 4	26	
H 00093	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 THD SIZE MS51922-1 (96906)	EA	6				*	*	*	*	*	21- 4	28	
F 00094	5310-225-6993	NUT, SELF-LOCKING: 1/2-13 THD SIZE MS51922-33 (96906)	EA	4	*	*	*	*	*	*	*	*	21- 4	10	
H 00095	5310-222-0671	NUT, PLAIN, HEXAGON HEAD: BRASS, 3/8-24 THD SIZE MS20341-616A (96906)	EA	9				*	*	*	*	*	21- 4	29	
X2 F 00096	5330-833-1428	PACKING, PREFORMED: O RING MS28775-142 (96906)	EA	2									21- 4	15	
X2 F 00097	5330-579-7916	PACKING, PREFORMED MS28775-115 (96906)	EA	1									21- 4	32	
F 00098	5330-618-5361	PACKING, PREFORMED: O RING MS28775-015 (96906)	EA	4	*	*	*	*	*	*	*	*	21- 4	4	
H 00099	5305-988-1727	SCREW, MACHINE, PAN HEAD: 1/4-20 X 1 IN. LG MS35206-283 (96906)	EA	6				*	*	*	*	*	21- 4	23	
H 00100		SCREW, MACHINE, PAN HEAD: 3/8-24 X 3/4 IN. LG MS35215-95 (96906)	EA	1									21- 4	11	

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 30-DAY DS MAINT ALLOWANCE (a) (b) (c)	(7) 30-DAY GS MAINT ALLOWANCE (a) (b) (c)	(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION (a) (b)							
									(a)	(b)	(c)	(a)	(b)	(c)	(a)	(b)
F 00101	5305-989-7434	SCREW, MACHINE, PAN HEAD: 10-32 X 1/2 IN. LG MS35207-263 (96906)	EA	16	*	*	*	*	*	*	21- 4	5				
X2 H 00102		STUFFING TUBE 13212E3582-8 (97403)	EA	2							21- 4	16				
P F 00103		SWITCH, ROTARY: 200 AMP 13205E5024 (97403)	EA	1	*	*	*	*	*	2	21- 4	31				
X2 H 00104		TERMINAL BOARD 13211E4775 (97403)	EA	1							21- 4	21				
F 00105	5310-042-4229	WASHER, LOCK: INTERNAL TOOTH, 1/2 IN. NOM. SIZE MS35333-113 (96906)	EA	4	*	*	*	*	*	*	21- 4	25				
F 00106		WASHER, FLAT: BRASS, 1/2 IN. SCREW SIZE AN961-816T (88044)	EA	8	*	*	*	*	*	*	21- 4	27				
H 00107	5310-809-4058	WASHER, FLAT: 1/4 IN. SCREW SIZE, MS27183-10 (96906)	EA	12			*	*	*	*	21- 4	24				
F 00108	5310-809-5998	WASHER, FLAT: 1/2 IN. BSC SIZE MS27183-18 (96906)	EA	8	*	*	*	*	*	*	21- 4	9				
H 00109	5310-913-9776	WASHER, LOCK: EXTERNAL TOOTH, 3/8 IN. SCREW SIZE MS35335-91 (96906)	EA	9			*	*	*	*	21- 4	30				
F 00110	5310-045-3296	WASHER, LOCK: NO. 10 SCREW SIZE MS35338-43 (96906)	EA	16	*	*	*	*	*	*	21- 4	6				
F 00111	5310-809-8546	WASHER, FLAT: NO. 10 SCREW SIZE MS27183-8 (96906)	EA	16	*	*	*	*	*	*	21- 4	7				
00112		4216 - MISCELLANEOUS WIRING AND FITTINGS														
O 00113	5305-071-2242	CAPSCREW, HEXAGON HEAD: 1/4-20 X 1 1/4 IN. LG MS90725-10 (96906)	EA	4	*	*	*	*	*	*	21- 5	13				
O 00114	5305-543-4718	CAPSCREW, HEXAGON HEAD: 3/8-16 X 3/4 IN. LG MS35309-358 (96906)	EA	1	*	*	*	*	*	*	21- 6	12				
X2 O 00115		CLAMP, CABLE, DOUBLE 13212E3591-5 (97403)	EA	2							21- 5	14				
X2 O 00116	5340-930-1754	CLAMP, LOOP, DOUBLE MS21334-2 (96906)	EA	2							21- 5	24				
O 00117	5310-918-6921	NUT, PLAIN, HEXAGON HEAD: 3/8-16 THD SIZE MS16203-39 (96906)	EA	3	*	*	*	*	*	*	21- 6	16				
O 00118	5310-543-4717	NUT, PLAIN, WING: BRASS, 3/8-16 UNC MS35425-28 (96906)	EA	1	*	*	*	*	*	*	21- 6	14				
O 00119	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 UNC MS51922-1 (96906)	EA	4	*	*	*	*	*	*	21- 5	13				
O 00120	5310-934-9758	NUT, PLAIN, HEXAGON HEAD: NO. 10-24 UNC MS35649-202 (96906)	EA	2	*	*	*	*	*	*	21- 5	20				
O 00121	5310-918-6921	NUT, PLAIN, HEXAGON HEAD: 3/8-16 UNC MS16203-39 (96906)	EA	1	*	*	*	*	*	*	21- 6	20				
O 00122	5305-984-6211	SCREW, MACHINE, PAN HEAD: 10-24 X 5/8 IN. LG MS35206-264 (96906)	EA	2	*	*	*	*	*	*	21- 5	20				
X2 O 00123	5307-722-9437	STUD, GROUNDING 13214E1223 (97403)	EA	1							21- 6	17				

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
0 00124	5940-688-6010	TERMINAL, LUG: CRIMP STYLE, NO. 6 AWG MS20659-10 (96906)	EA	4	*	*	*	*	*	*	*	*	21- 6	19
0 00125	5310-913-9776	WASHER, LOCK: 3/8 IN. NOM. SIZE MS35335-91 (96906)	EA	2	*	*	*	*	*	*	*	*	21- 6	18
X2 0 00126	5310-187-2413	WASHER, FLAT: ELECTRICAL, 3/8 IN. BSC SIZE AN961-616T (88044)	EA	4									21- 6	15
0 00127	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	8	*	*	*	*	*	*	*	*	21- 5	12
0 00128	5310-045-3296	WASHER, LOCK: NO. 10 NOM. SIZE MS35338-43 (96906)	EA	2	*	*	*	*	*	*	*	*	21- 5	21
0 00129	5310-809-8546	WASHER, FLAT: NO. 10 BSC SIZE MS27183-8 (96906)	EA	4	*	*	*	*	*	*	*	*	21- 5	22
0 00130	5310-913-9776	WASHER, LOCK: 3/8 IN. NOM. SIZE MS35335-91 (96906)	EA	1	*	*	*	*	*	*	*	*	21- 6	13
X2 0 00131	6145-299-6188	WIRE, ELECTRICAL: NO. 6 AWG (AS REQUIRED) QQW343TTPERB (81348)	FT										21- 5	19


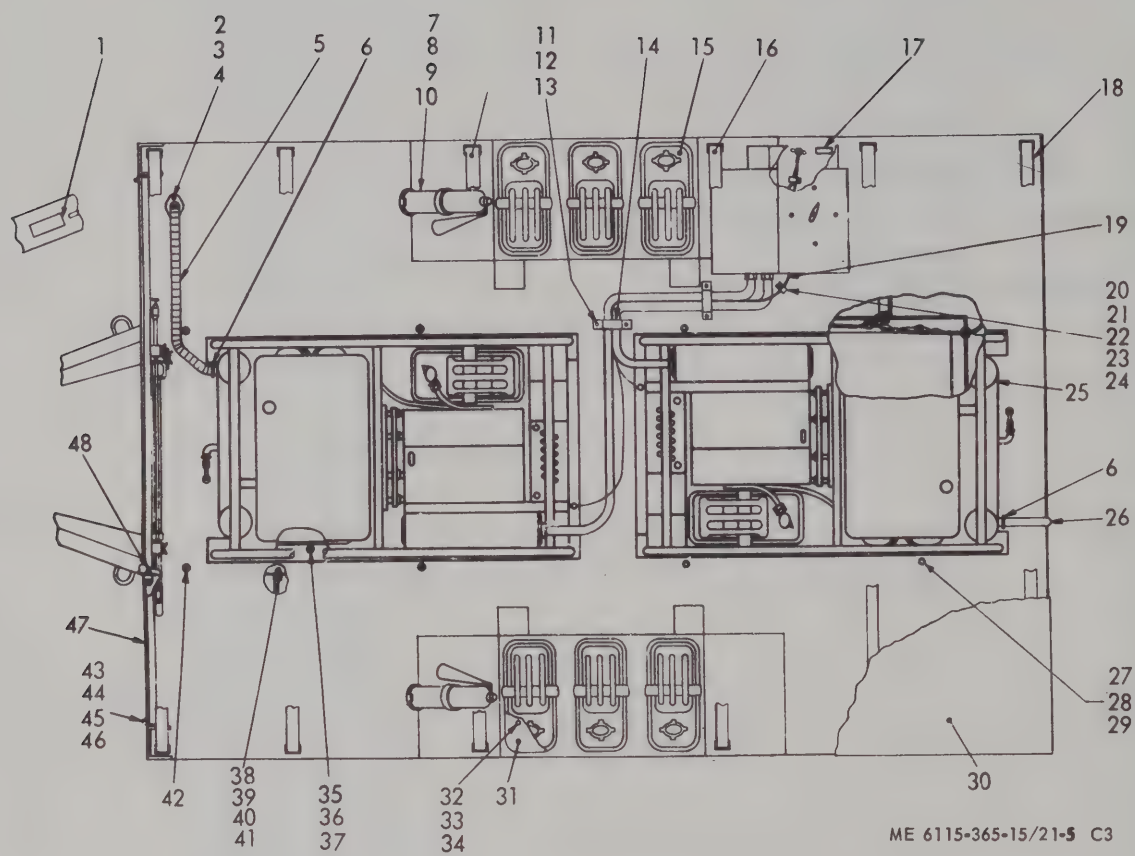


Figure 21-5. PU-656/G power unit.

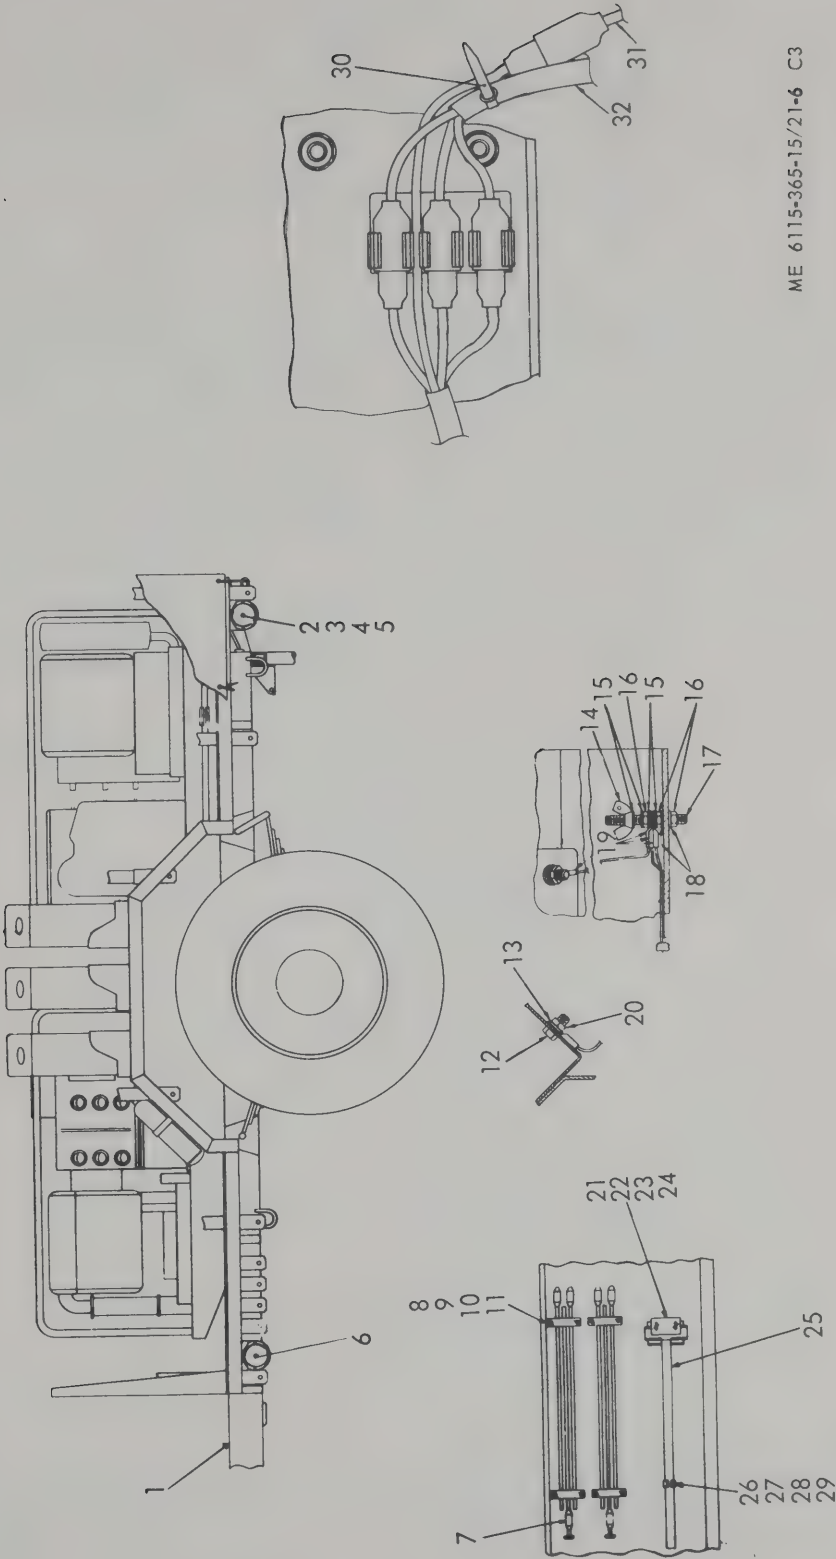

ME 6115-365-15/21-6 C3

CHAPTER 22

GENERATOR SET, PU-625/G, FSN 6115-873-3915

Section I. DESCRIPTION AND DATA

22-1. Description

a. General. The trailer mounted generator set, PU-625/G, consists of two 3 kw, 60 hz, MEP-016A Military Design generator sets mounted on a modified 3/4-ton, 2-wheel cargo trailer, model M-101-A1. (Figures 22-1 and 22-2.) Brackets, racks, holders, and cable reels are provided for transporting and installing communications equipment. Table 22-1 lists components of the PU-625/G generator set.

b. Generators. Each MEP-016A 3 kw generator set is powered by a directly coupled 4-cylinder, 6 hp, military standard

model 4A032 gasoline engine. For description, operation, and maintenance of the generators, refer to TM 5-6115-271-14. A power transfer switch is provided for connecting the generators to a common load.

c. Engines. For description, operation, and maintenance information not covered in TM 5-6115-271-14, refer to TM 5-2805-203-14.

d. Trailer. For description and maintenance of the trailer chassis, refer to TM 9-2330-202-14.

22-2. Tabulated Data

Table 22-1 lists components for the PU-625/G generator set.

Table 22-1. PU-625/G components

FSN	QTY	NOMENCLATURE
6115-A11-0393	1	Distribution box
4210-270-4512	1	Fire extinguisher, 5 lb.
6115-913-9290	2	Generator, 3 kw, 60 hz, MEP-016A
5975-642-8337	2	Ground rod, 9 ft.
5120-251-4489	1	Sledge hammer
2540-519-9794	1	Tarpaulin
2330-898-6779	1	Trailer M-101-A1, 3/4 ton

Section II. OPERATING INSTRUCTIONS

22-3. Setting-Up Instructions

a. Leveling.

(1) Locate the trailer on as level a surface as possible for the generators to operate efficiently.

(2) Set brakes and block wheels se-

curely to prevent any movement. Operate hand brake at weekly intervals to insure freedom of movement.

(3) Lower leg prop and adjust length for firm contact with ground.


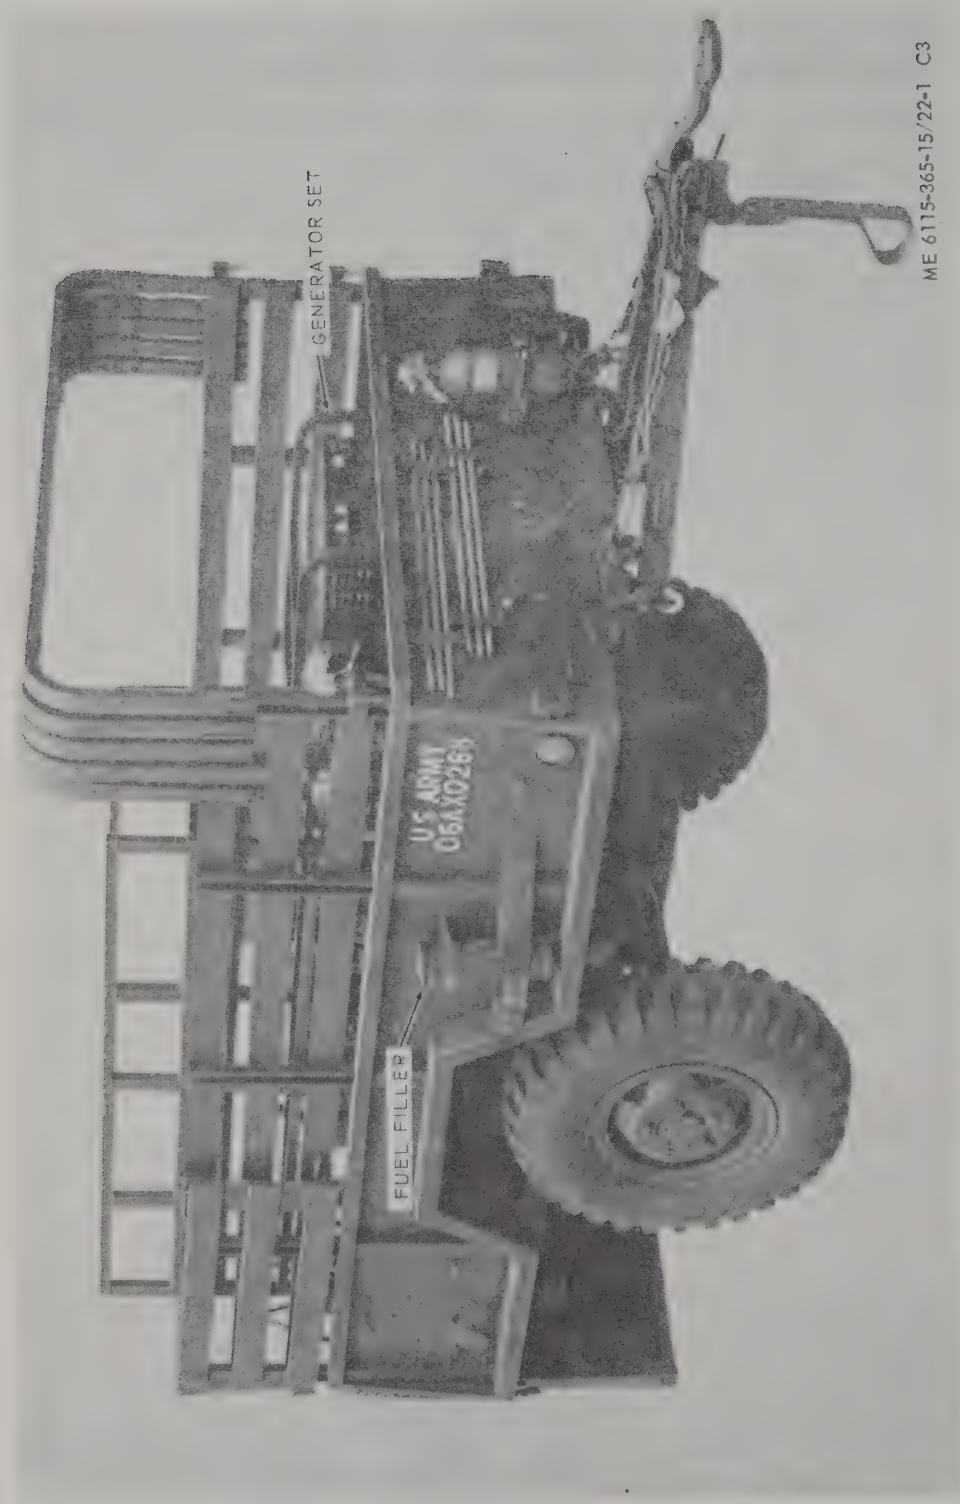


Figure 22-1. Generator set, PU-625/G.

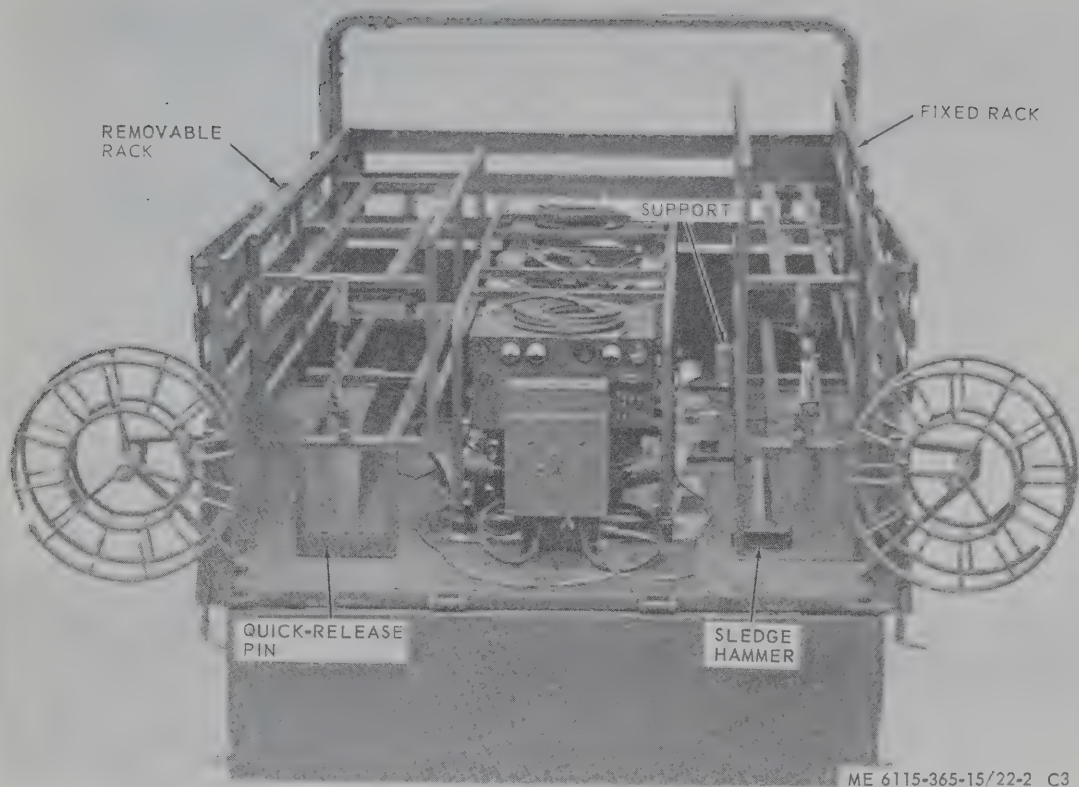

ME 6115-365-15/22-2 C3

Figure 22-2. Accessories, racks, and reels.

WARNING

Wheels must be blocked, brakes set, and leg prop down in support position before attempting to roll up the tarpaulin, and before starting to assemble or set-up equipment for operation.

b. Preparation Before Starting.


- (1) Remove tarpaulin and roof bows.
- (2) Unload equipment from racks.
- (3) Unscrew thumbscrews that secure roadside rack to trailer body and remove rack.
- (4) Remove generator set covers.
- (5) Remove engine oil pan plug and install drain line with shut-off cock. Turn the shut-off cock so that oil will not drain out. Refer to LO 2808-203-14 and put the proper amount of engine oil in the engine.

(6) Install the engine spark plugs. Torque to 23 - 25 ft. lbs.

(7) Install the generator set ground cables to the sets and to the ground stud under the distribution box.

(8) Assemble the 3 piece ground rod and install it or ground the trailer as directed in *c* below.

(9) Attach the fuel hose to the two-way valve and to the fuel line connector on the trailer floor (fig. 22-3). If fuel is to be supplied from a 55-gallon drum, attach the 25-foot hose to the drum and to the 2-way valve. The generator set gasoline tank under the set should be used for emergency operation only. Fill the trailer fuel tank. A gage is provided on the top of the tank to indicate the fuel level in the tank.

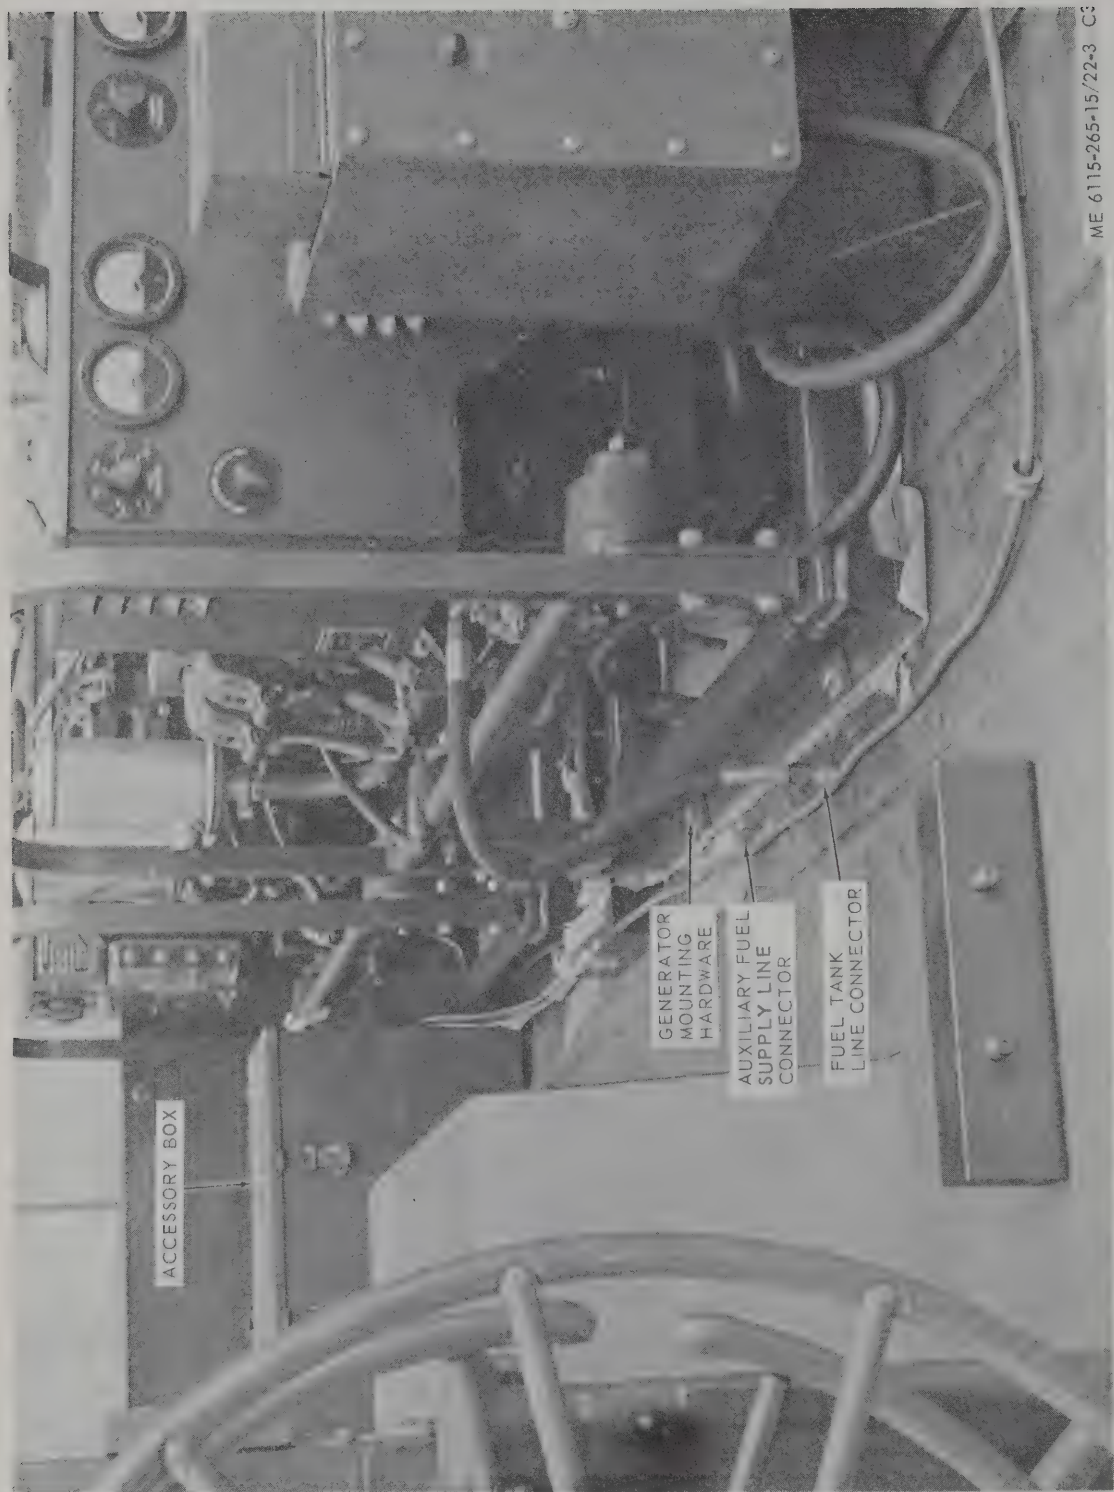

ME 6115-265-15/22-3 C3

Figure 22-3. Fuel line connections.

(10) Connect the load cables from the distribution box to the generator sets as shown in figure 22-4. Attach the cables to the floor of the trailer with the clamps provided. Connect the out-going load cables to the distribution box load terminals.

c. Grounding.

WARNING

Never operate the generator set until it has been properly grounded. Electrical defects in the load lines or equipment could cause death by electrocution.

(1) The ground may be any of three methods, depending on the location and the terrain.

(a) A ground rod driven to a depth of 8 feet.

(b) An underground metallic water piping system.

(c) A metal plate (9 square ft) buried to a depth of four feet.

(2) The ground lead must be no. 6 AWG copper wire bolted or clamped to the rod, plate, or piping system.

(3) Connect the other end of the ground lead to the ground stud on the distribution box support.

22-4. Starting

WARNING

Never operate the generator set in an enclosed area unless exhaust gases are piped outside. Inhalation of exhaust fumes may result in serious illness or death.

a. Perform the pre-starting operations in TM 5-6115-271-14.

b. Position the transfer switch to the desired generator.

c. Start the generator as described in TM 5-6115-271-14.

22-5. Stopping

Stop the generator set as described in TM 5-6115-271-14.

22-6. Operation

Operate the generator set as instructed in TM 5-6115-271-14. Use fuel from the trailer-mounted fuel tank. When refueling tank, operate the engine with fuel from the generator set fuel tank until sediment has had a chance to settle in the trailer fuel tank. Use the fuel transfer valve to perform fuel transfer operations. The load transfer switch on the distribution box is used to transfer the electrical load from one generator to the other (fig. 22-5).

Section III. OPERATOR'S MAINTENANCE INSTRUCTIONS

Operator's maintenance of the power unit is concerned with keeping the generator sets lubricated; the fuel tank filled; and cleaning and servicing the fuel filters and

air cleaners as described in TM 5-6115-271-14. Removal of dust and dirt from the equipment is also a routine maintenance function of the operator.

Section IV. ORGANIZATIONAL MAINTENANCE INSTRUCTIONS

22-7. Fuel System Components


a. *General.* The fuel system consists of a fuel tank located beneath the trailer; the fuel filters located inside the tank; the generator set fuel tanks located beneath the generators, on the skids; and the hoses and fittings to provide fuel to the engines. A fuel strainer in the filler neck is removable for cleaning. The fuel level gage is located on the top of the tank near the filler neck.

b. *Fuel Filter Replacement.*

(1) Drain the fuel tank.

(2) Loosen the hose clamps (45, fig. 22-6) on the hose (44) to the filler neck at the tank.

(3) Remove the nuts and washers that secure the tank hanger to the bracket and lower the tank far enough to disconnect fuel lines, vent hose, and ground wires on the top of the tank. Remove the tank.

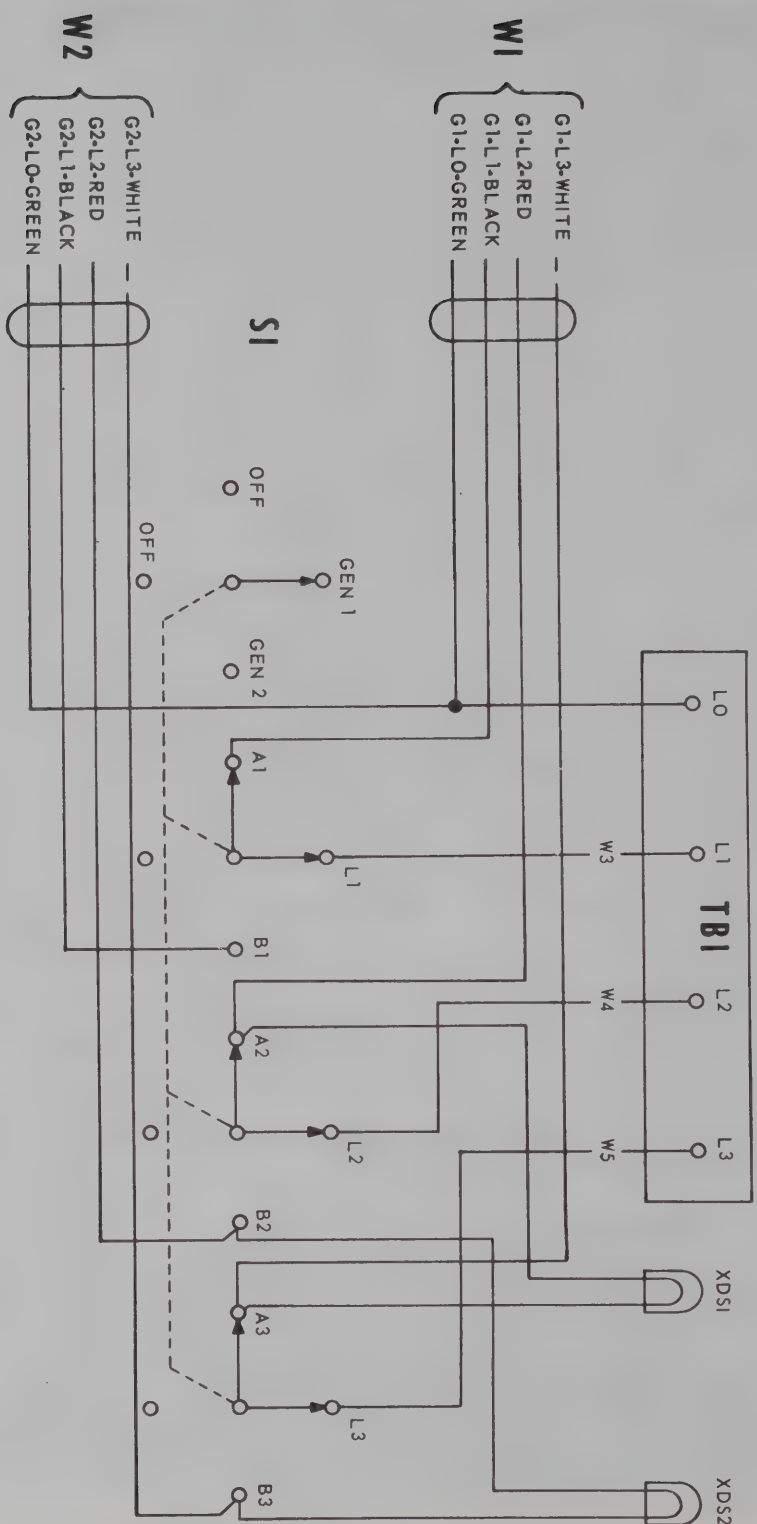

ME 6115-365-15/22-4 C3

Figure 22-4. Wiring diagram.

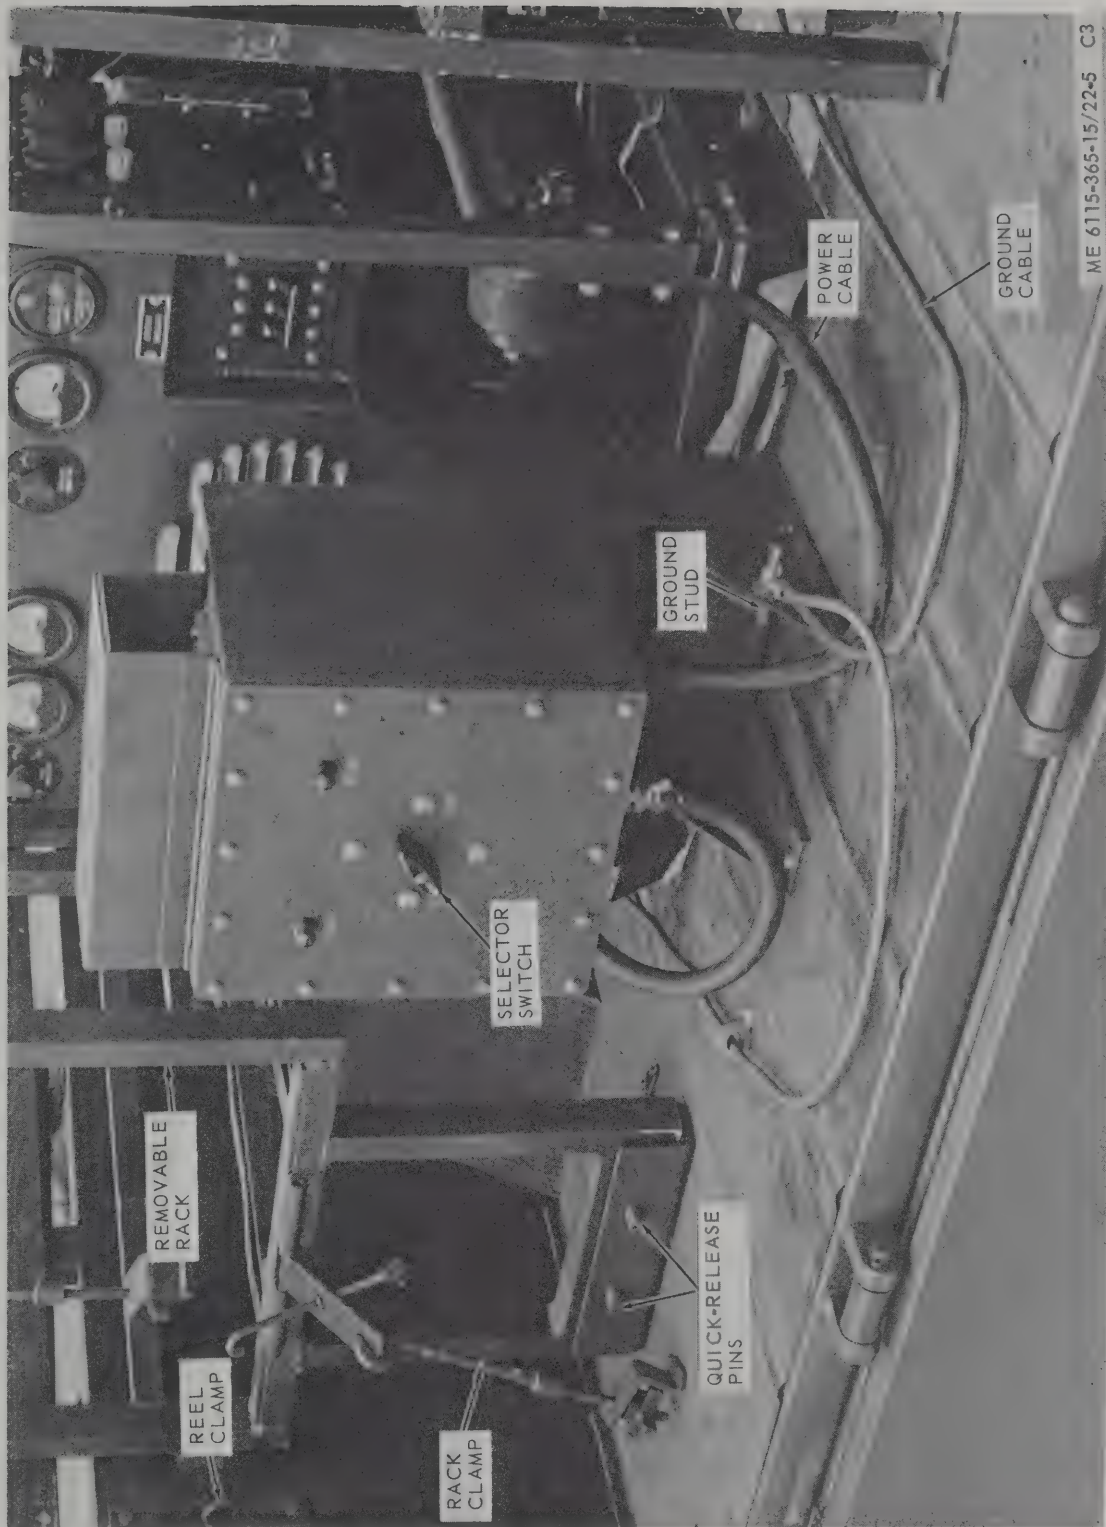


Figure 22-5. Distribution box and cables.

(4) Remove screws (6, fig. 22-7) and washers (5) that secure cover (3) to fuel tank. Remove cover and gasket with fuel filters.

(5) Remove nuts that secure filters to pick-up lines and remove filters.

(6) Install new filters and reverse removal procedure steps above.

c. Fuel Gage Replacement.

(1) Remove tank *b* above.

(2) Remove screws and washers that secure gage (22, fig. 22-7) to gage mount (18) and remove gage.

(3) Using serviceable gasket, install gage on gage mount and secure with screws and washers.

(4) Reinstall tank by reversing removal procedure *b* above.

d. Cleaning and Inspection.

(1) Remove tank *b* above, and remove fuel gage and filters.

(2) Clean all parts with solvent and flush out dirt and foreign particles from inside the tank.

(3) Inspect tank for dents, rust, cracks, and other damage. Inspect straps for defects and damaged or missing hardware. Inspect fuel gage for damage and proper operation.

(4) Replace defective or missing parts as necessary.

(5) Reinstall tank by reversing removal procedure *b* above.

22-8. Tarpaulin and Roof Bows

a. Removal.

(1) Remove tarpaulin from unit.

(2) Pull out chain-secured pins that secure roof bows to trailer and remove bows.

b. Cleaning and Inspection.

(1) Clean tarpaulin with water and detergent. Clean roof bows with solvent dampened cloth. Dry thoroughly.

(2) Inspect tarpaulin for tears, holes, missing or broken ropes and straps, and other defects. Inspect bows for bends, dents, and warped condition.

c. Installation. Installation is reverse of procedure *a* above. Be sure tarpaulin is treated for waterproofing and mildew resistance before reinstalling.

22-9. Trailer Leg Prop

a. Removal. Remove nuts (4, fig. 22-6), washers (3), and capscrews (2) that secure leg prop (1) to trailer chassis.

b. Cleaning and Inspection. Clean leg prop with cloth dampened in solvent and dry thoroughly. Inspect leg prop and base for bends, ease of adjustment, and secure attachment of base plate.

c. Installation. Installation is reverse of removal procedure *a* above. If trailer is to be moved, attach leg to holder beneath trailer and pin in place.

22-10. Holders, Supports, and Brackets

Replacement of the holders, supports, and brackets is accomplished by removing attaching hardware and installing serviceable components.

22-11. Reels and Reel Supports

(fig. 22-11)

a. Removal.

(1) Remove cotter pin (75), nut (74), and washer (73) and remove reel (5).

(2) Drive out roll pin (72) and remove collar (71) and spindle (70) from reel mount shaft.

(3) Remove capscrew (66) and washers (67 and 68) and remove shaft from reel mount.

(4) Remove cotter pins and remove reel mount from reel support.

(5) Remove nuts, washers, and capscrews that secure reel support to trailer body and remove support.

b. Installation. Installation is reverse of removal. Put a small amount of GAA on the shaft before reinstalling the spindle (70).

Section V. DIRECT AND GENERAL SUPPORT AND DEPOT MAINTENANCE INSTRUCTIONS


22-12. Generator Set

a. Removal.

(1) Disconnect fuel lines at fuel trans-

fer valve.

(2) Disconnect electrical load cables from panel.

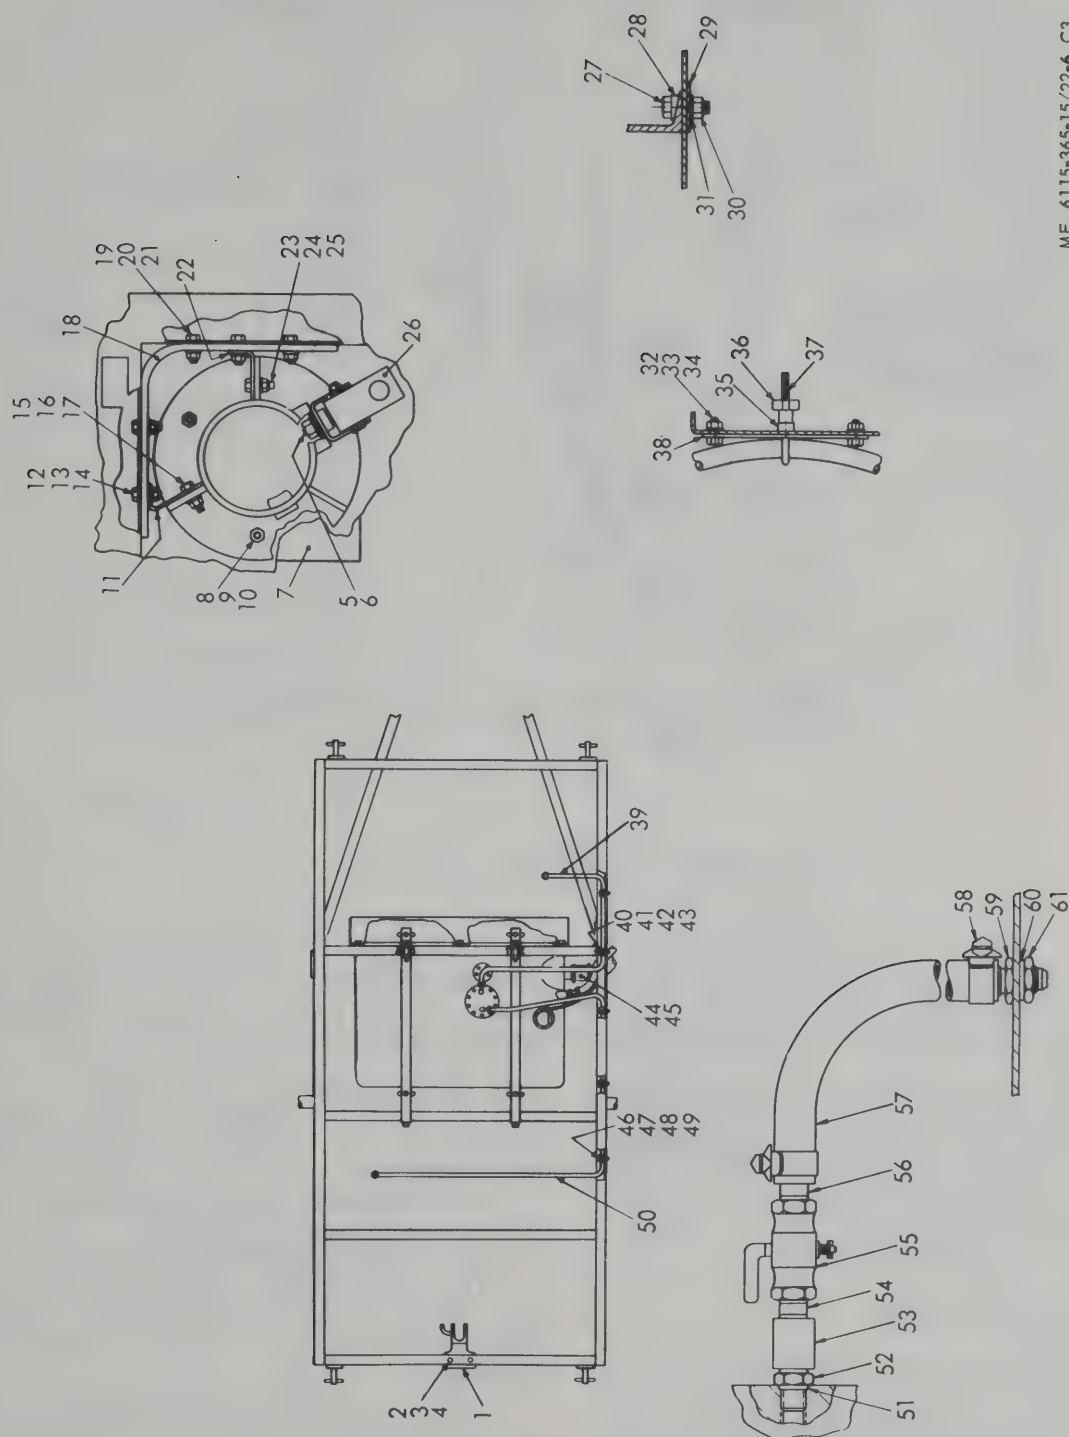

ME 6115-365-15/22-6 C3

Figure 22-6. Fuel supply fittings and oil drain.

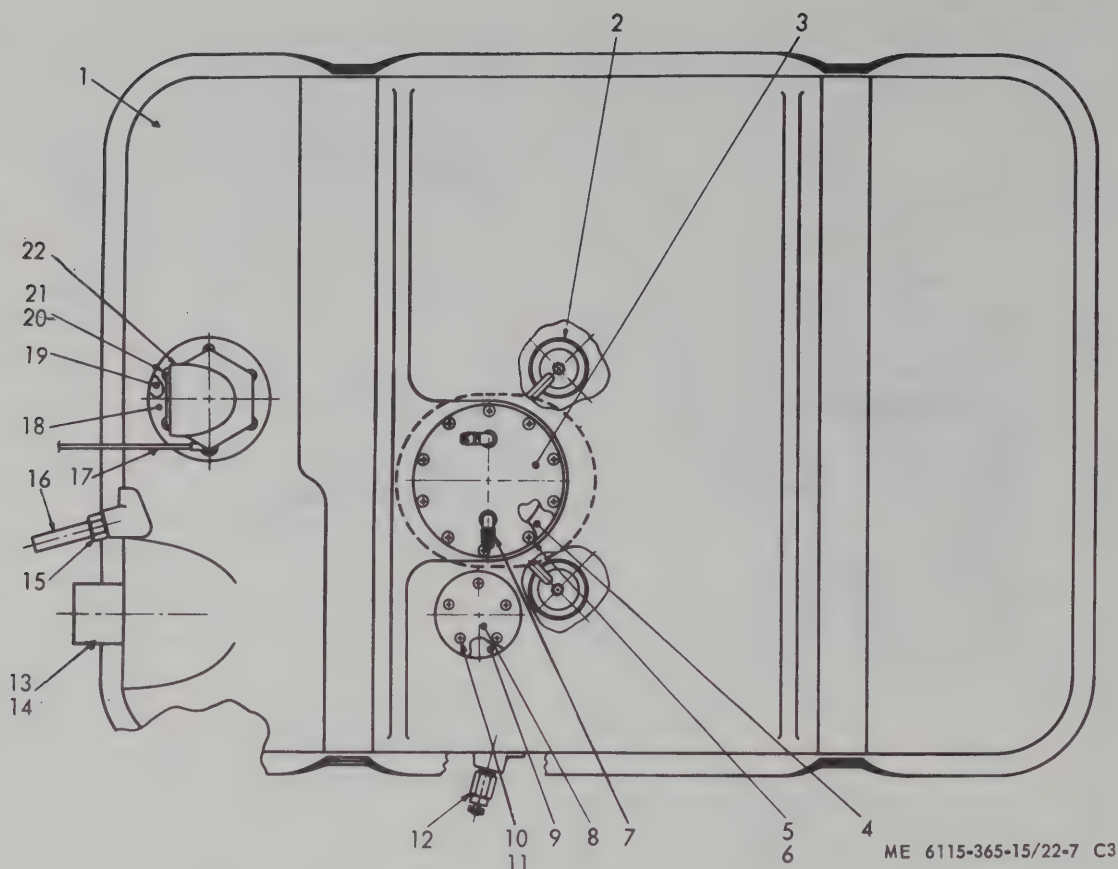


Figure 22-7. Fuel tank assembly.

(3) Remove nuts (30, fig. 22-6), washers (29 and 31), capscrews (27), and beveled washers (28) that secure generator set to trailer.

(4) Remove generator set from trailer.

b. Installation. Installation is reverse of removal procedure *a* above. Make sure that the beveled washers (28) are properly positioned so that generator set is securely mounted to the trailer body.

22-13. Distribution Box

a. Removal.

(1) Disconnect the load lines at the generator sets and the ground wires at the ground stud (16, fig. 22-8) on the distribution box bracket (10). Loosen cable clamps so that cables will be removed with distribution box.

(2) Remove nuts (13), washers (12),

stiffeners (22), and capscrews (11) that secure bracket to trailer bed and remove distribution box with cables.

b. Disassembly.

(1) Remove screws (47) and washers (48 and 49) and remove cover and gasket (45) from box.

(2) Disconnect and tag interval wiring at switch and indicator lights.

(3) Remove knob from switch.

(4) Remove nuts (29), washers (28), and screws (27) with "O" rings (30) and remove switch (43) and "O" ring (46) from box.

(5) To remove bracket from box, remove nuts (9) and washers (8) and separate bracket from box.

(6) To remove terminal board (22), remove nuts (36), washers (34 and 35), and machine screws (33), and separate

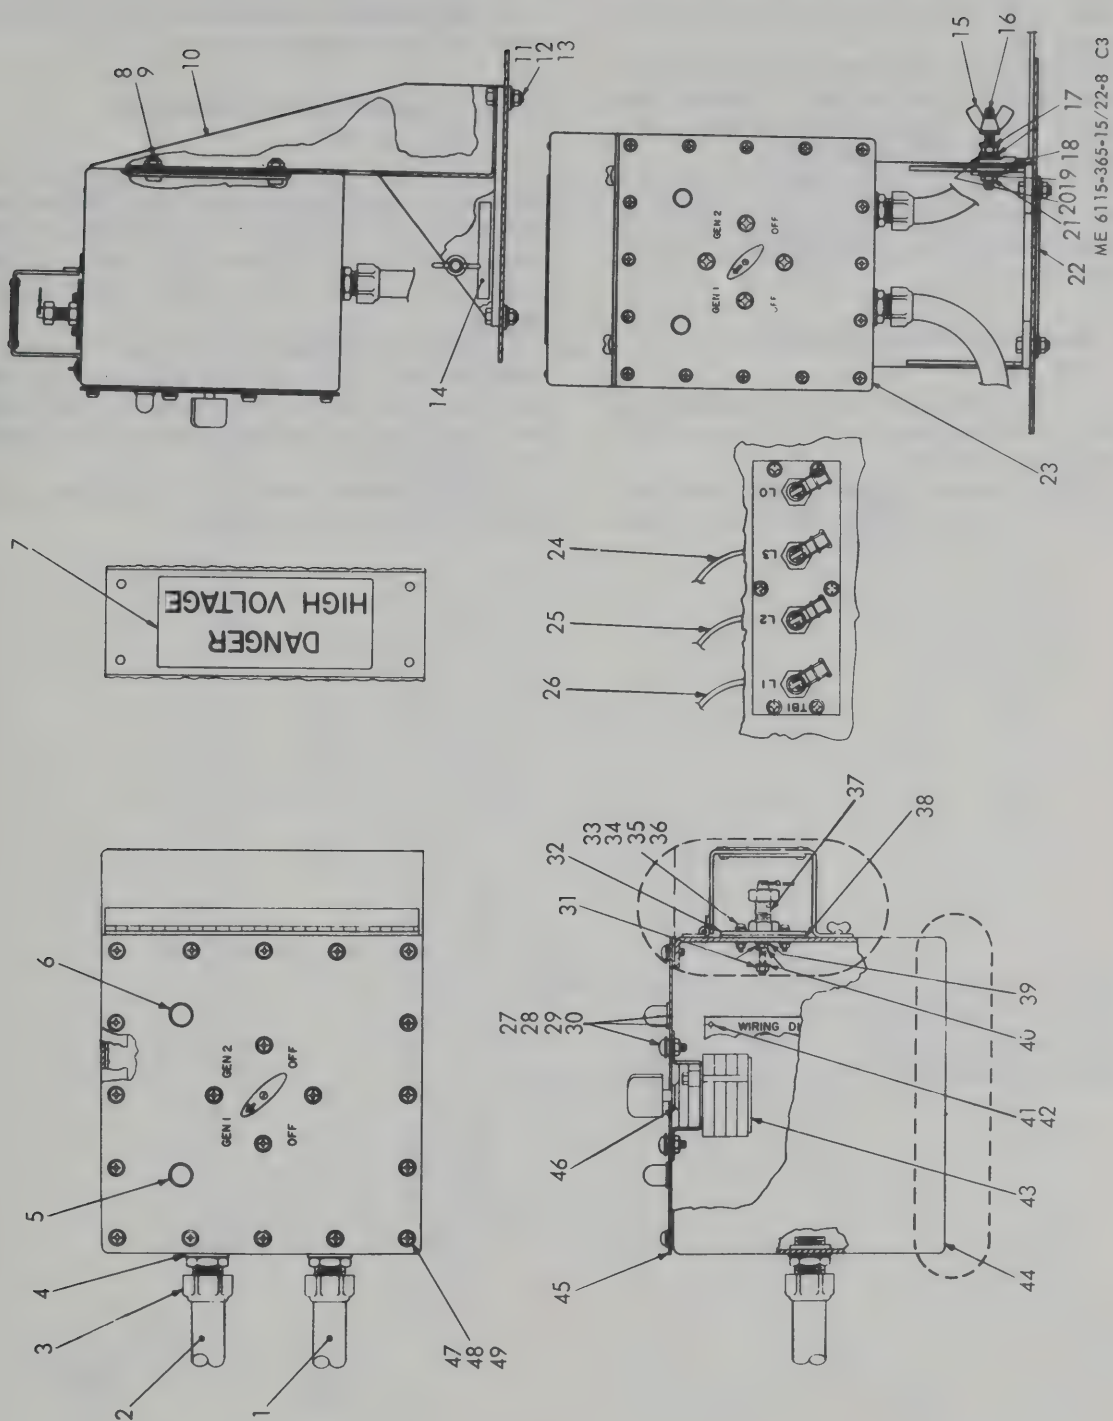


Figure 22-8. Distribution box.

terminal board and gasket (38) from box.

(7) To remove cables, loosen stuffing tube nuts and cable nuts and pull cables from box. Be careful not to damage the "O" rings (4).

c. Reassembly. Reassembly is reverse of disassembly procedures *b* above. Be sure that "O" rings and gaskets are serviceable before reinstalling.

d. Installation. Installation is reverse of removal *a* above. Refer to figure 22-4 to assure that electrical load cables are properly connected.

22-14. Removable Rack Assembly

(fig. 22-9)

a. Removal. Pull the quick-release pins, unscrew the screw-knobs, and remove the rack from the trailer.

b. Repair. Repair of the rack assembly consists of replacing the clamps (1), the

runners (24), the nylon runners (22), and the straightening and welding of the braces and longitudinals.

c. Installation. Installation is reverse of removal procedure *a* above.


22-15. Curbside Rack Assembly

(fig. 22-10)

a. Removal. Remove the nuts, washers, stiffeners, and capscrews that secure the rack to the floor of the trailer. Remove the capscrews and washers that secure the rack to the side of the trailer. Remove the rack.


b. Repair. Repair of the rack assembly consists of replacing the clamps (1), the runners (22), the nylon runners (24), and the straightening and welding of the braces and longitudinals.

c. Installation. Installation is reverse of removal procedure *a* above.

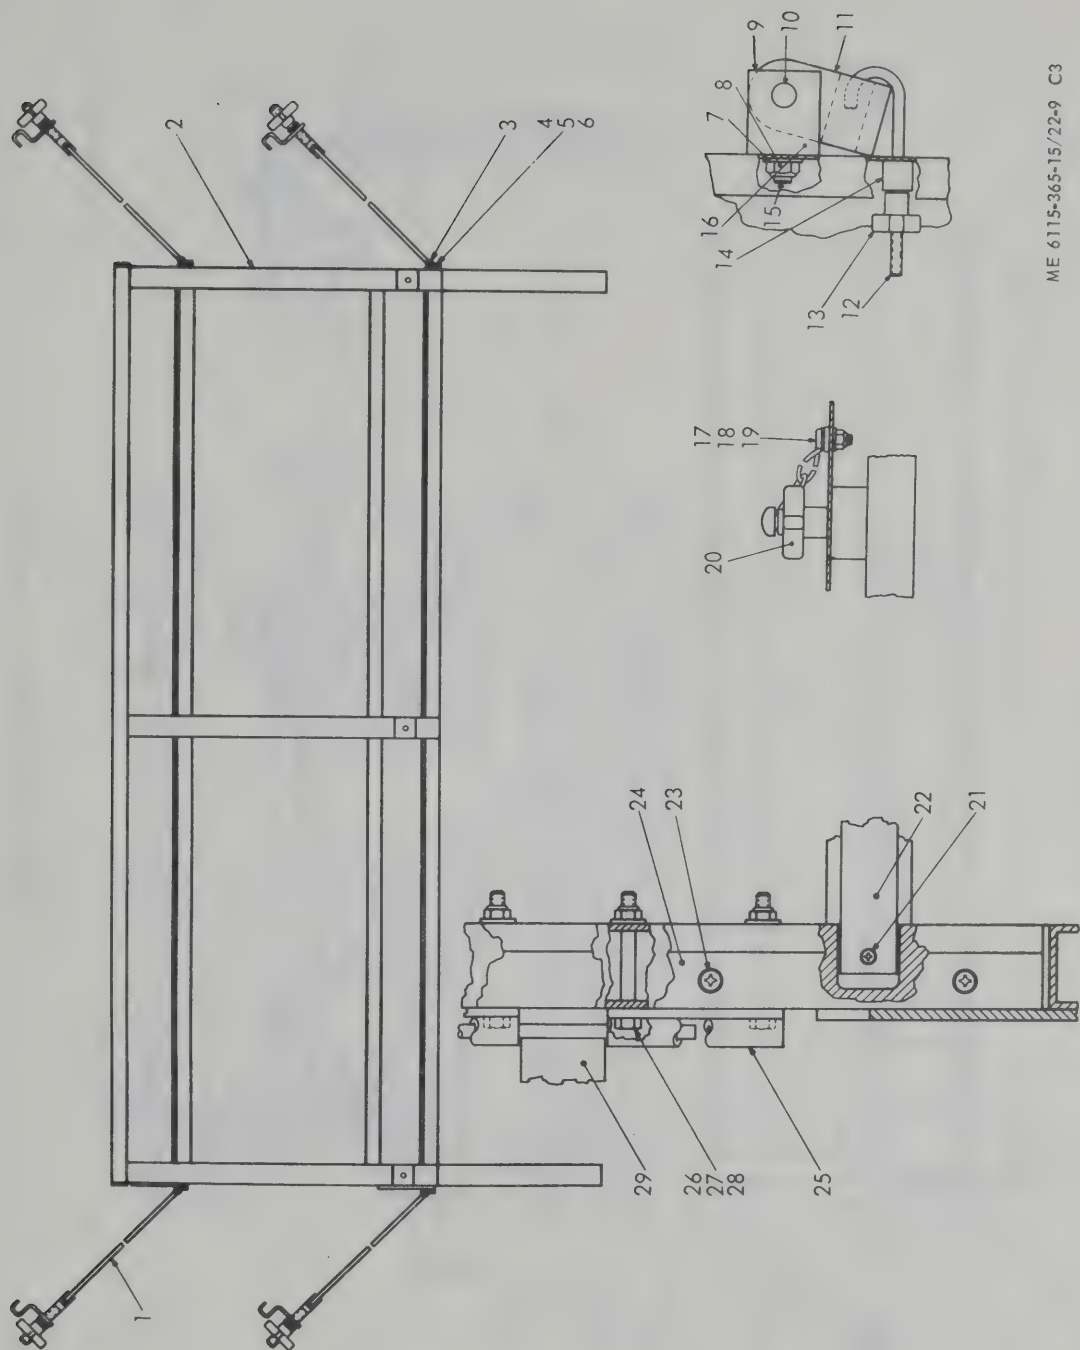

ME 6115-365-15/22-9 C3

Figure 22-9. Removable rack assembly.

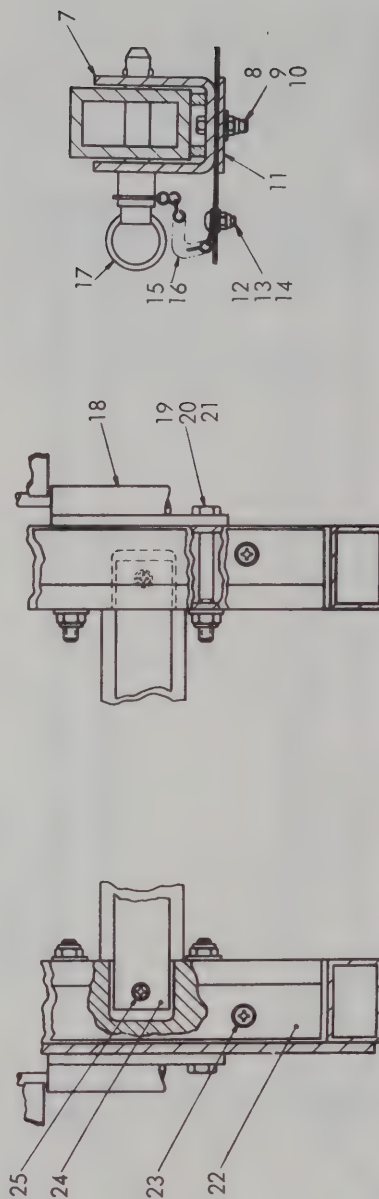

ME 6115-365-15/2210 C3

Figure 22-10. Curbside rack assembly.

ME 6115-365-15/22-11 C3


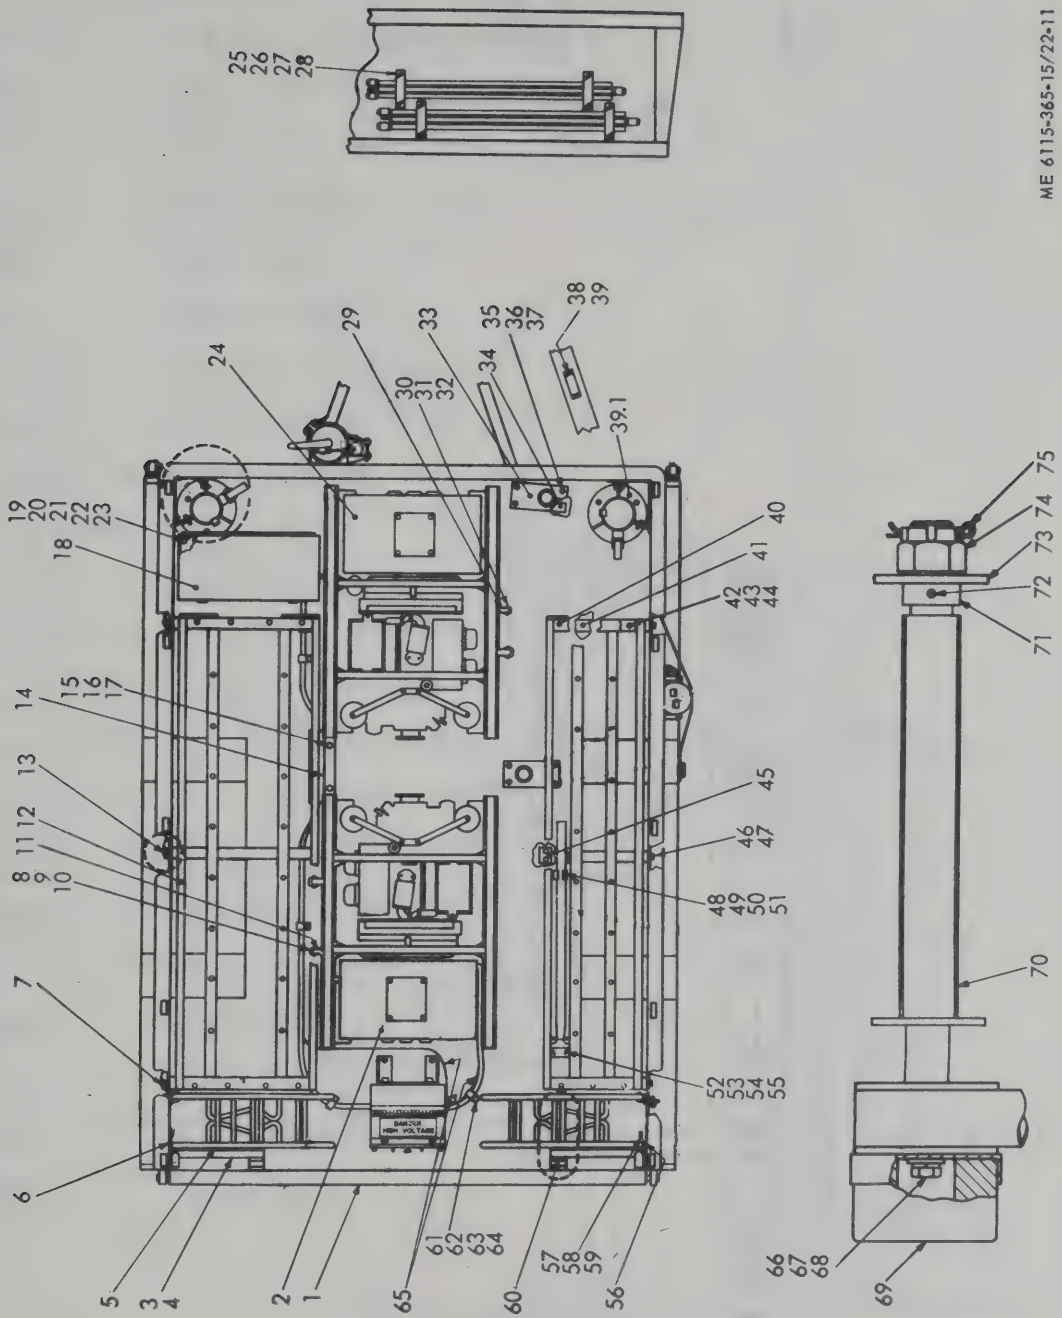


Figure 22-11. Basic trailer with accessories.

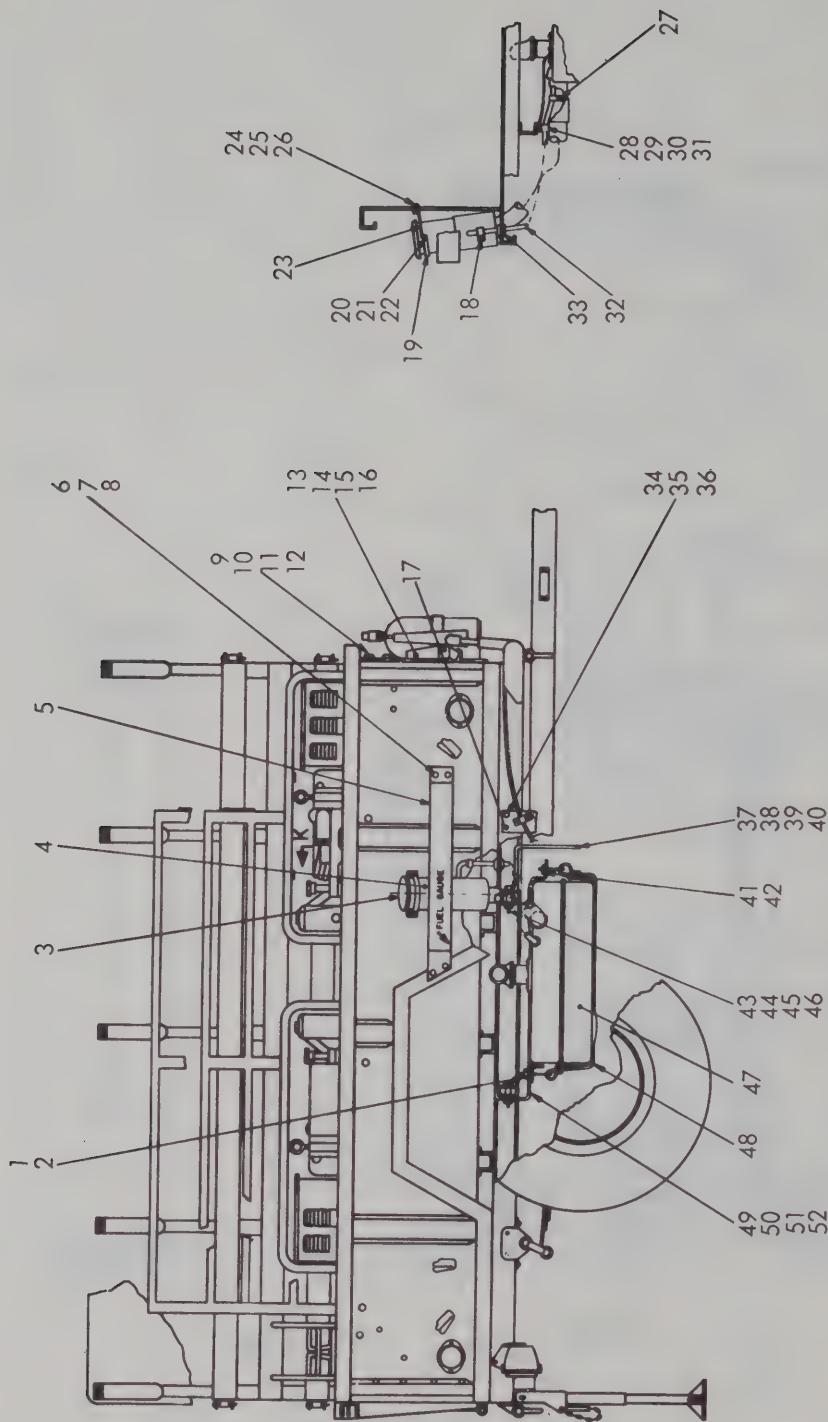

ME 6115-365-15/22-12 C3

Figure 22-12. Trailer with fuel tank mounted.

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
		PART I - PU-625/G								
00001		REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE								
00002		GROUP 03 - FUEL SYSTEM								
00003		0306 - TANKS, LINES AND FITTINGS								
X2 0 00005		BRACKET: FILLER NECK MTG 13205E5080 (97403)	EA	1					22- 12	23
X2 0 00006		BRACKET: TANK STRAP MTG, REAR 13205E4952 (97403)	EA	2					22- 12	49
0 00007		BRACKET: TANK SUPPORT 13205E4953 (97403)	EA	2	*	*	*	*	22- 12	48
P 0 00008	2910-911-0081	CAP: FUEL TANK, TAC VEHICULAR, FORDING MS35645-2 (96906)	EA	1	*	*	*	*	22- 12	3
0 00009	5305-068-0502	CAPSCREW, HEXAGON HEAD: 1/4-20 X 3/4 IN. LG MS90725-6 (96906)	EA	4	*	*	*	*	22- 12	6
0 00010	5305-225-3840	CAPSCREW, HEXAGON HEAD: 1/4-20 X 7/8 IN. LG MS90725-7 (96906)	EA	3	*	*	*	*	22- 12	24
0 00011	5305-225-3839	CAPSCREW, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)	EA	2	*	*	*	*	22- 12	20
0 00012	5305-269-3209	CAPSCREW, HEXAGON HEAD: 3/8-16 X 3/4 IN. LG MS90725-58 (96906)	EA	3	*	*	*	*	22- 12	38
0 00013	5305-269-3215	CAPSCREW, HEXAGON HEAD: 3/8-16 X 1 3/4 IN. LG MS90725-65 (96906)	EA	2	*	*	*	*	22- 12	50
0 00014	5305-269-3217	CAPSCREW, HEXAGON HEAD: 3/8-16 X 2 1/4 IN. LG MS90725-67 (96906)	EA	2	*	*	*	*	22- 12	44
0 00015	4730-908-3195	CLAMP: HOSE, 7/16-25/32 IN. RANGE MS35842-10 (96906)	EA	2	*	*	*	*	22- 12	27
0 00016	4730-909-8627	CLAMP: HOSE, 1 13/16 X 2 3/4 IN. RANGE MS35842-13 (96906)	EA	2	*	*	*	*	22-6	45
0 00017	5340-106-0551	CLAMP: LOOP, CUSHIONED, 5/8 IN. OD MS21104D10 (96906)	EA	2	*	*	*	*	22-6	40
0 00018	5340-106-0551	CLAMP: LOOP, CUSHIONED, 5/8 IN. OD MS21104D10 (96906)	EA	3	*	*	*	*	22-6	46
0 00019	5340-106-0552	CLAMP: LOOP, CUSHIONED, 3/4 IN. OD MS21104D12 (96906)	EA	1	*	*	*	*	22- 12	31
X2 0 00020		FILLER: FUEL TANK 13205E5081 (97403)	EA	1					22- 12	4
X2 0 00021		FITTING: 37 DEG FLARE, FUEL LINE CONNECTOR SAEJ514AF1G10C (81343)	EA	2					22- 11	30
0 00022	5325-184-9846	GROMMET: 3/4 IN. DIA MS35489-120 (96906)	EA	1	*	*	*	*	22- 12	33
X2 0 00023		GUARD: FUEL FILLER 13205E5083 (97403)	EA	1					22- 12	5

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS USABLE ON CODE	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
0 00024	2910-881-3433	HOSE: 1/2 IN. ID X 3/4 IN. OD X 24 IN. LG MILH13444TYPE2 (81349)	EA	1	*	*	*	*	22- 12	32
0 00025	4720-879-4091	HOSE ASSEMBLY: 5/16 IN. OD X 90 IN. LG MS28741-5-0900 (96906)	EA	1	*	*	*	*	22-6	50
P 0 00026	4720-289-4488	HOSE ASSEMBLY: DETACHABLE FITTING, 5/16 IN. OD X 18 IN. LG MS28741-5-0180 (96906)	EA	2	*	*	*	*	22- 11	29
P 0 00027	4721-781-4517	HOSE ASSEMBLY: DETACHABLE FITTING, 5/16 IN. OD X 50 IN. LG MS28741-5-0500 (96906)	EA	1	*	*	*	*	22-6	39
X2 0 00028		HOSE: FUEL, 2 IN. ID X 2 1/2 IN. OD X 3 IN. LG SAEF30CLASS30R2TYPE2 (81343)	EA	1					22-6	44
X2 0 00029		LOCKNUT: 37 DEG FLARE, 1/2-20 THD SIZE SAEF514AF1G10A (81343)	EA	2					22- 11	32
0 00030	5310-877-5797	NUT, SELF-LOCKING, HEXAGON HEAD: NO. 10-32 THD SIZE MS21044N3 (96906)	EA	1	*	*	*	*	22- 12	30
0 00031	5310-877-8797	NUT, SELF-LOCKING, HEXAGON HEAD: 10-32 THD SIZE MS21044N3 (96906)	EA	2	*	*	*	*	22-6	43
0 00032	5310-877-8797	NUT, SELF-LOCKING, HEXAGON HEAD: NO. 10-32 THD SIZE MS21044N3 (96906)	EA	3	*	*	*	*	22-6	49
0 00033	5310-088-1251	NUT, SELF-LOCKING, HEXAGON HEAD: 1/4-20 THD SIZE MS51922-1 (96906)	EA	4	*	*	*	*	22- 12	8
0 00034	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 THD SIZE MS51922-1 (96906)	EA	2	*	*	*	*	22- 12	22
0 00035	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 THD SIZE MS51922-1 (96906)	EA	3	*	*	*	*	22- 12	26
0 00036	5310-087-4652	NUT, SELF-LOCKING: 3/8-16 THD SIZE MS51922-17 (96906)	EA	3	*	*	*	*	22- 12	40
0 00037	5310-087-4652	NUT, SELF-LOCKING: 3/8-16 THD SIZE MS51922-17 (96906)	EA	2	*	*	*	*	22- 12	42
0 00038	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16 THD SIZE MS57922-7 (96906)	EA	2	*	*	*	*	22- 12	46
0 00039	5310-087-4652	NUT, HEXAGON HEAD: 3/8-16 THD SIZE MS51922-17 (96906)	EA	4	*	*	*	*	22- 12	52
X2 0 00040		PIPE: SPACER, 1/2 IN. ID, STD, BLK (AS REQUIRED) ASTMA120 (00000)	FT						22- 12	43

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
						(a)	(b)	(c)	(d)	(a)	(b)
						1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
0 00041	5305-989-7435	SCREW, MACHINE, PAN HEAD: 10-32 X 5/8 IN. LG MS35207-264 (96906)		EA	1	*	*			22- 12	28
0 00042	5305-989-7435	SCREW, MACHINE, PAN HEAD: 10-32 X 5/8 IN. LG MS35207-264 (96906)		EA	3	*	*	*	*	22-6	47
0 00043	5305-989-7435	SCREW, MACHINE, PAN HEAD: 10-32 X 5/8 IN. LG MS35207-264 (96906)		EA	2	*	*	*	*	22-6	41
X2 0 00044		SHIELD: FUEL TANK 13205E4951 (97403)		EA	1					22- 12	37
X2 0 00045		STRAP: FILLER BRACKET 13205E5082 (97403)		EA	1					22- 12	19
P 0 00046	2910-255-5038	TANK ASSEMBLY: FUEL, 2 FILTER 13216E7451-2 (97403)		EA	1	*	*	*	*	22- 12	47
X2 0 00047	4820-845-1096	COCK: DRAIN MS35783-2 (96906)		EA	1					22-7	12
X2 0 00048		COVER 13216E7456 (97403)		EA	1					22-7	8
X2 0 00049		ELBOW: 90-37 DEG X 5/16 IN. OD SAEW514 (81343)		EA	2					22-7	7
P 0 00051	2910-575-0998	FILTER: FUEL 13216E7451 (97403)		EA	2	*	*	*	*	22-7	2
X2 0 00052		GAGE: LIQUID LEVEL 13216E7459 (97403)		EA	1					22-7	22
X2 0 00053		GASKET: COVER 13216E7455 (97403)		EA	1					22-7	9
X2 0 00054		GASKET: GAGE MTG 13216E7458 (97403)		EA	1					22-7	19
X2 0 00055	2910-423-2730	GASKET: LEATHER 13216E7451 (97403)		EA	1					22-7	13
X2 0 00056		GASKET: PLATE MTG 13216E7453 (97403)		EA	1					22-7	4
X2 0 00057		GROUND WIRE ASSEMBLY 13216E7462 (97403)		EA	1					22-7	17
X2 0 00058		MOUNT: GAGE 13216E7458 (97403)		EA	1					22-7	18
X2 0 00059		NUT: INVERTED, 1/2 IN. OD, 3/4-18 THD SIZE SAEW512 (81343)		EA	1					22-7	15
X2 0 00060		PLATE: 2 CONNECTOR 3216E7454-2 (97403)		EA	1					22-7	3
X2 0 00061		SCREW, MACHINE: NO. 12-24 X 3/4 IN. LG FFS92TYPE3STYLE9C (81348)		EA	10					22-7	6
0 00062	5305-984-6193	SCREW, MACHINE: PAN HEAD, NO. 8-32 X 1/2 IN. LG MS35206-245 (96906)		EA	5	*	*	*	*	22-7	10
0 00063	5305-989-7435	SCREW, PAN HEAD: NO. 10-32 X 5/8 IN. LG MS35207-264 (96906)		EA	6	*	*	*	*	22-7	20
X2 0 00064		TANK: FUEL 13216E7452 (97403)		EA	1					22-7	1

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00065		TUBING: 1/2 IN. OD X .035 IN. WALL X 3 IN. LG SAEJ526 (81343)	EA	1					22-7	16
0 00066	5310-045-3299	WASHER: LOCK, NO. 8 NOM. SIZE, MS35338-42 (96906)	EA	5	*	*	*	*	22-7	11
X2 0 00067		WASHER: LOCK, NO. 12 NOM. SIZE, USASB27-4 (00000)	EA	10					22-7	5
0 00068	5310-045-3296	WASHER: LOCK, NO. 10 NOM. SIZE, MS35338-43 (96906)	EA	6	*	*	*	*	22-7	21
0 00069	5310-809-8546	WASHER: FLAT, NO. 10 BSC SIZE MS27183-8 (96906)	EA	1	*	*	*	*	22-12	29
0 00070	5310-809-8546	WASHER: FLAT, NO. 10 BSC SIZE MS27183-8 (96906)	EA	2	*	*	*	*	22-6	42
0 00071	5310-809-8546	WASHER: FLAT, NO. 10 BSC SIZE MS27183-8 (96906)	EA	3	*	*	*	*	22-6	48
0 00072	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	4	*	*	*	*	22-12	7
0 00073	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	2	*	*	*	*	22-12	21
0 00074	5310-809-4058	WASHER: FLAT, 1/4 IN. NOM. SIZE, MS27183-10 (96906)	EA	3	*	*	*	*	22-12	25
0 00075	5310-080-6004	WASHER: FLAT, 3/8 IN. NOM. SIZE, MS27183-14 (96906)	EA	3	*	*	*	*	22-12	39
0 00076	5310-080-6004	WASHER: 3/8 IN. BSC SIZE MS27183-14 (96906)	EA	2	*	*	*	*	22-12	41
0 00077	5310-080-6004	WASHER: FLAT, 3/8 IN. BSC SIZE MS27183-14 (96906)	EA	2	*	*	*	*	22-12	45
0 00078	5310-080-6004	WASHER: FLAT, 3/8 IN. BSC SIZE MS27183-14 (96906)	EA	4	*	*	*	*	22-12	51
0 00079	5310-809-5998	WASHER: FLAT, 1/2 IN. BSC SIZE MS27183-18 (96906)	EA	2	*	*	*	*	22-11	31
00080		GROUP 15 - FRAME								
00083		1507 - LEVELING JACKS								
0 00084	5305-269-3213	CAPSCREW, HEXAGON HEAD: 3/8-16 X 1 1/4 IN. LG MS90725-62 (96906)	EA	3	*	*	*	*	22-6	2
0 00085	5310-087-4652	NUT, SELF-LOCKING: 3/8-16 THD SIZE MS51922-17 (96906)	EA	3	*	*	*	*	22-6	4
P 0 00086	2590-318-6691	TRAILER LEG PROP ASSEMBLY 13214E1206 (97403)	EA	1	*	*	*	*	22-6	1
0 00087	5310-080-6004	WASHER: FLAT, 3/8 IN. BSC SIZE MS27183-14 (96906)	EA	3	*	*	*	*	22-6	3
00088		GROUP 18 - BODY								
00089		1808 - STOWAGE RACKS, BOXES, CABLE REELS								
X2 0 00090		ACCESSORY BOX 13205E5146 (97403)	EA	1					22-11	18
X2 0 00092		BRACKET: FIRE EXTINGUISHER MTC 13214E1235 (97403)	EA	1					22-12	13

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS USABLE ON CODE	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00093		BRACKET: RACK TO FLOOR 13216E7596 (97403)	EA	2					22- 10	7
X2 0 00094		PACKET ASSEMBLY: SWIVEL 13205E5094 (97403)	EA	4					22-6	26
X2 0 00095		BRACKET: SWIVEL 13205E5107 (97403)	EA	1					22-9	9
X2 0 00096		HOLDER 13205E5109 (97403)	EA	1					22-9	11
0 00097	5315-842-3044	PIN, COTTER: 3/32 X 3/4 IN. LG MS24665-283 (96906)	EA	1	*	*	*	*		
X2 0 00098		PIN: SWIVEL 13205E5152 (97403)	EA	1					22-9	10
X2 0 00099		SCREW, SHOULDER 13205E5108 (97403)	EA	1					22-9	15
0 00100	5305-071-2240	CAPSCREW, HEXAGON HEAD: 1/4-20 X 3/8 IN. LG MS90725-11 (96906)	EA	2	*	*	*	*	22- 11	20
0 00103	5305-225-3840	CAPSCREW, HEXAGON HEAD: 1/4-20 X 7/8 IN. LG MS90725-7 (96906)	EA	6	*	*	*	*	22- 10	8
0 00105	5305-225-3839	CAPSCREW, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)	EA	6	*	*	*	*	22-6	8
0 00107	5305-071-2232	CAPSCREW, HEXAGON HEAD: 1/4-20 X 3 1/4 IN. LG MS90725-19 (96906)	EA	2	*	*	*	*	22- 11	23
0 00108	5305-269-3209	CAPSCREW, HEXAGON HEAD: 3/8-16 X 3/4 IN. LG MS90725-58 (96906)	EA	4	*	*	*	*	22- 12	14
P 0 00110	4010-959-4775	CHAIN, WELDLESS, 6 IN. LG RRC271TYPE2C1-7 (81348)	EA	4	*	*	*	*	22- 10	15
X2 0 00111		HOOK 13205E5134-1 (97403)	EA	4					22-6	37
P 0 00112	4630-780-9350	HOOK: CHAIN MS87006-13 (96906)	EA	8	*	*	*	*	22-6	16
X2 0 00113		KNOB 13205E5105-1 (97403)	EA	4					22-6	36
X2 0 00116		BUMPER: REEL SHAFT 13216E7598 (97403)	EA	1					22- 11	69
0 00117	5305-068-0501	CAPSCREW, HEXAGON HEAD: 1/4-20 X 5/8 IN. LG MS90725-5 (96906)	EA	1	*	*	*	*	22- 11	66
X2 0 00118		COLLAR: REEL 13216E7608 (97403)	EA	1					22- 11	71
X2 0 00119		NUT, CASTELLATED, HEXAGON: 3/4-16 THD SIZE MS9358-17 (96906)	EA	1					22- 11	74
0 00120	5315-298-1481	PIN, COTTER: 1/8 X 1 1/2 IN. LG MS24665-357 (96906)	EA	1	*	*	*	*	22- 11	75
0 00121	5315-143-6284	PIN, SPRING: 1/8 X 1 IN. LG MS171534 (96906)	EA	1	*	*	*	*	22- 11	72
X2 0 00122		SPINDLE: REEL 13216E7607 (97403)	EA	1					22- 11	70
0 00123	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	1	*	*	*	*	22- 11	67
0 00124	5310-582-5965	WASHER: LOCK, 1/4 IN. NOM. SIZE, MS35338-44 (96906)	EA	1	*	*	*	*	22- 11	68

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS USABLE ON CODE	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
0 00125	5310-809-8536	WASHER: FLAT, 3/4 IN. BSC SIZE MS27183-24 (96906)	EA	1	*	*		*	22- 11	73
0 00127	5310-877-8797	NUT, SELF-LOCKING, HEXAGON: NO. 10-32 THD SIZE MS21044N3 (96906)	EA	3	*	*	*	*	22-9	19
0 00128	5310-877-8797	NUT, SELF-LOCKING, HEXAGON HEAD: NO. 10-32 THD SIZE MS21044N3 (96906)	EA	4	*	*	*	*	22- 10	14
0 00131	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)	EA	6	*	*	*	*	22- 10	10
0 00133	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)	EA	4	*	*	*	*	22- 11	22
0 00135	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)	EA	6	*	*	*	*	22-6	10
0 00136	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16 THD SIZE MS51922-17 (96906)	EA	1	*	*	*	*	22-6	6
0 00137	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16 THD SIZE MS51922-17 (96906)	EA	4	*	*	*	*	22- 12	16
P 0 00138		PIN, QUICK RELEASE MS17990C823 (96906)	EA	4	*	*	*	*	22- 10	17
0 00140	5305-071-2236	CAPSCREW, HEXAGON HEAD: 1/4-20 X 2 1/4 IN. LG MS90725-1 (96906)	EA	16	*	*	*	*	22- 10	19
X2 0 00141		CLAMP 13205E5137 (97403)	EA	4					22- 10	30
X2 0 00142		HINGE, LEAF BUTT 13205E5125 (97403)	EA	8					22- 10	18
0 00143	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 THD SIZE MS51922-1 (96906)	EA	16	*			*	22- 10	21
X2 0 00144		RUNNER: 11 3/4 IN. LG	EA	4					22- 10	22
X2 0 00145		RUNNER: NYLON, 61 1/2 IN. LG 13205E5123 (97403)	EA	4					22- 10	24
C 00146	5305-984-7361	SCREW, MACHINE: 10-32 X 3/8 IN. LG MS35191-270 (96906)	EA	12	*	*	*	*	22- 10	23
0 00147	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	16	*	*	*	*	22- 10	20
0 00148	5305-828-9820	SCREW, TAPPING: 6-32 X 1/2 IN. LG MS24627-24 (96906)	EA	40	*	*	*	*	22- 10	25
X2 0 00149		RACK ASSEMBLY: REMOVABLE 13205E5128 (97403)	EA	1					22- 11	12
0 00150	5305-071-2236	CAPSCREW, HEXAGON HEAD: 1/4-20 X 2 1/4 IN. LG MS90725-15 (96906)	EA	16	*	*	*	*	22-9	26
X2 0 00151		CLAMP 13205E5137 (97403)	EA	4					22-9	1
X2 0 00152		HINGE: LEAF BUTT 13205E5125 (97403)	EA	8					22-9	35
0 00153	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 THD SIZE MS51922-1 (96906)	EA	16	*	*	*	*	22-9	28

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
						(a)	(b)	(c)	(d)	(a)	(b)
						1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
O 00154	5305-984-7354	SCREW, MACHINE: 10-32 X 5/16 IN. LG MS35191-269 (96906)		EA	16	*	*	*	*	22-9	23
O 00155	5305-828-9820	SCREW: TAPPING, 6-32 X 1/2 IN. LG MS24627-24 (96906)		EA	40	*	*	*	*	22-9	21
X2 O 00156		RUNNER: 16 1/2 IN. LG 13205E5121 (97403)		EA	4					22-9	24
X2 O 00157		RUNNER: NYLON, 61 1/2 IN. LG 13205E5123 (97403)		EA	4					22-9	22
O 00158	5310-809-4058	WASHER, FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	16	*	*	*	*	22-9	27
X2 O 00159		REEL, CABLE MLLR55566RC435U (81349)		EA	2					22-11	5
O 00160	5305-989-7435	SCREW, MACHINE HEAD: 10-32 X 5/8 IN. LG MS35207-264 (96906)		EA	3	*	*	*	*	22-9	17
O 00161	5305-989-7434	SCREW, MACHINE, PAN HEAD: 10-32 X 3/4 IN. LG MS35207-263 (96906)		EA	4	*	*	*	*	22-10	12
P O 00162	5355-493-1849	SCREW, KNOB 13205E5148 (97403)		EA	3	*	*	*	*	22-9	20
X2 O 00163		CHAIN: 6 IN. LG RRC271TYPE1GRCC15STYLE1 (81349)		EA	1						
O 00164	4030-780-9350	HOOK, CHAIN MS87006-13 (96906)		EA	1	*	*	*	*		
O 00165	4030-946-8497	HOOK, CHAIN MS87006-23 (96906)		EA	1	*	*	*	*		
X2 O 00166		KNOB: 5/16-18 13205E5105-2 (97403)		EA	1						
X2 O 00167		PIN, ROLL: 1/8 X 5/8 IN. LG MS171528 (96906)		EA	1						
O 00168	5305-984-5681	SCREW: 5/16-18 X 3/4 IN. LG MS35206-301 (96906)		EA	1	*	*	*	*		
X2 O 00169		SPACER 13205E5119-1 (97403)		EA	4					22-6	35
X2 O 00172		STIFFENER 13205E5151 (97403)		EA	2					22-10	11
X2 O 00176		SUPPORT, MAST 13205E5099-2 (97403)		EA	2					22-11	39
O 00180	5305-225-3840	CAPSCREW, HEXAGON HEAD: 1/4-20 X 7/8 IN. LG MS90725-7 (96906)		EA	4	*	*	*	*	22-6	12
O 00181	5305-225-3840	CAPSCREW, HEXAGON HEAD: 1/4-20 X 7/8 IN. LG MS90725-7 (96906)		EA	2	*	*	*	*	22-6	14
O 00182	5305-068-0502	CAPSCREW, HEXAGON HEAD: 1/4-20 3/4 IN. LG MS90725-6 (96906)		EA	1	*	*	*	*	22-6	19
O 00183	5305-225-3840	CAPSCREW, HEXAGON HEAD: 1/4-20 X 7/8 IN. LG MS90725-7 (96906)		EA	2	*	*	*	*	22-6	23
O 00184	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)		EA	4	*	*	*	*	22-6	14
O 00185	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)		EA	2	*	*	*	*	22-6	16
O 00186	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)		EA	6	*	*	*	*	22-6	21

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS USABLE ON CODE	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
0 00187	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)	EA	2	*	*	*	*	22-6	25
0 00188	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	4	*	*	*	*	22-6	13
0 00189	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	2	*	*	*	*	22-6	15
0 00190	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	6	*	*	*	*	22-6	20
0 00191	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	2	*	*	*	*	22-6	24
0 00194	5310-809-8546	WASHER: FLAT, NO. 10 BSC SIZE MS27183-8 (96906)	EA	3	*	*	*	*	22-9	18
0 00195	5310-809-8546	WASHER: FLAT, NO. 10 BSC SIZE MS27183-8 (96906)	EA	4	*	*	*	*	22-10	13
0 00198	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	6	*	*	*	*	22-10	9
0 00200	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	4	*	*	*	*	22-11	21
0 00202	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	6	*	*	*	*	22-6	9
0 00204	5310-081-6004	WASHER: FLAT, 3/8 IN. BSC SIZE MS27183-14 (96906)	EA	4	*	*	*	*	22-12	15
0 00205	5310-081-6004	WASHER: FLAT, 1/2 IN. BSC SIZE MS27183-14 (96906)	EA	1	*	*	*	*	22-6	5
X2 0 00206		WASHER 13205E5114 (97403)	EA	4					22-11	19
00207		GROUP 22 - BODY ACCESSORY ITEMS								
00208		2202 - ACCESSORY ITEMS								
X2 0 00209		BRACKET: FIRE EXTINGUISHER MTG 13216E7601 (97403)	EA	1					22-12	9
X2 0 00210		BRACKET ASSEMBLY: SLEDGE HAMMER 13214E1214 (97403)	EA	1					22-11	52
0 00211	5305-068-0502	CAPSCREW, HEXAGON HEAD: 1/4-20 X 3/4 IN. LG MS90725-6 (96906)	EA	2	*	*	*	*	22-11	53
0 00212	5305-068-0502	CAPSCREW, HEXAGON HEAD: 1/4-20 X 3/4 IN. LG MS90725-6 (96906)	EA	1	*	*	*	*	22-11	49
0 00213	5305-068-0502	CAPSCREW, HEXAGON HEAD: 1/4-20 X 3/4 IN. LG MS90725-6 (96906)	EA	2	*	*	*	*	22-11	15
0 00214	5305-068-0502	CAPSCREW, HEXAGON HEAD: 1/4-20 X 3/4 IN. LG MS90725-6 (96906)	EA	8	*	*	*	*	22-11	26
0 00215	5305-269-3209	CAPSCREW, HEXAGON HEAD: 3/8-16 X 3/4 IN. LG MS90725-58 (96906)	EA	4	*	*	*	*	22-11	10
0 00216	5306-225-8498	CAPSCREW, HEXAGON HEAD: 5/16-18 X 7/8 IN. LG MS90725-33 (96906)	EA	1	*	*	*	*	22-11	34
X2 0 00217	2590-932-7298	CLAMP, GROUND ROD 13212E3617 (97403)	EA	4					22-11	25
X2 0 00218	5340-914-2578	CLIP, SPRING, SLEDGE HAMMER 13214E1213-1 (97403)	EA	1					22-11	48

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
						(a)	(b)	(c)	(d)	(a)	(b)
						1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00219		GUARD, CABLE 13216E7597 (97403)		EA	1					22- 11	14
0 00220	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)		EA	1	*	*	*	*	22- 11	51
0 00221	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)		EA	2	*	*	*	*	22- 11	55
0 00222	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 THD SIZE MS51922-1 (96906)		EA	8	*	*	*	*	22- 11	28
0 00223	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16 THD SIZE MS51922-17 (96906)		EA	4	*	*	*	*	22- 12	12
0 00224	5310-984-3806	NUT, SELF-LOCKING, HEXAGON: 5/16-18 THD SIZE MS5122-9 (96906)		EA	1	*	*	*	*	22- 12	36
X2 0 00225		PLATE: BRAKE CABLE MTG 13205E5133 (97403)		EA	1					22- 12	17
0 00226	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	2	*	*	*	*	22- 11	54
0 00227	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	1	*	*	*	*	22- 11	50
0 00228	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	2	*	*	*	*	22- 11	16
0 00229	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	8	*	*	*	*	22- 11	27
0 00230	5310-080-6004	WASHER: FLAT, 3/8 IN. BSC SIZE MS27183-14 (96906)		EA	4	*	*	*	*	22- 12	11
0 00231	5310-081-4219	WASHER: FLAT, 5/16 IN. BSC SIZE MS27183-12 (96906)		EA	1	*	*	*	*	22- 12	35
00232		2210 - DATA PLATES									
X2 0 00233		PLATE, IDENTIFICATION: GROUND TERMINAL 13205E4918 (97403)		EA	1					22-8	14
X2 0 00234		PLATE, IDENTIFICATION: PU-625/G 13205E4916-19 (97403)		EA	1					22- 11	38
0 00235	5305-253-5614	SCREW, DRIVE: NO. 4-7 X .19 IN. LG MS21318-20 (96906)		EA	4	*	*	*	*	22- 11	39
00236		GROUP 29 - AUXILIARY GENERATORS AND ENGINES									
00237		2901 - GENERATOR AND ENGINE ASSEMBLY									
0 00238	5305-782-9494	CAPSCREW, HEXAGON HEAD: 1/2-13 X 1 3/4 IN. LG MS90725-114 (96906)		EA	8	*	*	*	*	22-6	27
0 00240	5310-225-6993	NUT, SELF-LOCKING: 1/2-13 MS51922-33 (96906)		EA	8	*	*	*	*	22-6	30
X2 0 00241		WASHER: 1/2 IN. 13216E7602 (97403)		EA	8					22-6	29
0 00242	5310-809-5998	WASHER: 1/2 IN. NOM. SIZE MS27183-18 (96906)		EA	8	*	*	*	*	22-6	31
X2 0 00243		WASHER: BEVELED 1306E4482-2 (97403)		EA	8					22-6	28

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
						(a)	(b)	(c)	(d)	(a)	(b)
						1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
00244		2916 - ENGINE LUBRICATION SYSTEM									
O 00245	4730-270-4581	ADAPTER: 1/2-20 X 1/4-18 5AEJ514 (81343)		EA	2	*	*	*	*	22-6	52
P O 00246	4730-908-3194	CLAMP MS35842-11 (96906)		EA	4	*	*	*	*	22-6	58
O 00247	4820-277-1765	COCK, PLUG, SPRING, KEY: 1/4-18 X 1/4-18 THD SIZE MS35930-2 (96906)		EA	2	*	*	*	*	22-6	55
M O 00248		HOSE: 1/2-10 X 10 IN. LG SAEJ3OCL3ORSTYPE1 (81343)		EA	2	*	*	*	*	22-6	57
P O 00249	4730-684-1032	HOSE: 1/2-10 IN. ID (AS REQUIRED) SAEJ3OCL3ORSTYPE1 (81343)		FT		*	*	*	*		
O 00250	5310-584-5272	LOCK WASHER MS35332-48 (96906)		EA	2	*	*	*	*	22-6	60
O 00251	4730-196-1465	NIPPLE, CLOSE WWN351 (81348)		EA	2	*	*	*	*	22-6	54
O 00252		NIPPLE: 1/4 IN. IPS WWP521 (81348)		EA	2	*	*	*	*	22-6	53
O 00253	4730-196-1502	NIPPLE: 1/4 IN. IPS X 1 1/2 IN. LG WWN351 (81348)		EA	2	*	*	*	*	22-6	56
O 00254	5310-282-7818	NUT AN924-5 (88044)		EA	2	*	*	*	*	22-6	61
O 00255	5330-684-3430	PACKING, PREFORMED: O RING MS28775-013 (96906)		EA	2	*	*	*	*	22-6	51
X2 O 00256	4730-277-6447	UNION: BULKHEAD AN832-5 (88044)		EA	2					22-6	59
00257		GROUP 42 - ELECTRICAL EQUIPMENT									
00258		4202 - ELECTRICAL CONTROLS									
P O 00271	6210-660-8195	LIGHT, INDICATOR 13214E1391 (97403)		EA	2	*	*	*	*	22-8	6
00300		4216 - MISCELLANEOUS WIRING AND FITTINGS									
O 00301	5310-877-5797	NUT, SELF-LOCKING, HEXAGON: NO. 10-32 THD SIZE MS21044N3 (96906)		EA	4	*	*	*	*	22-11	64
X2 O 00302	5340-106-0552	CLAMP: LOOP, 3/4 IN. OD, TUBE MS21104D12 (96906)		EA	4					22-11	61
O 00303	5310-918-6921	NUT, PLAIN, HEXAGON: JAM MS16203-39 (96906)		EA	2	*	*	*	*	22-8	21
O 00304	5310-543-4717	NUT, PLAIN, WING: 3/8-16 THD SIZE MS35425-28 (96906)		EA	1	*	*	*	*	22-8	15
O 00305	5305-989-7435	SCREW, MACHINE: 10-32 X 5/8 IN. LG MS35207-264 (96906)		EA	4	*	*	*	*	22-11	62
X2 O 00306	5307-722-9437	STUD: GROUNDING 13214E1223 (97403)		EA	1					22-8	16
O 00307	5940-688-6010	TERMINAL LUG: CRIMP STYLE, 3/8 IN. BSC SIZE MS20659-10 (96906)		EA	2	*	*	*	*	22-8	19
O 00308	5310-809-8546	WASHER: FLAT, NO. 10 BSC SIZE MS27183-8 (96906)		EA	4	*	*	*	*	22-11	63

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS USABLE ON CODE	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
X2 0 00309	5310-187-2413	WASHER: FLAT, ELECTRIC, 3/8 IN. BSC SIZE AN961-616 (88044)	EA	1					22-8	20
0 00310	5310-913-9776	WASHER: LOCK, 3/8 IN. NOM. SIZE MS35 335-91 (96906)	EA	2	*	*	*	*	22-8	17
0 00311	5310-913-9776	WASHER: LOCK, EXTERNAL TOOTH, 3/8 IN. NOM. SIZE MS35335-91 (96906)	EA	2	*	*	*	*	22-8	18
0 00312	6145-395-8799	WIRE, ELECTRIC: NO. 6 AWG (AS REQUIRED) QQW343TYPERBR (81348)	FT		*	*	*	*	22- 11	65

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
		PART II - PU- 625/G												
00001		REPAIR PARTS FOR DS, GS AND DEPOT MAINTENANCE												
00002		GROUP 03 - FUEL SYSTEM												
00003		0306 - TANKS, LINES AND FITTINGS												
X2 0 00005		BRACKET: FILLER NECK MTG 13205E5080 (97403)	EA	1									22- 12	23
X2 0 00006		BRACKET: TANK STRAP MTG, REAR 13205E4952 (97403)	EA	2									22- 12	49
0 00007		BRACKET: TANK SUPPORT 13205E4953 (97403)	EA	2	*	*	*	*	*	*	*	*	22- 12	48
P 0 00008	2910-911-0081	CAP: FUEL TANK, TAC VEHICULAR, FORDING MS35645-2 (96906)	EA	1	*	*	*	*	*	*	*	*	22- 12	3
0 00009	5305-068-0502	CAPSCREW, HEXAGON HEAD: 1/4-20 X 3/4 IN. LG MS90725-6 (96906)	EA	4	*	*	*	*	*	*	*	*	22- 12	6
0 00010	5305-225-3840	CAPSCREW, HEXAGON HEAD: 1/4-20 X 7/8 IN. LG MS90725-7 (96906)	EA	3	*	*	*	*	*	*	*	*	22- 12	24
0 00011	5305-225-3839	CAPSCREW, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)	EA	2	*	*	*	*	*	*	*	*	22- 12	20
0 00012	5305-269-3209	CAPSCREW, HEXAGON HEAD: 3/8-16 X 3/4 IN. LG MS90725-58 (96906)	EA	3	*	*	*	*	*	*	*	*	22- 12	38
0 00013	5305-269-3215	CAPSCREW, HEXAGON HEAD: 3/8-16 X 1 3/4 IN. LG MS90725-65 (96906)	EA	2	*	*	*	*	*	*	*	*	22- 12	50
0 00014	5305-269-3217	CAPSCREW, HEXAGON HEAD: 3/8-16 X 2 1/4 IN. LG MS90725-67 (96906)	EA	2	*	*	*	*	*	*	*	*	22- 12	44
0 00015	4730-908-3195	CLAMP: HOSE, 7/16-25/32 IN. RANGE MS35842-10 (96906)	EA	2	*	*	*	*	*	*	*	*	22- 12	27
0 00016	4730-909-8627	CLAMP: HOSE, 1 13/16 X 2 3/4 IN. RANGE MS35842-13 (96906)	EA	2	*	*	*	*	*	*	*	*	22-6	45
0 00017	5340-106-0551	CLAMP: LOOP, CUSHIONED, 5/8 IN. OD MS21104D10 (96906)	EA	2	*	*	*	*	*	*	*	*	22-6	40
0 00018	5340-106-0551	CLAMP: LOOP, CUSHIONED, 5/8 IN. OD MS21104D10 (96906)	EA	3	*	*	*	*	*	*	*	*	22-6	46
0 00019	5340-106-0552	CLAMP: LOOP, CUSHIONED, 3/4 IN. OD MS21104D12 (96906)	EA	1	*	*	*	*	*	*	*	*	22- 12	31
X2 0 00020		FILLER: FUEL TANK 13205E5081 (97403)	EA	1									22- 12	4
X2 0 00021		FITTING: 37 DEG FLARE, FUEL LINE CONNECTOR SAEJ514AF1G10C (81343)	EA	2									22- 11	30
0 00022	5325-184-9846	GROMMET: 3/4 IN. DIA MS35489-120 (96906)	EA	1	*	*	*	*	*	*	*	*	22- 12	33
X2 0 00023		GUARD: FUEL FILLER 13205E5083 (97403)	EA	1									22- 12	5
0 00024	2910-881-3433	HOSE: 1/2 IN. ID X 3/4 IN. OD X 24 IN. LG MLH13444TYPE2 (81349)	EA	1	*	*	*	*	*	*	*	*	22- 12	32

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
0 00025	4720-879-4091	HOSE ASSEMBLY: 5/16 IN. OD X 90 IN. LG MS28741-5-0900 (96906)	EA	1	*	*	*	*	*	*	*	*	22-6	50
P 0 00026	4720-289-4488	HOSE ASSEMBLY: DETACHABLE FITTING, 5/16 IN. OD X 18 IN. LG MS28741-5-0180 (96906)	EA	2	*	*	*	*	*	*	*	*	22-11	29
P 0 00027	4721-781-4517	HOSE ASSEMBLY: DETACHABLE FITTING, 5/16 IN. OD X 50 IN. LG MS28741-5-0500 (96906)	EA	1	*	*	*	*	*	*	*	*	22-6	39
0 00028		HOSE: FUEL, 2 IN. ID X 2 1/2 IN. OD X 3 IN. LG SAEJ30CLASS30R2TYPE2 (81343)	EA	1	*	*	*	*	*	*	*	*	22-6	44
X2 0 00029		LOCKNUT: 37 DEG FLARE, 1/2-20 THD SIZE SAEJ514AF1G10A (81343)	EA	2									22-11	32
0 00030	5310-877-5797	NUT, SELF-LOCKING, HEXAGON HEAD: NO. 10-32 THD SIZE MS21044N3 (96906)	EA	1	*	*	*	*	*	*	*	*	22-12	30
0 00031	5310-877-8797	NUT, SELF-LOCKING, HEXAGON HEAD: 10-32 THD SIZE MS21044N3 (96906)	EA	2	*	*	*	*	*	*	*	*	22-6	43
0 00032	5310-877-8797	NUT, SELF-LOCKING, HEXAGON HEAD: NO. 10-32 THD SIZE MS21044N3 (96906)	EA	3	*	*	*	*	*	*	*	*	22-6	49
0 00033	5310-088-1251	NUT, SELF-LOCKING, HEXAGON HEAD: 1/4-20 THD SIZE MS51922-1 (96906)	EA	4	*	*	*	*	*	*	*	*	22-12	8
0 00034	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 THD SIZE MS51922-1 (96906)	EA	2	*	*	*	*	*	*	*	*	22-12	22
0 00035	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 THD SIZE MS51922-1 (96906)	EA	3	*	*	*	*	*	*	*	*	22-12	26
0 00036	5310-087-4652	NUT, SELF-LOCKING: 3/8-16 THD SIZE MS51922-17 (96906)	EA	3	*	*	*	*	*	*	*	*	22-12	40
0 00037	5310-087-4652	NUT, SELF-LOCKING: 3/8-16 THD SIZE MS51922-17 (96906)	EA	2	*	*	*	*	*	*	*	*	22-12	42
0 00038	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16 THD SIZE MS57922-7 (96906)	EA	2	*	*	*	*	*	*	*	*	22-12	46
0 00039	5310-087-4652	NUT, HEXAGON HEAD: 3/8-16 THD SIZE MS51922-17 (96906)	EA	4	*	*	*	*	*	*	*	*	22-12	52
X2 0 00040		PIPE: SPACER, 1/2 IN. ID, STD, BLK (AS REQUIRED) ASTMA120 (00000)	FT										22-12	43

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
O 00041	5305-989-7435	SCREW, MACHINE, PAN HEAD: 10-32 X 5/8 IN. LG MS35207-264 (96906)		EA	1	*	*	*	*	*	*	*	22-12	28
O 00042	5305-989-7435	SCREW, MACHINE, PAN HEAD: 10-32 X 5/8 IN. LG MS35207-264 (96906)		EA	3	*	*	*	*	*	*	*	22-6	47
O 00043	5305-989-7435	SCREW, MACHINE, PAN HEAD: 10-32 X 5/8 IN. LG MS35207-264 (96906)		EA	2	*	*	*	*	*	*	*	22-6	41
X2 O 00044		SHIELD: FUEL TANK 13205E4951 (97403)		EA	1								22-12	37
X2 O 00045		STRAP: FILLER BRACKET 13205E5082 (97403)		EA	1								22-12	19
P O 00046	2910-255-5038	TANK ASSEMBLY: FUEL, 2 FILTER 13216E7451-2 (97403)		EA	1	*	*	*	*	*	*	*	22-12	47
X2 O 00047	4820-845-1096	COCK: DRAIN MS35783-2 (96906)		EA	1								22-7	12
X2 O 00048		COVER 13216E7456 (97403)		EA	1								22-7	8
X2 O 00049		ELBOW: 90-37 DEG X 5/16 IN. OD SAEJ514 (81343)		EA	2								22-7	7
F 00050		EXTENSION: WELDMENT 13216E7457 (97403)		EA	1								22-7	14
P O 00051	2910-575-0998	FILTER: FUEL 13216E7451 (97403)		EA	2	*	*	*	*	*	*	*	22-7	2
X2 O 00052		GAGE: LIQUID LEVEL 13216E7459 (97403)		EA	1								22-7	22
X2 O 00053		GASKET: COVER 13216E7455 (97403)		EA	1								22-7	9
X2 O 00054		GASKET: GAGE MTG 13216E7458 (97403)		EA	1								22-7	19
X2 O 00055	2910-423-2730	GASKET: LEATHER 13216E7451 (97403)		EA	1								22-7	13
X2 O 00056		GASKET: PLATE MTG 13216E7453 (97403)		EA	1								22-7	4
X2 O 00057		GROUND WIRE ASSEMBLY 13216E7462 (97403)		EA	1								22-7	17
X2 O 00058		MOUNT: GAGE 13216E7458 (97403)		EA	1								22-7	18
X2 O 00059		NUT: INVERTED, 1/2 IN. OD, 3/4-18 THD SIZE SAEJ512 (81343)		EA	1								22-7	15
X2 O 00060		PLATE: 2 CONNECTOR 3216E7454-2 (97403)		EA	1								22-7	3
X2 O 00061		SCREW, MACHINE: NO. 12-24 X 3/4 IN. LG FFS92TYPE3STYLE9C (81348)		EA	10								22-7	6
O 00062	5305-984-6193	SCREW, MACHINE: PAN HEAD, NO. 8-32 X 1/2 IN. LG MS35206-245 (96906)		EA	5	*	*	*	*	*	*	*	22-7	10
O 00063	5305-989-7435	SCREW, PAN HEAD: 10-32 X 5/8 IN. LG MS35207-264 (96906)		EA	6	*	*	*	*	*	*	*	22-7	20
X2 O 00064		TANK: FUEL 13216E7452 (97403)		EA	1								22-7	1
X2 O 00065		TUBING: 1/2 IN. OD X .035 IN. WALL X 3 IN. LG SAEJ526 (81343)		EA	1								22-7	16

(1)	(2)	(3)	(4)	(5)	(6)			(7)			(8)	(9)	(10)		
SMR CODE	FEDERAL STOCK NUMBER	DESCRIPTION	USABLE ON CODE	UNIT OF MEAS	QTY INC IN UNIT	30-DAY DS MAINT ALLOWANCE			30-DAY GS MAINT ALLOWANCE			1-YR ALW PER 100 EQUIP CNTGY	DEPOT MAINT ALW PER 100 EQUIP	ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
		REF NUMBER & MFR CODE				1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
0 00066	5310-045-3299	WASHER: LOCK, NO. 8 NOM. SIZE, MS35338-42 (96906)		EA	5	*	*	*	*	*	*	*	*	22-7	11
X2 0 00067		WASHER: LOCK, NO. 12 NOM. SIZE, USASB27-4 (00000)		EA	10									22-7	5
0 00068	5310-045-3296	WASHER: LOCK, NO. 10 NOM. SIZE, MS35338-43 (96906)		EA	6	*	*	*	*	*	*	*	*	22-7	21
0 00069	5310-809-8546	WASHER: FLAT, NO. 10 BSC SIZE MS27183-8 (96906)		EA	1	*	*	*	*	*	*	*	*	22-12	29
0 00070	5310-809-8546	WASHER: FLAT, NO. 10 BSC SIZE MS27183-8 (96906)		EA	2	*	*	*	*	*	*	*	*	22-6	42
0 00071	5310-809-8546	WASHER: FLAT, NO. 10 BSC SIZE MS27183-8 (96906)		EA	3	*	*	*	*	*	*	*	*	22-6	48
0 00072	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	4	*	*	*	*	*	*	*	*	22-12	7
0 00073	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	2	*	*	*	*	*	*	*	*	22-12	21
0 00074	5310-809-4058	WASHER: FLAT, 1/4 IN. NOM. SIZE, MS27183-10 (96906)		EA	3	*	*	*	*	*	*	*	*	22-12	25
0 00075	5310-080-6004	WASHER: FLAT, 3/8 IN. NOM. SIZE, MS27183-14 (96906)		EA	3	*	*	*	*	*	*	*	*	22-12	39
0 00076	5310-080-6004	WASHER: 3/8 IN. BSC SIZE MS27183-14 (96906)		EA	2	*	*	*	*	*	*	*	*	22-12	41
0 00077	5310-080-6004	WASHER: FLAT, 3/8 IN. BSC SIZE MS27183-14 (96906)		EA	2	*	*	*	*	*	*	*	*	22-12	45
0 00078	5310-080-6004	WASHER: FLAT, 3/8 IN. BSC SIZE MS27183-14 (96906)		EA	4	*	*	*	*	*	*	*	*	22-12	51
0 00079	5310-809-5998	WASHER: FLAT, 1/2 IN. BSC SIZE MS27183-18 (96906)		EA	2	*	*	*	*	*	*	*	*	22-11	31
00080		GROUP 15 - FRAME													
00081		1501 - FRAME ASSEMBLY													
X2 DR 00082	2330-898-6779	TRAILER: M-101-A1 13205B5149 (97403)		EA	1									22-11	1
00083		1507 - LEVELING JACKS													
0 00084	5305-269-3213	CAPSCREW, HEXAGON HEAD: 3/8-16 X 1 1/4 IN. LG MS90725-62 (96906)		EA	3	*	*	*	*	*	*	*	*	22-6	2
0 00085	5310-087-4652	NUT, SELF-LOCKING: 3/8-16 THD SIZE MS51922-17 (96906)		EA	3	*	*	*	*	*	*	*	*	22-6	4
P 0 00086	2590-318-6691	TRAILER LEG PROP ASSEMBLY 13214E1206 (97403)		EA	1	*	*	*	*	*	*	*	*	22-6	1
0 00087	5310-080-6004	WASHER: FLAT, 3/8 IN. BSC SIZE MS27183-14 (96906)		EA	3	*	*	*	*	*	*	*	*	22-6	3

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION			
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)		
						1-20	21-50	51-100	1-20	21-50	51-100					FIG. NO.	ITEM NO.
00088		GROUP 18 - BODY															
00089		1808 - STOWAGE RACKS, BOXES, CABLE REELS															
X2 O 00090		ACCESSORY BOX 13205E5146 (97403)		EA	1										22- 11		18
X2 F 00091		BASE PLATE: MAST SUPPORT 13205E5122 (97403)		EA	2										22-6		7
X2 O 00092		BRACKET: FIRE EXTINGUISHER MTG 13214E1235 (97403)		EA	1										22- 12		13
X2 O 00093		BRACKET: RACK TO FLOOR 13216E7596 (97403)		EA	2										22- 10		7
X2 O 00094		BRACKET ASSEMBLY: SWIVEL 13205E5094 (97403)		EA	4										22-6		26
X2 O 00095		BRACKET: SWIVEL 13205E5107 (97403)		EA	1										22-9		9
X2 O 00096		HOLDER 13205E5109 (97403)		EA	1										22-9		11
O 00097	5315-842-3044	PIN, COTTER: 3/32 X 3/4 IN. LG MS24665-283 (96906)		EA	1	*	*	*	*	*	*	*	*	*			
X2 O 00098		PIN: SWIVEL 13205E5152 (97403)		EA	1										22-9		10
X2 O 00099		SCREW, SHOULDER 13205E5108 (97403)		EA	1										22-9		15
O 00100	5305-071-2240	CAPSCREW, HEXAGON HEAD: 1/4-20 X 3/8 IN. LG MS90725-11 (96906)		EA	2	*	*	*	*	*	*	*	*	*	22- 11		20
F 00101	5305-068-0501	CAPSCREW, HEXAGON HEAD: 1/4-20 X 5/8 IN. LG MS90725-5 (96906)		EA	4	*	*	*	*	*	*	*	*	*	22-6		32
F 00102	5305-068-0501	CAPSCREW, HEXAGON HEAD: 1/4-20 X 5/8 IN. LG MS90725-5 (96906)		EA	14	*	*	*	*	*	*	*	*	*	22- 11		57
O 00103	5305-225-3840	CAPSCREW, HEXAGON HEAD: 1/4-20 X 7/8 IN. LG MS90725-7 (96906)		EA	6	*	*	*	*	*	*	*	*	*	22- 10		8
F 00104	5305-225-3840	CAPSCREW, HEXAGON HEAD: 1/4-20 X 7/8 IN. LG MS90725-7 (96906)		EA	6	*	*	*	*	*	*	*	*	*	22- 11		42
O 00105	5305-225-3839	CAPSCREW, HEXAGON HEAD: 1/4-20 X 1 IN. LG MS90725-8 (96906)		EA	6	*	*	*	*	*	*	*	*	*	22-6		8
F 00106	5305-071-2240	CAPSCREW, HEXAGON HEAD: 1/4-20 X 1 3/8 IN. LG MS90725-11 (96906)		EA	8	*	*	*	*	*	*	*	*	*	22- 11		35
O 00107	5305-071-2232	CAPSCREW, HEXAGON HEAD: 1/4-20 X 3 1/4 IN. LG MS90725-19 (96906)		EA	2	*	*	*	*	*	*	*	*	*	22- 11		23
O 00108	5305-269-3209	CAPSCREW, HEXAGON HEAD: 3/8-16 X 3/4 IN. LG MS90725-58 (96906)		EA	4	*	*	*	*	*	*	*	*	*	22- 12		14
F 00109	5306-225-8497	CAPSCREW, HEXAGON HEAD: 5/16-18 X 3/4 IN. LG MS90725-32 (96906)		EA	3	*	*	*	*	*	*	*	*	*	22- 11		47
O 00110	4010-959-4775	CHAIN, WELDLESS, 6 IN. LG RRC271TYPE2C1-7 (81348)		EA	4	*	*	*	*	*	*	*	*	*	22- 10		15
X2 O 00111		HOOK 13205E5134-1 (97403)		EA	4										22-6		37

(1)	(2)	(3)	(4)	(5)	(6)			(7)			(8)	(9)	(10)		
SMR CODE	FEDERAL STOCK NUMBER	DESCRIPTION REF NUMBER & MFR CODE	USABLE ON CODE	UNIT OF MEAS	QTY INC IN UNIT	30-DAY DS MAINT ALLOWANCE			30-DAY GS MAINT ALLOWANCE			1-YR ALW PER 100 EQUIP CNTGY	DEPOT MAINT ALW PER 100 EQUIP	ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
						1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
P 0 00112	4630-780-9350	HOOK: CHAIN MS87006-13 (96906)		EA	8	*	*	*	*	*	*	*	*	22- 10	16
X2 0 00113		KNOB 13205E5105-1 (97403)		EA	4									22-6	36
X2 F 00114		MOUNT: REEL 13205E5112 (97403)		EA	1									22- 11	3
X2 F 00115		MOUNT: REEL 13250E5145 (97403)		EA	1									22- 11	60
X2 0 00116		BUMPER: REEL SHAFT 13216E7598 (97403)		EA	1									22- 11	69
0 00117	5305-068-0501	CAPSCREW, HEXAGON HEAD: 1/4-20 X 5/8 IN. LG MS90725-5 (96906)		EA	1	"	*	*	*	*	*	*	*	22- 11	66
X2 0 00118		COLLAR: REEL 13216E7608 (97403)		EA	1									22- 11	71
X2 0 00119		NUT, CASTELLATED, HEXAGON: 3/4-16 THD SIZE MS9358-17 (96906)		EA	1									22- 11	74
0 00120	5315-298-1481	PIN, COTTER: 1/8 X 1 1/2 IN. LG MS24665-357 (96906)		EA	1	*	*	*	*	*	*	*	*	22- 11	75
0 00121	5315-143-6284	PIN, SPRING: 1/8 X 1 IN. LG MS171534 (96906)		EA	1	*	*	*	*	*	*	*	*	22- 11	72
X2 0 00122		SPINDLE: REEL 13216E7607 (97403)		EA	1									22- 11	70
0 00123	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	1	*	*	*	*	*	*	*	*	22- 11	67
0 00124	5310-582-5965	WASHER: LOCK, 1/4 IN. NOM. SIZE MS35338-44 (96906)		EA	1	*	*	*	*	*	*	*	*	22- 11	68
0 00125	5310-809-8536	WASHER: FLAT, 3/4 IN. BSC SIZE MS27183-24 (96906)		EA	1	*	*	*	*	*	*	*	*	22- 11	73
F 00126	5315-816-1794	PIN, COTTER: 3/32 X 1 IN. LG MS24665-285 (96906)		EA	4	*	*	*	*	*	*	*	*	22- 11	4
0 00127	5310-877-8797	NUT, SELF-LOCKING, HEXAGON: NO. 10-32 THD SIZE MS21044N3 (96906)		EA	3	*	*	*	*	*	*	*	*	22-9	19
0 00128	5310-877-8797	NUT, SELF-LOCKING, HEXAGON HEAD: NO. 10-32 THD SIZE MS21044N3 (96906)		EA	4	*	*	*	*	*	*	*	*	22- 10	14
F 00129	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)		EA	8	"	*	*	*	*	"	*	*	22- 11	37
F 00130	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 THD SIZE MS51922-1 (96906)		EA	4	*	*	*	*	*	*	*	*	22-6	34
0 00131	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)		EA	6	*	*	*	*	*	*	*	*	22- 10	10
F 00132	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)		EA	14	*	*	*	*	*	*	*	*	22- 11	59
0 00133	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)		EA	4	*	*	*	*	*	*	*	*	22- 11	22
F 00134	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)		EA	6	*	*	*	*	*	*	*	*	22- 11	44
0 00135	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)		EA	6	*	*	*	*	*	*	*	*	22-6	10

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
O 00136	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16 THD SIZE MS51922-17 (96906)	EA	1	*	*	*	*	*	*	*	*	22-6	6
O 00137	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16 THD SIZE MS51922-17 (96906)	EA	4	*	*	*	*	*	*	*	*	22-12	16
P O 00138		PIN, QUICK RELEASE MS179900823 (96906)	EA	4	*	*	*	*	*	*	*	*	22-10	17
X2 F 00139		RACK ASSEMBLY: CURBSIDE 13205B5129 (97403)	EA	1									22-11	40
O 00140	5305-071-2236	CAPSCREW, HEXAGON HEAD: 1/4-20 X 2 1/4 IN. LG MS90725-1 (96906)	EA	16	*	*	*	*	*	*	*	*	22-10	19
X2 O 00141		CLAMP 13205B5137 (97403)	EA	4									22-10	30
X2 O 00142		HINGE, LEAF BUTT 13205B5125 (97403)	EA	8									22-10	18
O 00143	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 THD SIZE MS51922-1 (96906)	EA	16	*	*	*	*	*	*	*	*	22-10	21
X2 O 00144		RUNNER: 11 3/4 IN. LG	EA	4									22-10	22
X2 O 00145		RUNNER: NYLON, 61 1/2 IN. LG 13205B5123 (97403)	EA	4									22-10	24
O 00146	5305-984-7361	SCREW, MACHINE: 10-32 X 3/8 IN. LG MS35191-270 (96906)	EA	12	*	*	*	*	*	*	*	*	22-10	23
O 00147	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	16	*	*	*	*	*	*	*	*	22-10	20
O 00148	5305-828-9820	SCREW, TAPPING: 6-32 X 1/2 IN. LG MS24627-24 (96906)	EA	40	*	*	*	*	*	*	*	*	22-10	25
X2 O 00149		RACK ASSEMBLY: REMOVABLE 13205B5128 (97403)	EA	1									22-11	12
O 00150	5305-071-2236	CAPSCREW, HEXAGON HEAD: 1/4-20 X 2 1/4 IN. LG MS90725-15 (96906)	EA	16	*	*	*	*	*	*	*	*	22-9	26
X2 O 00151		CLAMP 13205B5137 (97403)	EA	4									22-9	1
X2 O 00152		HINGE: LEAF BUTT 13205B5125 (97403)	EA	8									22-9	25
O 00153	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 THD SIZE MS51922-1 (96906)	EA	16	*	*	*	*	*	*	*	*	22-9	28
O 00154	5305-984-7354	SCREW, MACHINE: 10-32 X 5/16 IN. LG MS35191-269 (96906)	EA	16	*	*	*	*	*	*	*	*	22-9	23
O 00155	5305-828-9820	SCREW: TAPPING, 6-32 X 1/2 IN. LG MS24627-24 (96906)	EA	40	*	*	*	*	*	*	*	*	22-9	21
X2 O 00156		RUNNER: 16 1/2 IN. LG 13205B5121 (97403)	EA	4									22-9	24
X2 O 00157		RUNNER: NYLON, 61 1/2 IN. LG 13205B5123 (97403)	EA	4									22-9	22
O 00158	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	16	*	*	*	*	*	*	*	*	22-9	27
X2 O 00159		REEL, CABLE MLLR55566RC435U (81349)	EA	2									22-11	5

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
O 00160	5305-989-7435	SCREW, MACHINE HEAD: 10-32 X 5/8 IN. LG MS35207-264 (96906)	EA	3	*	*	*	*	*	*	*	*	22-9	17
O 00161	5305-989-7434	SCREW, MACHINE, PAN HEAD: 10-32 X 3/4 IN. LG MS35207-263 (96906)	EA	4	*	*	*	*	*	*	*	*	22-10	12
P O 00162	5355-493-1849	SCREW, KNOB 13205E5148 (97403)	EA	3	*	*	*	*	*	*	*	*	22-9	20
X2 O 00163		CHAIN: 6 IN. LG RRC271TYPE1GRCC15STYLE1 (81349)	EA	1										
O 00164	4030-780-9350	HOOK, CHAIN MS87006-13 (96906)	EA	1	*	*	*	*	*	*	*	*		
O 00165	4030-946-8497	HOOK, CHAIN MS87006-23 (96906)	EA	1	*	*	*	*	*	*	*	*		
X2 O 00166		KNOB: 5/16-18 13205E5105-2 (97403)	EA	1										
X2 O 00167		PIN, U: 1/8 X 5/8 IN. LG MS171528 (96906)	EA	1										
O 00168	5305-984-5681	SCREW: 5/16-18 X 3/4 IN. LG MS35206-301 (96906)	EA	1	*	*	*	*	*	*	*	*		
X2 O 00169		SPACER 13205E5119-1 (97403)	EA	4									22-6	35
X2 F 00170		SPACER PLATE 13205E5144 (97403)	EA	2									22-6	38
X2 F 00171		STIFFENER 13205E5140-4 (97403)	EA	2									22-11	34
X2 O 00172		STIFFENER 13205E5151 (97403)	EA	2									22-10	11
X2 F 00173		STIFFENER 13205E5140-1 (97403)	EA	2									22-11	41
X2 F 00174		STIFFENER 13205E5140-3 (97403)	EA	1									22-11	45
X2 F 00175		SUPPORT 13205E5143 (97403)	EA	2									22-11	33
X2 O 00176		SUPPORT, MAST 13205E5099-2 (97403)	EA	2									22-11	39-1
X2 F 00177		BRACKET: ANGLE 13205E5124 (97403)	EA	2									22-6	11
X2 F 00178		BRACKET: ANGLE 13205E5118 (97403)	EA	2									22-6	18
X2 F 00179		BRACKET: ANGLE 13205E5132 (97403)	EA	2									22-6	22
O 00180	5305-225-3840	CAPSCREW, HEXAGON HEAD: 1/4-20 X 7/8 IN. LG MS90725-7 (96906)	EA	4	*	*	*	*	*	*	*	*	22-6	12
O 00181	5305-225-3840	CAPSCREW, HEXAGON HEAD: 1/4-20 X 7/8 IN. LG MS90725-7 (96906)	EA	2	*	*	*	*	*	*	*	*	22-6	14
O 00182	5305-068-0502	CAPSCREW, HEXAGON HEAD: 1/4-20 X 3/4 IN. LG MS90725-6 (96906)	EA	1	*	*	*	*	*	*	*	*	22-6	19
O 00183	5305-225-3840	CAPSCREW, HEXAGON HEAD: 1/4-20 X 7/8 IN. LG MS90725-7 (96906)	EA	2	*	*	*	*	*	*	*	*	22-6	23
O 00184	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)	EA	4	*	*	*	*	*	*	*	*	22-6	14

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
0 00185	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)		EA	2	*	*	*	*	*	*	*	22-6	16
0 00186	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)		EA	6	*	*	*	*	*	*	*	22-6	21
0 00187	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)		EA	2	*	*	*	*	*	*	*	22-6	25
0 00188	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	4	*	*	*	*	*	*	*	22-6	13
0 00189	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	2	*	*	*	*	*	*	*	22-6	15
0 00190	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	6	*	*	*	*	*	*	*	22-6	20
0 00191	5310-809-4058	WASHER, FLAT: 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	2	*	*	*	*	*	*	*	22-6	24
X2 F 00192		SUPPORT: REEL MOUNT 13205E5110 (97403)		EA	1								22- 11	6
X2 F 00193		SUPPORT: REEL MOUNT 13205E5111 (97403)		EA	1								22- 11	56
0 00194	5310-809-8546	WASHER: FLAT, NO. 10 BSC SIZE MS27183-8 (96906)		EA	3	*	*	*	*	*	*	*	22-9	18
0 00195	5310-809-8546	WASHER: FLAT, NO. 10 BSC SIZE MS27183-8 (96906)		EA	4	*	*	*	*	*	*	*	22- 10	13
F 00196	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	8	*	*	*	*	*	*	*	22- 11	36
F 00197	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	4	*	*	*	*	*	*	*	22-6	33
0 00198	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	6	*	*	*	*	*	*	*	22- 10	9
F 00199	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	14	*	*	*	*	*	*	*	22- 11	58
0 00200	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	4	*	*	*	*	*	*	*	22- 11	21
F 00201	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	6	*	*	*	*	*	*	*	22- 11	43
0 00202	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)		EA	6	*	*	*	*	*	*	*	22-6	9
F 00203	5310-407-9566	WASHER: LOCK, 5/16 IN. BSC SIZE MS35338-45 (96906)		EA	3	*	*	*	*	*	*	*	22- 11	46
0 00204	5310-081-6004	WASHER: FLAT, 3/8 IN. BSC SIZE MS27183-14 (96906)		EA	4	*	*	*	*	*	*	*	22- 12	15
0 00205	5310-081-6004	WASHER: FLAT, 1/2 IN. BSC SIZE MS27183-14 (96906)		EA	1	*	*	*	*	*	*	*	22-6	5
X2 O 00206		WASHER 13205E5114 (97403)		EA	4								22- 11	19
00207		GROUP 22 - BODY ACCESSORY ITEMS												
00208		2202 - ACCESSORY ITEMS												
X2 O 00209		BRACKET: FIRE EXTINGUISHER MTG 13216E7601 (97403)		EA	1								22- 12	9
X2 O 00210		BRACKET ASSEMBLY: SLEDGE HAMMER 13214E1214 (97403)		EA	1								22- 11	52

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
0 00211	5305-068-0502	CAPSCREW, HEXAGON HEAD: 1/4-20 X 3/4 IN. LG MS90725-6 (96906)	EA	2	*	*	*	*	*	*	*	*	22- 11	53
0 00212	5305-068-0502	CAPSCREW, HEXAGON HEAD: 1/4-20 X 3/4 IN. LG MS90725-6 (96906)	EA	1	*	*	*	*	*	*	*	*	22- 11	49
0 00213	5305-068-0502	CAPSCREW, HEXAGON HEAD: 1/4-20 X 3/4 IN. LG MS90725-6 (96906)	EA	2	*	*	*	*	*	*	*	*	22- 11	15
0 00214	5305-068-0502	CAPSCREW, HEXAGON HEAD: 1/4-20 X 3/4 IN. LG MS90725-6 (96906)	EA	8	*	*	*	*	*	*	*	*	22- 11	26
0 00215	5305-269-3209	CAPSCREW, HEXAGON HEAD: 3/8-16 X 3/4 IN. LG MS90725-58 (96906)	EA	4	*	*	*	*	*	*	*	*	22- 12	10
0 00216	5306-225-8498	CAPSCREW, HEXAGON HEAD: 5/16-18 X 7/8 IN. LG MS90725-33 (96906)	EA	1	*	*	*	*	*	*	*	*	22- 12	34
X2 0 00217	2590-932-7298	CLAMP, GROUND ROD 13212E3617 (97403)	EA	4									22- 11	25
X2 0 00218	5340-914-2578	CLIP, SPRING, SLEDGE HAMMER 13214E1213-1 (97403)	EA	1									22- 11	48
X2 0 00219		GUARD, CABLE 13216E7597 (97403)	EA	1									22- 11	14
0 00220	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)	EA	1	*	*	*	*	*	*	*	*	22- 11	51
0 00221	5310-088-1251	NUT, SELF-LOCKING, HEXAGON: 1/4-20 THD SIZE MS51922-1 (96906)	EA	2	*	*	*	*	*	*	*	*	22- 11	55
0 00222	5310-088-1251	NUT, SELF-LOCKING: 1/4-20 THD SIZE MS51922-1 (96906)	EA	8	*	*	*	*	*	*	*	*	22- 11	28
0 00223	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16 THD SIZE MS51922-17 (96906)	EA	4	*	*	*	*	*	*	*	*	22- 12	12
0 00224	5310-984-3806	NUT, SELF-LOCKING, HEXAGON: 5/16-18 THD SIZE MS5122-9 (96906)	EA	1	*	*	*	*	*	*	*	*	22- 12	36
X2 0 00225		PLATE: BRAKE CABLE MTG 13205E5133 (97403)	EA	1									22- 12	17
0 00226	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	2	*	*	*	*	*	*	*	*	22- 11	54
0 00227	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	1	*	*	*	*	*	*	*	*	22- 11	50
0 00228	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	2	*	*	*	*	*	*	*	*	22- 11	16
0 00229	5310-809-4058	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-10 (96906)	EA	8	*	*	*	*	*	*	*	*	22- 11	27
0 00230	5310-080-6004	WASHER: FLAT, 3/8 IN. BSC SIZE MS27183-14 (96906)	EA	4	*	*	*	*	*	*	*	*	22- 12	11
0 00231	5310-081-4219	WASHER: FLAT, 5/16 IN. BSC SIZE MS27183-12 (96906)	EA	1	*	*	*	*	*	*	*	*	22- 12	35
00232		2210 - DATA PLATES												
X2 0 00233		PLATE, IDENTIFICATION: GROUND TERMINAL 13205E4918 (97403)	EA	1									22-8	14

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE	(5) UNIT OF MEAS	(6) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
						1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
X2 0 00234		PLATE, IDENTIFICATION: PU-625/G 13205E4916-19 (97403)		EA	1									22- 11	38
0 00235	5305-253-5614	SCREW, DRIVE: NO. 4-7 X .19 IN. LG MS21318-20 (96906)		EA	4	*	*	*	*	*	*	*	*	22- 11	39
00236		GROUP 29 - AUXILIARY GENERATORS AND ENGINES													
00237		2901 - GENERATOR AND ENGINE ASSEMBLY													
0 00238	5305-782-9494	CAPSCREW, HEXAGON HEAD: 1/2-13 X 1 3/4 IN. LG MS90725-114 (96906)		EA	8	*	*	*	*	*	*	*	*	22-6	27
P FR 00239	6115-913-9290	GENERATOR SET: MEP-016A MILG52367TYPE1 (81349)		EA	2	*	*	*	*	*	*	*	*	22- 11	24
0 00240	5310-225-6993	NUT, SELF-LOCKING: 1/2-13 MS51922-33 (96906)		EA	8	*	*	*	*	*	*	*	*	22-6	30
X2 0 00241		WASHER: 1/2 IN. 13216E7602 (97403)		EA	8									22-6	29
0 00242	5310-809-5998	WASHER: 1/2 IN. NOM. SIZE MS27183-18 (96906)		EA	8	*	*	*	*	*	*	*	*	22-6	31
X2 0 00243		WASHER: BEVELED 1306E4482-2 (97403)		EA	8									22-6	28
00244		2916 - ENGINE LUBRICATION SYSTEM													
0 00245	4730-270-4581	ADAPTER: 1/2-20 X 1/4-18 SAEJ514 (81343)		EA	2	*	*	*	*	*	*	*	*	22-6	52
P O 00246	4730-908-3194	CLAMP MS35842-11 (96906)		EA	4	*	*	*	*	*	*	*	*	22-6	58
0 00247	4820-277-1765	COCK, PLUG, SPRING, KEY: 1/4-18 X 1/4-18 THD SIZE MS35930-2 (96906)		EA	2	*	*	*	*	*	*	*	*	22-6	55
M O 00248		HOSE: 1/2-10 X 10 IN. LG SAEJ30CL30RSTYF1 (81343)		EA	2	*	*	*	*	*	*	*	*	22-6	57
P O 00249	4730-684-1032	HOSE: 1/2-10 IN. ID (AS REQUIRED) SAEJ30CL30RSTYF1 (81343)		FT		*	*	*	*	*	*	*	*		
0 00250	5310-584-5272	LOCK WASHER MS35332-48 (96906)		EA	2	*	*	*	*	*	*	*	*	22-6	60
0 00251	4730-196-1465	NIPPLE, CLOSE WWN351 (81348)		EA	2	*	*	*	*	*	*	*	*	22-6	54
0 00252		NIPPLE: 1/4 IN. IPS WWP521 (81348)		EA	2	*	*	*	*	*	*	*	*	22-6	53
0 00253	4730-196-1502	NIPPLE: 1/4 IN. IPS X 1 1/2 IN. LG WWN351 (81348)		EA	2	*	*	*	*	*	*	*	*	22-6	56
0 00254	5310-282-7818	NUT AN924-5 (88044)		EA	2	*	*	*	*	*	*	*	*	22-6	61
0 00255	5330-684-3430	PACKING, PREFORMED: O RING MS28775-013 (96906)		EA	2	*	*	*	*	*	*	*	*	22-6	51
X2 0 00256	4730-277-6447	UNION: BULKHEAD AN832-5 (88044)		EA	2									22-6	59

(1)	(2)	(3)	(4)	(5)	(6)			(7)			(8)	(9)	(10)		
SMR CODE	FEDERAL STOCK NUMBER	DESCRIPTION	USABLE ON CODE	UNIT OF MEAS	QTY INC IN UNIT	30-DAY DS MAINT ALLOWANCE			30-DAY GS MAINT ALLOWANCE			1-YR ALW PER 100 EQUIP CNTGY	DEPOT MAINT ALW PER 100 EQUIP	ILLUS- TRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
		REF NUMBER & MFR CODE				1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
F 00283	5305-988-1725	SCREW, MACHINE, PAN HEAD: 1/4-20 X 3/4 IN. LG MS35206-281 (96906)		EA	4	*	*	*	*	*	*	*	*	22-8	27
F 00284	5305-984-6214	SCREW, MACHINE, PAN HEAD: 10-24 X 1 IN. LG MS35206-267 (96906)		EA	6	*	*	*	*	*	*	*	*	22-8	33
X2 F 00285		STUFFING TUBE 13212E3582-4 (97403)		EA	2									22-8	3
P F 00286	5930-878-6722	SWITCH, ROTARY: 30 AMP 13205E5022 (97403)		EA	1	*	*	*	*	*	*	*	*	22-8	43
X2 F 00287		TERMINAL BOARD 13212E3606 (97403)		EA	1									22-8	32
X2 F 00288	5940-904-9634	TERMINAL, LOAD 13208E5820-6 (97403)		EA	4									22-8	37
F 00289	5310-809-8546	WASHER: FLAT, NO. 10 BSC SIZE MS27183-8 (96906)		EA	12	*	*	*	*	*	*	*	*	22-8	34
F 00290	5310-809-8546	WASHER: FLAT, NO. 10 BSC SIZE MS27183-8 (96906)		EA	16	*	*	*	*	*	*	*	*	22-8	48
F 00291	5310-809-3078	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-11 (96906)		EA	4	*	*	*	*	*	*	*	*	22-8	28
F 00292	5310-022-8834	WASHER: FLAT, 1/4 IN. NOM. SIZE MS35333-108 (96906)		EA	4	*	*	*	*	*	*	*	*	22-8	39
F 00293	5310-045-3296	WASHER: LOCK, NO. 10 NOM. SIZE MS35338-43 (96906)		EA	16	*	*	*	*	*	*	*	*	22-8	49
F 00294	5310-045-3296	WASHER: LOCK, NO. 10 NOM. SIZE MS35338-43 (96906)		EA	6	*	*	*	*	*	*	*	*	22-8	35
F 00295	5310-184-8970	WASHER: LOCK, 1/4 IN. NOM. SIZE MS35338-101 (96906)		EA	8	*	*	*	*	*	*	*	*	22-8	40
F 00296	5310-080-6004	WASHER: FLAT, 3/8 IN. BSC SIZE MS27183-14 (96906)		EA	4	*	*	*	*	*	*	*	*	22-8	8
F 00297	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16 THD SIZE MS51922-17 (96906)		EA	4	*	*	*	*	*	*	*	*	22-8	13
X2 F 00298		STIFFENER 13205E5140-2 (97403)		EA	2									22-8	22
F 00299	5310-080-6004	WASHER: FLAT, 3/8 IN. BSC SIZE MS27183-14 (96906)		EA	4	*	*	*	*	*	*	*	*	22-8	12
00300		4216 - MISCELLANEOUS WIRING AND FITTINGS													
O 00301	5310-877-5797	NUT, SELF-LOCKING, HEXAGON: NO. 10-32 THD SIZE MS21044N3 (96906)		EA	4	*	*	*	*	*	*	*	*	22-11	64
X2 O 00302	5340-106-0552	CLAMP: LOOP, 3/4 IN. OD, TUBE MS21104D12 (96906)		EA	4									22-11	61
O 00303	5310-918-6921	NUT, PLAIN, HEXAGON: JAM MS16203-39 (96906)		EA	2	*	*	*	*	*	*	*	*	22-8	21
O 00304	5310-543-4717	NUT, PLAIN, WING: 3/8-16 THD SIZE MS35425-28 (96906)		EA	1	*	*	*	*	*	*	*	*	22-8	15
O 00305	5305-989-7435	SCREW, MACHINE: 10-32 X 5/8 IN. LG MS35207-264 (96906)		EA	4	*	*	*	*	*	*	*	*	22-11	62
X2 O 00306	5307-722-9437	STUD: GROUNDING 13214E1223 (97403)		EA	1									22-8	16

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
F 00283	5305-988-1725	SCREW, MACHINE, PAN HEAD: 1/4-20 X 3/4 IN. LG MS35206-281 (96906)	EA	4	*	*	*	*	*	*	*	*	22-8	27
F 00284	5305-984-6214	SCREW, MACHINE, PAN HEAD: 10-24 X 1 IN. LG MS35206-267 (96906)	EA	6	*	*	*	*	*	*	*	*	22-8	33
X2 F 00285		STUFFING TUBE 13212E3582-4 (97403)	EA	2									22-8	3
P F 00286	5930-878-6722	SWITCH, ROTARY: 30 AMP 13205E5022 (97403)	EA	1	*	*	*	*	*	*	*	*	22-8	43
X2 F 00287		TERMINAL BOARD 13212E3606 (97403)	EA	1									22-8	32
X2 F 00288	5940-904-9634	TERMINAL, LOAD 13208E5820-6 (97403)	EA	4									22-8	37
F 00289	5310-809-8546	WASHER: FLAT, NO. 10 BSC SIZE MS27183-8 (96906)	EA	12	*	*	*	*	*	*	*	*	22-8	34
F 00290	5310-809-8546	WASHER: FLAT, NO. 10 BSC SIZE MS27183-8 (96906)	EA	16	*	*	*	*	*	*	*	*	22-8	48
F 00291	5310-809-3078	WASHER: FLAT, 1/4 IN. BSC SIZE MS27183-11 (96906)	EA	4	*	*	*	*	*	*	*	*	22-8	28
F 00292	5310-022-8834	WASHER: FLAT, 1/4 IN. NOM. SIZE MS35333-108 (96906)	EA	4	*	*	*	*	*	*	*	*	22-8	39
F 00293	5310-045-3296	WASHER: LOCK, NO. 10 NOM. SIZE MS35338-43 (96906)	EA	16	*	*	*	*	*	*	*	*	22-8	49
F 00294	5310-045-3296	WASHER: LOCK, NO. 10 NOM. SIZE MS35338-43 (96906)	EA	6	*	*	*	*	*	*	*	*	22-8	35
F 00295	5310-184-8970	WASHER: LOCK, 1/4 IN. NOM. SIZE MS35338-101 (96906)	EA	8	*	*	*	*	*	*	*	*	22-8	40
F 00296	5310-080-6004	WASHER: FLAT, 3/8 IN. BSC SIZE MS27183-14 (96906)	EA	4	*	*	*	*	*	*	*	*	22-8	8
F 00297	5310-087-4652	NUT, SELF-LOCKING, HEXAGON: 3/8-16 THD SIZE MS51922-17 (96906)	EA	4	*	*	*	*	*	*	*	*	22-8	13
X2 F 00298		STIFFENER 13205E5140-2 (97403)	EA	2									22-8	22
F 00299	5310-080-6004	WASHER: FLAT, 3/8 IN. BSC SIZE MS27183-14 (96906)	EA	4	*	*	*	*	*	*	*	*	22-8	12
00300		4216 - MISCELLANEOUS WIRING AND FITTINGS												
O 00301	5310-877-5797	NUT, SELF-LOCKING, HEXAGON: NO. 10-32 THD SIZE MS21044N3 (96906)	EA	4	*	*	*	*	*	*	*	*	22- 11	64
X2 O 00302	5340-106-0552	CLAMP: LOOP, 3/4 IN. OD, TUBE MS21104D12 (96906)	EA	4									22- 11	61
O 00303	5310-918-6921	NUT, PLAIN, HEXAGON: JAM MS16203-39 (96906)	EA	2	*	*	*	*	*	*	*	*	22-8	21
O 00304	5310-543-4717	NUT, PLAIN, WING: 3/8-16 THD SIZE MS35425-28 (96906)	EA	1	*	*	*	*	*	*	*	*	22-8	15
O 00305	5305-989-7435	SCREW, MACHINE: 10-32 X 5/8 IN. LG MS35207-264 (96906)	EA	4	*	*	*	*	*	*	*	*	22- 11	62
X2 O 00306	5307-722-9437	STUD: GROUNDING 13214E1223 (97403)	EA	1									22-8	16

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) USABLE ON CODE UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUS- TRATION	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			FIG. NO.	ITEM NO.
0 00307	5940-688-6010	TERMINAL LUG: CRIMP STYLE, 3/8 IN. BSC SIZE MS20659- 10 (96906)	EA	2	*	*	*	*	*	*	*	*	22-8	19
0 00308	5310-809-8546	WASHER: FLAT, NO. 10 BSC SIZE MS27183-8 (96906)	EA	4	*	*	*	*	*	*	*	*	22-11	63
X2 0 00309	5310-187-2413	WASHER: FLAT, ELECTRIC, 3/8 IN. BSC SIZE AN961-616 (88044)	EA	1									22-8	20
0 00310	5310-913-9776	WASHER: LOCK, 3/8 IN. NOM. SIZE, MS35 335-91 (96906)	EA	2	*	*	*	*	*	*	*	*	22-8	17
0 00311	5310-913-9776	WASHER: LOCK, EXTERNAL TOOTH, 3/8 IN. BSC SIZE MS35335-91 (96906)	EA	2	*	*	*	*	*	*	*	*	22-8	18
0 00312	6145-395-8799	WIRE, ELECTRIC: NO. 6 AWG (AS REQUIRED) QQW343TYPERBR (81348)	FT		*	*	*	*	*	*	*	*	22-11	65

CHAPTER 23

GENERATOR SET PU-650B/G

Section I. DESCRIPTION AND DATA

23-1. Description


a. General. The trailer mounted generator set, PU-650B/G, consists of a 60 KW, 50/60 Hertz, diesel engine driven generator, mounted on a 2½ ton, two wheel modified trailer, Model M200A1 (Fig. 23-1).

b. Function. The generator set PU-650B/G is a mobile power unit capable of furnishing 60 KW, 50/60

Hertz power.

c. Generator and Engine. For description, operation and maintenance information, refer to TM 5-6115-545-12.

d. Trailer. For description, lubrication, and maintenance, refer to TM 9-2330-205-14.

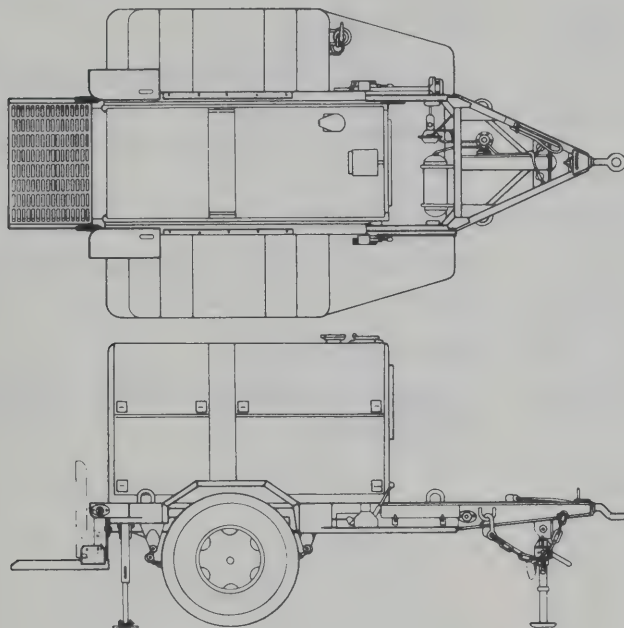

ME 750-5-32/2-27

Figure 23-1. Side and top view of generator set PU-650B/G.

23-2. Tabulated Data

Table 23-1 lists components for the PU-650B/G generator set.

Table 23-1. PU-650B/G Components

NSN	Qty	Nomenclature
2330-00-331-2309	1	Trailer, 2½ Ton, Model M200A1
6115-00-118-1243	1	Generator Set, PU-650B/G, 60 KW, 50/60 Hz, DED, MdL MEP-006A
4210-00-270-4512	1	Fire Extinguisher
5975-00-878-3791	1	Ground Rod Assembly
5120-00-251-4489	1	Sledge Hammer
2910-00-066-1235	1	Adapter Assembly

Section II. OPERATING INSTRUCTIONS

WARNING

Wheels must be blocked, brakes set, and leg supports down in support position before operating the equipment.

Never operate the generator set until it has been properly grounded. Electrical defects in the load lines or equipment can cause death by electrocution when contact is made with an ungrounded system.

Never operate the generator set in an inclosed area unless the exhaust gases are piped to the outside. Inhalation of exhaust fumes will result in serious illness or death.

23-3. Setting-Up Instructions

a. Leveling.

(1) Locate the trailer on as level a surface as possible in order for the generator set to operate efficiently.

(2) Set brakes and block wheels securely to prevent any movement. Operate the hand brake at weekly intervals to assure freedom of linkage.

(3) Pull leg supports down and adjust length for firm contact with ground.

b. Grounding.

(1) The generator set must be grounded prior to operation. The ground may be any of three methods, depending on the location and terrain.

(a) A ground rod driven to a depth of 8 feet.

(b) An underground metallic water piping system.

(c) A metal plate (9 sq. ft.) buried at a depth of 4 feet.

(2) The ground lead must be No. 6 AWG copper wire bolted or clamped to the rod, plate or piping system.

(3) Connect the other end of the ground lead to the generator set ground stud.

23-4. Starting

a. Perform the pre-starting procedures described in paragraph 1-3.

b. Start the generator set as instructed in TM 5-6115-545-12.

23-5. Stopping

Stop the generator set as instructed in TM 5-6115-545-12.

23-6. Operation

Operate the generator set as instructed in TM 5-6115-545-12.

Section III. ORGANIZATIONAL REPAIR PARTS

(1) Source maintenance and recoverability code			(2) National stock number	(3) Description	(4) Unit of issue	(5) Quantity incorporated in unit	(6) 15-day organizational maint allowances				(7) Illustration	
Source-	Mainte-	Recovera-					(a) 1-5	(b) 6-20	(c) 21-50	(d) 51- 100	(a) Fig. No.	Item No.
PA	O	ZZ	5730-00-809-9703	GROUP 01 – ENGINE 0106 – ENGINE LUBRICATING SYSTEM ELBOW, OIL DRAIN MS24519-9 (96906)	EA	1						
PA	O	ZZ		HOSE, OIL DRAIN MIL-H-6000 (81349)	EA	1						
PA	O	ZZ	4730-00-908-3194	CLAMP, HOSE: Oil drain MS 35482-11 (96906)	EA	1						
				GROUP 15 – FRAME, TOWING ATTACHMENTS AND DRAWBARS								
				1501 – FRAME ASSEMBLY								
PA	O	ZZ	5310-00-088-1251	NUT, SELF-LOCKING, HEXA- GON: Hammer clip and bracket mtg. MS51922-1 (96906)	EA	3						
PA	O	ZZ	5310-00-809-4058	WASHER, FLAT: Hammer clip and bracket MS27183-10 (96906)	EA	3						
PA	O	ZZ	5305-00-068-0502	SCREW, CAP, HEXAGON HEAD: Hammer clip and bracket MS90725-6 (96906)	EA	3						
XB	O	ZZ		CLPP, SPRING: Hammer 13214E1213-1 (97403)	EA	1						
PA	O	ZZ	5340-00-999-6277	BRACKET ASSEMBLY, HAMMER 13214E1214 (97403)	EA	1						
PA	O	ZZ	5310-00-080-8495	NUT, PLAIN, WING MS35425-39 (96906)	EA	2						
PA	O	ZZ	5310-00-582-5965	WASHER, LOCK MS35338-44 (96906)	EA	2						
PA	O	ZZ	5310-00-809-4058	WASHER, FLAT MS27183-10 (96906)	EA	2						
XB	O	ZZ		PLATE, HOLDDOWN 13214E1216 (97403)	EA	1						
XB	O	ZZ	6115-00-450-6593	BRACKET 13214E1215 (97403)	EA	1						
XB	O	ZZ	5306-00-197-1552	BOLT, WELDING MS51934-23 (96906)	EA	2						
PA	O	ZZ	5120-00-203-4656	HAMMER GGGH86 (81348)	EA	1						
XB	O	ZZ	2510-00-947-9219	STEP, FRONT, ROAD SIDE 13214E1462 (97403)	EA	1						
XB	O	ZZ	2510-00-947-7727	STEP, FRONT, CURB SIDE 13214E1461 (97403)	EA	1						
XB	O	ZZ		STEP, REAR, ROAD SIDE 13214E1261 (97403)	EA	1						
XB	O	ZZ		STEP, REAR, CURB SIDE 13214E1259 (97403)	EA	1						
XB	O	ZZ	2510-00-924-8707	FENDER, CURB SIDE 13214E1263 (97403)	EA	1						
XB	O	ZZ	2510-00-924-8697	FENDER, ROAD SIDE 13214E1264 (97403)	EA	1						
XB	O	ZZ	2510-00-926-3517	PLATFORM 13214E1298 (97403)	EA	1						
PA	O	ZZ	5305-00-225-8499	SCREW, CAP, HEXAGON HEAD: Fender and step mtg. MS90725-34 (96906)	EA	48						
PA	O	ZZ	5310-00-087-0057	WASHER, FLAT: Fender, step and bracket mtg. MS27183-12 (96906)	EA	140						

(1) Source maintenance and recoverability code			(2) National stock number	(3) Description	(4) Unit of issue	(5) Quantity incorporated in unit	(6) 15-day organizational maint allowances				(7) Illustration	
Source-	Mainte- nance	Recovera- bility					(a) 1-5	(b) 6-20	(c) 21-50	(d) 51- 100	(a) Fig. No.	Item No.
PA	O	ZZ	5310-00-984-3806	1501 - FRAME ASSEMBLY - Continued	EA	72						
				NUT, SELF-LOCKING, HEXA- GON: Fender, step and bracket mtg.								
				MS51922-9 (96906)	EA	1						
				BRACKET, REAR STEP: Curb side 13214E1309-2 (97403)								
PA	O	ZZ	5305-00-269-3213	SCREW, CAP, HEXAGON HEAD: Rear step bracket	EA	6						
				MS90725-62 (96906)								
PA	O	ZZ	5310-00-950-1310	WASHER, FLAT: Rear step bracket	EA	6						
				MS27183-14 (96906)								
PA	O	ZZ	5310-00-087-4652	NUT, SELF-LOCKING, HEXA- GON: Rear step bracket	EA	6						
				MS51922-17 (96906)								
XB	O	ZZ		BRACKET, REAR STEP: Road- side	EA	1						
				13214E1309-1 (97403)								
PA	O	ZZ	5305-00-225-8500	SCREW, CAP, HEXAGON HEAD: Fender mtg.	EA	10						
				MS90725-35 (96906)								
XB	O	ZZ		SPACER, CHANNEL	EA	2						
				13214E1267-1 (97403)								
XB	O	ZZ	9520-00-945-7542	CHANNEL, FRONT	EA	1						
				13214E1268 (97403)								
PA	O	ZZ	5305-00-225-8503	SCREW, CAP, HEXAGON HEAD: Channel mtg.	EA	2						
				MS90725-39 (96906)								
XB	O	ZZ		SPACER, FRONT STEP	EA	12						
				13214E1267-2 (97403)								
XB	O	ZZ	9520-00-947-7219	CHANNEL, FRONT STEP	EA	1						
				13214E1463 (97403)								
XB	O	ZZ	2510-00-923-1254	BRACKET, BRAKE	EA	2						
				13214E1269 (97403)								
XB	O	ZZ		BRACKET, BRAKE CABLE	EA	2						
				13214E1270 (97403)								
XB	O	ZZ	5340-00-944-2691	STRAP, BRAKE CABLE	EA	2						
				13214E1271 (97403)								
XB	O	ZZ	5340-00-989-3304	SPACER, BRAKE BRACKET	EA	4						
				13214E1272 (97403)								
XB	O	ZZ	5340-00-999-6253	ANCHOR, PLATFORM	EA	2						
				13214E1303 (97403)								
XB	O	ZZ	5340-00-087-7676	BRACKET, PLATFORM: LH	EA	1						
				13214E1299 (97403)								
XB	O	ZZ	5340-00-999-6441	BRACKET, PLATFORM: RH	EA	1						
				13214E1300 (97403)								
PA	O	ZZ	5305-00-042-6417	SCREW, CAP, HEXAGON HEAD: Platform bracket	EA	6						
				MS90725-113 (96906)								
PA	O	ZZ	5310-00-809-5998	WASHER, FLAT: Platform bracket	EA	6						
				MS27183-18 (96906)								
PA	O	ZZ	5310-00-225-6993	NUT, SELF-LOCKING, HEXA- GON: Platform bracket	EA	6						
				MS51922-33 (96906)								
PA	O	ZZ	5310-00-939-9204	SCREW, CAP, HEXAGON HEAD: Platform mtg.	EA	2						
				MS90725-187 (96906)								

(1) Source maintenance and recoverability code			(2) National stock number	(3) Description	(4) Unit of issue	(5) Quantity incorporated in unit	(6) 15-day organizational maint allowances				(7) Illustration	
Source-	Mainte-	Recovera-					(a) 1-5	(b) 6-20	(c) 21-50	(d) 51- 100	(a) Fig. No.	Item No.
				1501 – FRAME ASSEMBLY – Continued								
PA	O	ZZ	5310-00-809-8533	WASHER, FLAT: Platform mtg. MS27183-23 (96906)	EA	4						
PA	O	ZZ	5310-00-067-6356	NUT, SELF-LOCKING: HEXA- GON: Platform mtg. MS51922-57 (96906)	EA	2						
XB	O	ZZ	2510-00-948-3253	BRACKET, LIGHT 13214E1308 (97403)	EA	1						
PA	O	ZZ		SCREW, CAP, HEXAGON HEAD: bracket mtg. MS90725-8 (96906)	EA	2						
PA	O	ZZ	5310-00-809-4058	WASHER, FLAT: Light bracket mtg. MS27183-10 (96906)	EA	2						
PA	O	ZZ	5310-00-088-1251	NUT, SELF-LOCKING, HEXA- GON: Light bracket mtg. MS51922-1 (96906)	EA	2						
PA	O	ZZ	5305-00-225-9081	SCREW, CAP, HEXAGON HEAD: Front step MS90725-36 (96906)	EA	2						
				GROUP 18 – BODY, CAB, HOOD AND HULL 1808 – BOXES, CARRYING CASES								
PA	O	ZZ	5310-00-984-3806	NUT, SELF-LOCKING, HEXA- GON: Accessory box mtg. MS51922-9 (96906)	EA	3						
PA	O	ZZ	5310-00-080-6004	WASHER, FLAT: Accessory box mtg. MS27183-13 (96906)	EA	3						
PA	O	ZZ	5305-00-225-8498	SCREW, CAP, HEXAGON HEAD: Accessory box mtg. MS90725-33 (96906)	EA	3						
XB	O	ZZ		BOX, ACCESSORY 13214E1256 (97403)	EA	1						
XB	O	ZZ		HINGE, CONTINUOUS MS35825-1D (69606)	EA	1						
XB	O	ZZ		RIVET, SOLID: Latch mtg. MS20613-4PS (96906)	EA	8						
XB	O	ZZ		LATCH AND STRIKE ASSEMBLY MS18015-1 (96906)	EA	2						
				GROUP 22 – BODY CHASSIS OR HULL 2202 – ACCESSORY ITEMS								
XB	O	ZZ	2910-00-066-1235	ADAPTER, FUEL DRUM 13211E7541 (97403)	EA	1						
XB	O	ZZ		PIPE, EXTENSION 13211E7542 (97403)	EA	1						
XB	O	ZZ	4710-00-185-6948	PIPE, STAND 13211E7543 (97403)	EA	1						
XB	O	ZZ		WASHER, BRASS 13211E7544 (97403)	EA	1						
XB	O	ZZ	5365-00-402-5125	RING, SEALING 13211E7546 (97403)	EA	1						
XB	O	ZZ		WASHER, STEEL 13200E6361 (97403)	EA	1						
XB	O	ZZ	3740-00-902-1479	HEAD 13211E7548 (97403)	EA	1						

(1) Source maintenance and recoverability code			(2) National stock number	(3) Description	(4) Unit of issue	(5) Quantity incorporated in unit	(6) 15-day organizational maint allowances				(7) Illustration	
Source-	Mainte-	Recovera-					(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(a) Fig. No.	Item No.
				2202 - ACCESSORY ITEMS - Continued								
XB	O	ZZ	3740-00-902-1481	CLAMP 13200E6363 (97403)	EA	1						
XB	O	ZZ		WASHER, RUBBER 13211E7547 (97403)	EA	1						
PA	O	ZZ	5310-00-209-1239	WASHER, LOCK MS35335-00 (96906)	EA	2						
PA	O	ZZ	4730-00-277-5115	NIPPLE AN816-5-4 (81352)	EA	1						
XB	O	ZZ		SCREW, SHOULDER 13211E7545 (97403)	EA	2						
PA	O	ZZ		ROD, GROUND MIL-R-11461 (81349)	EA	2						
PA	O	ZZ		2210 - DATA PLATES SCREW, DRIVE: Identification plate mtg. MS21318-21 (96906)	EA	4						
XB	O	ZZ		PLATE, IDENTIFICATION 13216E7604-36 (97403)	EA	1						
XB	O	ZZ		PLATE, IDENTIFICATION: Ground 13205E4918 (97403)	EA	1						
PA	O	ZZ	5310-00-269-4040	GROUP 40 - ELECTRIC MO- TORS AND GENERATORS 4000 - MAJOR ASSEMBLAGE NUT, SELF-LOCKING, HEXA- GON: Generator mtg. MS51922-49 (96906)	EA	4						
PA	O	ZZ	5310-00-823-8803	WASHER, FLAT: Generator mtg. MS27183-21 (96906)	EA	4						
XB	O	ZZ		WASHER, BEVEL: Generator mtg. 13206E4482-3 (97403)	EA	4						
PA	O	ZZ	5305-00-724-7222	SCREW, CAP, HEXAGON HEAD: Generator mtg. MS90728-164 (96906)	EA	4						
PA	O	ZZ	5310-00-543-4717	4019 - RADIO INTERFERENCE SUPPRESSION NUT, PLAIN, WING: Ground stud MS35425-28 (96906)	EA	1						
PA	O	ZZ		WASHER, FLAT: Ground and AN961-616S (81352)	EA	4						
PA	O	ZZ	5310-00-187-2413	WASHER, FLAT: Ground Stud (Optional) AN961-616T (81352)	EA	4						
PA	O	ZZ	5310-00-584-7995	NUT, PLAIN, HEXAGON: Groun lead to stud MS16203-27 (96906)	EA	1						
PA	O	ZZ	5310-00-584-7996	NUT, PLAIN, HEXAGON: Stud MS16203-39 (96906)	EA	2						
PA	O	ZZ	5310-00-022-8847	WASHER, LOCK: Stud MS35333-110 (96906)	EA	2						
XB	O	ZZ	5307-00-722-9437	STUD, GROUND 13214E1223 (97403)	EA	1						
PA	O	ZZ		TERMINAL LUG: Ground stud MS20659-110 (96906)	EA	1						

(1) Source maintenance and recoverability code			(2) National stock number	(3) Description	(4) Unit of issue	(5) Quantity incorporated in unit	(6) 15-day organizational maint allowances				(7) Illustration	
Source -	Mainte- nance	Recovera- bility					(a) 1-5	(b) 6-20	(c) 21-50	(d) 51- 100	(a) Fig. No.	Item No.
PA	O	ZZ		4019 - RADIO INTERFERENCE SUPPRESSION - Continued								
				WIRE, ELECTRICAL: Ground QQW343CLASSB, TYPE C, XARI	EA	1						
				GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS								
PA	O	ZZ	4210-00-270-4512	7603 - FIRE EXTINGUISHERS								
				EXTINGUISHER, FIRE	EA	1						
				OE910 (81348)								
PA	O	ZZ	5310-00-087-4652	NUT, SELF-LOCKING, HEXA- GON: Extinguisher bracket	EA	4						
				MS51922-17 (96906)								
PA	O	ZZ	5310-00-080-6004	WASHER, FLAT: Extinguisher bracket	EA	4						
				MS27183-14 (96906)								
PA	O	ZZ	5305-00-984-5691	SCREW, MACHINE: Extinguisher bracket	EA	4						
				MS352067-311 (96906)								
XB	O	ZZ		BRACKET, FIRE EXTINGUISHER	EA	1						
				13214E1235 (97403)								

Section IV. DIRECT SUPPORT, GENERAL SUPPORT, AND DEPOT REPAIR PARTS

(1) Source maintenance and recoverability code			(2) National stock number	(3) Description	(4) Unit of issue	(5) Quantity incorporated in unit	(6) 30-Day DS maint. ALW.			(7) 30-Day GS maint. ALW.			(8) Illus- tration	
Source	Mainte- nance	Recovera- bility					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100	(a) Fig. No.	Item No.
PA	O	ZZ	4730-00-809-9703	GROUP 01 - ENGINE 0106 - ENGINE LUBRICATING SYSTEM ELBOW, OIL DRAIN MS24519-9 (96906)	EA	1								
PA	O	ZZ		HOSE, OIL DRAIN MIL-H-6000 (81349)	EA	1								
PA	O	ZZ	4730-00-908-3194	CLAMP, HOSE: Oil drain MS35482-11 (96906)	EA	1								
PA	O	ZZ	5310-00-088-1251	GROUP 15 - FRAME, TOWING ATTACHMENTS AND DRAWBARS 1501 - FRAME ASSEMBLY NUT, SELF-LOCKING, HEXA- GON: Hammer clip and bracket mtg. MS51922-1 (96906)	EA	3								
PA	O	ZZ	5310-00-809-4058	WASHER, FLAT: Hammer clip and bracket MS27183-10 (96906)	EA	3								
PA	O	ZZ	5305-00-068-0502	SCREW, CAP HEXAGON HEAD: Hammer clip and bracket MS90725-6 (96906)	EA	3								
XB	O	ZZ		CLIP, SPRING: Hammer 13214E1213-1 (97403)	EA	1								
PA	O	ZZ	5340-00-999-6277	BRACKET ASSEMBLY, HAMMER 13214E1214 (97403)	EA	1								
PA	O	ZZ	5310-00-080-8495	NUT, PLAIN, WING MS35425-39 (96906)	EA	2								
PA	O	ZZ	5310-00-582-5965	WASHER, LOCK MS35338-44 (96906)	EA	2								
PA	O	ZZ	5310-00-809-4058	WASHER, FLAT MS27183-10 (96906)	EA	2								
XB	O	ZZ		PLATE, HOLDDOWN 13214E1216 (97403)	EA	1								
XB	O	ZZ	6115-00-450-6593	BRACKET 13214E1215 (97403)	EA	1								
XB	O	ZZ	5306-00-197-1552	BOLT, WELDING MS51934-23 (96906)	EA	2								
PA	O	ZZ	5120-00-203-4656	HAMMER GGGH86 (81348)	EA	1								
XB	O	ZZ	2510-00-947-9219	STEP, FRONT ROADSIDE 13214E1462 (97403)	EA	1								
XB	O	ZZ	2510-00-947-7727	STEP, FRONT, CURBSIDE 13214E1461 (97403)	EA	1								
XB	O	ZZ		STEP, REAR, ROADSIDE 13214E1261 (97403)	EA	1								
XB	O	ZZ		STEP, REAR, CURBSIDE 13214E1259 (97403)	EA	1								
XB	O	ZZ	2510-00-924-8707	FENDER, CURBSIDE 13214E1263 (97403)	EA	1								
XB	O	ZZ	2510-00-924-8697	FENDER, ROADSIDE 13214E1264 (97403)	EA	1								
XB	O	ZZ	2510-00-924-3517	PLATFORM 13214E1298 (97403)	EA	1								
PA	O	ZZ	5305-00-225-8499	SCREW, CAP, HEXAGON HEAD: Fender and step mtg. MS90725-34 (96906)	EA	48								

(1) Source maintenance and recoverability code			(2) National stock number	(3) Description	(4) Unit of issue	(5) Quantity incorporated in unit	(6) 30-Day DS maint. ALW.			(7) 30-Day GS maint. ALW			(8) Illus- tration	
Source	Mainte- nance	Recovera- bility					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100	(a) Fig. No.	Item No.
PA	O	ZZ	5310-00-087-0057	WASHER, FLAT: Fender, step and bracket mtg. MS27183-12 (96906)	EA	140								
PA	O	ZZ	5310-00-984-3806	NUT, SELF-LOCKING HEXA- GON: Fender, step and bracket mtg. MS51922-9 (96906)	EA	72								
XB	O	ZZ		BRACKET, REAR STEP: Curb- side 13214E1309-2(97403)	EA	1								
PA	O	ZZ	5305-00-269-3213	SCREW, CAP, HEXAGON HEAD: Rear step bracket MS90725-62 (96906)	EA	6								
PA	O	ZZ	5310-00-950-1310	WASHER, FLAT: Rear step brack- et MS27183-14 (96906)	EA	6								
PA	O	ZZ	5310-00-087-4652	NUT, SELF-LOCKING, HEXA- GON: Rear step bracket MS51922-17 (96906)	EA	6								
XB	O	ZZ		BRACKET, REAR STEP: Road- side 13214F1309-1 (97403)	EA	1								
PA	O	ZZ	5305-00-225-8500	SCREW, CAP, HEXAGON HEAD: Fender mtg. MS90725-35 (96906)	EA	10								
XB	O	ZZ		SPACER, CHANNEL 13214E1267-1 (97403)	EA	2								
XB	O	ZZ	9520-00-945-7542	CHANNEL, FRONT 13214E1268 (97403)	EA	1								
PA	O	ZZ	5305-00-225-8503	SCREW, CAP, HEXAGON HEAD: Channel mtg. MS90725-39 (96906)	EA	12								
XB	O	ZZ		SPACER, FRONT STEP 13214E1267-2 (97403)	EA	2								
XB	O	ZZ	9520-00-947-7219	CHANNEL, FRONT STEP 13214E1463 (97403)	EA	1								
XB	O	ZZ	2510-00-923-1254	BRACKET, BRAKE 13214E1269 (97403)	EA	2								
XB	O	ZZ		BRACKET, BRAKE CABLE 13214E1270 (97403)	EA	2								
XB	O	ZZ	5340-00-944-2691	STRAP, BRAKE CABLE 13214E1271 (97403)	EA	2								
XB	O	ZZ	5340-00-989-3304	SPACER, BRAKE BRACKET 13214E1272 (97403)	EA	4								
XB	O	ZZ	5340-00-999-6253	ANCHOR, PLATFORM 13214E1303 (97403)	EA	2								
XB	O	ZZ	5340-00-087-7676	BRACKET, PLATFORM: LH 13214E1299 (97403)	EA	1								
XB	O	ZZ	5340-00-999-6441	BRACKET, PLATFORM: RH 13214E1300 (97403)	EA	1								
PA	O	ZZ	5305-00-042-6417	SCREW, CAP, HEXAGON HEAD: Platform bracket MS90725-113 (96906)	EA	6								
PA	O	ZZ	5310-00-809-5998	WASHER, FLAT: Platform brack- et MS27183-18 (96906)	EA	6								
PA	O	ZZ	5310-00-225-6993	NUT, SELF-LOCKING, HEXA- GON: Platform bracket MS51922-33 (96906)	EA	6								

(1) Source maintenance and recoverability code			(2) National stock number	(3) Description	(4) Unit of issue	(5) Quantity incorporated in unit	(6) 30-Day DS maint. ALW.			(7) 30-Day GS maint. ALW			(8) Illus- tration	
Source	Mainte- nance	Recovera- bility					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100	(a) Fig. No.	Item No.
PA	O	ZZ	5305-00-939-9204	SCREW, cap, HEXAGON HEAD: Platform mtg. MS90725-187 (96906)	EA	2								
PA	O	ZZ	5310-00-809-8533	WASHER, FLAT: Platform mtg. MS27183-23 (96906)	EA	4								
PA	O	ZZ	5310-00-067-6356	NUT, SELF-LOCKING HEXA- GON: Platform mtg. MS51922-57 (96906)	EA	2								
XB	O	ZZ	2510-00-948-3253	BRACKET, LIGHT 13214E1308 (97403)	EA	1								
PA	O	ZZ		SCREW, CAP, HEXAGON HEAD: Light bracket mtg. MS90725-8 (96906)	EA	2								
PA	O	ZZ	5310-00-809-4058	WASHER, FLAT: Light bracket mtg. MS27183-10 (96906)	EA	2								
PA	O	ZZ	5310-00-088-1251	NUT, SELF-LOCKING, HEXA- GON: Light bracket mtg. MS51921-1 (96906)	EA	2								
PA	O	ZZ	5305-00-225-9081	SCREW, CAP, HEXAGON HEAD: Front step MS90725-36 (96906)	EA	2								
				GROUP 18 - BODY CAB, HOOD AND HULL 1808 - BOXES, CARRYING CASES										
PA	O	ZZ	5310-00-984-3806	NUT, SELF-LOCKING, HEXA- GON: Accessory box mtg. MS51922-9 (96906)	EA	3								
PA	O	ZZ	5310-00-080-6004	WASHER, FLAT: Accessory box mtg. MS27183-13 (96906)	EA	3								
PA	O	ZZ	5305-00-225-8498	SCREW, CAP, HEXAGON HEAD: Accessory box mtg. MS90725-33 (96906)	EA	3								
XB	O	ZZ		BOX, ACCESSORY 13214E1256 (97403)	EA	1								
XB	O	ZZ		HINGE, CONTINUOUS MS35825-1D (96906)	EA	1								
XB	O	ZZ		RIVET, SOLID: Latch mtg. MS20613-4PS (96906)	EA	8								
XB	O	ZZ		LATCH AND STRIKE ASSEMBLY MS18015-1 (96906)	EA	2								
				1810 - CARGO BODY										
XB	F	FD	2330-00-331-2307	TRAILER 13214E1257 (97403)	EA	1								
XB	F	FD		CHASSIS 13214E1258 (97403)	EA	1								
				GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS 2202 - ACCESSORY ITEMS										
XB	O	ZZ	2910-00-066-1235	ADAPTER, FUEL RRUM 13211E7541 (97403)	EA	1								
XB	O	ZZ		PIPE, EXTENSION 13211E7542 (97403)	EA	1								
XB	O	ZZ	4710-00-185-6948	PIPE, STAND 13211E7543 (97403)	EA	1								

(1) Source maintenance and recoverability code			(2) National stock number	(3) Description	(4) Unit of issue	(5) Quantity incorporated in unit	(6) 30-Day DS maint. ALW.			(7) 30-Day GS maint. ALW			(8) Illus- tration	
Source	Mainte- nance	Recovera- bility					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100	(a) Fig. No.	Item No.
XB	O	ZZ		2202-ACCESSORY ITEMS-Cont WASHER, BRASS 13211E7544 (97403)	EA	1								
XB	O	ZZ	5365-00-402-5125	RING, SEALING 13211E7546 (97403)	EA	1								
XB	O	ZZ		WASHER, STEEL 13200E6361 (97403)	EA	1								
XB	O	ZZ	3740-00-902-1479	HEAD 13211E7548 (97403)	EA	1								
XB	O	ZZ	3740-00-902-1481	CLAMP 13200E6363 (97403)	EA	1								
XB	O	ZZ		WASHER, RUBBER 13211E7547 (97403)	EA	1								
PA	O	ZZ	5310-00-209-1239	WASHER, LOCK MS35335-60 (96906)	EA	2								
PA	O	ZZ	4730-00-277-5115	NIPPLE AN816-5-4 (81352)	EA	1								
XB	O	ZZ		SCREW, SHOULDER 13211E7545 (97403)	EA	2								
PA	O	ZZ		ROD, GROUND MIL-R-11461 (81349)	EA	2								
PA	O	ZZ		2210 - DATA PLATES SCREW, DRIVE: Identification plate mtg. MS21318-21 (96906)	EA	4								
XB	O	ZZ		PLATE, IDENTIFICATION 13216E7604-36 (97403)	EA	1								
XB	O	ZZ		PLATE, IDENTIFICATION: Ground 13205E4918 (97403)	EA	1								
PA	O	ZZ	5310-00-269-4040	GROUP 40 - ELECTRIC MO- TORS AND GENERATORS 4000 - MAJOR ASSEMBLAGE NUT, SELF-LOCKING, HEXA- GON: Generator mtg. MS51922-49 (96906)	EA	4								
PA	O	ZZ	5310-00-823-8803	WASHER, FLAT: Generator mtg. MS27183-21 (96906)	EA	4								
XB	O	ZZ		WASHER, BEVEL: Generator mtg. 13206E448-2-3 (97403)	EA	4								
PA	O	ZZ	5305-00-724-7222	SCREW, CAP, HEXAGON HEAD: Generator mtg. MS90728-164 (96906)	EA	4								
PA	F	FD	6115-00-118-1243	GENERATOR, DIESEL ENGINE MIL-G-52884-8 (81349) 4019 - RADIO INTERFERENCE SUPPRESSION	EA	1								
PA	O	ZZ	5310-00-543-4717	NUT, PLAIN, WING: Ground stud MS35425-28 (96906)	EA	1								
PA	O	ZZ		WASHER, FLAT: Ground stud AN961-616S (81352)	EA	4								
PA	O	ZZ	5310-00-187-2413	WASHER, FLAT: Ground stud (Optional) AN961-616T (81352)	EA	4								
PA	O	ZZ	5310-00-584-7995	NUT, PLAIN, HEXAGON: Ground lead to stud MS16203-27 (96906)	EA	1								
PA	O	ZZ	5310-00-584-7996	NUT, PLAIN, HEXAGON: Stud MS16203-39 (96906)	EA	2								

(1) Source maintenance and recoverability code			(2) National stock number	(3) Description	(4) Unit of issue	(5) Quantity incorporated in unit	(6) 30-Day DS maint. ALW.			(7) 30-Day GS maint. ALW			(8) Illus- tration	
Source	Mainte- nance	Recovera- bility					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100	(a) Fig. No.	Item No.
PA	O	ZZ	5310-00-022-8847	4019-RADIO INTERFERENCE SUPPRESSION-Continued	EA	2								
XB	O	ZZ	5307-00-722-9437	WASHER, LOCK: Stud MS35333-110 (96906)	EA	1								
PA	O	ZZ		STUD, GROUND 13214E1223 (97403)	EA	1								
PA	O	ZZ		TERMINAL, LUG: Ground stud MS20659-110 (96906)	EA	1								
				WIRE, ELECTRICAL: Ground QQW343CLASSB, TYPE C, XARI	EA	1								
				GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS										
PA	O	ZZ	4210-00-270-4512	7603 - FIRE EXTINGUISHERS EXTINGUISHER, FIRE:	EA	1								
PA	O	ZZ	5310-00-087-4652	OE910 (81348)	EA	4								
PA	O	ZZ	5310-00-080-6004	NUT, SELF-LOCKING, HEXA- GON: Extinguisher bracket MS51922-17 (96906)	EA	4								
PA	O	ZZ	5305-00-984-5691	WASHER, FLAT: Extinguisher bracket MS27183-14 (96906)	EA	4								
XB	O	ZZ		SCREW, MACHINE: Extinguisher bracket MS35206-311 (96906)	EA	1								
				BRACKET, FIRE EXTINGUISH- ER 13214E1235 (97403)	EA	1								

APPENDIX A**REFERENCES****A-1. Fire Protection**

TB 5-4200-200-10

Hand Portable Fire Extinguishers
Approved for Army Users**A-2. Lubrication**

C9100IL

Fuels, Lubricants, Oils, and Waxes

Refer to appropriate Lubrication Orders and Manuals listed in respective chapters for lubrication instructions applicable.

A-3. Operating Instructions

TM 5-766

Electric Power Generators in the
Field

Refer to appropriate manuals listed in respective chapters for operating instructions applicable to generator sets.

A-4. Maintenance

TM 5-764

Electric Motor and Generator Repair

TM 9-6140-200-15

Operation and Organizational, field, and depot
maintenance: Storage batteries, lead-acid type

TM 11-483

Radio Interference Suppression

TM 38-750

The Army Maintenance Management System

A-5. Shipment and Storage

SB 38-100

Army Preservation Packing and
Marking Materials, Supplies,
and Equipment

TM 38-230-1

Preservation, packing, and packing of
military supplies and equipment (Vol 1).

TM 740-90-1

Administrative Storage of Equipment

A-6. Demolition

TM 750-244-3

Procedures for destruction of equipment to
prevent enemy use (Mobility equipment
Command)

■ APPENDIX B

BASIC ISSUE ITEMS LIST AND ITEMS TROOP INSTALLED OR AUTHORIZED

Section I. INTRODUCTION

B-1. Scope

This appendix lists items required by the operator for operation of the generator set.

B-2. General

This list is divided into the following sections:

a. *Basic Issue Items List — Section II.* Not applicable.

b. *Items Troop Installed or Authorized List — Section III.* A list of items in alphabetical sequence, which at the discretion of the unit commander may accompany the generator set. These items are not subject to turn-in with the generator set when evacuated.

B-3. Explanation of Columns

The following provides an explanation of columns in the tabular list of items troop installed or authorized, section III.

a. *Source, Maintenance, and Recoverability Code(s) (SMR):*

(1) *Source Code.* This code indicates the source for the listed item. Source codes are:

Code	Explanation
P	Repair parts, special tools, and test equipment supplied from GSA/DSA or Army supply system and authorized for use at indicated maintenance levels.
P2	Repair parts, special tools, and test equipment which are procured and stocked for insurance purposes because the combat or military essentiality of the end item dictates that a minimum quantity be available in the supply system.

(2) *Maintenance code.* This code indicates the lowest level of maintenance authorized to install the listed item. The maintenance level code is:

Code	Explanation
C	Crew/Operator

(3) *Recoverability code.* This code indicates whether unserviceable items should be returned for recovery or salvage. Items not coded are non-recoverable. Recoverability codes are:

Code	Explanation
R	Applied to repair parts (assemblies and components), special tools, and test equipment which are considered economically repairable at direct and general support maintenance levels.
S	Repair parts, special tools, test equipment, and assemblies which are economically repairable at DSU and GSU activities and which normally are furnished by supply on an exchange basis.

b. *Federal Stock Number.* This column indicates the Federal stock number assigned to the item. This number will be used for requisitioning purposes.

c. *Description.* This column indicates the Federal item name and any additional description of the item required.

d. *Unit of Measure (U/M).* A 2-character alphabetic abbreviation indicating the amount or quantity of the item upon which the allowances are based; e.g., ft, ea, etc.

e. *Quantity Authorized.* This column indicates the quantity of the item authorized to be used with the equipment.

Section III. ITEMS TROOP INSTALLED OR AUTHORIZED LIST

(1) SMR code	(2) Federal stock number	(3) Description Ref. No. & Mfr code	Usable on code	(4) Unit of meas	(5) Qty auth
PC	2910-066-1235	ADAPTER, Drum		ea	1
PC	7520-559-9618	CASE, Maintenance and operation manuals.		ea	1
PC	5935-787-8627	CONNECTOR, Plug		ea	1
PC*	4210-270-4512	EXTINGUISHER, Fire		ea	1
PC	4210-555-8837	EXTINGUISHER, Fire		ea	1
PC	4720-021-3320	HOSE ASSY, Auxiliary fuel		ea	1
PC	5975-878-3791	ROD ASSY, Ground		ea	1
*Applies to PU-401/M, FSN 6115-823-2217					
PU-402/M, FSN 6115-722-3760					
PU-406/M, FSN 6115-738-6342					
PU-495/G, FSN 6115-823-2218					
PU-551/G, FSN 6115-889-1307					
PU-625/G, FSN 6115-873-3915					

APPENDIX C

MAINTENANCE

Section I. INTRODUCTION

C-1. General

a. This section provides a general explanation of all maintenance and repair functions authorized at various maintenance levels.

b. Section II designates overall responsibility for the performance of maintenance functions on the identified item or component. The implementation of the maintenance functions upon the end item or component will be consistent with the assigned maintenance functions.

c. Section III contains supplemental instructions, explanatory notes and/or illustrations required for a particular maintenance function.

C-2. Explanation of Columns in Section II

a. *Group Number.* The functional group is a numerical group set up on a functional basis. The applicable functional grouping indexes are listed on the MAC in the appropriate numerical sequence.

b. *Functional Group.* This column contains a brief description of the components of each functional group.

c. *Maintenance Functions.* This column lists the various maintenance functions (A through K) and indicates the lowest maintenance level authorized to perform these functions. The symbol designations for the various maintenance levels are as follows:

- C - Operator or crew
- O - Organizational maintenance
- F - Direct support maintenance
- H - General support maintenance
- D - Depot maintenance

The maintenance functions are defined as follows:

A - INSPECT. To determine serviceability of an item by comparing its physical, mechanical, and electrical characteristics with established standards.

B - TEST. To verify serviceability and to detect electrical or mechanical failure by use of test equipment.

C - SERVICE. To clean, to preserve, to charge, to paint, and to add fuel, lubricants, cooling agents, and air.

D - ADJUST. To rectify to the extent necessary to bring into proper operating range.

E - ALIGN. To adjust specified variable elements of an item to bring to optimum performance.

F - CALIBRATE. To determine the corrections to be made in the readings of instruments or test equipment used in precise measurement. Consists of the comparisons of two instruments, one of which is a certified standard of known accuracy, to detect and adjust any discrepancy in the accuracy, of the instrument being compared with the certified standard.

G - INSTALL. To set up for use in an operational environment such as an emplacement, site, or vehicle.

H - REPLACE. To replace unserviceable items with serviceable assemblies, subassemblies, or parts.

I - REPAIR. To restore an item to serviceable condition. This includes, but is not limited to, inspection, cleaning, preserving, adjusting, replacing, welding, riveting, and strengthening.

J - OVERHAUL. To restore an item to a completely serviceable condition as prescribed by maintenance serviceability standards using the Inspect and Repair Only as Necessary (IROAN) technique.

K - REBUILD. To restore an item to a standard as nearly as possible to original or new condition in appearance, performance, and life expectancy. This is accomplished through complete disassembly of the item, inspection of all parts or components, repair or replacement of worn or unserviceable elements (items) using original manufacturing tolerances and

specifications and subsequent reassembly of the item.

d. Tools and Equipment. This column is not applicable.

e. Remarks. This column is provided for referencing by code the remarks (section III) pertinent to the maintenance functions.

C-3. Explanation of Columns in Section III.

a. Reference Code. This column con-

sists of two letters separated by a dash, both of which are references to section II. The first letter references column 5 and the second letter references a maintenance function, column 3, A through K.

b. Remarks. This column lists information pertinent to the maintenance function being performed, as indicated on the MAC, section II.

Section II. MAINTENANCE ALLOCATION CHART

(1) Group No.	(2) Functional Group	(3) Maintenance Functions											(4) Tools and Equipment	(5) Remarks
		A	B	C	D	E	F	G	H	I	J	K		
01	ENGINE													
0100	Engine Assembly		C						F	F				A
03	FUEL SYSTEM													
0306	Tanks, Lines, Fittings	0							0					B
06	ELECTRICAL SYSTEM													
0608	Miscellaneous Trailer Wiring	0							0					
15	FRAME													
1501	Frame Assembly								D					
1507	Leveling Jacks	0							0	F				
18	BODY													
1808	Storage Racks, Boxes, Cable Reels								0	0				
1810	Cargo Body								D	D				
22	BODY ACCESSORY ITEMS													
2201	Canvas Items	0							0	F				
2202	Accessory Items								0	0				
2210	Data Plates	0							0					
29	AUXILIARY GENERATOR AND ENGINE													
2901	Generator Assembly			C					F	F				C
2916	Engine Lubrication System			C					0					

(1) Group NO.	(2) Functional Group	(3) Maintenance Functions											(4) Tools and Equipment	(5) Remarks
		A	B	C	D	E	F	G	H	I	J	K		
2941	Engine Exhaust	Inspect	Test	Service	Adjust	Align	Calibrate	Install	Replace	Repair	Overhaul	Rebuild		
40	ELECTRIC GENERATORS													
4000	Generator Set													
42	ELECTRICAL EQUIPMENT													
4202	Electrical Controls													
4216	Miscellaneous Wiring and Fittings													

Section III. REMARKS

Reference Code	Remarks
A-I	Refer to applicable Generator TM for engine replacement and refer to applicable Engine TM for engine repair.
B-H	Applies to PU-375B/G, PU-625/G, PU-628G, PU-629/G, PU-631/G, and PU-656/G
C-H	Remove and install the generator and engine as a single unit.

INDEX

	Paragraph	Page
Introduction	1-1	1-1
PU-236/G	8-1	8-1
PU-236A/G	8-1	8-1
PU-236B/G	7-1	7-1
PU-253/U	13-1	13-1
PU-253A/U	13-1	13-1
PU-304C/MPQ-4	16-1	16-1
PU-332/G	11-1	11-1
PU-332A/G	11-1	11-1
PU-375/G	14-1	14-1
PU-375A/G	14-1	14-1
PU-375B/G	17-1	17-1
PU-401/M	9-1	9-1
PU-402/M	5-1	5-1
PU-406/M	5-1	5-1
PU-409/M	6-1	6-1
PU-409A/M	6-1	6-1
PU-495/G	10-1	10-1
PU-551/G	15-1	15-1
PU-564A/G	12-1	12-1
PU-564B/G	12-1	12-1
PU-617/M	2-1	2-1
PU-618/M	4-1	4-1
PU-619/M	3-1	3-1
PU-620/M	4-1	4-1
PU-625/G	22-1	22-1
PU-628/G	18-1	18-1
PU-629/G	19-1	19-1
PU-631/G	20-1	20-1
PU-656/G	21-1	21-1

By Order of the Secretary of the Army:

Official:

J. C. LAMBERT,
Major General, United States Army,
The Adjutant General.

HAROLD K. JOHNSON,
General, United States Army,
Chief of Staff.

Distribution:

Active Army:

USASA (2)	AMS (3)	
ACSI (1)	USAREURCOMZ (2)	
DCSLOG (1)	MAAG (1)	
CNGB (1)	JBUSMC (1)	
TSG (1)	USA Engr RD Lab (3)	
CofEngrs (3)	Units org under fol TOE	
CC-E (1)	(2 copies each UNOINDC):	
Dir of Trans (1)	1-7	6-635
CofSptS (1)	1-37	6-636
USAMB (1)	1-55	6-700
USACDCARTYA (2)	1-58	6-701
USACDCARMA (2)	1-75	6-575
USAIB (2)	1-78	6-576
USA AD Bd (2)	1-100	7-11
USAAESWBD (2)	1-101	7-12
USA Avn Bd (2)	1-107	7-42
USCONARC (3)	1-127	8-35
OS Maj Comd (5) except	1-137	8-36
USASETAF (2)	1-207	8-122
USARJ (1)	1-252	8-126
USAMOCOM (2)	1-256	8-137
USASMC (1)	1-102	8-187
MDW (1)	1-307	8-551
Armies (2)	3-52	8-581
Corps (2)	5-25	8-590
USAC (1)	5-26	8-667
Div (2)	5-35	8-902
Engr Bde (1)	5-36	8-903
USMA (2)	5-45	9-12
Svc Colleges (2)	5-46	9-86
Br Svc Sch (2)	5-52	9-87
USACDCEC (10)	5-112	9-227
Gen Dep (10)	5-145	9-247
Engr Dep (10)	5-146	10-17
Army Dep (2)	5-155	10-22
USA Tml Comd (2)	5-156	10-77
Army Tml (1)	5-237 (5)	10-105
Div Engr (2)	5-262 (5)	10-106
Engr Dist (2)	5-266	10-107
USAMEC (46)	5-267 (1)	10-127
USAECEFB (5)	5-279	10-201
USAREUR Engr Proc Cen (2)	5-500 (BB, GD)	10-202
USAREUR Engr Sup Cen Agcy (10)	6-401	10-206
Engr Fld Maint Shops (2)	6-555	10-337
Ft Knox Fld Maint Shops (10)	6-556	10-349
Fld Comd, DASA (8)	6-557	10-407

10-417	11-51	29-127	44-237
10-445	11-52	29-136	44-535
10-446	11-227	29-137	44-536
10-447	11-500 (TM)	29-139	44-537
10-448	12-56	29-202	51-15
10-458	12-57	29-206	51-16
10-467	17-42	29-215	55-6
10-475	19-252	29-216	55-11
10-476	19-256	29-217	55-12
10-477	29-1	30-5	55-16
10-500 (KK, KL, KM)	29-5	30-6	55-62
10-521	29-6	30-7	55-66
10-536	29-15	30-25	55-89
11-38	29-16	30-26	55-116
11-45	29-21	30-27	55-126
11-46	29-25	30-28	55-131
11-55	29-26	30-29	55-202
11-57	29-35	30-500 (AC, AD, AF, AG, FA, FB, FC, JA, JB)	55-225
11-66	29-36		55-227
11-117	29-45	37-42	55-260
11-127	29-46	37-51	55-302
11-155	29-51	37-61	55-458
11-156	29-55	44-2	55-459
11-157	29-61	44-12	55-500 (GF, LA, LB, LC, LF)
11-158	29-102	44-85	57-42
11-165	29-116	44-86	67-42
11-166	29-118	44-235	
11-237	29-119	44-236	
	29-126		

NG: State AG (3).

USAR: Same as active Army except allowance is one copy to each unit.

For explanation of abbreviations used, see AR 320-50.

